Owner's Manual

2020 CR-V Hybrid



California Proposition 65 Warning

Operating, servicing and maintaining a passenger vehicle or off-highway motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passengervehicle.

Event Data Recorders

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less. The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating;
- Whether or not the driver and passenger safety belts were buckled/fastened;
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR. The data belongs to the vehicle owner and may not be accessed by anyone else except as legally required or with the permission of the vehicle owner.

Service Diagnostic Recorders

This vehicle is equipped with service-related devices that record information about powertrain performance. The data can be used to verify emissions law requirements and/or help technicians diagnose and solve service problems. It may also be combined with data from other sources for research purposes, but it remains confidential. Some diagnostic and maintenance information is uploaded to Honda upon vehicle start up.

California Perchlorate Contamination Prevention Act

The airbags, seat belt tensioners, and CR type batteries in this vehicle may contain perchlorate materials - special handling may apply. See *www.dtsc.ca.gov/hazardouswaste/perchlorate/*

As you read this manual, you will find information that is preceded by a **NOTICE** symbol. This information is intended to help you avoid damage to your vehicle, other property, or the environment.

Software End User License Agreement

Your vehicle comes equipped with software, which is governed by the End User License Agreement in Owner's Manual, and which contains a binding arbitration clause. Please refer to the End User License Agreement for the terms and conditions governing your use of the installed software, as well as the applications, services, functions, and content provided through the software. Your use of the installed software will serve as your consent to the terms and conditions of the End User License Agreement. You may opt out within 30 days of your initial use of the Software by sending a signed, written notice to HONDA at American Honda Motor Co., Inc. Honda Automobile Customer Services Mail Stop 100-5E-8A, 1919 Torrance Blvd. Torrance, CA 90501-2746.

Privacy Notice

This vehicle may share location and usage information. To manage this setting, visit *www.hondalink.com/vehicle-data-choices*.

A Few Words About Safety

Your safety, and the safety of others, is very important. And operating this vehicle safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all the hazards associated with operating or maintaining your vehicle. You must use your own good judgment.

You will find this important safety information in a variety of forms, including:

- Safety Labels on the vehicle.
- Safety Messages preceded by a safety alert symbol A and one of three signal words: DANGER, WARNING, or CAUTION. These signal words mean:

You WILL be KILLED or SERIOUSLY HURT if you don't follow instructions.

You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.

You CAN be HURT if you don't follow instructions.

- Safety Headings such as Important Safety Precautions.
- Safety Section such as Safe Driving.
- Instructions how to use this vehicle correctly and safely.

This entire book is filled with important safety information - please read it carefully.

This owner's manual should be considered a permanent part of the vehicle and should remain with the vehicle when it is sold.

This owner's manual covers all models of your vehicle. You may find descriptions of equipment and features that are not on your particular model.

Images throughout this owner's manual (including the front cover) represent features and equipment that are available on some, but not all, models. Your particular model may not have some of these features.

This owner's manual is for vehicles sold in the United States.

The information and specifications included in this publication were in effect at the time of approval for printing. Honda Motor Co., Ltd. reserves the right, however, to discontinue or change specifications or design at any time without notice and without incurring any obligation.

Safe Driving P. 41 For Safe Driving P. 42 Airbags P. 56 Seat Belts P. 47 Instrument Panel P. 87 Indicators P. 88 Gauges and Driver Information Interface P. 124 Controls P. 147 Clock P 148 Locking and Unlocking the Doors P. 150 Moonroof* P. 182 Adjusting the Seats P. 205 Interior Convenience Items P. 215 Features P. 239 Audio System P. 240 Audio System Basic Operation P. 247, 268 Customized Features P. 359, 366 HomeLink® Universal Transceiver* P. 392

Driving P. 455

Before Driving P. 456Towing a Trailer P. 461Parking Your Vehicle P. 555Multi-View Rear Camera P. 566

Maintenance P. 573

Before Performing Maintenance P. 574 Maintenance Minder[™] P. 577 Checking and Maintaining Wiper Blades P. 597 Climate Control System Maintenance P. 614

Handling the Unexpected P. 623

| Tools P. 624 | If a Tire Goes Flat P. 625 |
|----------------------------------------|--------------------------------------|
| Overheating P. 645 | Indicator, Coming On/Blinking P. 648 |
| When You Cannot Open the Tailgate P. 6 | 60 |


➡ Information P. 663


Specifications P. 664 Emissions Testing P. 669 Identification Numbers P. 666 Warranty Coverages P. 671

Contents


| | | | h, I | Quick Reference Guide | P. 6 |
|----------------------------------------------------------------------------|----------------------------------------------------------------|----------------------------------------|-----------------------------------------------------------------------------------------------------------------|-------------------------|---------------|
| Child Safety P. 70 | Exhaust Gas Hazard P. 84 | Safety Labels P. 85 | <u> 1</u> h | | |
| | | | n The | Cofe Duiving | |
| | | | 4h. " | Safe Driving | P. 41 |
| | | | _`¶h, 🗖 | | |
| | | | ₩. W - | Instrument Panel | D 07 |
| - | | Opening and Closing the Windows P. 178 | <u>''</u> | instrument runer | P. 87 |
| Operating the Switches Around the Steerin Climate Control System P. 232 | ng Wheel P. 183 | Adjusting the Mirrors P. 203 | - 'Yh, - | | |
| Climate Control System P. 232 | | | The second se | Controls | P_1/17 |
| | | | lh, 📜 | | 1.147 |
| Audio Error Messages P. 337 | General Information on the Audio System | P. 342 | | | |
| Bluetooth [®] HandsFreeLink [®] P. 395, 419 | Compass* P. 453 | | ્પા | Features | P. 239 |
| | | | в. 📕 | | |
| Off-Highway Driving Guidelines P. 463 | When Driving P. 465 Honda Sensin | ng [®] P. 499 Braking P. 547 | | | |
| | Fuel Economy and CO ₂ Emissions P. 571 | | ંપા | Driving | P. 455 |
| | | | | | |
| | | | | | |
| | Replacing Light Bulbs P. 594 | | | Maintenance | P. 573 |
| 5 | 12-volt Battery P. 611 Accessories and Modifications P. 620 | Remote Transmitter Care P. 613 | | | |
| Cleaning P. 015 | Accessories and mounications r. 020 | | | Handling the Unexpected | P -C22 |
| | | | | Handling the onexpected | P. 623 |
| 5 | 5 | Jump Starting P. 643 | | | |
| | Emergency Towing P. 659 | | | Information | P 663 |
| Refueling P. 661 | | | | | F. 005 |
| | | | | | |
| Devices that Emit Radio Waves P. 667 | Reporting Safety Defects P. 668 | | | Index | P. 676 |
| | Customer Service Information P. 674 | | | | |
| | | | | | |
| | | | | | |


Visual Index

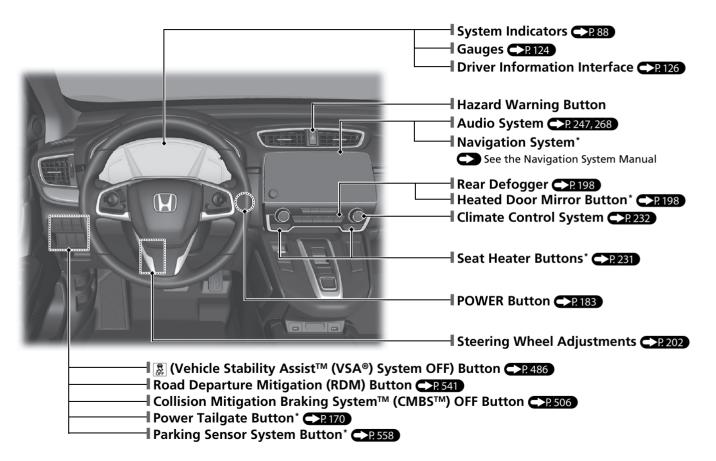

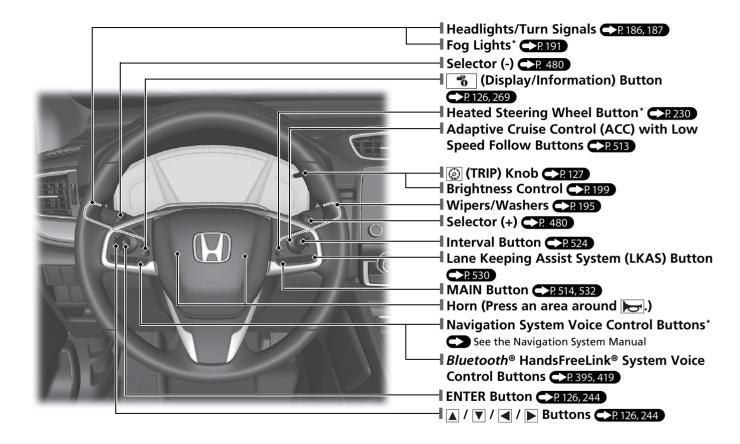


Visual Index

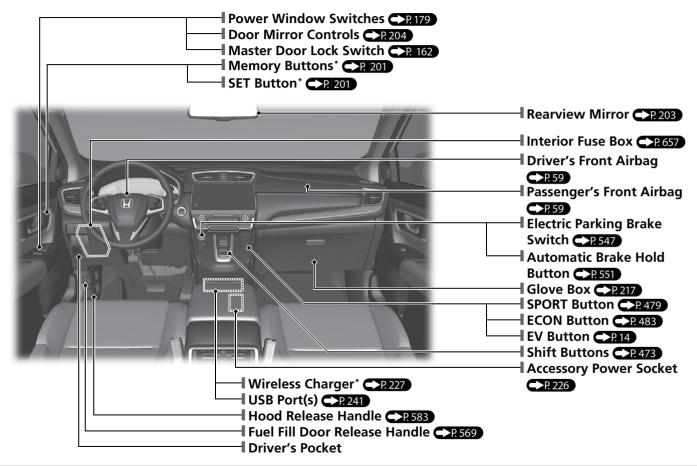

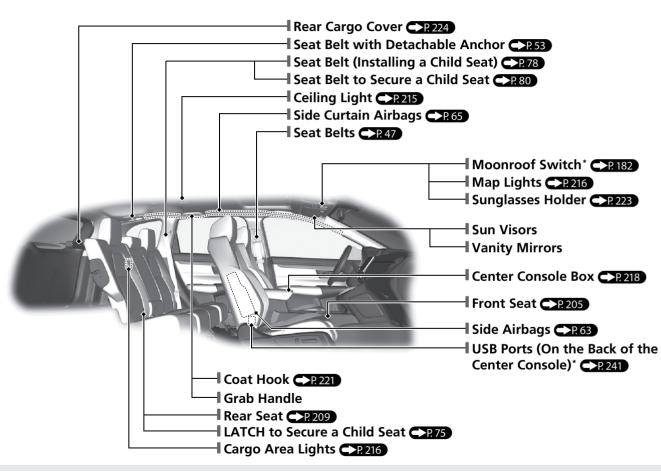

Visual Index

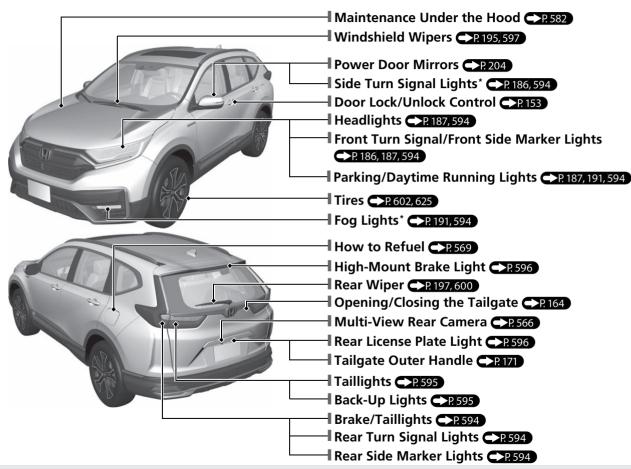

SPORT HYBRID i-MMD (intelligent Multi-Mode Drive)

Your SPORT HYBRID i-MMD vehicle uses both an electric motor and a gasoline engine as propulsion sources, with the electric motor receiving electricity from an internal High Voltage battery or internal generator. The High Voltage battery can be charged from the generator driven by the engine or regenerative braking.

When driving, your vehicle is propelled exclusively by the electric motor, exclusively by the gasoline engine, or by a combination of the two. The system selects which propulsion source is most appropriate and automatically switches to it. Under certain circumstances, pressing the **EV** button can manually enable EV (driven only on electricity) mode.

• Energy efficiency

As with a gasoline-powered vehicle, hybrid vehicle fuel efficiency and driving range is most impacted by your driving style. Aggressive acceleration and high-speed driving can easily trigger the system to switch the propulsion source to the gasoline-powered engine. In addition, heavy climate control system use negatively affects vehicle range and efficiency. Either of these use patterns will more quickly reduce the High Voltage battery's state of charge.

• Battery types

There are two types of batteries used in this vehicle; a standard 12-volt battery that powers the airbags, the interior and exterior lights, and other standard 12-volt systems; and a high voltage battery that is used to power the propulsion motor and recharge the 12-volt battery.

SPORT HYBRID i-MMD SYSTEM MAIN COMPONENTS

Gasoline Engine– Provides propulsion to drive the wheels under certain driving conditions, and turns the generator.

Generator– Starts the engine and generates electric power when driven by the gasoline engine to supply electricity to power the electric motor and/or to charge the High Voltage battery.

Electric Motor– Provides propulsion to drive the wheels in conjunction with the gasoline engine in certain conditions, and provides electricity to the High Voltage battery through regenerative braking.

High Voltage Battery– Provides electrical storage and serves as a power source for the electric motor.


Learning about the High Voltage battery's characteristics will help you get the best handling and maximize the range of your electric vehicle.

High Voltage Battery Charge Level Indicator- Displays

battery state of charge.

When the indicator:

- Displays two or less segments, EV mode is no longer available.
- Displays ten segments, battery charge level is full.

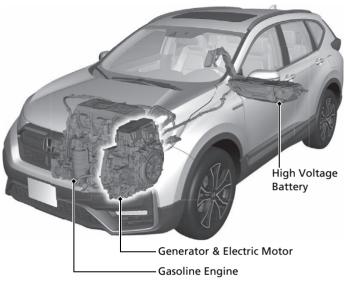

| Vehic | le Speed | | Time | |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Operating mode | Electric Vehicle (EV) | Hybrid (HV) | Engine (Direct Drive) | Regeneration |
| Driving state | Stopped or driven at low speeds: Only the electric motor provides propulsion to the wheels. | Driven in high-load conditions (e.g., when accelerating, going uphill): The Electric Motor provides propulsion to the wheels. The petrol engine drives the generator, supplying electricity to the electric motor for added propulsion or to the High Voltage battery for charging. | Driven in high-speed, low-load conditions: The petrol engine provides propulsion to the wheels. The High Voltage battery supplies electricity to the electric motor for added propulsion. The electric motor provides electricity to the High Voltage battery through regenerative braking. | The accelerator pedal is released and the vehicle is decelerating. The electric motor provides electricity to the High Voltage battery through regenerative braking. |
| Power Flow Monitor | | | | |
| Electric motor | Stopped/Running | Running | Generating/Running | Regenerating |
| Generator | Stopped | Generating | No Output | Stopped/No Output |
| Engine | Stopped | Running | Running | Stopped/No Output |
| High Voltage battery | Discharge | Charging/Discharge | Charging/Discharge | Charging |

EV Button

 EV mode is enabled by pressing the EV button near the shift button.

The **EV** mode indicator comes on in the instrument panel when EV mode is enabled.

Press the EV button again to switch back to HV mode.

Some conditions, such as a low High Voltage battery level and a high vehicle speed, may keep the system from manually switching into EV mode. The beeper sounds and a message appears on the driver information interface with the button pressed when EV mode is disabled.

Shifts in vehicle, driving or road conditions may automatically cancel EV mode and switch back to HV mode.


A message will appear on the driver information interface and EV mode may be canceled automatically when:

- The High Voltage battery charge level is low.
- Your vehicle speed is too high.
- Your vehicle speed is above 25 mph (40 km/h) while the engine is in warming-up operation.
- You fully depress the accelerator pedal.
- You are driving on hilly road.

Driver Information Interface Warning and Information Messages


In EV mode, the acoustic vehicle alerting system is on.

Acoustic Vehicle Alerting System

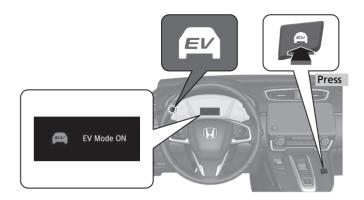

• Regenerative Energy and Regenerative Braking

When regenerative braking is in operation

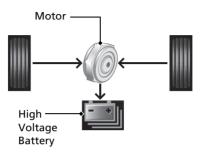

When decelerating without the accelerator being depressed or the brake pedal being applied, or while driving downhill, the electric motor acts as a generator that recovers a portion of the electrical energy that was used to accelerate the vehicle. This regenerative braking slows the vehicle in a manner similar to engine braking in a gasoline-powered vehicle. You can control the rate of deceleration by using the deceleration paddle selector.

• Auto Engine Stop/Start

Your vehicle's gasoline engine automatically stops running during vehicle operation or restarts while the vehicle is stationary when it is appropriate.

In the following cases, however, auto engine stop may not activate.

- The vehicle momentarily needs additional power for aggressive acceleration, or driving uphill or at high speed.
- The climate control system is in heavy use.
- The High Voltage battery temperature is high or low.

• Sounds Unique to the SPORT HYBRID i-MMD System

When you first start driving this vehicle, you will likely hear some unfamiliar sounds, particularly when you turn on the power system, or while you are driving or accelerating from a stop. Some of these sounds are unique to this vehicle's powertrain, fuel, and climate control systems; others are similar to sounds generated by conventional automobiles that typically are masked by louder noises absent from a vehicle of this design. These sounds are not a cause for concern, and you will soon recognize them as normal and thus be able to detect any new or unusual noise should one develop.

After shutting off the engine, you may hear certain noises coming from the vehicle. Here's the lowdown:

• Noise from Under Vehicle: This noise is caused by the vacuum pump inside the fuel evaporation leakage check module (ELCM). Depending on conditions, the pump will come on for about 15 minutes about 5 to 10 hours after engine shutoff. This noise is just normal vehicle operation and doesn't indicate a vehicle problem.

Safety Precautions



Do not cover the air intake.



If the air intake is obstructed during vehicle operation, the High Voltage battery can become too hot. To protect the battery, the system may start to limit the battery's output and cause the power system and 12-volt battery charging system indicators to come on.

Do not touch the High Voltage system

Attempting to take a High Voltage system component apart or disconnect one of its wires can cause severe electrical shock. Make sure that any maintenance or repairs to the High Voltage system is performed by a Honda dealer.

If a crash occurs

• Be careful of electric shock hazard.

► If a severe crash damages your vehicle's High Voltage system, there is a possibility of electrical shock due to exposed High Voltage components or wires. If this happens, do not touch any of the High Voltage system components or any of its orange wires.

• Avoid contact with High Voltage battery fluid.

► The High Voltage battery contains a flammable electrolyte that could leak as a result of a severe crash. Avoid skin or eye contact with the electrolyte as it is corrosive. If you accidentally come into contact with the electrolyte, rinse the exposed skin or flush your eyes with copious amounts of water for at least five minutes, and seek medical attention immediately.

• Use a fire extinguisher for an electrical fire.

Attempting to extinguish an electrical fire with even a small quantity of water, from a garden hose for instance, can be dangerous.

• Anytime the vehicle is damaged in a crash, have it repaired by a dealer.

Quick Reference Guide

Emergency Shutdown System for the High Voltage System

If the vehicle is involved in a crash, the emergency shutdown system will activate depending on the severity of the impact. When the system activates, the High Voltage system automatically shuts down, and the vehicle can no longer move under its own power. To return the High Voltage system back to normal operation, consult a dealer.

Honda collects and recycles High Voltage batteries used in its vehicles - consult a dealer for more information.

Eco Assist® System 22433


Ambient Meter -

• With SPORT mode off, the color of the ambient meter changes to green to indicate that the vehicle is being driven in a fuel efficient manner.

ECON Mode Indicator P. 100 Comes on when the ECON button is pressed.



The message is displayed for a few seconds when the **ECON** button is pressed.

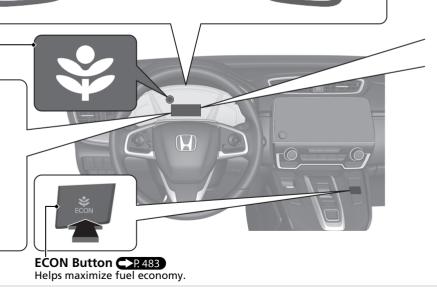


Drive Cycle Score/Lifetime Points

• Comes on when the power mode is in VEHICLE OFF.



Eco Drive Display CRIBO

• Keep the vehicle icon near the center of the circle.

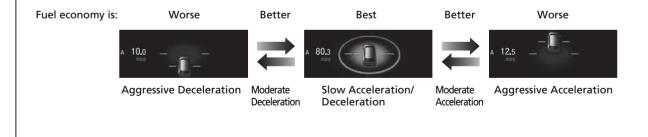


Safe Driving



 Your vehicle is fitted with airbags to help protect you and your passengers during a moderate-to-severe collision.

- Child Safety CR70

- All children 12 and younger should be seated in the rear seat.
- Smaller children should be properly restrained in a forward-facing child seat.
- Infants must be properly restrained in a rear-facing child seat.

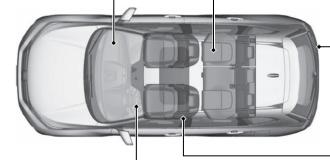

-Exhaust Gas Hazard 🖙 🕬

• Your vehicle emits dangerous exhaust gases that contain carbon monoxide. Do not run the engine in confined spaces where carbon monoxide gas can accumulate.

Before Driving Checklist CP246

• Before driving, check that the front seats, head restraints, steering wheel, and mirrors have been properly adjusted.

Seat Belts P.47


- Fasten your seat belt and sit upright well back in the seat.
- Check that your passengers are wearing their seat belts correctly.



Fasten your lap belt as low as possible.

Instrument Panel

Indicators RESS/Driver Information Interface (CRI26)/Gauges (CRI24)

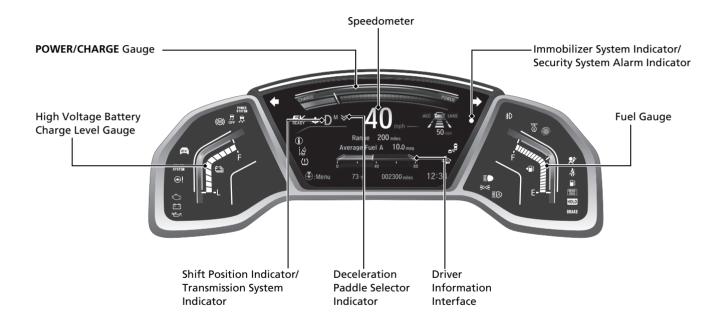

Controls CERT

Clock CP.148

Models with color audio system





- Press and hold the **MENU/CLOCK** button.
- 2 Rotate ⁽[¬]) to change hour, then press [™]₂.
- E
- Rotate \bigcirc to change minute, then press \bigotimes .
- 4 Select SET, then press ⊘.

These indications are used to show how to operate the selector knob.

- Rotate 🗇 to select.
- Press 🕹 to enter.

 
Models with navigation system

The navigation system receives signals from GPS satellites, updating the clock automatically.

Models with Display Audio



Select the frome (Home) icon, then select Settings.



3 Touch the respective ▲ / ▼ icon to adjust the hours or minutes up or down.



POWER Button CR183

Press the button to change the vehicle's power mode.



Turn Signals R186

Turn Signal Control Lever





Light Control Switches



Wipers and Washers

Wiper/Washer Control Lever

MIST OFF AUTO*1: Wiper speed varies automatically INT*2: Low speed with intermittent LO: Low speed wipe HI: High speed wipe HI: High speed wipe Pull toward you to spray washer fluid.

Adjustment Ring

- -: Low Sensitivity^{*1}
- •: Lower speed, fewer sweeps*2
- +: High Sensitivity*1
- + Children Higher speed, more sweeps*2

*1: Models with automatic intermittent wipers

*2: Models without automatic intermittent wipers


Models with automatic intermittent wipers AUTO should always be turned OFF before the following situations in order to prevent severe damage to the wiper system:

- Cleaning the windshield
- Driving through a car wash
- No rain present

Steering Wheel CR202

• To adjust, pull the adjustment lever towards you, adjust to the desired position, then lock the lever back in place.

To adjust

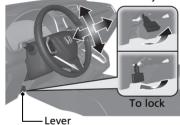

Unlocking the Front Doors from the Inside

₽. 160

• Pull either front door inner handle to unlock and open it at the same time.



Tailgate CP.164

• Press the tailgate outer handle to unlock and open the tailgate when you have the smart entry remote on you.

Models with power tailgate


 Press the power tailgate button on the driver's side control panel, or press the remote transmitter to unlock and open the tailgate when you have the smart entry remote on you.



Models with hands free access

Use a forward and back kicking motion under the center of the rear bumper to open or close the power tailgate while carrying the smart entry remote.



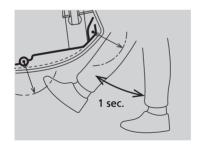

Power Door Mirrors

₽. 204

- With the power mode in ON, move the selector switch to L or R.
- Push the appropriate edge of the adjustment switch to adjust the mirror.

Selector Switch




Adjustment Switch

Power Windows CR178

- With the power mode in ON, open and close the power windows.
- If the power window lock button is in the off position, each passenger's window can be opened and closed with its own switch.
- If the power window lock button is in the on position (indicator on), each passenger's window switch is disabled.


Auto-open/close function on driver's window

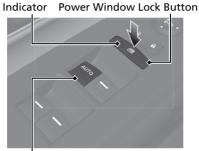

Window Switch

Auto-open/close function on front windows

Indicator Power Window Lock Button

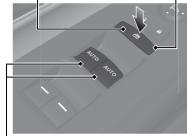



Window Switches

Climate Control System CI2222

- Press the **AUTO** button to activate the climate control system.
- Press the SOFF button to turn the system on or off.
- Press the windshield.

Models without SYNC button

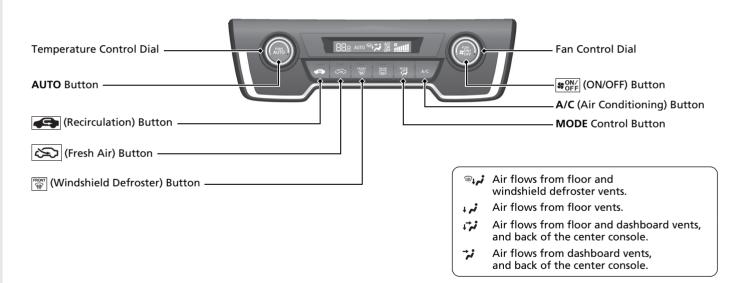

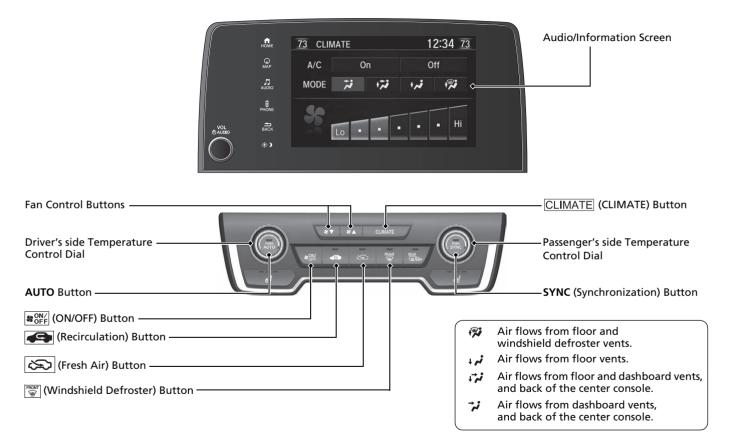


Features CIPER

 Audio Remote Controls







- + / Bar Press to adjust the volume up/down.
- ▲ / ▼ Button Press \blacktriangle or \bigtriangledown to cycle through the audio mode as follows:

Models with color audio system

FM1/FM2/AM/USB or iPod/Pandora®/ Bluetooth[®] Audio

Models with Display Audio

FM/AM/SiriusXM®/USB/iPod/ Bluetooth® Audio/Pandora®/Apps/ Audio Apps

Models with Display Audio

- ENTER Button
- When listening to a USB flash drive
- Press ENTER to display the folder list.
- **2** Press \blacktriangle or \bigtriangledown to select a folder.
- Press ENTER to display a list of tracks in that folder.
- 4 Press \blacktriangle or \bigtriangledown to select a track, then press ENTER.
- When listening to an iPod
- Press ENTER to display the iPod music list.
- 2 Press \blacktriangle or \bigtriangledown to select a category.
- Press ENTER to display a list of items in the category.
- Press \blacktriangle or \bigtriangledown to select an item, then press ENTER.
- ▶ Press ENTER and press ▲ or ▼ repeatedly until a desired item you want to listen is displayed.

- When listening to Pandora®
 - Press ENTER to display the station list.
- Press \blacktriangle or \bigtriangledown to select an item, then press ENTER.
- When listening to *Bluetooth*[®] Audio
 - Press ENTER to display the track list.
- Press \blacktriangle or \bigtriangledown to select a track, then press ENTER.

Quick Reference Guide

• I b Button

Radio:Press to change the preset station. Press and hold to select the next or previous strong station.

USB device:

Press to skip to the beginning of the next song or return to the beginning of the current song. Press and hold to change a folder.

Pandora®:

Press to skip to the next track. Press and hold to select the next or previous station.


• (Display/Information) Button: Press to change contents.

Driver Information Interface




Audio System 28240

Models with color audio system P. 247

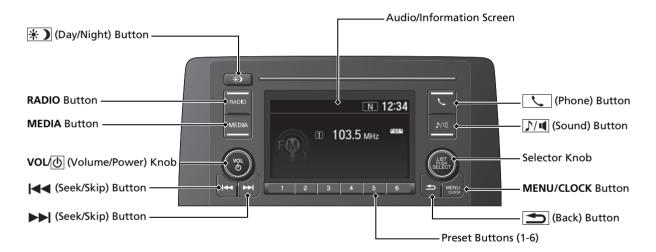

Models with Display Audio P. 268

For navigation system operation 🗲 See the Navigation System Manual

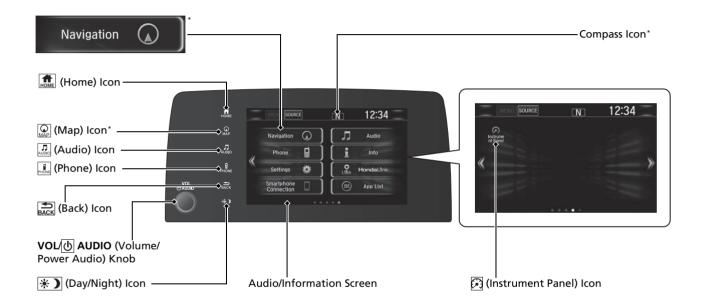

Driving CR455

- Select P and depress the brake pedal when turning on the power.
- Shift selection



 


Park

Ρ

Press the P button.

Used when parking or before turning off or starting the power system. Transmission is locked.





Neutral Press the N button. Transmission is not locked.



Drive

Press the D button. Used for normal driving. The deceleration paddle selector can be used temporarily.

The deceleration paddle selector can be used when SPORT mode is on.

Deceleration Paddle Selector P.480

When you release the accelerator pedal, you can control the rate of deceleration without removing your hands from the steering wheel. Using the deceleration paddle selector situated on the steering wheel, you can sequentially shift through four stages of deceleration.

Pull the + selector for a few seconds when you want to cancel the deceleration paddle selector.

When SPORT mode is OFF

If you pull back the paddle selector, the rate of deceleration will change temporarily, and the stage will appear in the instrument panel.

When SPORT mode is ON

If you pull back the paddle selector, the rate of deceleration will change and the stage along with **M** will appear in the instrument panel.



- Paddle Selector

| + Paddle | |
|----------|--|
| Selector | |

When SPORT mode is OFF, the deceleration stage appears.

When SPORT mode is ON, the deceleration stage and **M** appear.



Deceleration stage





VSA[®] On and Off CR486

- The Vehicle Stability Assist[™] (VSA[®]) system helps stabilize the vehicle during cornering, and helps maintain traction while accelerating on loose or slippery road surfaces.
- VSA[®] comes on automatically every time you turn on the power system.
- To partially disable VSA[®] functionality/ features, press and hold it until you hear a beep.

Tire Pressure Monitoring System (TPMS)

- Detects a change in tire conditions and overall dimensions due to decrease in tire pressures.
- The TPMS is turned on automatically every time you turn on the power system.
- A calibration procedure must be performed when certain conditions arise.

CMBS[™] On and Off

► P. 506

- When a possible collision is likely unavoidable, the CMBS[™] can help you to reduce the vehicle speed and the severity of the collision.
- The CMBS[™] is turned on every time you turn on the power system.
- To turn the CMBS[™] on or off, press and hold the button until you hear a beep.

Refueling CR568

Fuel recommendation: Unleaded gasoline, pump octane number 87 or higher Fuel tank capacity:14 US gal (53 L)

Pull the fuel fill door release handle.




After refueling, wait for about five seconds before removing the filler nozzle.



Honda Sensing[®] (1949)

Honda Sensing[®] is a driver support system which employs the use of two distinctly different kinds of sensors, a radar sensor located in the front grille and a front sensor camera mounted to the interior side of the windshield, behind the rear view mirror.

> The camera is located behind the rearview mirror

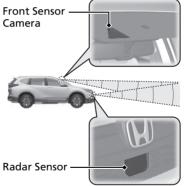

The radar sensor is inside the front arille.



Collision Mitigation Braking System[™] (CMBS[™]) ⊂ 28502

Can assist you when there is a possibility of your vehicle colliding with a vehicle or a pedestrian detected in front of yours. The CMBS[™] is designed to alert you when a potential collision is determined, as well as to reduce your vehicle speed to help minimize collision severity when a collision is deemed unavoidable.

Adaptive Cruise Control (ACC) with Low Speed Follow CR51B

Helps maintain a constant vehicle speed and a set following-interval behind a vehicle detected ahead of yours and, if the detected vehicle comes to a stop, can decelerate and stop your vehicle, without you having to keep your foot on the brake or the accelerator.

Lane Keeping Assist System (LKAS)

Provides steering input to help keep the vehicle in the middle of a detected lane and provides tactile and visual alerts if the vehicle is detected drifting out of its lane.

Road Departure Mitigation (RDM) System ►**P**.539

Alerts and helps to assist you when the system detects a possibility of your vehicle unintentionally crossing over detected lane markings and/or leaving the roadway altogether.

Maintenance CIERR

Under the Hood CTRESS

- Check engine oil, engine coolant, and windshield washer fluid. Add when necessary.
- Check brake fluid.
- Check the 12-volt battery condition monthly.


П Pull the hood release handle under the corner of the dashboard.





Locate the hood latch lever, push it to the side, and then raise the hood. Once you have raised the hood slightly, you can release the lever.



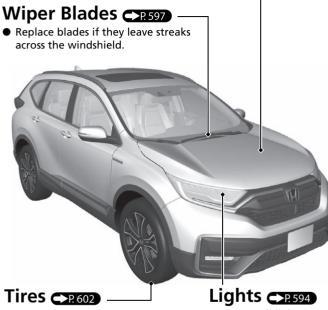

- Inspect tires and wheels regularly.
- Check tire pressures regularly.
- Install snow tires for winter driving.

- Inspect all lights regularly.

When finished, close the hood and make sure it is firmly locked in place.

Handling the Unexpected CIERRI

Flat Tire CR625

• Park in a safe location and repair the flat tire using the tire repair kit in the cargo area.



Indicators Come On

►P. 648

Identify the indicator and consult the owner's manual.




Power System Won't Start C21640

• If the 12-volt battery is dead, jump start using a booster battery.



Blown Fuse **PR655**

Check for a blown fuse if an electrical device does not operate.

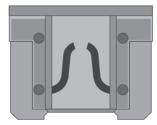

Overheating 7.645

• Park in a safe location. If you do not see steam under the hood, open the hood, and let the power system cool down.



Emergency Towing CR659

• Call a professional towing service if you need to tow your vehicle.



What to Do If

Why does the brake pedal pulsate slightly when applying the brakes?



This can occur when the ABS activates and does not indicate a problem. Apply firm, steady pressure on the brake pedal. Never pump the brake pedal.

Anti-lock Brake System (ABS)

The rear door cannot be opened from inside the vehicle. Why?



Check if the childproof lock is in the lock position. If so, open the rear door with the outside door handle

To cancel this function, slide the lever up to the unlock position.





Why do the doors lock after I unlocked the doors?



If you do not open the doors within 30 seconds, the doors are relocked automatically for security.



Why does the beeper sound when I open the driver's door?



The beeper sounds when:

• The exterior lights are left on.

• The power mode is in ACCESSORY.



Why does a beeper sound when I walk away from the vehicle after I close the door?



The beeper sounds if you move outside the walk away auto lock operating range before the door completely closes. ► Locking the doors and tailgate (Walk away auto lock®) <> P.155



Why does the beeper sound when I start driving?

The beeper sounds when the driver and/or front passenger are not wearing their seat belts.



Pressing the electric parking brake switch does not release the parking brake. Why?



Press the electric parking brake switch with the brake pedal depressed.



Depressing the accelerator pedal does not release the parking brake automatically. Why?



• Fasten the driver's seat belt.

• Check if the transmission is in P or N. If so, select any other position.



Why do I hear a screeching sound when I apply the brake pedal?



The brake pads may need to be replaced. Have your vehicle inspected by a dealer.

I'm seeing an amber indicator of a tire with an exclamation point. What is that?



The Tire Pressure Monitoring System (TPMS) needs attention. If you recently inflated or changed a tire, you have to recalibrate the system.

Tire Pressure Monitoring System (TPMS) P. 489

Why does the shift position automatically change to P when I open the driver's door to check for parking space lines when reversing?

- Fasten the driver's seat belt.
- Close the driver's door and manually change the shift position.

When opening the driver's door P.476

Safe Driving

You can find many safety recommendations throughout this chapter, and throughout this manual.

For Safe Driving

| Important Safety Precautions | 42 |
|--------------------------------|----|
| Important Handling Information | 44 |
| Your Vehicle's Safety Features | 45 |
| Safety Checklist | |
| Seat Belts | |
| About Your Seat Belts | 47 |
| Fastening a Seat Belt | 51 |
| Seat Belt Inspection | 55 |
| Airbags | |
| Airbag System Components | 56 |
| Types of Airbags | 59 |

| Front Airbags (SRS) | . 59 |
|--------------------------------------|------|
| Side Airbags | . 63 |
| Side Curtain Airbags | . 65 |
| Airbag System Indicators | . 67 |
| Airbag Care | . 69 |
| Child Safety | |
| Protecting Child Passengers | . 70 |
| Safety of Infants and Small Children | . 72 |
| Safety of Larger Children | . 82 |
| Exhaust Gas Hazard | |
| Carbon Monoxide Gas | . 84 |
| | |

Safety Labels

Label Locations 85

The following pages explain your vehicle's safety features and how to use them properly. The safety precautions below are ones that we consider to be among the most important.

Important Safety Precautions

Always wear your seat belt

A seat belt is your best protection in all types of collisions. Airbags are designed to supplement seat belts, not replace them. So even though your vehicle is equipped with airbags, make sure you and your passengers always wear your seat belts, and wear them properly.

Restrain all children

Children ages 12 and under should ride properly restrained in a back seat, not the front seat. Infants and small children should be restrained in a child seat. Larger children should use a booster seat and a lap/shoulder seat belt until they can use the belt properly without a booster seat.

Be aware of airbag hazards

While airbags can save lives, they can cause serious or fatal injuries to occupants who sit too close to them, or are not properly restrained. Infants, young children, and short adults are at the greatest risk. Be sure to follow all instructions and warnings in this manual.

Don't drink and drive

Alcohol and driving don't mix. Even one drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. So don't drink and drive, and don't let your friends drink and drive, either.

➢Important Safety Precautions

Some states prohibit the use of cell phones other than hands-free devices by the driver while driving.

■ Pay appropriate attention to the task of driving safely

Engaging in cell phone conversation or other activities that keep you from paying close attention to the road, other vehicles, and pedestrians could lead to a crash. Remember, situations can change quickly, and only you can decide when it is safe to divert some attention away from driving.

Control your speed

Excessive speed is a major factor in crash injuries and deaths. Generally, the higher the speed, the greater the risk, but serious injuries can also occur at lower speeds. Never drive faster than is safe for current conditions, regardless of the maximum speed posted.

■ Keep your vehicle in safe condition

Having a tire blowout or a mechanical failure can be extremely hazardous. To reduce the possibility of such problems, check your tire pressures and condition frequently, and perform all regularly scheduled maintenance.

Do not leave children unattended in the vehicle

Children, pets and people needing assistance left unattended in the vehicle may be injured if they activate one or more of the vehicle controls. They may also cause the vehicle to move, resulting in a crash in which they and/or another person(s) can be injured or killed. Also, depending on the ambient temperature, the temperature of the interior may reach extreme levels, which can result in harm or death. Even if the climate control system is on, never leave them in the vehicle unattended as the climate control system can shut off at any time.

Important Handling Information

Your vehicle has higher ground clearance than a passenger vehicle designed for use only on pavement. Higher ground clearance has many advantages for off-highway driving. It allows you to travel over bumps, obstacles, and rough terrain. It also provides good visibility so you can anticipate problems earlier.

These advantages come at some cost. Because your vehicle is taller and rides higher off the ground, it has a higher center gravity making it more susceptible to tipping or roll over if you make abrupt turns. Utility vehicles have a significantly higher rollover rate than other types of vehicles. In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt. As a reminder, make sure you and your passengers always wear seat belts. ➢Important Handling Information


For information on how to reduce the risk of rollover, read:

- Precautions While Driving P. 471
- Diff-Highway Driving Guidelines P. 463

Failure to operate your vehicle correctly might result in a crash or a rollover.

Safe Driving

Your Vehicle's Safety Features

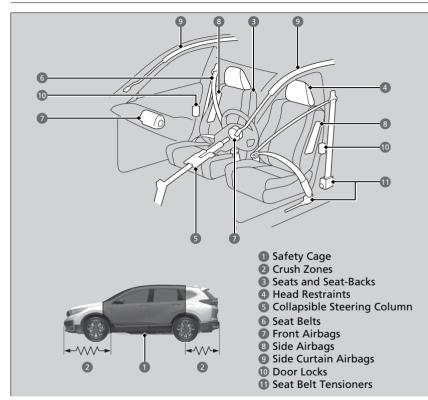

The following checklist will help you take an active role in protecting yourself and your passengers.

Your Vehicle's Safety Features

Your vehicle is equipped with many features that work together to help protect you and your passengers during a crash.

Some features do not require any action on your part. These include a strong steel framework that forms a safety cage around the passenger compartment, front and rear crush zones, a collapsible steering column, and tensioners that tighten the front seat belts in a sufficient crash.

However, you and your passengers cannot take full advantage of these features unless you remain seated in the correct position and always wear your seat belts. In fact, some safety features can contribute to injuries if they are not used properly.

Safety Checklist

For the safety of you and your passengers, make a habit of checking these items each time before you drive.

• After everyone has entered the vehicle, be sure all doors and the tailgate are closed and locked. Locking the doors and the tailgate helps prevent an occupant from being ejected and an outsider from unexpectedly opening a door or the tailgate.

Locking/Unlocking the Doors from the Inside P. 160

• Adjust your seat to a position suitable for driving. Be sure the front seats are adjusted as far to the rear as possible while allowing the driver to control the vehicle. Sitting too close to a front airbag can result in serious or fatal injury in a crash.

Adjusting the Seats P. 205

• Adjust head restraints to the proper position. Head restraints are most effective when the center of the head restraint aligns with the center of your head. Taller persons should adjust their head restraint to the highest position.

Adjusting the Front Head Restraints P. 212

• Always wear your seat belt, and make sure you wear it properly. Confirm that any passengers are properly belted as well.

Fastening a Seat Belt P. 51

• Protect children by using seat belts or child seats according to a child's age, height and weight.

Child Safety P. 70

Safety Checklist

If the door and/or tailgate open message appears on the driver information interface, a door and/or the tailgate is not completely closed. Close all doors and the tailgate tightly until the message disappears.

Driver Information Interface Warning and Information Messages P. 107



Seat Belts

About Your Seat Belts

Seat belts are the single most effective safety device because they keep you connected to the vehicle so that you can take advantage of many built-in safety features. They also help keep you from being thrown against the inside of the vehicle, against any passengers, or out of the vehicle. When worn properly, seat belts also keep your body properly positioned in a crash so that you can take full advantage of the additional protection provided by the airbags.

In addition, seat belts help protect you in almost every type of crash, including:

- frontal impacts
- side impacts
- rear impacts
- rollovers

Lap/shoulder seat belts

All five seating positions are equipped with lap/shoulder seat belts with emergency locking retractors. In normal driving the retractor lets you move freely while keeping some tension on the belt. During a collision or sudden stop the retractor locks to restrain your body.

The front passenger's and rear seat belts also have a lockable retractor for use with child seats.

Sinstalling a Child Seat with a Lap/Shoulder Seat Belt P. 78

➢About Your Seat Belts

Not wearing a seat belt properly increases the chance of serious injury or death in a crash, even though your vehicle has airbags.

Be sure you and your passengers always wear seat belts and wear them properly.

If you extend the seat belt too quickly, it will lock in place. If this happens, slightly retract the seat belt, then extend it slowly.

Seat belts cannot completely protect you in every crash. But in most cases, seat belts can reduce your risk of serious injury.

Most states require you to wear seat belts.

Proper use of seat belts

Follow these guidelines for proper use:

- All occupants should sit upright, well back in the seat, and remain in that position for the duration of the trip. Slouching and leaning reduce the effectiveness of the belt and can increase the chance of serious injury in a crash.
- Never place the shoulder part of a lap/shoulder seat belt under your arm or behind your back. This could cause very serious injuries in a crash.
- Two people should never use the same seat belt. If they do, they could be very seriously injured in a crash.
- Do not put any accessories on the seat belts. Devices intended to improve comfort or reposition the shoulder part of a seat belt can reduce the protective capability and increase the chance of serious injury in a crash.

➢About Your Seat Belts

If a rear seat passenger moves around and extends the seat belt, the lockable retractor may activate. If this happens, release the retractor by unfastening the seat belt and allow the belt to retract completely. Then refasten the belt.

Seat Belt Reminder



The seat belt system includes an indicator on the instrument panel to remind the driver or a front passenger or both to fasten their seat belts.

If you set the power mode to ON and a seat belt is not fastened, a beeper will sound and the indicator will blink. After a few seconds, the beeper will stop and the indicator will come on and remain illuminated until the seat belt is fastened.

The beeper will periodically sound and the indicator will blink while the vehicle is moving until the seat belt is fastened.

≫Seat Belt Reminder

The indicator will also come on if a front passenger does not fasten their seat belt within six seconds after the power mode is set to ON.

When no one is sitting in the front passenger's seat, the indicator will not come on and the beeper will not sound.

The indicator also may not come on and the beeper may not sound when the occupant is not heavy enough to trigger the weight sensor. Such occupants (e.g., infants and smaller children) should be moved to the rear seat as a deploying front airbag likely will injure or kill them.

Protecting Child Passengers P. 70

Automatic Seat Belt Tensioners

The front seats are equipped with automatic seat belt tensioners to enhance safety.

The tensioners automatically tighten the front seat belts during a moderate-tosevere frontal collision, sometimes even if the collision is not severe enough to inflate the front airbags.



➢Automatic Seat Belt Tensioners


The seat belt tensioners can only operate once. If a tensioner is activated, the SRS indicator will come on. Have a dealer replace the tensioner and thoroughly inspect the seat belt system as it may not offer protection in a subsequent crash.

During a moderate-to-severe side impact, the tensioner on that side of the vehicle also activates.

Fastening a Seat Belt

After adjusting a front seat to the proper position, and while sitting upright and well back in the seat:

Adjusting the Seats P. 205

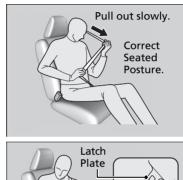

Buckle

1. Pull the seat belt out slowly.

- **2.** Insert the latch plate into the buckle, then tug on the belt to make sure the buckle is secure.
 - Make sure that the belt is not twisted or caught on anything.

Fastening a Seat Belt

No one should sit in a seat with an inoperative seat belt or one that does not appear to be working correctly. Using a seat belt that is not working properly may not protect the occupant in a crash. Have a dealer check the belt as soon as possible.

Never insert any foreign objects into the buckle or retractor mechanism.

If the seat belt appears to be locked in a fully retracted position, firmly pull out on the shoulder belt once, then push it back in.

Then smoothly pull it out of the retractor and fasten. If you are unable to release the seat belt from a fully retracted position, do not allow anyone to sit in the seat, and take your vehicle to a dealer for repair.

About Your Seat Belts P. 47
 Seat Belt Inspection P. 55



- **3.** Position the lap part of the belt as low as possible across your hips, then pull up on the shoulder part of the belt so the lap part fits snugly. This lets your strong pelvic bones take the force of a crash and reduces the chance of internal injuries.
- **4.** If necessary, pull up on the belt again to remove any slack, then check that the belt rests across the center of your chest and over your shoulder. This spreads the forces of a crash over the strongest bones in your upper body.

➢Fastening a Seat Belt

Improperly positioning the seat belts can cause serious injury or death in a crash.

Make sure all seat belts are properly positioned before driving.

To release the belt, push the red **PRESS** button and then guide the belt by hand until it has retracted completely.

When exiting the vehicle, be sure the belt is properly stowed so that it will not get caught in the closing door.


➢Adjusting the Shoulder Anchor

The shoulder anchor height can be adjusted to four levels. If the belt contacts your neck, lower the height one level at a time.

After an adjustment, make sure that the shoulder anchor position is secure.


Adjusting the Shoulder Anchor

The front seats have adjustable shoulder anchors to accommodate taller and shorter occupants.

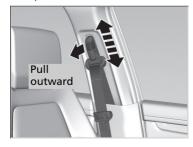

- **1.** Move the anchor up and down while pulling the shoulder anchor outward.
- **2.** Position the anchor so that the belt rests across the center of your chest and over your shoulder.

Seat Belt with Detachable Anchor

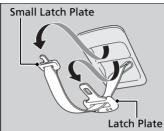

1. Pull out the seat belt's small latch plate and the latch plate from each holding slot in the ceiling.

2. Line up the triangle marks on the small latch plate and anchor buckle. Make sure the seat belt is not twisted. Attach the belt to the anchor buckle.


3. Insert the latch plate into the buckle. Properly fasten the seat belt the same way you fasten the lap/shoulder seat belt.


Seat Belt with Detachable Anchor

Using the seat belt with the detachable anchor unlatched increases the chance of serious injury or death in a crash.


Before using the seat belt, make sure the detachable anchor is correctly latched.

To unlatch the detachable anchor, insert the latch plate into the slot on the side of the anchor buckle.

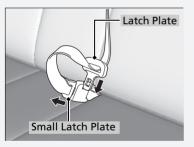

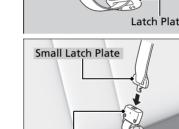

Anchor Buckle

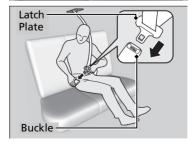

Continued

Safe Driving

Advice for Pregnant Women

If you are pregnant, the best way to protect yourself and your unborn child when driving or riding in a vehicle is to always wear a seat belt and keep the lap part of the belt as low as possible across the hips.

Wear the shoulder belt across the chest avoiding the abdomen.



Wear the lap part of the belt as low as possible across the hips.

➢Advice for Pregnant Women

Each time you have a checkup, ask your doctor if it is okay for you to drive.

To reduce the risk of injuries to both you and your unborn child that can be caused by an inflating front airbag:

- When driving, sit upright and adjust the seat as far back as possible while allowing full control of the vehicle.
- When sitting in the front passenger's seat, adjust the seat as far back as possible.

Seat Belt Inspection

Regularly check the condition of your seat belts as follows:

- Pull each belt out fully, and look for frays, cuts, burns, and wear.
- Check that the latch plates and buckles work smoothly and the belts retract easily.
 - ▶ If a belt does not retract easily, cleaning the belt may correct the problem. Only use a mild soap and warm water. Do not use bleach or cleaning solvents. Make sure the belt is completely dry before allowing it to retract.

Any belt that is not in good condition or working properly will not provide proper protection and should be replaced as soon as possible.


A belt that has been worn during a crash may not provide the same level of protection in a subsequent crash. Have your seat belts inspected by a dealer after any collision.

Seat Belt Inspection

Not checking or maintaining seat belts can result in serious injury or death if the seat belts do not work properly when needed.

Check your seat belts regularly and have any problem corrected as soon as possible.

Airbag System Components

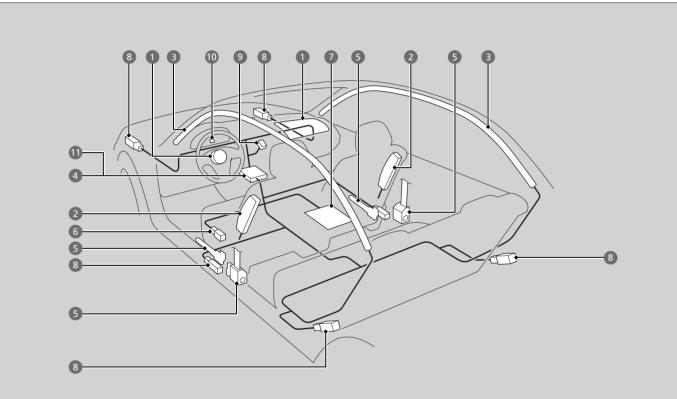

The front, front side, and side curtain airbags are deployed according to the direction and severity of impact. Both side curtain airbags are deployed in a rollover. The airbag system includes:

- Two SRS (Supplemental Restraint System) front airbags. The driver's airbag is stored in the center of the steering wheel; the front passenger's airbag is stored in the dashboard. Both are marked SRS AIRBAG.
- Two side airbags, one for the driver and one for a front passenger. The airbags are stored in the outer edges of the seatbacks. Both are marked SIDE AIRBAG.
- Two side curtain airbags, one for each side of the vehicle. The airbags are stored in the ceiling, above the side windows. The front and rear pillars are marked SIDE CURTAIN AIRBAG.

- An electronic control unit that, when the power mode is in ON, continually monitors information about the various impact sensors, seat and buckle sensors, rollover sensor, airbag activators, seat belt tensioners, and other vehicle information. During a crash event the unit can record such information.
- Automatic front seat belt tensioners. In addition, the driver's and front passenger's seat belt buckles incorporate sensors that detect whether or not the belts are fastened.
- A driver's seat position sensor. This sensor determines the optimal force at which the airbag will deploy in a crash.
- Weight sensors in the front passenger's seat. The front passenger's airbag will be turned off if the weight on the seat is approximately 65 lbs (29 kg) or less (the weight of an infant or small child).

- Impact sensors that can detect a moderate-to-severe front or side impact.
- An indicator on the dashboard that alerts you that the front passenger's front airbag has been turned off.
- O An indicator on the instrument panel that alerts you to a possible problem with your airbag system or seat belt tensioners.
- A rollover sensor that can detect if your vehicle is about to roll over and signal the control unit to deploy both side curtain airbags.

Important Facts About Your Airbags

Airbags can pose serious hazards. To do their job, airbags must inflate with tremendous force. So, while airbags help save lives, they can cause burns, bruises, and other minor injuries, sometimes even fatal ones if occupants are not wearing their seat belts properly and sitting correctly.

What you should do: Always wear your seat belt properly, and sit upright and as far back from the steering wheel as possible while allowing full control of the vehicle. A front passenger should move their seat as far back from the dashboard as possible.

Remember, however, that no safety system can prevent all injuries or deaths that can occur in a severe crash, even when seat belts are properly worn and the airbags deploy.

Do not place hard or sharp objects between yourself and a front airbag.

Carrying hard or sharp objects on your lap, or driving with a pipe or other sharp object in your mouth, can result in injuries if your front airbag inflates.

Do not attach or place objects on the front airbag covers. Objects on the covers marked **SRS AIRBAG** could interfere with the proper operation of the airbags or be propelled inside the vehicle and hurt someone if the airbags inflate.

➢Important Facts About Your Airbags

Do not attempt to deactivate your airbags. Together, airbags and seat belts provide the best protection.

When driving, keep hands and arms out of the deployment path of the front airbag by holding each side of the steering wheel. Do not cross an arm over the airbag cover.

Types of Airbags

Your vehicle is equipped with three types of airbags:

- Front airbags: Airbags in front of the driver's and front passenger's seats.
- Side airbags: Airbags in the driver's and front passenger's seat-backs.
- Side curtain airbags: Airbags above the side windows.

Each is discussed in the following pages.

Front Airbags (SRS)

The front SRS airbags inflate in a moderate-to-severe frontal collision to help protect the head and chest of the driver and/or front passenger.

SRS (Supplemental Restraint System) indicates that the airbags are designed to supplement seat belts, not replace them. Seat belts are the occupant's primary restraint system.

Housing Locations

The front airbags are housed in the center of the steering wheel for the driver, and in the dashboard for the front passenger. Both airbags are marked **SRS AIRBAG**.

Types of Airbags

The airbags can inflate whenever the power mode is in ON.


After an airbag inflates in a crash, you may see a small amount of smoke. This is from the combustion process of the inflator material and is not harmful. People with respiratory problems may experience some temporary discomfort. If this occurs, get out of the vehicle as soon as it is safe to do so.

➢Front Airbags (SRS)

During a frontal crash severe enough to cause one or both front airbags to deploy, the airbags can inflate at different rates, depending on the severity of the crash, whether or not the seat belts are latched, and/ or other factors. Frontal airbags are designed to supplement the seat belts to help reduce the likelihood of head and chest injuries in frontal crashes. Front airbags are designed to inflate during moderate-to-severe frontal collisions. When the vehicle decelerates suddenly, the sensors send information to the control unit which signals one or both front airbags to inflate.

A frontal collision can be either head-on or angled between two vehicles, or when a vehicle crashes into a stationary object, such as a concrete wall.

How the Front Airbags Work

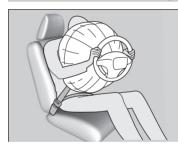

While your seat belt restrains your torso, the front airbag provides supplemental protection for your head and chest.

The front airbags deflate immediately so that they won't interfere with the driver's visibility or the ability to steer or operate other controls.

The total time for inflation and deflation is so fast that most occupants are not aware that the airbags deployed until they see them lying in front of them.

➢How the Front Airbags Work

Although the driver's and front passenger's airbags normally inflate within a split second of each other, it is possible for only one airbag to deploy. This can happen if the severity of a collision is at the margin, or threshold that determines whether or not the airbags will deploy. In such cases, the seat belt will provide sufficient protection, and the supplemental protection offered by the airbag would be minimal.

When front airbags should not deploy

Minor frontal crashes: Front airbags were designed to supplement seat belts and help save lives, not to prevent minor scrapes, or even broken bones that might occur during a less than moderate-to-severe frontal crash.

Side impacts: Front airbags can provide protection when a sudden deceleration causes a driver or front passenger to move toward the front of the vehicle. Side airbags and side curtain airbags have been specifically designed to help reduce the severity of injuries that can occur during a moderate-to-severe side impact which can cause the driver or passenger to move toward the side of the vehicle.

Rear impacts: Head restraints and seat belts are your best protection during a rear impact. Front airbags cannot provide any significant protection and are not designed to deploy in such collisions.

Rollovers: In a rollover, your best form of protection is a seat belt or, if your vehicle is equipped with a rollover sensor, both a seat belt and a side curtain airbag. Front airbags, however, are not designed to deploy in a rollover as they would provide little if any protection.

When front airbags deploy with little or no visible damage

Because the airbag system senses sudden deceleration, a strong impact to the vehicle framework or suspension might cause one or more of the airbags to deploy. Examples include running into a curb, the edge of a hole, or other low fixed object that causes a sudden deceleration in the vehicle chassis. Since the impact is underneath the vehicle, damage may not be readily apparent.

When front airbags may not deploy, even though exterior damage appears severe

Since crushable body parts absorb crash energy during an impact, the amount of visible damage does not always indicate proper airbag operation. In fact, some collisions can result in severe damage but no airbag deployment because the airbags would not have been needed or would not have provided protection even if they had deployed.

Advanced Airbags

The airbags have advanced features to help reduce the likelihood of airbag related injuries to smaller occupants.

Driver's Seat Position Sensor

Passenger's Seat Weight Sensors The driver's advanced airbag system includes a seat position sensor.

Based on information from this sensor and the severity of the impact, the advanced airbag system determines the optimal deployment of the driver's airbag.

The front passenger's advanced airbag system has weight sensors.

We advise against allowing a child age 12 or under to ride in the front passenger's seat. However, **if you do allow a child age 12 or under to ride in the front passenger's seat**, note that the system will automatically turn off the front passenger's airbag if the sensors detect that the child is approximately 65 lbs (29 kg) or less.

Advanced Airbags

If there is a problem with the driver's seat position sensor, the SRS indicator will come on, and in the event of a crash, the airbag will deploy (regardless of the driver's seating position) with a force corresponding to the severity of the impact.

For the advanced airbags to work properly:

- Do not spill any liquid on or under the seats.
- Do not put any object under the passenger's seat.
- Make sure any objects are positioned properly on the floor. Improperly positioned objects can interfere with the advanced airbag sensors.
- All occupants should sit upright and wear their seat belts properly.
- Do not cover the passenger's side dashboard with a cloth, towel, cover, etc.

Passenger Front Airbag Off Indicator P. 68

Make sure the floor mat behind the front passenger's seat is set in the correct position evenly on the floor. An improperly placed mat can interfere with the advanced airbag sensors.

Floor Mats P. 616

Side Airbags

The side airbags help protect the torso and pelvis of the driver or a front passenger during a moderate-to-severe side impact.

Housing Locations



The side airbags are housed in the outside edge of the driver's and passenger's seat-backs.

Both are marked **SIDE AIRBAG**.

≥Side Airbags


Make sure you and your front seat passenger always sit upright. Leaning into the path of a side airbag can prevent the airbag from deploying properly and increases your risk of serious injury.

Do not attach accessories on or near the side airbags. They can interfere with the proper operation of the airbags, or hurt someone if an airbag inflates.

Do not cover or replace the front seat-back covers without consulting a dealer.

Improperly replacing or covering front seat-back covers can prevent your side airbags from properly deploying during a side impact.

Operation

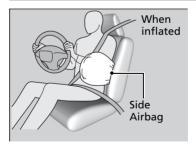

When the sensors detect a moderate-tosevere side impact, the control unit signals the side airbag on the impact side to immediately inflate.

■ When a side airbag deploys with little or no visible damage

Because the airbag system senses sudden acceleration, a strong impact to the side of the vehicle's framework can cause a side airbag to deploy. In such cases, there may be little or no damage, but the side impact sensors detected a severe enough impact to deploy the airbag.


When a side airbag may not deploy, even though visible damage appears severe

It is possible for a side airbag not to deploy during an impact that results in apparently severe damage. This can occur when the point of impact was toward the far front or rear of the vehicle, or when the vehicle's crushable body parts absorbed most of the crash energy. In either case, the side airbag would not have been needed nor provided protection even if it had deployed.

Side Curtain Airbags

The side curtain airbags help protect the heads of the driver and passengers in the outer seating positions during a moderate-to-severe side impact. The side curtain airbags equipped in this vehicle are also designed to help reduce the likelihood of partial and complete ejection of vehicle occupants through side windows in crashes, particularly rollover crashes.

Housing Locations

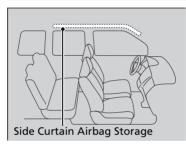

The side curtain airbags are located in the ceiling above the side windows on both sides of the vehicle.

Side Curtain Airbags

If the SRS control unit senses that your vehicle is about to rollover, it immediately deploys both side curtain airbags and activates both front seat belt tensioners.

If the impact is on the passenger's side, the passenger's side curtain airbag deploys even if there are no occupants on that side of the vehicle.

To get the best protection from the side curtain airbags, occupants should wear their seat belts properly and sit upright and well back in their seats.

Do not attach any objects to the side windows or roof pillars as they can interfere with the proper operation of the side curtain airbags.

Operation



The side curtain airbag is designed to deploy in a rollover or a moderate-to-severe side impact.

■ When side curtain airbags deploy in a frontal collision

One or both side curtain airbags may also inflate in a moderate-to-severe angled frontal collision.

Airbag System Indicators

If a problem occurs in the airbag system, the SRS indicator will come on and a message appears on the driver information interface.

Supplemental Restraint System (SRS) Indicator



■ When the power mode is set to ON The indicator comes on for a few seconds, then goes off. This tells you the system is working properly. Supplemental Restraint System (SRS) Indicator

AWARNING

Ignoring the SRS indicator can result in serious injury or death if the airbag systems or tensioners do not work properly.

Have your vehicle checked by a dealer as soon as possible if the SRS indicator alerts you to a possible problem.

If the indicator comes on at any other time, or does not come on at all, have the system checked by a dealer as soon as possible. If you don't, your airbags and seat belt tensioners may not work properly when they are needed.

Passenger Front Airbag Off Indicator





When the passenger front airbag off indicator comes on

The indicator comes on to alert you that the passenger's front airbag has been turned off. This occurs when the weight sensors detect about 65 lbs (29 kg) or less, the weight of an infant or small child, on the seat.

Children age 12 or under should always ride properly restrained in a back seat. Child Safety P. 70

If the front passenger's seat is empty, the passenger's front airbag will not deploy and the indicator will come on

≥Passenger Front Airbag Off Indicator

To ensure the passenger is detected properly, confirm that:

- There is no child seat or other object pressing against the rear of the seat-back.
- There is no rear passenger pushing or pulling on the back of the front passenger's seat.
- The front seat or seat-back is not forced back against an object on the seat or floor behind it.
- There is no object placed under or beside the front passenger's seat.
- The occupant is sitting in an upright position and the seat back is not excessively reclined.
- The occupant is not leaning against the door or center console
- The occupant's feet are placed on the floor in front of them
- There are no objects hanging from the front passenger's seat.
- Only small, lightweight objects are in the seat-back pocket.

The passenger front airbag off indicator may come on and go off periodically if the total weight on the seat is near the airbag cutoff threshold.

Have your vehicle checked by a dealer as soon as possible if:

- All of the above conditions are met, and the indicator comes on with an adult seated in the front passenger seat.
- The seat is empty and the indicator is off.

Do not allow an adult passenger to ride in the front seat when the indicator is on.

Airbag Care

You do not need to, and should not, perform any maintenance on or replace any airbag system components yourself. However, you should have your vehicle inspected by a dealer in the following situations:

When the airbags have deployed

If an airbag has inflated, the control unit and other related parts must be replaced. Similarly, once an automatic seat belt tensioner has been activated, it must be replaced.

■ When the vehicle has been in a moderate-to-severe collision

Even if the airbags did not inflate, have your dealer inspect the following: the driver's seat position sensor, weight sensors in the passenger's seat, front seat belt tensioners, and each seat belt that was worn during the crash.

Do not remove or modify a front seat without consulting a dealer

This would likely disable or affect the proper operation of the driver's seat position sensor or the weight sensors in the passenger's seat. If it is necessary to remove or modify a front seat to accommodate a person with disabilities, contact a Honda dealer, or American Honda Automobile Customer Service at 1-800-999-1009.

➢Airbag Care

We recommend against the use of salvaged airbag system components, including the airbag, tensioners, sensors, and control unit.

Child Safety

Protecting Child Passengers

Each year, many children are injured or killed in vehicle crashes because they are either unrestrained or not properly restrained. In fact, vehicle crashes are the number one cause of death of children ages 12 and under.

To reduce the number of child deaths and injuries, every state requires that infants and children be properly restrained when they ride in a vehicle.

Children should sit properly restrained in a rear seat. This is because:



- An inflating front or side airbag can injure or kill a child sitting in the front seat.
- A child in the front seat is more likely to interfere with the driver's ability to safely control the vehicle.
- Statistics show that children of all sizes and ages are safer when they are properly restrained in a rear seat.

➢Protecting Child Passengers

Children who are unrestrained or improperly restrained can be seriously injured or killed in a crash.

Any child too small for a seat belt should be properly restrained in a child seat. A larger child should be properly restrained with a seat belt, using a booster seat if necessary.

The National Highway Traffic Safety Administration recommends that all children ages 12 and under be properly restrained in a rear seat. Some states have laws restricting where children may ride.

- Any child who is too small to wear a seat belt correctly must be restrained in an approved child seat that is properly secured to the vehicle using either the seat belt or the lower anchors of the LATCH system.
- Never hold a child on your lap because it is impossible to protect them in the event of a collision.
- Never put a seat belt over yourself and a child. During a crash, the belt would likely press deep into the child and cause serious or fatal injuries.
- Never let two children use the same seat belt. Both children could be very seriously injured in a crash.
- Do not allow children to operate the doors, windows or seat adjustments.
- Do not leave children in the vehicle unattended, especially in hot weather when the inside of the vehicle can get hot enough to kill them. They could also activate vehicle controls causing it to move unexpectedly.

➢Protecting Child Passengers

AWARNING

Allowing a child to play with a seat belt or wrap one around their neck can result in serious injury or death.

Instruct children not to play with any seat belt and make sure any unused seat belt a child can reach is buckled, fully retracted, and locked.

To deactivate a lockable retractor, release the buckle and allow the seat belt to wind up all the way.

To remind you of the passenger's front airbag hazards and child safety, your vehicle has warning labels on the dashboard and on the front visors. Please read and follow the instructions on these labels.

Safety Labels P. 85

Safety of Infants and Small Children

Protecting Infants

An infant must be properly restrained in a rear-facing, reclining child seat until the infant reaches the seat manufacturer's weight or height limit for the seat, and the infant is at least one year old.



Positioning a rear-facing child seat

Child seats must be placed and secured in a rear seating position.

When properly installed, a rear-facing child seat may prevent the driver or a front passenger from moving their seat all the way back, or from locking their seat-back in the desired position. Make sure that there is no contact between the child seat and the seat in front of it.

It can also interfere with proper operation of the passenger's advanced front airbag system.

Airbags P. 56

If this occurs, we recommend that you install the child seat directly behind the front passenger's seat, move the seat as far forward as needed, and leave it unoccupied. Or, you may wish to get a smaller rear-facing child seat.

Protecting Infants

Placing a rear-facing child seat in the front seat can result in serious injury or death during a crash.

Always place a rear-facing child seat in the rear seat, not the front.

Many experts recommend use of a rear-facing seat for a child up to two years old if the child's height and weight are appropriate for a rear-facing seat.

Rear-facing child seats should never be installed in a forward-facing position.

Always refer to the child seat manufacturer's instructions before installation.

Do not allow a front seat to rest against a child seat installed in a rear seating position: The weight sensor in the front seat may not correctly detect the actual weight of the occupant.

Protecting Smaller Children

If a child is at least one year old and has exceeded the weight and height limitations of a rearward-facing child seat, the child should be properly restrained in a firmly secured forward-facing child seat until they exceed the weight and height limitations for the forward-facing child seat.

Placing a forward-facing child seat in the front seat can be hazardous, even with advanced front airbags that automatically turn the passenger's front airbag off. A



rear seat is the safest place for a child.

Forward-facing child seat placement

We strongly recommend placing a forwardfacing child seat in a rear seating position.

Protecting Smaller Children

Placing a forward-facing child seat in the front seat can result in serious injury or death if the front airbag inflates.

If you must place a forward-facing child seat in front. move the vehicle seat as far back as possible, and properly restrain the child.

Educate yourself about the laws and regulations regarding child seat use where you are driving, and follow the child seat manufacturer's instructions.

Selecting a Child Seat

Most child seats are LATCH-compatible (Lower Anchors and Tethers for Children). Some have a rigid-type connector while others have a flexible-type connector. Both are equally easy to use. Some existing and previously owned child seats can only be installed using the seat belt. Whichever type you choose, follow the child seat manufacturer's use and care instructions including recommended expiration dates as well as the instructions in this manual. Proper installation is key to maximizing your child's safety.

In seating positions and vehicles not equipped with LATCH, a LATCH-compatible child seat can be installed using the seat belt and a top tether for added security. This is because all child seats are required to be designed so that they can be secured with a lap belt or the lap part of a lap/shoulder belt. In addition, the child seat manufacturer may advise that a seat belt be used to attach a LATCH-compatible seat once a child reaches a specified weight. Please read the child seat owner's manual for proper installation instructions.

Important consideration when selecting a child seat

Make sure the child seat meets the following three requirements:

- The child seat is the correct type and size for the child.
- The child seat is the correct type for the seating position.
- The child seat is compliant with Federal Motor Vehicle Safety Standard 213.


Selecting a Child Seat

Installation of a LATCH-compatible child seat is simple.

LATCH-compatible child seats have been developed to simplify the installation process and reduce the likelihood of injuries caused by incorrect installation.

Installing a LATCH-Compatible Child Seat


A LATCH-compatible child seat can be installed in any of the rear seats. A child seat is attached to the lower anchors with either the rigid or flexible type of connectors.

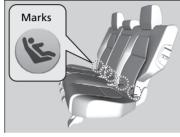


 Locate the lower anchors under the marks.
 Make sure to lock the seat-back in the upright position.



- **3.** Place the child seat on the vehicle seat, then attach the child seat to the lower anchors according to the instructions that came with the child seat.
 - When installing the child seat, make sure that the lower anchors are not obstructed by the seat belt or any other object.

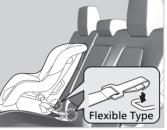

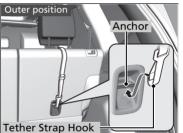


Outer position

- **4.** Put the head restraint to its upper-most position, then route the tether strap between the head restraint legs, and secure the tether strap hook to the anchor.
- **5.** Go to step 8.

➢Installing a LATCH-Compatible Child Seat

Never attach two child seats to the same anchor. In a collision, one anchor may not be strong enough to hold two child seat attachments and may break, causing serious injury or death.

For your child's safety, when using a child seat installed using the LATCH system, make sure that the child seat is properly secured to the vehicle. A child seat that is not properly secured will not adequately protect a child in a crash and may cause injury to the child or other vehicle occupants.

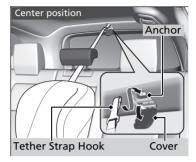

Center position

- **4.** Put the head restraint to its upper-most position.
- 5. Open the anchor cover.
- **6.** Route the tether strap through the head restraint legs. Make sure the strap is not twisted.
- **7.** Secure the tether strap hook to the anchor.

All models

- **8.** Tighten the tether strap as instructed by the child seat manufacturer.
- **9.** Make sure the child seat is firmly secured by rocking it forward and back and side to side; little movement should be felt.
- **10.** Make sure any unused seat belt that a child can reach is buckled, the lockable retractor is activated, and the belt is fully retracted and locked.

Installing a Child Seat with a Lap/Shoulder Seat Belt

A child seat can be installed with a lap/shoulder belt in any rear seat or, if absolutely necessary, the front passenger seat.

Safe Driving





- **1.** Make sure to lock the seat-back in the upright position.
- **2.** Place the child seat on the vehicle seat.
- **3.** Route the seat belt through the child seat according to the seat manufacturer's instructions, and insert the latch plate into the buckle.
 - ► Insert the latch plate fully until it clicks.
- **4.** Slowly pull the shoulder part of the belt all the way out until it stops. This activates the lockable retractor.
- **5.** Let the seat belt retract a few inches and check that the retractor has switched modes by pulling on the webbing. It should not pull out again until it is reset by removing the latch plate from the buckle.
 - If you are able to pull the shoulder belt out, the lockable retractor is not activated. Slowly pull the seat belt all the way out, and repeat steps 4 – 5.

Installing a Child Seat with a Lap/Shoulder Seat Belt

A child seat that is not properly secured will not adequately protect a child in a crash and may cause injury to the child or other vehicle occupants.




- **6.** Grab the shoulder part of the seat belt near the buckle, and pull up to remove any slack from the lap part of the belt.
 - When doing this, place your weight on the child seat and push it into the vehicle seat.
- **7.** Make sure the child seat is firmly secured by rocking it forward and back and side to side; less than one inch of movement should occur near the seat belt.
- **8.** Make sure any unused seat belt that a child can reach is buckled, the lockable retractor is activated, and the belt is fully retracted and locked.

Installing a Child Seat with a Lap/Shoulder Seat Belt

To deactivate a lockable retractor, release the buckle and allow the seat belt to wind up all the way.


Adding Security with a Tether

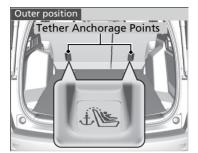



A tether anchorage point is provided behind the rear outer seating position and in the ceiling for the rear center. If you have a child seat that comes with a tether but can be installed with a seat belt, the tether may be used for additional security.

Moding Security with a Tether

Always use a tether for forward-facing child seats when using the seat belt or lower anchors.

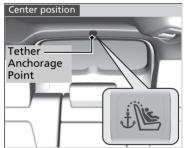

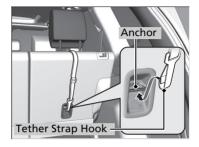

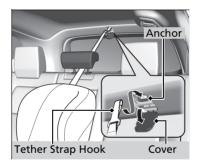

Using an outer anchor

- Put the head restraint to its upper-most position, then route the tether strap through the head restraint legs. Make sure the strap is not twisted.
- **2.** Secure the tether strap hook to the anchor.
- **3.** Tighten the tether strap as instructed by the child seat manufacturer.

Using the center anchor

- **1.** Put the head restraint to its upper-most position.
- **2.** Open the anchor cover.
- **3.** Route the tether strap through the head restraint legs.
- Make sure the strap is not twisted.
- **4.** Secure the tether strap hook to the anchor.
- **5.** Tighten the tether strap as instructed by the child seat manufacturer

Safety of Larger Children

Protecting Larger Children

The following pages give instructions on how to check proper seat belt fit, what kind of booster seat to use if one is needed, and important precautions for a child who must sit in front.

Checking Seat Belt Fit

When a child is too big for a child seat, secure the child in a rear seat using the lap/ shoulder seat belt. Have the child sit upright and all the way back, then answer the following questions.



Checklist

- Do the child's knees bend comfortably over the edge of the seat?
- Does the shoulder belt cross between the child's neck and arm?
- Is the lap part of the seat belt as low as possible, touching the child's thighs?
- Will the child be able to stay seated like this for the whole trip?

If you answer yes to all these questions, the child is ready to wear the lap/shoulder seat belt correctly. If you answer no to any question, the child needs to ride on a booster seat until the seat belt fits properly without a booster seat.

Safety of Larger Children ■

Allowing a child age 12 or under to sit in front can result in injury or death if the passenger's front airbag inflates.

If a larger child must ride in front, move the vehicle seat as far to the rear as possible, have the child sit up properly and wear the seat belt properly, using a booster seat if needed.

Booster Seats



If a lap/shoulder seat belt cannot be used properly, position the child in a booster seat in the rear seat. For the child's safety, check that the child meets the booster seat manufacturer's recommendations.

Protecting Larger Children - Final Checks

Your vehicle has a rear seat where children can be properly restrained. If you ever have to carry a group of children, and a child must ride in front:

- Make sure you read and fully understand the instructions and safety information in this manual.
- Move the front passenger seat as far back as possible.
- Have the child sit upright and well back in the seat.
- Check that the seat belt is properly positioned so that the child is secure in the seat.

Monitoring child passengers

We strongly recommend that you keep an eye on child passengers. Even older, more mature children sometimes need to be reminded to fasten their seat belts and sit up properly.

➢Booster Seats

When installing a booster seat, make sure to read the instructions that came with it, and install the seat accordingly.

There are high- and low-type booster seats. Choose a booster seat that allows the child to wear the seat belt correctly.

Some U.S. states require children to use a booster seat until they reach a given age or weight (e.g. 6 years or 60 lbs). Be sure to check current laws in the state where you intend to drive.

Carbon Monoxide Gas

The engine exhaust from this vehicle contains carbon monoxide, a colorless, odorless, and highly toxic gas. As long as you properly maintain your vehicle, carbon monoxide gas will not get into the interior.

Have the exhaust system inspected for leaks whenever

- The exhaust system is making an unusual noise.
- The exhaust system may have been damaged.
- The vehicle is raised for an oil change.

When you operate a vehicle with the tailgate open, airflow can pull exhaust gas into the interior and create a hazardous condition. If you must drive with the tailgate open, open all the windows and set the climate control system as shown below.

- **1.** Select the fresh air mode.
- 2. Select the 👬 mode.
- **3.** Set the fan speed to high.
- 4. Set the temperature control to a comfortable setting.

Adjust the climate control system in the same manner if you sit in your parked vehicle with the engine running.

➢Carbon Monoxide Gas

Carbon monoxide gas is toxic.

Breathing it can cause unconsciousness and even kill you.

Avoid any enclosed areas or activities that expose you to carbon monoxide.


An enclosed area such as a garage can quickly fill up with carbon monoxide gas.

Do not run the engine with the garage door closed. Even when the garage door is open, drive out of the garage immediately after starting the engine.

Label Locations


These labels are in the locations shown. They warn you of potential hazards that can cause serious injury or death. Read these labels carefully.

If a label comes off or becomes hard to read (except for the dashboard label which may be removed by the owner), contact a dealer for a replacement.

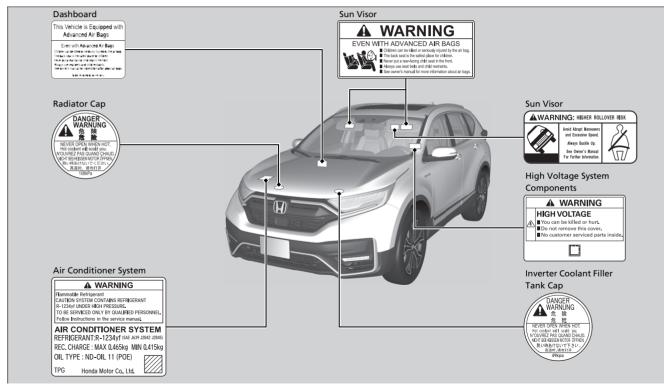

Instrument Panel

 This chapter describes the buttons, indicators, and gauges that are used while driving.



Indicators

| Parking Brake and Brake System Indicator (Red) | → P. 89 |
|--------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Parking Brake and Brake System Indicator (Amber) | →P . 90 |
| Automatic Brake Hold System Indicator | →P . 91 |
| Automatic Brake Hold Indicator | →P . 91 |
| Low Oil Pressure Indicator | →P . 91 |
| Malfunction Indicator Lamp | →P . 92 |
| 12-Volt Battery Charging System Indicator | →P . 93 |
| Shift Position Indicator | → P. 93 |
| Deceleration Paddle Selector Indicator | →P . 93 |
| Transmission System Indicator | →P . 93 |
| READY Indicator | →P . 92 |
| POWER SYSTEM Indicator | →P .91 |
| Seat Belt Reminder Indicator | →P . 94 |
| | Brake System Indicator (Red) Parking Brake and Brake System Indicator (Amber) Automatic Brake Hold System Indicator Automatic Brake Hold Indicator Low Oil Pressure Indicator Malfunction Indicator Lamp 12-Volt Battery Charging System Indicator Shift Position Indicator Deceleration Paddle Selector Indicator Transmission System Indicator READY Indicator POWER SYSTEM Indicator Seat Belt Reminder |

| | Low Fuel Indicator | →P . 94 |
|----------------|-----------------------------------------------------------------------------------|-----------------|
| (ABS) *1 | Anti-lock Brake System (ABS) Indicator | → P. 95 |
| *1 | Supplemental Restraint System Indicator | → P. 95 |
| ≣@ *1 | Auto High-Beam Indicator | → P. 99 |
| *1 | Vehicle Stability Assist [™] (VSA [®]) System Indicator | → P. 95 |
| OFF *1 | Vehicle Stability Assist [™] (VSA [®]) OFF Indicator | → P. 96 |
| •! *1 | Electric Power Steering (EPS) System Indicator | → P. 96 |
| (!) *1 | Low Tire Pressure/TPMS Indicator | →P . 97 |
| ++ | Turn Signal and Hazard Warning Indicators | → P. 98 |
| | High Beam Indicator | → P. 98 |
| <u> ∋00</u> ∈ | Lights On Indicator | →P . 99 |
| Ð | Fog Light Indicator* | → P. 99 |
| (\mathbf{i}) | System Message Indicator | → P. 98 |
| * | ECON Mode Indicator | →P . 100 |

| | - | | |
|----|--------------------|--------------------------------------------------------------------------------|-----------------|
| ١١ | SPORT | SPORT Mode Indicator | →P . 94 |
| | | EV Indicator | → P. 92 |
| | EV *1 | EV Mode Indicator | →P . 92 |
| | *1 | Road Departure Mitigation (RDM) Indicator | →P . 101 |
| | J⊂ *1 | Collision Mitigation Braking System™ (CMBS™) Indicator | →P . 105 |
| | e ^{ve} *1 | Blind spot information System Indicator* | →P . 100 |
| | 0 | Immobilizer System Indicator | → P. 99 |
| | 0 | Security System Alarm Indicator | →P . 100 |
| | | Adaptive Cruise Control (ACC) with Low Speed Follow Indicator (Amber) | →P . 103 |
| | ACC *1 | Adaptive Cruise Control (ACC) with Low Speed Follow Indicator (Green) | →P . 104 |
| | LKAS *1 | Lane Keeping Assist System (LKAS) Indicator (Amber) | →P . 104 |
| | LINAS | Lane Keeping Assist System (LKAS) Indicator (Green) | →P . 104 |

*1: When you set the power mode to ON, these indicators come on to indicate that system checks are being performed. They go off a few seconds later or after the power system has started. If an indicator does not come on or turn off, there may be a malfunction in the corresponding system. To resolve the issue, follow the instructions in the owner's manual.

| Indicator | Name | On/Blinking | Explanation | Message |
|-----------------------|---------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| BRAKE (Red) | Parking Brake and Brake System Indicator (Red) | Comes on when the parking brake is applied and goes off when it is released. Comes on when the brake fluid level is low. Comes on if there is a problem with the brake system. The beeper sounds and the indicator comes on if you drive with the parking brake not fully released. Comes on for about 15 seconds when you apply the electric parking brake while the power mode is in ACCESSORY or VEHICLE OFF, then goes off. Stays on for about 15 seconds when you set the power mode to VEHICLE OFF while the electric parking brake is applied, then goes off. | Comes on while driving - Make sure the parking brake is released. Check the brake fluid level. What to do when the indicator comes on while driving P. 650 Comes on along with the Parking Brake and Brake System Indicator (Amber) - Immediately stop in a safe place. Contact a dealer for repair. The brake pedal becomes harder to operate. Depress the pedal further than you normally do. If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On P. 651 Comes on along with the ABS indicator - Have your vehicle checked by a dealer. If the Brake System Indicator (Red) Comes On or Blinks P. 650 Blinks and the Parking Brake and Brake System Indicator (Amber) comes on at the same time - There is a problem with the electric parking brake and have your vehicle checked by a dealer immediately. If the Brake System Indicator (Red) Comes On or Blinks at the Same Time With the electric parking brake and Brake System Indicator (Amber) comes on at the same time - There is a problem with the electric parking brake and have your vehicle checked by a dealer immediately. If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Red) Comes On P. 651 | Parking Brake Parking Brake Parking Brake Parking Brake Parking Brake Parking Brake Problem |

| Indicator | Name | On/Blinking | Explanation | Message |
|-----------|--------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------|
| | BRAKE SYSTEM (Amber) Parking Brake and Brake System Indicator (Amber) | Comes on if there is a problem with a system related to braking other than the conventional brake system. Comes on if there is a problem with the cooperative control with regenerative braking, the electric servo brake system, or the hill start assist system. | Comes on while driving - Avoid high speeds and sudden braking. Take the vehicle to a dealer immediately. | Brake System Problem |
| SYSTEM | | • Comes on if there is a problem with the electric parking brake system or the automatic brake hold system. | Stays on constantly - Avoid using the parking brake and have your vehicle checked by a dealer immediately. | Electric Parking Brake Problem Brake Hold System Problem |
| | | • Comes on if the brake system is deactivated temporarily after the 12-volt battery has been disconnected, then re-connected. | • Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer. | Drive Carefully. Systems Initializing |
| | | Comes on if there is a problem with the radar sensor. Indicator may come on temporarily when the Maximum Load Limit is exceeded. | Make sure the total load is within the Maximum Load Limit. Maximum Load Limit P. 459 Stays on constantly - Have your vehicle checked by a dealer. | — |

90

Instrument Panel

| Indicator | Name | On/Blinking | Explanation | Message |
|-----------------|---------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------|
| BRAKE HOLD | Automatic Brake Hold System Indicator | • Comes on when the automatic brake hold system is on. | D Automatic Brake Hold P. 551 | Brake Hold Brake Hold System Standby |
| HOLD | Automatic Brake Hold Indicator | • Comes on when the automatic brake hold is activated. | Automatic Brake Hold P. 551 | - |
| 4 <u>7</u> % | Low Oil Pressure Indicator | Comes on when the engine oil pressure is low. | Comes on while driving - Immediately stop in a safe place. If the Low Oil Pressure Indicator Comes On P. 648 | Check Engine Oil Level |
| POWER SYSTEM | Power System Indicator | Comes on if there is a problem with the electric vehicle system. Comes on when the High Voltage battery temperature becomes high. | Have your vehicle checked by a dealer immediately. | Power System Problem Power System Problem. Do Not Drive. |

| Indicator | Name | On/Blinking | Explanation | Message |
|-----------|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------|
| READY | READY Indicator | • Comes on when the vehicle is ready to drive. | Turning on the Power P. 465 | Ready To Drive |
| EV | EV Indicator | Comes on when the vehicle is moved by the motor, and the engine is not operating. | — | — |
| EV | EV Mode Indicator | • Comes on when the vehicle is in EV mode. | SPORT HYBRID i-MMD (intelligent Multi-Mode Drive) P. 11 | 🖂 EV Mode ON |
| ť | Malfunction Indicator Lamp | After you have set the power mode to ON, the vehicle performs system checks. However, if the readiness codes have not been set by that time, this indicator will blink five times and then go off. Comes on if there is a problem with the emissions control systems. Blinks when a misfire in the engine's cylinders is detected. | Readiness codes are part of the on board diagnostics for the emissions control systems. Testing of Readiness Codes P. 669 Comes on while driving - Have your vehicle checked by a dealer. Blinks while driving - Stop in a safe place where there are no flammable objects. Stop the power system for 10 minutes or more, and wait for it to cool down. Then, take your vehicle to a dealer. If the Malfunction Indicator Lamp Comes On or Blinks P. 649 | Emissions System Problem |

| Indicator | Name | On/Blinking | Explanation | Message |
|-------------------------|-------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|
| <u> </u> | 12-volt Battery Charging System Indicator | Comes on when the 12-volt battery is not charging. | Stop in a safe place and have your vehicle checked by a dealer immediately. If the 12-volt Battery Charging System Indicator Comes On P. 648 | 12 Volt Battery Charging Problem |
| D | Shift Position Indicator | Indicates the current shift position. | Shifting P. 473 | — |
| D | Transmission System Indicator | • The indicated current shift position blinks if there is a problem with the transmission system. | Avoid sudden start and acceleration, and stop in a safe place immediately. Have your vehicle checked by a dealer. | Transmission System Problem |
| | | • The indicated current shift position or all the shift positions blink if you cannot select P due to the transmission system failure. | Set the parking brake when parking.Have your vehicle checked by a dealer immediately. | Transmission Problem. AppParking Brake When Parked |
| D ∛ D [™] ∛ | Deceleration Paddle Selector Indicator | Comes on when the paddle selector is pulled. Blinks when the rate of deceleration does not change while pulling the paddle selector. Comes on with M when SPORT mode is selected and pulling the paddle selector. | Deceleration Paddle Selector P. 480 | — |

Instrument Panel

| Indicator | Name | On/Blinking | Explanation | Message |
|-----------|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|
| SPORT | SPORT Mode Indicator | Comes on when you press the SPORT button. | The ambient meter remains lit up in red as long as sport mode is on. SPORT Mode P. 479 | SPORT ON |
| X | Seat Belt Reminder Indicator | Blinks and the beeper sounds for a few seconds if you are not wearing a seat belt when you set the power mode to ON, then the indicator comes on. If the front passenger is not wearing a seat belt, the indicator comes on a few seconds later. Blinks while driving if you and/or the front passenger has not fastened a seat belt. The beeper sounds and the indicator blinks at regular intervals. | The beeper stops and the indicator goes off when you and the front passenger fasten their seat belts. Stays on after you and/or the front passenger has fastened the seat belt(s) A detection error may have occurred in the sensor. Have your vehicle checked by a dealer. Seat Belt Reminder P. 49 | Fasten Seat Bett Fasten Passenaer's Seat Bett |
| | Low Fuel Indicator | Comes on when the fuel reserve is running low (approximately 2.1 U.S. gal/8.0 Liter left). Blinks if there is a problem with the fuel gauge. | Comes on - Refuel your vehicle as soon as possible. Blinks - Have your vehicle checked by a dealer. | Fuel Low Fuel Gauge System Problem |

| Indicator | Name | On/Blinking | Explanation | Message |
|-----------|-------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------|
| (ABS) | Anti-lock Brake System (ABS) Indicator | • Comes on if there is a problem with the ABS. | Stays on constantly - Have your vehicle checked by a dealer. With this indicator on, your vehicle still has normal braking ability but no anti-lock function. Anti-lock Brake System (ABS) P. 553 | Anti-Lock Brake System Problem |
| * | Supplemental Restraint System Indicator | Comes on if a problem with any of the following is detected: Supplemental restraint system Side airbag system Side curtain airbag system Seat belt tensioner | • Stays on constantly - Have your vehicle checked by a dealer. | Airbag System (SRS) Problem |
| A | Vehicle Stability Assist™ (VSA®) | Blinks when VSA[®] is active. Comes on if there is a problem with the VSA[®] system. | Stays on constantly - Have your vehicle checked by a dealer. ▶ Vehicle Stability Assist™ (VSA®), aka Electronic Stability Control (ESC), System P. 485 | Vehicle Stability Assist (VSA) Problem |
| 2 | | • Comes on if the VSA [®] system is deactivated temporarily after the 12-volt battery has been disconnected, then re-connected. | • Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer. | Drive Carefully. Systems Initializing |

| Indicator | Name | On/Blinking | Explanation | Message |
|-----------|------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------|
| | Vehicle Stability | Comes on when you partially disable VSA[®]. | SCA® On and Off P. 486 | Vehicle Stability Assist (VSA) OFF |
| OFF | Assist™ (VSA®) OFF Indicator | • Comes on if the VSA [®] system is deactivated temporarily after the 12-volt battery has been disconnected, then re-connected. | • Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer. | Drive Carefully. Systems Initializing |
| ⊕! | Electric Power Steering (EPS) System Indicator | • Comes on if there is a problem with the EPS System. | Stays on constantly - Have your vehicle checked by a dealer. If the Electric Power Steering (EPS) System Indicator Comes On P. 652 | €! Power Steering System (EPS) Problem |

| Indicator | Name | On/Blinking | Explanation | Message |
|-----------|----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------|
| (!) | Low Tire Pressure/TPMS Indicator | May come on briefly if the power mode is set to ON and the vehicle is not moved within 45 seconds, to indicate the calibration process is not yet complete. Comes on and stays on when: One or more tires' pressures are determined to be significantly low. The system has not been calibrated. | Comes on while driving - Stop in a safe place, check tire pressures, and inflate the tire(s) if necessary. Stays on after the tires are inflated to the recommended pressures - The system needs to be calibrated. TPMS Calibration P. 489 | (!.) Tire Pressures Low |
| | | • Blinks for about one minute, and then stays on if there is a problem with the TPMS. | • Blinks and remains on - Have your vehicle checked by a dealer. | Tire Pressure Monitor Problem |
| | | • Comes on if the TPMS is deactivated temporarily after the 12-volt battery has been disconnected, then reconnected. | • Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer. | Drive Carefully. Systems Initializing |

| Indicator | Name | On/Blinking | Explanation | Message |
|------------|-------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| Ì | System Message Indicator | Comes on along with a beep when a problem is detected. A system message on the driver information interface appears at the same time. | While the indicator is on, press the (display/information) button to see the message again. Refer to the Indicators information in this chapter when a system message appears on the driver information interface. Respond to the message accordingly. The driver information interface does not return to the normal screen unless the warning is canceled, or the pressed. | |
| * * | Turn Signal and Hazard Warning Indicators | Blinks when you operate the turn signal lever.Blink along with all turn signals when you press the hazard warning button. | Does not blink or blinks rapidly Have your vehicle checked by a dealer. | — |
| ED | High Beam Indicator | Comes on when the high beam headlights are on. | — | — |

| Indicator | Name | On/Blinking | Explanation | Message |
|----------------------|---------------------------------|-----------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| <u>⇒</u> 0 0 <u></u> | Lights On Indicator | • Comes on when the parking, tail, and other external lights are on. | Light Switches P. 187 | — |
| 钓 | Fog Light Indicator* | • Comes on when the fog lights are on. | Fog Lights* P. 191 | — |
| ĒA | Auto High-Beam Indicator | • Comes on when all the operating conditions of the auto high-beam are met. | Dauto High-Beam P. 192 | — |
| Diver Indicator | Immobilizer System Indicator | • Blinks if the immobilizer system cannot recognize the key information. | Blinks - You cannot start the power system. Set the power mode to VEHICLE OFF, then select the ON mode again. Repeatedly blinks - The system may be malfunctioning. Have your vehicle checked by a dealer. Do not attempt to alter this system or add other devices to it. Electrical problems can occur. | _ |

| Indicator | Name | On/Blinking | Explanation | Message |
|--------------------|------------------------------------------------------------|--------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------|
| Diver Indicator | Security System Alarm Indicator | • Blinks when the security system alarm has been set. | Security System Alarm* P. 175 | — |
| * | ECON Mode Indicator | • Comes on when the ECON mode is on. | ECON Mode P. 483 | ECON ON ECON |
| | Blind spot information System Indicator* • Com | • Stays on while the blind spot information system is turned off. | Blind spot information System* P. 495 | Blind Spot Info System OFF |
| en B | | • Comes on when mud, snow, or ice accumulates in the vicinity of sensor. | Comes on while driving - Remove the obstacle in the vicinity of the sensor. Blind spot information System* P. 495 | Blind Spot Info Not Available |
| | | • Comes on if there is a problem with the system. | • Comes on while driving - Have your vehicle checked by a dealer. | Blind Spot Info System Problem |

| Indicator | Name | On/Blinking | Explanation | Message |
|-----------|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------|
| | | Comes on if there is a problem with the RDM system. Comes on if the RDM is deactivated temporarily after the 12-volt battery has been disconnected, then re-connected. Stays on constantly - Have your vehicle checked by a dealer. Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer. | Road Departure Mitigation System Problem | |
| | Road Departure | | (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a | Drive Carefully. Systems Initializing |
| | Mitigation (RDM) Indicator | • Comes on when the RDM system shuts itself off. | Stays on - The temperature inside the camera is too high. Use the climate control system to cool down the camera. The system activates when the temperature inside the camera cools down. ▶ Front Sensor Camera P. 544 | Some Driver Assist Rystems Carvos Oburste Carvers Temperature Teo High |

Continued 101

| Indicator | Name | On/Blinking | Explanation | Message |
|-----------|-------------------------------------------------|--------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------|
| | | • Comes on when the RDM system shuts itself off. | blocked by dirt, mud, etc. Stop your vehicle in a safe place and wipe the debris off with a soft cloth. Have your vehicle checked by a dealer if the indicator and message come back on after you cleaned the area around the camera. Front Sensor Camera P. 544 Indicator may come on temporarily when passing through an enclosed space, such as a tunnel. The area around the radar sensor is blocked by dirt, mud, etc. Stop your vehicle in a safe place and wipe the debris off with a soft cloth. Indicator may take | Some Driver Assist Systems Cannot Operate: Clean Front Windshield |
| | Road Departure Mitigation (RDM) Indicator | | | Some Driver Assist Systems Canot Operate: Radar Obstructed |
| | | Indicator may come on temporarily when the Maximum Load Limit is exceeded. | Make sure the total load is within the Maximum Load Limit. Maximum Load Limit P. 459 Stays on constantly - Have your vehicle checked by a dealer. | _ |

| Indicator | Name | On/Blinking | Explanation | Message |
|-----------|-------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------|
| | | • Comes on if there is a problem with ACC with Low Speed Follow. | • Comes on while driving - Have your vehicle checked by a dealer. | Adaptive Cruise Control Problem |
| ACC | Adaptive Cruise Control (ACC) with Low Speed | • Comes on if the ACC with Low Speed Follow is deactivated temporarily after the 12-volt battery has been disconnected, then re-connected. | • Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer. | Drive Carefully. Systems Initializing |
| | | Comes on if there is a problem with ACC with Low Speed Follow. Indicator may come on temporarily when Maximum Load Limit is exceeded. ACC with Low Speed Follow has been automatically canceled. | Make sure the total load is within the Maximum Load Limit. Maximum Load Limit P. 459 Stays on constantly - Have your vehicle checked by a dealer. | — |

| Indicator | Name | On/Blinking | Explanation | Message |
|-----------|--------------------------------------------------------------------------------------------|--------------------------------------------------------------|----------------------------------------------------------------|--------------------------------|
| ACC | Adaptive Cruise Control (ACC) with Low Speed Follow Indicator (Green) | Comes on when you press the MAIN button. | Adaptive Cruise Control (ACC) with Low Speed Follow P. 513 | _ |
| LKAS | Lane Keeping Assist System (LKAS) Indicator (Amber) | • Comes on if there is a problem with the LKAS. | • Stays on constantly - Have your vehicle checked by a dealer. | Lane Keeping Assist Problem |
| LKAS | Lane Keeping Assist System (LKAS) Indicator (Green) | Comes on when you press the MAIN button. | Lane Keeping Assist System (LKAS) P. 530 | _ |

| Indicator | Name | On/Blinking | Explanation | Message |
|-----------|-----------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------|
| × | | Comes on when you deactivate the CMBS[™]. A driver information interface message appears for five seconds. Comes on if there is a problem with the CMBS[™]. | Stays on constantly without the CMBS™ off - Have your vehicle checked by a dealer. ➢ Collision Mitigation Braking System™ (CMBS™) P. 502 | Collision Miligation Braking System OFF |
| | Collision Mitigation Braking System™ | Comes on if the CMBS[™] is deactivated temporarily after the 12-volt battery has been disconnected, then re-connected | • Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer. | Drive Carefully, Systems Initializing |
| | (CMBS™) Indicator | Comes on when the CMBS[™] shuts itself off. | Stays on - The area around the camera is blocked by dirt, mud, etc. Stop your vehicle in a safe place, and wipe it off with a soft cloth. Front Sensor Camera P. 544 Have your vehicle checked by a dealer if the indicator does not go off even after you cleaned the camera. | Some Driver Assist Systems Cannot Operate: Clean Front Windshield |

| Indicator | Name | On/Blinking | Explanation | Message |
|-----------|------------------------------------|--------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------|
| | Collision Mitigation Braking | Comes on when the CMBS™ shuts itself off. | Vehicle in a safe place, and wipe it on with a soft cloth. Indicator may take some time to go off after the radar sensor is cleaned. Have your vehicle checked by a dealer if the indicator does not go off even after you clean the sensor cover. Radar Sensor P. 546 Stays on - The temperature inside the | Some Driver Assist Systems Cannot Operate: Radar Obstructed |
| | System™ (CMBS™) Indicator | | Stays on - The temperature inside the camera is too high. Use the climate control system to cool down the camera. The system activates when the temperature inside the camera cools down. Front Sensor Camera P. 544 | Some Driver Acade Rynema: Cource Organite: Courses Tengenshare Too High |
| | | Indicator may come on temporarily when the Maximum Load Limit is exceeded. | Make sure the total load is within the Maximum Load Limit. Maximum Load Limit P. 459 Stays on constantly - Have your vehicle checked by a dealer. | _ |

Driver Information Interface Warning and Information Messages

The following messages appear only on the driver information interface. Press the (display/information) button to see the message again with the system message indicator on.

| Message | Condition | Explanation |
|-----------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Door And Tailgate Open | Appears if any door or the tailgate is not completely closed. Appears if any door or the tailgate is opened while driving. The beeper sounds. | Disappears when all doors and the tailgate are closed. |
| Parking Sensor System Problem | Models with parking sensor system Appears if there is a problem with the parking sensor system. If there is a problem with any of the sensors, the all sensor indicator(s) comes on in red. | • Check if the area around the sensor(s) is covered with mud, ice, snow, etc. If the indicator(s) stays on or the beeper does not stop even after you clean the area, have the system checked by a dealer. |
| (I Acoustic Vehicle Alering System Problem | • Appears if there is a problem with the acoustic vehicle alerting system. | • Have your vehicle checked by a dealer immediately. |
| Maintenance Das Soon A 1 2 3 4 5 | Appears when the scheduled maintenance is due soon. Consequently, Maintenance Due Now and Maintenance Past Due follow. | Maintenance Minder Messages on the Driver Information Interface P. 579 |

| Message | Condition | Explanation |
|---------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Shutter Grille Problem. Power Reduced | • Appears if there is a problem with the shutter grille, and the radiator coolant temperature is too high. | Power output will be reduced, so you may not be able to accelerate or maintain your current speed. Have your vehicle checked by a dealer. |
| Charging System Problem | • Appears when there is a problem with the 12-volt battery charging system. | Have your vehicle checked by a dealer. Checking the 12-volt Battery P. 611 |
| Brake Hold Disabled Apply Brake Pedal | • Appears if the automatic brake hold is automatically canceled while it is in operation. | Immediately depress the brake pedal. |
| Stop Driving When Safe. Engine Temperature Too Hot | • Appears when the engine coolant temperature gets abnormally high. | Dverheating P. 645 |
| Avoid Acceleration and Hiph Speed. Engine Temperature Near Limit | • Appears when the engine coolant temperature is near its upper limit. | • Drive slowly to prevent overheating. |

| Message | Condition | Explanation |
|----------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|
| Engine Cooling System Problem | • Appears if there is a problem with the cooling system. | • Drive slowly to prevent overheating and have your vehicle checked by a dealer as soon as possible. |
| Fasten Seat Belt | • Appears when you set the power mode to ON without fastening the driver's seat belt. | • Fasten the seat belt properly before you start to drive. |
| To Shift: Apply Brake Pedal | • Appears when you try to change the transmission without depressing the brake pedal. | • Depress the brake pedal, then change the transmission. |
| To Shift: Release Accelerator Pedal | • Appears when you try to change the transmission without releasing your foot off the accelerator pedal. | • Release your foot off the accelerator pedal, then change the transmission. |
| To Shift: Vehicle Must Be Stopped | Appears when the P button is pressed while the vehicle is moving. Appears if you put the transmission into R while the vehicle is moving forward, or into D while the vehicle is reversing. | • Make sure that the vehicle comes to a stop before operating the shift button. |

| Message | Condition | Explanation |
|--------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Stop The Vehicle When Safe. Use Caution,Vehicle May Move When Parked. | Appears if there is a problem with the electric system. Appears when you set the power mode to OFF while driving. | Immediately stop in a safe place and set the parking brake, then restart the power system. If the message disappears, continue driving. Continue driving if the message goes off soon after. If there is a problem with the transmission system, the transmission indicator system comes on. Transmission System Indicator P. 93 |
| Brake Hold Brake System OFF | • Appears when the automatic brake hold system is turned off. | Automatic Brake Hold P. 551 |
| To Enable Brake Hold: Seat Belt + Push | • Appears when the automatic brake hold button is pressed without wearing the driver's seat belt. | Fasten the driver's seat belt. Automatic Brake Hold P. 551 |
| To Disable To Disable Brake Hold: Brake + Push | • Appears when the automatic brake hold button is pressed without depressing the brake pedal while the automatic brake hold is in operation. | Press the automatic brake hold button with the brake pedal depressed. Automatic Brake Hold P. 551 |
| Darking Brake BRAKE Engaged | Appears when the parking brake is applied automatically while it is in operation. | Automatic Brake Hold P. 551 Parking Brake P. 547 |

| Message | Condition | Explanation |
|------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| To Release Parking Brake: Brake + Push | • Appears when the electric parking brake switch is pressed without depressing the brake pedal while the electric parking brake is in operation. | Press the electric parking brake switch with the brake pedal depressed. Parking Brake P. 547 |
| Critical Failure Detected. Stop Driving When Safe | • Appears when the vehicle is no longer able to run due to a malfunction. | Immediately stop in a safe place.Have your vehicle checked by a dealer. |
| Depress Brake Pedal And Apoly Parking Brake | • Appears when there is a risk that the vehicle will move unexpectedly after you have stopped due to a malfunction with the vehicle. | While the vehicle is stopped, apply the parking brake. Parking Brake P. 547 Have your vehicle checked by a dealer. |
| Lin Keyless Start System Problem | Appears as soon as a problem is detected in the smart entry system or push button starting system. | Appears constantly - Have your vehicle checked by a dealer. |
| Keyless Remote Not Detected | • Appears when you close the door with the power mode in ON without the smart entry remote inside the vehicle. | Disappears when you bring the smart entry remote back inside the vehicle and close the door. Smart Entry Remote Reminder P. 185 |

| Message | Condition | Explanation |
|----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Keyless Remote Battery Low | • Appears when the smart entry remote battery becomes weak. | Replacing the Button Battery P. 613 |
| To Slart ♥■ + ● Vehicle: Brake + Push | • Appears when you set the power mode to ACCESSORY or ON. | Turning on the Power P. 465 |
| Pressing Button Again 2x OF Holding Will Cause Initian OFF & Power Loss | • Appears if you press the POWER button while the vehicle is moving. | Emergency Power System Off P. 642 |
| Accessory Mode | Appears when the power mode is in ACCESSORY. | _ |
| To Switch Vehicle OFF: Push Twice | • Appears after the driver's door is opened when the power mode is in ACCESSORY. | Change the power mode to VEHICLE OFF. POWER Button P. 183 |
| To Start, Hold Remote Near Start Button | • Appears if the smart entry remote's battery is too weak to turn on the power system or the key is not within operating range to turn on the power system. The beeper sounds six times. | Bring the back of the smart entry remote into contact with the POWER button. If the Smart Entry Remote Battery is Weak P. 641 |

| Message | Condition | Explanation |
|--------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| N⇔ ■ Neutral Hold Mode On. Shift To Park When Done. | Appears when you press and hold N button for more than two seconds. | Disappears when you set the shift position to a shift other than N. If you want to keep the transmission in N position [car wash mode] P. 477 |
| 2 Shift To Park | • Appears when the vehicle is stopped with the driver's seat belt unfastened and there is a chance that the vehicle may roll unintentionally. | Press the P button before release the brake pedal when idling, parking or exiting the vehicle. Shift Operation P. 475 |
| High Hower Power Reduced. | • Appears when the power system temperature is high. | Your vehicle has less ability to accelerate and may be harder to start on an incline. Park in a safe place, and cool the system down. Dverheating P. 645 |
| Research Low Temperature. Power Reduced. | • Appears when the High Voltage battery temperature is low. | Your vehicle has less ability to accelerate and may be harder to start on an incline.Goes off once you start driving as the High Voltage battery warms up. |
| Check 12 Volt Charging System. Power Reduced. | • Appears after the 12-volt battery charging system indicator comes on. | Your vehicle has less ability to accelerate and may be harder to start on an incline.Contact a dealer immediately. |
| Please Wait While Vehicle is Warmed | • Appears when the High Voltage battery temperature is too low to operate (approx22°F [-30°C] or below). | • You can start the engine and use the climate control system to warm up the interior, which will also warm the High Voltage battery enough for you to drive the vehicle. |

| Message | Condition | Explanation |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Temperature Is Too Cold For Vehicle To Operate | • Appears when the High Voltage battery and other system control temperatures are too low to operate (approx40°F [-40°C] or below). | You must wait for an increase in the ambient temperature or move the vehicle to a warmer location.Consult a dealer if necessary. |
| Hybrid System Problem. Power Reduced. | Appears if the power system is in diagnostic mode. | You may notice a decrease in available power. Have your vehicle checked by a dealer. As a result of diagnostics, the power system indicator may come on. Power System Indicator P. 91 |
| EV Mode Not Available. Bate State St | Appears when you have met following situations and EV mode is canceled. Battery Temperature At Limit. Battery Charge Too Low. Engine Too Cold. Cabin Being Heated. Speed Too High. Hard Acceleration Requested. | • EV mode is available once the condition is improved or the cause that canceled EV mode is cleared. |
| Gear Position is N. Release Accelerator Pedal | Appears when you depress the accelerator pedal while the shift position is in N. | • Remove your foot off the accelerator pedal. When driving, depress the brake pedal and operate the shift position. |

| Message | Condition | Explanation |
|--------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
| To Exit Vehicle In Neutral: Press N Again & Hold For Zsec | • Appears when you put the transmission into N , then release the N button. | If you want to keep the transmission in N position [car wash mode] P. 477 |
| Gear Unavailable. Try Again After Awhile. | Appears when you repeatedly change the shift position between P and other positions in short period. | • Take some time before changing the shift position. |
| EV Mode Not Available | • Appears if the engine needs to be started when you press the EV button. | _ |
| EV Mode Cancelled | Appears when you have met following situations and EV mode has been automatically canceled. When the High Voltage battery charge is low. When the velocity of your vehicle is high. When your vehicle's speed exceeds 25 mph (40 km/h) before the engine warms up enough. When depressing the accelerator pedal deeply. When driving on a slope. | • EV mode is available once the condition is improved or the cause that canceled EV mode is cleared. |
| High Voltage Battery Charge Too Low. Vehicle Cannot Start | • Appears when the High Voltage battery is running extremely low. | • Contact a dealer immediately. |

| Message | Condition | Explanation |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ED Light Control System Problem | Appears if there is a problem with the automatic lighting control system. | • Appears while driving - Manually turn the lights on, and have your vehicle checked by a dealer. |
| ≣D Headlight Problem | Appears if there is a problem with the headlights. | Appears while driving - The headlights may not be on. When conditions allow you to drive safely, have your vehicle checked by a dealer as soon as possible. |
| To Start ☆ ↑ + ⑦ Driving: Brake + Push | • Appears when you unlock and open the driver's door while the power system is on by remote engine start. | Remote Engine Start P. 467 |
| Driver Attention Level Low Driver Attention Level Low. Time For A Break | Appears if the vehicle is being driven in a manner consistent with drowsy or inattentive driving. | Driver Attention Monitor P. 133 |
| ACC OFF | Appears when ACC with Low Speed Follow has been automatically canceled. | You can resume the set speed after the condition that caused ACC with Low Speed Follow to cancel improves. Press the RES/+ button. Adaptive Cruise Control (ACC) with Low Speed Follow P. 513 |

| Message | Condition | Explanation |
|--------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| Cruise Cancelled: Tonc Close To Vehicle Ahead | • Appears when the distance between your vehicle and the vehicle ahead of you is too close while ACC with Low Speed Follow is in operation. | ACC with Low Speed Follow has been automatically canceled. Adaptive Cruise Control (ACC) with Low Speed Follow P. 513 |
| Cannot Set Cruise: Too Close To Vehicle Ahead | • Appears when pressing the -/SET button while the distance between your vehicle and the vehicle ahead of you is too close. | ACC with Low Speed Follow cannot be set. Adaptive Cruise Control (ACC) with Low Speed Follow P. 513 |
| Cruise Cancelled: Fasten Seat Belt | • Appears when the driver's seat belt is unfastened while your vehicle is automatically stopped by ACC with Low Speed Follow. | ACC with Low Speed Follow has been automatically canceled. Adaptive Cruise Control (ACC) with Low Speed Follow P. 513 |
| Cannot Set Cruise: Fasten Seat Belt | Appears when pressing the –/SET button while the driver's seat belt is unfastened. | ACC with Low Speed Follow cannot be set. Adaptive Cruise Control (ACC) with Low Speed Follow P. 513 |
| Cannot Set Cruise: Speed Too High | • Appears when the speed of the vehicle is too high for you to set ACC. | Reduce the speed, then set ACC. Adaptive Cruise Control (ACC) with Low Speed Follow P. 513 |
| Cruise Cancelled: Speed Too High | • Appears when ACC is canceled due to excessive high vehicle speed. | Reduce the speed, then reset ACC. Adaptive Cruise Control (ACC) with Low Speed Follow P. 513 |

| Message | Condition | Explanation |
|-----------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| To Resume Cruise: Use "RES/+" Switch | • Appears when the vehicle ahead of you resumes driving, after your vehicle has been stopped automatically by ACC with Low Speed Follow. | Press the RES/+ button or -/SET button or depress the accelerator pedal. Adaptive Cruise Control (ACC) with Low Speed Follow P. 513 |
| Cruise Cancelled: Loss Of Traction | Appears if the VSA[®] or traction control function operates while ACC with Low Speed Follow is in operation. | ACC with Low Speed Follow has been automatically canceled. Adaptive Cruise Control (ACC) with Low Speed Follow P. 513 |
| Cruise Cancelled: Shift To Drive | Appears when the shift position is changed to any position other than D while ACC with Low Speed Follow is in operation. | ACC with Low Speed Follow has been automatically canceled. Adaptive Cruise Control (ACC) with Low Speed Follow P. 513 |
| Cannot Set Cruise: Shift To Drive | • Appears when pressing the -/SET button while the shift position is in any position other than D . | ACC with Low Speed Follow cannot be set. Adaptive Cruise Control (ACC) with Low Speed Follow P. 513 |
| Image: Cruise Cancelled: Slope Too Steep Image: Cruise Cancelled: Slope Too Steep | Appears when the vehicle is stopped on a very steep slope while ACC with Low Speed Follow is in operation. | ACC with Low Speed Follow has been automatically canceled. Adaptive Cruise Control (ACC) with Low Speed Follow P. 513 |

| Message | Condition | Explanation |
|--------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cannot Set Cruise: Slope Too Steep Connot Set Cruise: Slope Too Steep | Appears when pressing the –/SET button while the vehicle is stopped on a very steep slope. | ACC with Low Speed Follow cannot be set. Adaptive Cruise Control (ACC) with Low Speed Follow P. 513 |
| Cruise Cancelled: Parking Brake Is Applied | Appears when the parking brake is applied automatically while ACC with Low Speed Follow is in operation. | ACC with Low Speed Follow has been automatically canceled. Adaptive Cruise Control (ACC) with Low Speed Follow P. 513 Parking Brake P. 547 |
| Cannot Set Cruise: Parate SAPplied | Appears when pressing the –/SET button while the parking brake is applied. | ACC with Low Speed Follow cannot be set. Adaptive Cruise Control (ACC) with Low Speed Follow P. 513 Parking Brake P. 547 |
| Cannot Set Cruise: Brake Pedal Is Applied | • Appears when pressing the –/SET button while the vehicle is moving and the brake pedal is depressed. | ACC with Low Speed Follow cannot be set. Adaptive Cruise Control (ACC) with Low Speed Follow P. 513 |
| Cruise Cancelled: Apply Brake Pedal | • Appears if ACC with Low Speed Follow is canceled while your vehicle is automatically stopped by ACC with Low Speed Follow. | • Immediately depress the brake pedal. |

| Message | Condition | Explanation |
|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| BRAKE | • Flashes when the system senses a likely collision with a vehicle in front of you. | Take appropriate action to prevent a collision (apply the brakes, change lanes, etc.) Adaptive Cruise Control (ACC) with Low Speed Follow P. 513 Collision Mitigation Braking System[™] (CMBS[™]) P. 502 |
| | Lane Keeping Assist System (LKAS)Appears when the vehicle is driving out of a detected lane. The steering wheel vibrates rapidly. | Keep the vehicle within the lane you are driving. Lane Keeping Assist System (LKAS) P. 530 |
| Lane Departure | Road Departure Mitigation (RDM) System Appears when the vehicle is driving out of a detected lane. When you selected Warning Only The steering wheel vibrates rapidly when the vehicle is drifting out of a detected lane. | Keep the vehicle within the lane you are driving. Road Departure Mitigation (RDM) System P. 539 You can change the setting for the road departure mitigation system. Narrow, Normal, Wide, and Warning Only can be selected. Customized Features P. 138, 366 |
| | When you selected Narrow, Normal or Wide - The steering wheel vibrates rapidly when the vehicle is drifting out of a detected lane. The system also steers the vehicle to help you remain within your driving lane. | |

| Message | Condition | Explanation |
|----------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Road Departure Mitigation Activated | Road Departure Mitigation (RDM) System When you selected Narrow Appears when the vehicle is likely to drive out of a detected lane. The RDM system also steers the vehicle to help you remain within your driving lane. | _ |
| Steering Required | Blinks when you fail to steer the vehicle. The beeper sounds simultaneously. | • Operate the steering wheel to resume the LKAS. |
| Lane Keeping Assist Cannot Operate | • Appears when the LKAS is in operation, or the LKAS button is pressed, but there is a problem with a system related to the LKAS. The LKAS cancels automatically. The beeper sounds simultaneously if selected by customization. | If any other system indicators come on, such as the VSA®, ABS and brake system, take appropriate action. Indicators P. 88 |
| Some Driver Assist Systems Cannol Operate: Radar Obstructed | Appears if anything covers the radar sensor cover and prevents the sensor from detecting a vehicle in front. May appear when driving in bad weather (rain, snow, fog, etc.) | When the radar sensor gets dirty, stop your vehicle in a safe place, and wipe off dirt using a soft cloth. Have your vehicle checked by a dealer if the message does not disappear even after you clean the sensor cover. Radar Sensor P. 546 Honda Sensing[®] P. 499 |

| Message | Condition | Explanation |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Some Driver Action Byttemis Cannor Downles: Canners Tenerative Tene High | Appears if the temperature inside the front sensor camera is too high and some driver assist systems cannot be activated. | Use the climate control system to cool down the camera. Disappears - The camera has been cooled down and the systems are activated normally. Front Sensor Camera P. 544 Honda Sensing[®] P. 499 |
| Some Driver Assist Systems Cannot Operate: Clean Front Windshield | Appears if the area around the front sensor camera is blocked by dirt, mud, etc. and be prevented from detecting a vehicle in front. May appear when driving in bad weather (rain, snow, fog, etc.) | When the front window gets dirty, stop your vehicle in a safe place, and wipe it off with a soft cloth. Have your vehicle checked by a dealer if the message does not disappear even after you cleaned the area around the camera. Front Sensor Camera P. 544 Honda Sensing[®] P. 499 |
| Auto Hish-Beam Problem | • Appears if there is a problem with the auto high-beam. | Manually operate the headlight switch. If you are driving with the high beam headlights when this happens, the headlights are changed to low beams. |

| Message | Condition | Explanation | |
|--------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| All Wheel Drive System Problem | • Appears if there is a problem with the real time AWD with intelligent control system [™] . | • The engine drives the front wheels only in this state. Have your vehicle checked by a dealer. | |
| Stop Driving When Sate, Al-Whee Drive Temperature Too Hot | • Appears when the differential temperature is too high. | Stop in a safe place, change to P, and idle the engine until the message disappears. If the message does not disappear, have your vehicle checked by a dealer. ▶ Real Time AWD with Intelligent Control System[™] P. 488 | |
| Models with power tailgate | | | |
| Message | Condition | Explanation | |

| | TAIL ATT Power Tailgate Problem | | Manually open or close the power tailgate.Have your vehicle checked by a dealer. |
|--|---------------------------------------|--|-------------------------------------------------------------------------------------------------------------|
|--|---------------------------------------|--|-------------------------------------------------------------------------------------------------------------|

Models with color audio system

| Message | Condition | Explanation |
|---------------------------------------------------|-------------------------------------------------------------------------------------------|----------------------------|
| Must Stop And Shift To Park To Change Settings | • Appears while you are customizing the settings and the shift position changed out of P. | Customized Features P. 138 |

Gauges

Gauges include the speedometer, fuel gauge, and other related indicators. They are displayed when the power mode is in ON.

Speedometer

Displays your driving speed in mph or km/h.

Fuel Gauge

Displays the amount of fuel left in the fuel tank.

POWER/CHARGE Gauge

Electric motor

The degree to which the electric motor is being powered is displayed by the readings on the **POWER** side.

Battery charge in progress

The degree to which the High Voltage battery is being charged is displayed by the readings on the **CHARGE** side.

≫Gauges

Press the **(display/information)** button repeatedly until the **(b)** icon is shown on the driver information interface. Press **ENTER**, then press and hold it again. The speedometer reading and the displayed measurements will switch between mph and km/h.

■Fuel Gauge

NOTICE

You should refuel when the reading approaches $[\underline{E}]$. Running out of fuel can cause the engine to misfire, damaging the catalytic converter.

The actual amount of remaining fuel may differ from the fuel gauge reading.

High Voltage Battery Charge Level Gauge

Shows the remaining High Voltage battery charge level.

High Voltage Battery Charge Level Gauge

The High Voltage battery charge level may decrease under the following conditions:

- When the 12-volt battery has been replaced.
- When the 12-volt battery has been disconnected.
- When the High Voltage battery control system corrects its reading.

The charge level reading will be corrected automatically while driving.

Changes in the temperature of the High Voltage battery can increase or decrease the battery's charging capacity. If temperature changes cause the battery's capacity to change, the number of indicators in the battery charge level gauge may also change, even if the amount of charge remains the same.

Driver Information Interface


The driver information interface shows the odometer, trip meter, outside temperature indicator, and other gauges.

It also displays important messages such as warnings and other helpful information.

Switching the Display


Main displays

Press the (display/information) button, and then press or to change the display. Press **ENTER** to see detailed information.

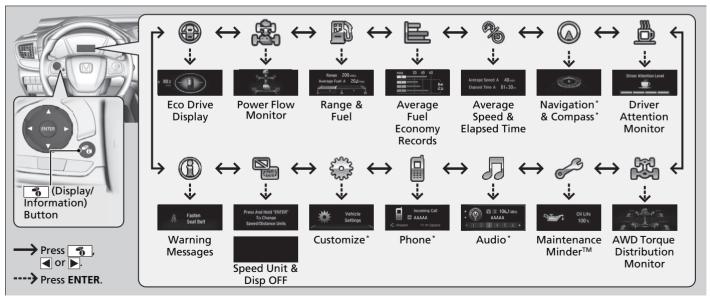

Trip computer

Press the 💮 (TRIP) knob to change display.

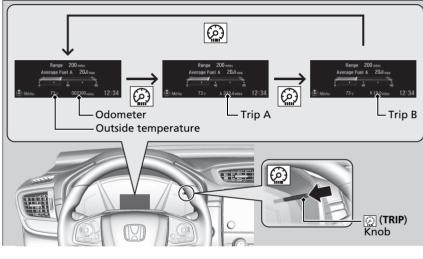

Odometer

Shows the total number of miles or kilometers that your vehicle has accumulated.

Trip Meter

Shows the total number of miles or kilometers driven since the last reset. Meters A and B can be used to measure two separate trips.

■Trip Meter

Switch between trip meter A and trip meter B by pressing the 👰 knob.

Resetting a trip meter

To reset a trip meter, display it, then press and hold the 💮 knob. The trip meter is reset to **0.0**.

Average Fuel Economy

Shows the estimated average fuel economy of each trip meter in mpg or I/100 km. The display is updated at set intervals. When a trip meter is reset, the average fuel economy is also reset.

Range

Shows the estimated distance you can travel on the remaining power and fuel. This estimated distance is based on the vehicle's current fuel economy.

Elapsed Time

Shows the time elapsed since Trip A or Trip B was reset.

Average Speed

Shows the average speed in mph or km/h since Trip A or Trip B was reset.

Instant Fuel Economy Gauge

Shows the instant fuel economy as a bar graph in mph or I/100 km.

➢Average Fuel Economy

You can change when to reset the average fuel economy.

Customized Features P. 138, 366

Elapsed Time


You can change when to reset the elapsed time. Customized Features P. 138, 366

Average Speed

■ Maintenance Minder™

Shows the remaining oil life and Maintenance Minder[™]. **Maintenance Minder[™]** P. 577

Average Fuel Economy Records

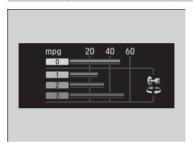


Shows the average fuel economy for the last three driving cycles (1-3), and the current driving cycle (0) in mpg or I/100 km.

Each time you set the power mode to ON, the display is updated, and the oldest record is deleted.

Eco Drive Display/Drive Cycle Score/Lifetime Points


Eco Drive Display

The vehicle icon on the display moves forward or backward while driving. The more aggressive the acceleration is, the further the icon moves forward. The more aggressive the deceleration is, the further the icon moves backward. Keep the icon near the center of the circle for better fuel economy while driving.

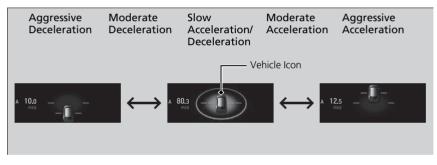

Drive Cycle Score/Lifetime Points

 Appear for a few seconds when you set the power mode to VEHICLE OFF. Each has three stages. Depending on your driving style, the leaf icon(s) and the gauge increase or decrease to indicate that you have reached a different stage of fuel economy.




■ Resetting the Drive Cycle Score

- **1.** Make sure the shift position is in **P**. Turn the power mode to ON.
- 2. If ECON mode is on, press the ECON button to turn it off.
- 3. Turn the power mode to VEHICLE OFF.
- **4.** Turn the power mode to ON again.
 - ▶ Make sure to complete steps from 4 through 6 within 30 seconds.
- 5. Depress the brake pedal twice.
- 6. Press the ECON button twice.
 - ▶ The color of the ambient meter will turn to monochrome.
- 7. Turn the power mode to VEHICLE OFF.

Power Flow Monitor

Displays the power flow of the motor and engine, indicating the vehicle's power source and whether the battery is being charged.

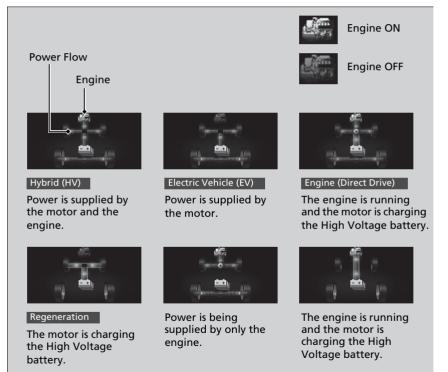


Power Flow Monitor

While the vehicle is stationary with the engine running, the following may appear on the driver information interface.



Driver Attention Monitor

The Driver Attention Monitor analyzes steering inputs to determine if the vehicle is being driven in a manner consistent with drowsy or inattentive driving. If it determines that the vehicle is being driven in such a manner, it will display the degree of the driver's attention in the Driver Information Interface.

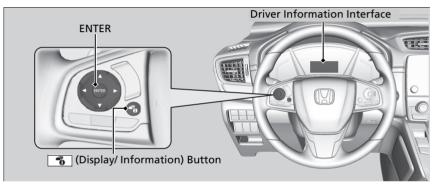



When the (display/information) button is pressed, bars in the Driver Information Interface light up in white to indicate the degree of the driver's attention.

Switching the Display P. 126

Driver Attention Monitor

The Driver Attention Monitor cannot always detect if the driver is tired or inattentive. Regardless of the system's feedback, if you are feeling tired, stop in a safe location and rest for as long as needed. If two bars light up, the **Driver Attention Level Low** message will appear.

If one bar lights up, the **Driver Attention Level Low. Time For A Break** message will appear, a beep will sound, and the steering wheel will vibrate.

If this message appears, stop in a safe location and rest for as long as needed. The message will disappear when the **ENTER** button is pressed or when the system has determined that the driver is driving normally. If the driver does not take a break and the monitor continues to detect that the driver is very tired, the message will appear again after approximately 15 minutes, accompanied by a beep and steering wheel vibrations. The message does not appear when the traveling time is 30 minutes or less.



Driver Attention

The Driver Attention Monitor resets when

- the power system is turned off.
- the driver unfastens the seat belt and opens the door while the vehicle is stopped.

For the Driver Attention Monitor to function

- the vehicle must be traveling above 25 mph (40 km/h).
- the electric power steering (EPS) system indicator must be off.

Depending on driving conditions or other factors, the Driver Attention Monitor may not function in the following circumstances.

- the steering assist function of the Lane Keeping Assist System (LKAS) is active. ► Lane Keeping Assist System (LKAS) P. 530
- the condition of the road is poor, e.g. the surface is unpaved or bumpy.
- it is windy.
- the driver is frequently operating the vehicle in an assertive manner such as changing lanes or accelerating.

Customizing

You can change the Driver Attention Monitor settings. Select **Tactile And Audible Alert**, **Tactile Alert**, or **OFF**.

Customized Features P. 138, 366

For the Driver Attention Monitor to function

The bars in the Driver Information Interface remain grayed out unless the Driver Attention Monitor is functioning.

AWD Torque Distribution Monitor



The indicators on the display show the amount of torque being transferred to the right front, left front, right rear, and left rear wheels.

Real Time AWD with Intelligent Control System™ P. 488

Outside Temperature

Shows the outside temperature in Fahrenheit.

Adjusting the outside temperature display

Adjust the temperature reading by up to $\pm 5^{\circ}$ F if the temperature reading seems incorrect.

➢Outside Temperature

The temperature sensor is in the front bumper. Road heat and exhaust from another vehicle can affect the temperature reading when your vehicle speed is less than 19 mph (30 km/h).

It may take several minutes for the display to be updated after the temperature reading has stabilized.

You can adjust the temperature reading. Customized Features P. 138, 366

Navigation*

Compass*

Shows the compass screen.

Turn-by-Turn Directions

When driving guidance is provided by the navigation system^{*} or Android Auto, turnby-turn directions to your destination appear.

Refer to the Navigation System Manual

Android Auto™ P. 333

Audio*

Show the current audio information.

Audio System Basic Operation P. 268

Phone*

Show the current phone information.

➢Navigation*

Models with color audio system

Customized Features

Use the driver information interface to customize certain features.

How to customize

Select the R screen by pressing the R button while the power mode is in ON, and the vehicle is at a complete stop, and the shift position is in P. Select R, then press the **ENTER** button.


Customized Features


To customize other features, press the \blacktriangle / \blacktriangledown button.

List of customizable options P. 141


Example of customization settings P. 145

Put the transmission into \fbox{P} before you attempt to change any customized setting.

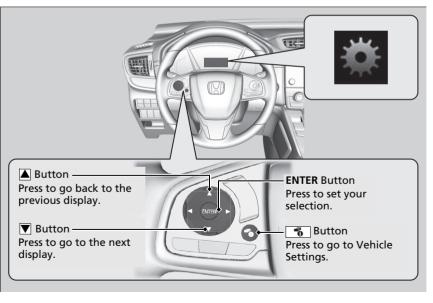

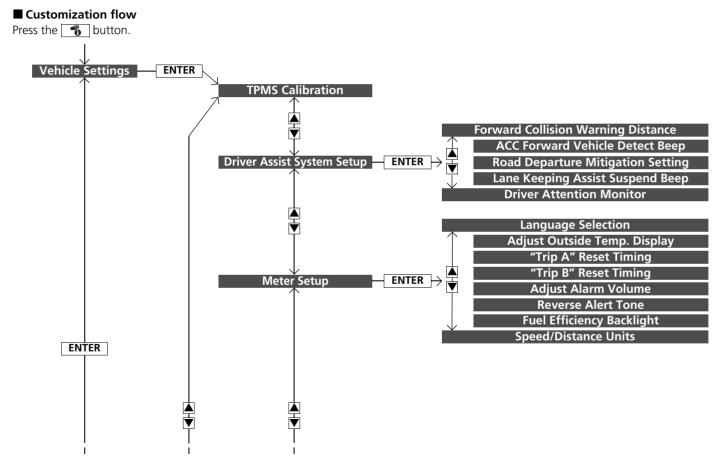



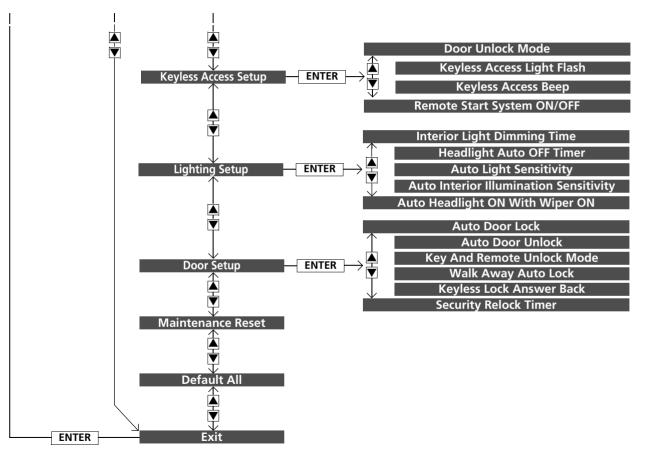

List of customizable options

| Setup Group | Customizable Features | Description | Selectable Settings |
|----------------------------------|---------------------------------------|---------------------------------------------------------------------------------------------------------|----------------------------------------------------|
| TPMS Calibration | — | Calibrates the TPMS. | Cancel/Calibrate |
| Driver Assist System Setup | Forward Collision Warning Distance | Changes the distance at which CMBS [™] alerts. | Long/Normal*1/Short |
| | ACC Forward Vehicle Detect Beep | Causes the system to beep when the system detects a vehicle, or when the vehicle goes out of ACC range. | ON/OFF*1 |
| | Road Departure Mitigation Setting | Changes the setting for the road departure mitigation system. | Narrow/Normal ^{*1} /Wide/ Warning Only |
| | Lane Keeping Assist Suspend Beep | Causes the system to beep when the LKAS is suspended. | ON/OFF*1 |
| | Driver Attention Monitor | Changes the setting for the driver attention monitor. | Tactile And Audible Alert*1/ Tactile Alert/OFF |

*1:Default Setting

| Setup Group | Customizable Features | Description | Selectable Settings |
|-------------|---------------------------------|----------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------|
| | Language Selection | Changes the displayed language. | English*1/Français/Español |
| | Adjust Outside Temp. Display | Adjusts the temperature reading by a few degrees. | -5°F ~ ±0°F*1 ~ +5°F |
| | "Trip A" Reset Timing | Changes the setting of how to reset trip meter A, average fuel economy A, average speed A, and elapsed time A. | When Fully Refueled/IGN OFF/ Manually Reset ^{*1} |
| Meter Setup | "Trip B" Reset Timing | Changes the setting of how to reset trip meter B, average fuel economy B, average speed B, and elapsed time B. | When Fully Refueled/IGN OFF/ Manually Reset ^{*1} |
| | Adjust Alarm Volume | Changes the alarm volume, such as buzzers, warnings, turn signal sound, and so on. | High/Mid ^{*1} /Low |
| | Reverse Alert Tone | Causes the beeper to sound once when the shift position is changed to $[\mathbf{R}]$. | ON*1/OFF |
| | Fuel Efficiency Backlight | Turns the ambient meter feature on and off. | ON*1/OFF |
| | Speed/Distance Units | Selects the trip computer units. | km/h·km/mph·miles*1 |

*1:Default Setting

| Setup Group | Customizable Features | Description | Selectable Settings |
|----------------------------|-------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------|
| Keyless Access Setup | Door Unlock Mode | Changes which doors unlock when you grab the driver's door handle. | Driver Door Only ^{*1} /All Doors |
| | Keyless Access Light Flash | Causes some exterior lights to flash when you unlock/lock the doors. | ON*1/OFF |
| | Keyless Access Beep | Sets the beeper sound or not when you grab either front door handle. | ON*1/OFF |
| | Remote Start System ON/OFF | Turns the remote engine start feature on and off. | ON*1/OFF |
| Lighting Setup | Interior Light Dimming Time | Changes the length of time the interior lights stay on after you close the doors. | 60sec/30sec*1/15sec |
| | Headlight Auto OFF Timer | Changes the length of time the exterior lights stay on after you close the driver's door. | 60sec/30sec/15sec*1/0sec |
| | Auto Light Sensitivity | Changes the timing for the headlights to come on. | Max/High/Mid ^{*1} /Low/Min |
| | Auto Interior Illumination Sensitivity | Changes the sensitivity of the brightness of the instrument panel when the headlight switch is in the AUTO position. | Max/High/Mid*1/Low/Min |
| | Auto Headlight ON With Wiper ON | Changes the settings for the wiper operation when the headlights automatically come on while the headlight switch is in the AUTO position. | ON*1/OFF |


*1: Default Setting

| Setup Group | Customizable Features | Description | Selectable Settings |
|----------------------|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
| Door Setup | Auto Door Lock | Changes the setting for when the doors and the tailgate automatically lock. | With Vehicle Speed ^{*1} /Shift From P/OFF |
| | Auto Door Unlock | Changes the setting for when the doors and the tailgate automatically unlock. | When Driver's Door Opens ^{*1/} When Shifting Into Park/ When Ignition Switched OFF/OFF |
| | Key And Remote Unlock Mode | Sets up either the driver's door or all doors to unlock on the first operation of the remote. | Driver Door ^{*1} /All Doors |
| | Walk Away Auto Lock | Changes the settings for the automatic locking the doors when you walk away from the vehicle while carrying the smart entry remote. | ON/OFF*1 |
| | Keyless Lock Answer Back | LOCK/UNLOCK- The exterior lights flash. LOCK (2nd push)- The beeper sounds. | ON*1/OFF |
| | Security Relock Timer | Changes the time it takes for the doors to relock and the security system to set after you unlock the vehicle without opening any door. | 90sec/60sec/30sec*1 |
| Maintenance Reset | - | Resets the Maintenance Minder™ display when you have performed the maintenance service. | Cancel/All Due Items |
| Default All | _ | Cancels customized changes you have made or restores them to their default setting. | Cancel/Set |

*1: Default Setting

Example of customization settings

The steps for changing the **"Trip A" Reset Timing** setting to **When Fully Refueled** are shown below. The default setting for **"Trip A" Reset Timing** is **Manually Reset**.

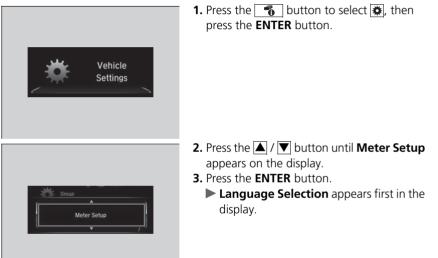





Trip A" Reset Timing



- 4. Press the ▲ / ▼ button until "Trip A" **Reset Timing** appears on the display, then press the **ENTER** button. ► The display switches to the customization setup screen, where you can select When Fully Refueled, IGN OFF, Manually Reset, or Exit.
- 5. Press the ▲ / ▼ button and select When Fully Refueled, then press the ENTER button.
 - The When Fully Refueled Setup screen appears, then the display returns to the customization menu screen.
- **6.** Press the ▲ / ▼ button until **Exit** appears on the display, then press the ENTER button.
- 7. Repeat Step 6 until you return to the normal screen.

Controls

This chapter explains how to operate the various controls necessary for driving.

| Clock |
|--------------------------------------------|
| Locking and Unlocking the Doors |
| Key 150 |
| Low Smart Entry Remote Signal Strength 152 |
| Locking/Unlocking the Doors from the |
| Outside 153 |
| Locking/Unlocking the Doors from the |
| Inside 160 |
| Childproof Door Locks 162 |
| Auto Door Locking/Unlocking |
| Tailgate |
| Security System |
| Immobilizer System 175 |
| Security System Alarm*175 |

| Opening and Closing the Windows | 178 |
|-----------------------------------|-----|
| Moonroof* 1 | 182 |
| Operating the Switches Around the | |
| Steering Wheel | |
| POWER Button 1 | 183 |
| Turn Signals1 | 186 |
| Light Switches 1 | 187 |
| Fog Lights* 1 | 191 |
| Daytime Running Lights 1 | 191 |
| Auto High-Beam 1 | 192 |
| Wipers and Washers 1 | 195 |
| Brightness Control 1 | 199 |

| Rear Defogger/Heated Door Mirror * | |
|------------------------------------|-----|
| Button | 198 |
| Driving Position Memory System* | 200 |
| Adjusting the Steering Wheel | 202 |
| Adjusting the Mirrors | 203 |
| Adjusting the Seats | 205 |
| Interior Convenience Items | 215 |
| Climate Control System | |
| Using Automatic Climate Control | 232 |

Automatic Climate Control Sensors238

* Not available on all models

Clock

Adjusting the Clock

Models with Display Audio

The clock is automatically updated through the audio system.

All models

You can adjust the time manually in the audio/information screen, with the power mode is in ON.

Adjusting the Time



Models with color audio system Using the MENU/CLOCK button

- Press and hold the MENU/CLOCK button.
 Adjust Clock is selected.
- **2.** Rotate \bigcirc to change hour, then press \bigotimes .
- 3. Rotate "♂ to change minute, then press .
- To enter the selection, rotate ⁽[¬]) and select
 Set, then press [¬]

■Adjusting the Clock

The clock in the driver information interface is automatically adjusted along with the audio system's clock display.

■Using the MENU/CLOCK button

These indications are used to show how to operate the selector knob. Rotate \bigcirc to select. Press \circlearrowright to enter.

You can customize the clock display to show the 12 hour clock or 24 hour clock.

Customized Features P. 359



Models with Display Audio

- Using the Settings menu on the audio/ information screen
- 1. Select Settings.
- 2. Select Clock.
- 3. Select Clock Adjustment.
- **4.** Select \blacktriangle or \bigtriangledown to change hour.
- 5. Select ▲ or ▼ to change minute, then select OK.

Substrained by the Settings menu on the audio/information screen

You can customize the clock display to show the 12 hour clock or 24 hour clock and turn the clock display on and off.

Customized Features P. 366

You can also adjust the clock by touching the clock displayed on the upper right corner of the display.

- 1. Touch the clock on the display for a few seconds.
- 2. Select Settings.
- 3. Select Clock.
- 4. Select Clock Adjustment.
- 5. Select \blacktriangle or \bigtriangledown to change hour.
- 6. Select 🔺 or 👿 to change minute, then select **OK**.

You cannot adjust the time while the vehicle is moving.


tailgate.

Key

This vehicle comes with the following keys:



Built-in Key

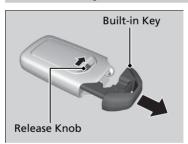

The built-in key can be used to lock/unlock the doors when the smart entry remote battery becomes weak and the power door lock/ unlock operation is disabled.

Use the keys to turn on and off the power

system, and to lock and unlock the doors and

To remove the built-in key, slide the release knob and then pull out the key. To reinstall the built-in key, push the built-in key into the smart entry remote until it clicks.

≫Key

All the keys have an immobilizer system. The immobilizer system helps protect against vehicle theft.

Immobilizer System P. 175

Follow the advice below to prevent damage to the keys:

- Do not leave the keys in direct sunlight, or in locations with high temperature or high humidity.
- Do not drop the keys or set heavy objects on them.
- Keep the keys away from liquids.
- Do not take the keys apart except for replacing the battery.

If the circuits in the keys are damaged, the power system may not activate, and the remote transmitter may not work.

If the keys do not work properly, have them inspected by a dealer.

You can remotely turn the power system on using the remote engine start.

Remote Engine Start P. 467

| Contains a number that you will need if you purchase a replacement key. Contains a number that you will need if you purchase a replacement key. Contains a number that you will need if you purchase an additional key, contact a dealer. If you wish to purchase an additional key, contact a dealer. If you lose your key and you cannot activate the power system, contact a dealer. | Key Number Tag | ≫Key Number Tag |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | | safe place outside of your vehicle. If you wish to purchase an additional key, contact a dealer. If you lose your key and you cannot activate the |

Controls

Low Smart Entry Remote Signal Strength

The vehicle transmits radio waves to locate the smart entry remote when locking/ unlocking the doors, opening the tailgate, or to activate the power system.

In the following cases, locking/unlocking the doors, opening the tailgate, or activating the power system may be inhibited or operation may be unstable:

- Strong radio waves are being transmitted by nearby equipment.
- You are carrying the smart entry remote together with telecommunications equipment, laptop computers, cell phones, or wireless devices.
- A metallic object is touching or covering the smart entry remote.

➢Low Smart Entry Remote Signal Strength


Communication between the smart entry remote and the vehicle consumes the smart entry remote's battery.

Battery life is about two years, but this varies depending on regularity of use.

The battery is consumed whenever the smart entry remote is receiving strong radio waves. Avoid placing it near electrical appliances such as televisions and personal computers.

Locking/Unlocking the Doors from the Outside

Using the Smart Entry with Push Button Start System

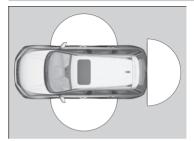

Door Lock

Sensor

When you carry the smart entry remote, you can lock/unlock the doors and open the tailgate.

You can lock/unlock the doors within a radius of about 32 inches (80 cm) of the outside door handle or tailgate outer handle.

Locking the doors and tailgate

Touch the door lock sensor on the front door or press the lock button on the tailgate.

Some exterior lights flash; the beeper sounds; all the doors and tailgate lock; and the security system* sets.

≥Locking/Unlocking the Doors from the Outside

If the interior light switch is in the door activated position, the interior light comes on when you unlock the doors and tailgate.

No doors opened: The light fades out after 30 seconds.

Doors and tailgate relocked: The light goes off immediately.

Interior Lights P. 215

Using the Smart Entry with Push Button Start System

If you do not open a door or the tailgate within 30 seconds of unlocking the vehicle with the smart entry system, the doors and tailgate will automatically relock.

You can lock or unlock doors using the smart entry system only when the power mode is in VEHICLE OFF.

- Do not leave the smart entry remote in the vehicle when you get out. Carry it with you.
- Even if you are not carrying the smart entry remote, you can lock/unlock the doors and tailgate while someone else with the remote is within range.
- The door may be locked or unlocked if the door handle is covered with water in heavy rain or in a car wash if the smart entry remote is within range.
- If you grip a front door handle or touch a door lock sensor wearing gloves, the door sensor may be slow to respond or may not respond by locking or unlocking the doors.



* Not available on all models





Unlocking the doors and tailgate

Grab the driver's door handle:

- The driver's door unlocks.
- Some exterior lights flash twice and the beeper sounds twice.

Grab the front passenger's door handle:

- ► All the doors and tailgate unlock.
- Some exterior lights flash twice and the beeper sounds twice.

Press the tailgate outer handle:

- ► The tailgate unlocks.
- Some exterior lights flash twice and the beeper sounds twice.

Dening/Closing the Tailgate P. 165

Substrain Start Entry with Push Button Start System

- After locking the door, you have up to 2 seconds during which you can pull the door handle to confirm whether the door is locked. If you need to unlock the door immediately after locking it, wait at least 2 seconds before gripping the handle, otherwise the door will not unlock.
- The door might not open if you pull it immediately after gripping the door handle. Grip the handle again and confirm that the door is unlocked before pulling the handle.
- Even within the 32 inches (80 cm) radius, you may not be able to lock/unlock the doors and the tailgate with the smart entry remote if it is above or below the outside handle.
- The smart entry remote may not operate if it is too close to the door and door glass.

The light flashes, and beeper sounds and unlock settings can be customized using the driver information interface* or audio/information screen*.

Models with color audio system


Customized Features P. 138 Models with Display Audio

Customized Features P. 366

Models with power tailgate

You can also unlock and open with the power tailgate.

Using the Tailgate Outer Handle P. 171

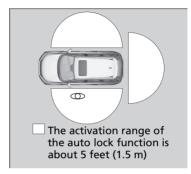

| 20 |
|----|

■ Locking the doors and tailgate (Walk away auto lock[®])

When you walk away from the vehicle while carrying the smart entry remote, the doors and tailgate will automatically lock. The auto lock function activates when all doors and tailgate are closed, and the smart entry remote is within about 5 feet (1.5 m) radius of the outside door handle. Exit vehicle while carrying smart entry remote and close door(s) and tailgate.

- **1.** While within about 5 feet (1.5 m) radius of the vehicle.
 - The beeper sounds; the auto lock function will be activated.
- Carry the smart entry remote beyond about 5 feet (1.5 m) from the vehicle and remain outside this range for 2 or more seconds.
 - Some exterior lights flash; the beeper sounds; all doors and tailgate will then lock.

Locking the doors and tailgate (Walk away auto lock[®])

The auto lock function is set to **OFF** as the factory default setting. The auto lock function can be set to **ON** using the driver information interface* or audio/ information screen*.

If you set the auto lock function to **ON** using the driver information interface* or audio/information screen*, only the smart entry remote that was used to unlock the driver's door prior to the setting change can activate auto lock.

Models with color audio system

Customized Features P. 138
 Models with Display Audio
 Customized Features P. 366

After the auto lock function has been activated, when you stay within the locking/unlocking operation range, the indicator on the smart entry remote will continue to flash until the doors and tailgate are locked.

When you stay beside the vehicle within the operation range, the doors and tailgate will automatically lock approximately 30 seconds after the auto lock function activating beeper sounds.

When you open a door or tailgate after the auto lock function activating beeper sounds, the auto lock function will be canceled.

To temporarily deactivate the function:

- 1. Set the power mode to OFF.
- 2. Open the driver's door.
- **3.** Using the master door lock switch, operate the lock as follows:
 - $\mathsf{Lock} \to \mathsf{Unlock} \to \mathsf{Lock} \to \mathsf{Unlock}.$
 - The beeper sounds and the function is deactivated.

To restore the function:

- Set the power mode to ON.
- Lock the vehicle without using the auto lock function.
- With the smart entry remote on you, move out of the auto lock function operation range.
- Open any door.

≥Locking the doors and tailgate (Walk away auto lock®)

Under the following circumstances, the auto lock function will not activate:

- The remote is inside the vehicle.
- ► The beeper will not sound.
- The remote is taken out of its operational range before all doors and tailgate are closed.
- ► The beeper will sound.

Models with power tailgate

If equipped, the user must wait until the power tailgate fully closes before the auto lock function will be activated.

The auto lock function does not operate when any of the following conditions are met.

- The smart entry remote is inside the vehicle.
- A door, tailgate or the hood is not closed.
- The power mode is set to any mode other than OFF.
- The smart entry remote is not located within a radius of about 5 feet (1.5 m) from the vehicle when you get out of the vehicle and close the doors and tailgate.


Auto lock function operation stop beeper

After the auto lock function has been activated, the auto lock operation stop beeper sounds for approximately two seconds in the following cases.

- The smart entry remote is put inside the vehicle through a window.
- You are located too close to the vehicle.

• The smart entry remote is put inside the tailgate. If the warning beeper sounds, check that you are carrying the smart entry remote. Then, open/close a door and confirm the auto lock activation beeper sounds once.

Using the Remote Transmitter

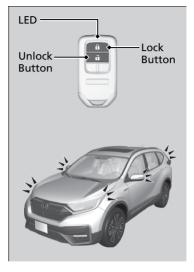

■ Locking the doors and tailgate Press the lock button.

Once:

Some exterior lights flash, all the doors and tailgate lock, and the security system* sets.

Twice (within five seconds after the first push):

The beeper sounds and verifies the security system^{*} is set.

Unlocking the doors and tailgate

Press the unlock button.

Once:

Some exterior lights flash twice, and the driver's door unlocks.

Twice:

▶ The remaining doors and tailgate unlock.

Using the Remote Transmitter

If you do not open a door or the tailgate within 30 seconds of unlocking the vehicle with the remote transmitter, the doors and tailgate will automatically relock.

You can change the relock timer setting. Models with color audio system

Customized Features P. 138 Models with Display Audio

You can lock or unlock doors using the remote transmitter only when the power mode is in VEHICLE OFF.

The remote transmitter uses low-power signals, so the operating range may vary depending on the surroundings.

The remote will not lock the vehicle when a door is open.

If the distance at which the remote transmitter works varies, the battery is probably low.

If the LED does not come on when you press a button, the battery is dead.

Replacing the Button Battery P. 613

You can customize the door unlock mode setting.


Models with color audio system

Customized Features P. 138 Models with Display Audio

Customized Features P. 366

Locking/Unlocking the Doors Using a Key

If the lock or unlock button of the remote transmitter does not work, use the key instead.

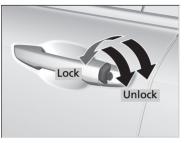

Fully insert the key and turn it.

➢Locking/Unlocking the Doors Using a Key

When you lock the driver's door with a key, all the other doors and tailgate lock at the same time. When unlocking, the driver's door unlocks first. Turn the key a second time within a few seconds to unlock the remaining doors and the tailgate.

You can customize the door unlock mode setting. Models with color audio system


Customized Features P. 138

Models with Display Audio

Customized Features P. 366

Locking a Door Without Using a Key

If you do not have the key on you, or if for some reason you cannot lock a door using the key, you can lock the door without it.

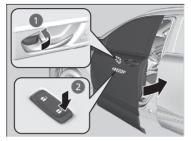

Locking the driver's door

Push the lock tab forward ① or push the master door lock switch in the lock direction②, and close the door.

Locking the passenger's doors

Push the lock tab forward and close the door.

Locking a Door Without Using a Key

When you lock the driver's door, all the other doors and tailgate lock at the same time.


Before locking a door, make sure that the key is not inside the vehicle.

Lockout prevention system

The doors and tailgate cannot be locked when the smart entry remote is inside the vehicle.

Locking/Unlocking the Doors from the Inside

Using the Lock Tab

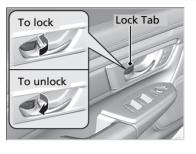

Locking a door Push the lock tab forward.

Unlocking a door Pull the lock tab rearward.

■Using the Lock Tab

When you lock the door using the lock tab on the driver's door, all of the other doors and tailgate lock at the same time.

When you unlock the door using the lock tab on the driver's door, only the driver's door will unlock.

Unlocking Using the Front Door Inner Handle



Pull the front door inner handle.

The door unlocks and opens in one motion.

≥Unlocking Using the Front Door Inner Handle

The front door inner handles are designed to allow front seat occupants to open the door in one motion. However, this feature requires that front seat occupants never pull a front door inner handle while the vehicle is in motion.

Children should always ride in a rear seat where childproof door locks are provided.

Childproof Door Locks P. 162

Unlocking and opening the driver's door from the inner handle unlocks all the other doors.

To avoid all the doors to be unlocked, use the lock tab on the driver's door to unlock, then lock again before opening the door.

This setting works for one time only. If you do not want all the doors to be unlocked all the time, customize the Auto Door Unlock setting to OFF*1/Off*2 using the driver information interface* or audio/information screen*.

Models with color audio system

Customized Features P. 138

Models with Display Audio

Customized Features P. 366

*1: Models with color audio

*2: Models with Display Audio

* Not available on all models

Using the Master Door Lock Switch



Press the master door lock switch in as shown to lock or unlock all doors and the tailgate.


≥Using the Master Door Lock Switch

When you lock/unlock either front door using the master door lock switch, all the other doors and the tailgate lock/unlock at the same time.

Childproof Door Locks

The childproof door locks prevent the rear doors from being opened from the inside regardless of the position of the lock tab.

Setting the Childproof Door Locks

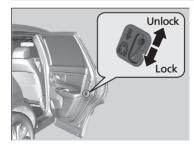

Slide the lever in the rear door to the lock position, and close the door.

When opening the door

Open the door using the outside door handle.

Childproof Door Locks

To open the door from the inside when the childproof door lock is on, put the lock tab in the unlock position, lower the rear window, put your hand out of the window, and pull the outside door handle.

Auto Door Locking/Unlocking

Your vehicle locks or unlocks all doors automatically when a certain condition is met.

Auto Door Locking

Drive lock mode

All doors and tailgate lock when the vehicle's speed reaches about 10 mph (15 km/h).

Auto Door Unlocking

Driver's door open mode

All doors unlock when the driver's door is opened.

➢Auto Door Locking/Unlocking

You can turn off or change to another auto door locking/unlocking setting using the driver information interface* or audio/information screen*.

Models with color audio system

- Customized Features P. 138 Models with Display Audio
 - Customized Features P. 366

Tailgate

Precautions for Opening/Closing the Tailgate

Always make sure individuals and objects are clear of the tailgate before opening or closing it.

Models without power tailgate

- Open the tailgate all the way.
- ▶ If it is not fully opened, the tailgate may begin to close under its own weight.
- Be careful when it is windy. The wind may cause the tailgate to close.

All models

Keep the tailgate closed while driving to:

- Avoid possible damage.
- Prevent exhaust gas from leaking into the vehicle.
- Carbon Monoxide Gas P. 84

Precautions for Opening/Closing the Tailgate

Anyone caught in the path of a tailgate that is being opened or closed can be seriously injured.


Make sure that all people are clear of the tailgate before opening or closing it.

Be careful not to hit your head on the tailgate or to put your hands between the tailgate and the cargo area when closing the tailgate.

When you are storing or picking up cargo from the cargo area, or by using a forward and back kicking motion under the center of the rear bumper for hands free access*, while the engine is idling, do not stand in front of the exhaust pipe. You may get burned.

Do not allow any passenger in the cargo space. They may get hurt during hard braking, a sudden acceleration, or a crash.

Opening/Closing the Tailgate

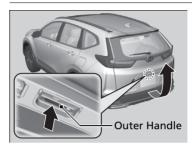

When all the doors are unlocked or press the tailgate unlock button on the remote transmitter, the tailgate is unlocked. Press the outer handle and lift open the tailgate.

If you are carrying the smart entry remote, you do not have to unlock the tailgate before opening it.

To close the tailgate, grab the inner handle, pull the tailgate down, and push it closed from outside.

If you close the tailgate when all the doors are locked, the tailgate locks automatically. ► Some exterior lights flash.

Dening/Closing the Tailgate

Do not leave the keys, in the vehicle when you get out. Carry it with you.

Even if you are not carrying the smart entry remote, you can lock/unlock the tailgate while someone else with the remote is within range.

Do not leave the keys inside the cargo area and close the tailgate. The beeper sounds and the tailgate cannot be closed.



Using the Remote Transmitter



Press the tailgate unlock button to unlock the tailgate.

≥Using the Remote Transmitter

If you have unlocked and opened the tailgate using the remote transmitter, when closing, the tailgate locks automatically.

Opening/Closing the Power Tailgate*

The power tailgate can be operated by pressing the power tailgate button on the remote transmitter, pressing the power tailgate button in the driver's side control panel, pressing the button on the tailgate, or by raising and lowering your foot under the center of the rear bumper for hands free access^{*}.

The power tailgate can be opened/closed when the transmission is in [P].

Opening/Closing the Power Tailgate*

Opening or closing a power tailgate while any part of a passenger is in the tailgate's operating path can cause serious injury.

Make sure all passengers or objects are clear of the tailgate operating range before opening or closing the tailgate.

NOTICE

Do not push or pull on the power tailgate when it is being automatically opened or closed. Forcibly opening or closing the power tailgate while in operation can deform the tailgate frame.

When operating the power tailgate, make sure there is enough space around your vehicle. People near the tailgate may be seriously hurt if the tailgate hits or closes on their heads. Be especially cautious if children are around.

The power tailgate may not open or close under the following conditions:

- You activate the power system while the tailgate is automatically opening or closing.
- The vehicle is parked on a steep hill.
- The vehicle is swayed in a strong wind.
- The tailgate or the roof is covered with snow or ice.

If you close the power tailgate when all the doors are locked, the power tailgate locks automatically.

Using the Hands Free Access*



Use a forward and back kicking motion under the center of the rear bumper to open or close the power tailgate while carrying the smart entry remote.

Some exterior lights will flash and a beeper sounds, then the tailgate begins to move.

■Using the Hands Free Access*

During rain or in other instances when the vehicle becomes wet, the sensor may not properly detect your foot motion.

When performing work on or around the rear section of the vehicle, you may inadvertently open or close the tailgate.


To prevent this from happening, select Customized Features on the audio/information screen and then select **OFF** for the feature.

Customized Features P. 366


If you hold your foot under the bumper for too long, the power tailgate does not open or close.

This function will not operate if you don't have the smart entry remote on you. Please make sure you have the smart entry remote on you.

The duration of the kicking motion should be approximately one second.

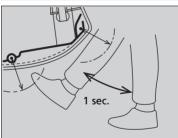

Using the Remote Transmitter

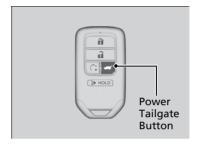

Press the power tailgate button for more than one second to operate when the power mode is in VEHICLE OFF (LOCK).

Some exterior lights flash and the beeper sounds.

If you press the button again while the power tailgate is moving, it will stop. Press the button for more than one second, and the power tailgate will reverse direction.

Customizing when to open the tailgate

Anytime: The power tailgate unlocks and opens at the same time. This is the default setting.

When Unlocked: The tailgate opens when all doors are unlocked.

Customized Features P. 366

Dening/Closing the Power Tailgate*

If you replace the 12-volt battery or the power tailgate fuse while the tailgate is open, the power tailgate may be disabled. The power tailgate resumes once you manually close the tailgate.

Installing aftermarket components other than Honda genuine accessories on the power tailgate may prevent it from fully opening or closing.

Make sure the power tailgate is fully open before you get your cargo in and out.

The beeper sounds when you start driving while the power tailgate is still open, or closing.

Using the Power Tailgate Button



To open or close the power tailgate, press the power tailgate button for about one second.
▶ Some exterior lights flash and the beeper sounds.

If you press the button again while the power tailgate is moving, it will stop. Press the button for about one second, and the power tailgate will reverse direction.

Dening/Closing the Power Tailgate *

If the power tailgate meets resistance while opening or closing, the auto reverse feature reverses the direction. The beeper sounds three times.

The auto reverse function stops sensing when the tailgate is almost closed to make sure that it fully closes.

Do not touch the sensors located on both sides of the tailgate. The power tailgate does not close if you touch either sensor when you are trying to close the tailgate.

Be careful not to scratch the sensors with a sharp object. If scratched, they can be damaged, and the power tailgate closing feature malfunctions.

Using the Tailgate Outer Handle



If you press the outer handle of the tailgate for no longer than one second, the tailgate opens automatically.

- ► The beeper sounds.
- ► If you want to open the tailgate
- manually, press the button for more than one second.
- Tailgate P. 164

If you are carrying the smart entry remote, you do not have to unlock the tailgate before opening it.

If you press the outer handle again while the power tailgate is moving, it will stop. Press the outer handle, and the power tailgate will reverse direction.

▶ Using the Tailgate Outer Handle

Do not leave the keys in the vehicle when you get out. Carry it with you.

Even if you are not carrying the smart entry remote, you can lock/unlock the tailgate while someone else with the remote is within range.

Do not leave the smart entry remote inside the cargo area and close the tailgate. The beeper sounds and the tailgate cannot be closed.

You can change the power tailgate operation setting on and off.

Customized Features P. 366


Using the Tailgate Inner Button



Press the tailgate inner button on the tailgate to close the power tailgate. ► The beeper sounds.

If you press the button again while the power tailgate is moving, it will stop. Press and release the button again, and the power tailgate will reverse direction.

Programming Tailgate Position

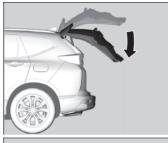

The extent to which the power tailgate automatically opens can be programmed.

To program:

- **1.** Open the tailgate to the desired position.
- **2.** Press and hold the tailgate inner button. You will hear one long beep, followed by two short beeps.

Programming Tailgate Position

If the tailgate is only slightly opened, the position cannot be programmed, even if you push the tailgate inner button.

If you want to reprogram the power tailgate to open all the way, manually raise the tailgate to its upper most position and follow the directions in step 2.





Auto-Closer

If you manually close the power tailgate, it latches automatically.

The auto-closer feature does not activate if you press the tailgate outer handle while the power tailgate is closing.

NOTICE

Do not put any force on the tailgate while the power tailgate is latching.

Keep your hands away from the tailgate when you manually close the tailgate and let it latch automatically. It is dangerous to put your hands around the tailgate as it starts to latch itself.

➢Power Tailgate Fall Detection

If you try to manually close the power tailgate immediately after it fully opens, the power tailgate fall detection may activate.

Once the power tailgate fall detection activates, wait until the power tailgate fully closes. Keep away from the power tailgate when it is in motion.

If the power tailgate fall detection constantly activates, consult at a dealer.

Power Tailgate Fall Detection

Automatically lowers the power tailgate when there is a possibility that the fully opened power tailgate can fall down by its own weight (for example, by snow on the tailgate). The beeper sounds while the power tailgate lowers.

Immobilizer System

The immobilizer system prevents a key that has not been pre-registered from starting the power system. Each key contains electronic transmitters that use electronic signals to verify the key.

Pay attention to the following when pressing the **POWER** button:

- Do not allow objects that emit strong radio waves near the **POWER** button.
- Make sure the key is not covered by or touching a metal object.
- Do not bring a key from another vehicle's immobilizer system near the **POWER** button.
- Do not put the key near magnetic items. Electronic device, such as televisions and audio systems emit strong magnetic fields. Note that even a key chain can become magnetic.

Security System Alarm*

The security system alarm activates when the tailgate, hood or doors are forcibly opened. The alarm does not activate if the tailgate or doors are opened with the key, remote transmitter or smart entry system.

However, the alarm activates if a door is opened with the key and then the hood is opened before the power mode is set to ON.

When the security system alarm activates

The horn sounds intermittently, and some exterior lights flash.

≥Immobilizer System

NOTICE

Leaving the key in the vehicle can result in theft or accidental movement of the vehicle.

Always take the key with you whenever you leave the vehicle unattended.

Do not alter the system or add other devices to it. Doing so may damage the system and make your vehicle inoperable.

Security System Alarm *

The security system alarm continues for a maximum of two minutes until the security system alarm deactivates.

■ To deactivate the security system alarm

Unlock the vehicle using the key, remote transmitter or smart entry system, or turn the power mode is set to ON. The system, along with the horn and flashing lights, is deactivated.

Setting the security system alarm

The security system alarm automatically sets when the following conditions have been met:

- The power mode is set to VEHICLE OFF (LOCK).
- The hood and tailgate are closed.
- All doors and tailgate are locked from outside with the key, remote transmitter, or smart entry system.

When the security system alarm sets

The security system alarm indicator in the instrument panel blinks and the blinking interval changes after about 15 seconds.

To cancel the security system alarm

The security system alarm is canceled when the vehicle is unlocked using the remote transmitter or smart entry system, or when the power mode is set to ON. The security system alarm indicator goes off at the same time.

Security System Alarm*

Do not set the security system alarm when someone is in the vehicle or a window is open. The system can accidentally activate when:

- Unlocking the door with the lock tab.
- Opening the hood with the hood release handle.

If the 12-volt battery goes dead after you have set the security system alarm, the security alarm may go off once the 12-volt battery is recharged or replaced. If this occurs, deactivate the security system alarm by unlocking a door using the key, remote transmitter, or smart entry system.

Do not alter the system or add other devices to it. Doing so may damage the system and make your vehicle inoperable.

Panic Mode



The panic button on the remote transmitter

If you press the panic button for approximately one second, the following will occur for about 30 seconds:

- The horn sounds.
- Some exterior lights flash.

Canceling panic mode

- Press any button on the remote transmitter.
- Set the power mode to ON.

Opening/Closing the Power Windows

The power windows can be opened and closed when the power mode is in ON, using the switches on the doors. The driver's side switches can be used to open and close all the windows.

The power window lock button on the driver's side must be switched off (not pushed in, indicator off) to open and close the windows from anywhere other than the driver's seat.

When the power window lock button is switched on (pushed in, indicator on), you can only operate the driver's window. Turn the power window lock button on if a child is in the vehicle.

≥Opening/Closing the Power Windows


Closing a power window on someone's hands or fingers can cause serious injury.

Make sure your passengers are away from the windows before closing them.

The power windows can be operated for up to 10 minutes after you set the power mode to VEHICLE OFF.

Opening either front door cancels this function.

Opening/Closing the Windows with Auto-Open/Close Function

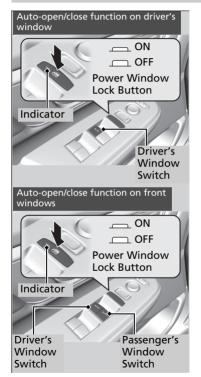

Manual operation

To open: Push the switch down lightly, and hold it until the desired position is reached. **To close:** Pull the switch up lightly, and hold it until the desired position is reached.

Automatic operation

To open: Push the switch down firmly. **To close:** Pull the switch up firmly.

The window opens or closes completely. To stop the window at any time, push or pull the switch briefly.

Dpening/Closing the Power Windows


Auto Reverse

If a power window senses resistance when closing automatically, it stops closing and reverse direction.

The driver's window auto reverse function is disabled when you continuously pull up the switch.

The auto reverse function stops sensing when the window is almost closed to ensure that it fully closes.

Opening/Closing Windows without Auto-Open/Close Function

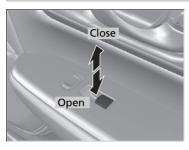

To open: Push the switch down. **To close:** Pull the switch up.

Release the switch when the window reaches the desired position.

Opening the Windows with the Remote




To open: Press the unlock button, and then within 10 seconds, press it again and keep it pressed. If the windows stop midway, repeat the procedure.

Opening the Windows with the Remote

Models with moonroof

If you open the windows with the remote, the moonroof will open automatically along with them.

Opening/Closing the Windows with the Key

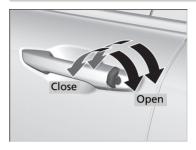

To open: Unlock the driver's door with the key. Within 10 seconds of returning the key to the central position, turn the key in the unlock direction and hold it there.

To close: Lock the driver's door with the key. Within 10 seconds of returning the key to the central position, turn the key in the lock direction and hold it there.

Release the key to stop the windows at the desired position. If you want further adjustment, repeat the same operation.

Dening/Closing the Windows with the Key

Models with moonroof


If you open/close the windows with the key ,the moonroof will close automatically along with them.

Moonroof*

Opening/Closing the Moonroof

You can operate the moonroof when the power mode is in ON. Use the switch in the front of the ceiling to open and close the moonroof.

Using the Moonroof Switch

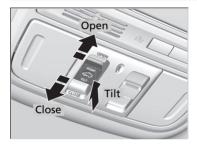

■ Automatic operation To open: Pull the switch back firmly. To close: Push the switch forward firmly.

The moonroof automatically opens or closes all the way. To stop the moonroof midway, pull or push the switch briefly.

Manual operation

To open: Pull the switch back lightly, and hold it until the desired position is reached. **To close:** Push the switch forward lightly, and hold it until the desired position is reached.

■ Tilting the moonroof up

To tilt: Push on the center of the moonroof switch.

To close: Push the switch forward firmly, then release.

≥Using the Moonroof Switch

Opening or closing the moonroof on someone's hands or fingers can cause serious injury.

Make sure all hands and fingers are clear of the moonroof before opening or closing it.

NOTICE

Opening the moonroof in below freezing temperature or when it is covered with snow or ice can damage the moonroof panel or motor.

The moonroof can be operated for up to 10 minutes after you set the power mode to VEHICLE OFF (LOCK).

Opening either front door cancels this function.

When resistance is detected, the auto reverse function causes the moonroof to change directions, then stop. Auto reverse stops sensing when the moonroof is almost closed to ensure that it fully closes.


You can use the remote transmitter or the key to operate the moonroof.

Depending the Windows with the Remote P. 180

Opening/Closing the Windows with the Key P. 181

POWER Button


Changing the Power Mode

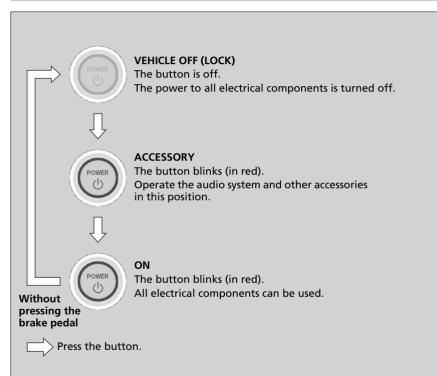

➢POWER Button

POWER Button Operating Range

You can start the power system when the smart entry remote is inside the vehicle.

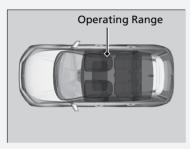

The power system may also start if the smart entry remote is close to the door or window, even if it is outside the vehicle.

ON mode:

The **POWER** button is on (in red), if the power system is on.

If the battery of the smart entry remote is getting low, the power system may not start when you push the **POWER** button. If the power system does not start, refer to the following link.

➡ If the Smart Entry Remote Battery is Weak P. 641

Do not leave the power mode in ACCESSORY or ON when you get out.


Automatic Power Off

If you leave the vehicle for 30 to 60 minutes with the transmission in [P] and the power mode in ACCESSORY, the vehicle automatically goes into the mode similar to VEHICLE OFF (LOCK) to avoid draining the 12-volt battery.

Power Mode Reminder

If you open the driver's door when the power mode is set to ACCESSORY, a warning buzzer sounds.

Smart Entry Remote Reminder

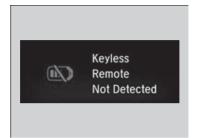

When the power mode is set to any mode other than OFF and you remove the smart entry remote from the vehicle and shut the door, an alarm will sound. If the alarm continues to sound, place the smart entry remote in another location.

When the power mode is in ACCESSORY

The alarm will sound from outside the vehicle.

When the power mode is in ON

An alarm will sound both inside and outside the vehicle. In addition, a warning indicator will appear on the instrument panel.

Smart Entry Remote Reminder


When the smart entry remote is within the system's operational range, and all the doors are closed, the warning function cancels.

If the smart entry remote is taken out of the vehicle after the power system has been started, you can no longer change the **POWER** button mode or restart the power system. Always make sure if the remote is in your vehicle when you operate the **POWER** button.

Removing the smart entry remote from the vehicle through a window does not activate the warning buzzer.

Do not put the smart entry remote on the dashboard or in the glove box. It may cause the warning buzzer to go off. Under some other conditions that can prevent the vehicle from locating the remote, the warning buzzer may also go off even if the remote is within the system's operational range.

Turn Signals

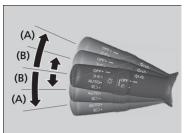

The turn signals can be used when the power mode is in ON.

■ (A): Turn signal

Push the lever up or down based on the direction you want to turn, and the turn signal will blink.

■ (B): One-touch turn signal

When you lightly push the lever up or down and release it, the turn signal will blink 3 times.

If you lightly push the lever in the opposite direction while it is blinking, the blinking will stop.


➢Turn Signals

The turn signal indicator on the instrument panel will blink when the external turn signal blinks.

Indicators P. 88

Light Switches

Manual Operation

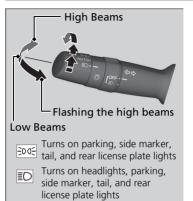

Rotating the light switch turns the lights on and off, regardless of the power mode setting.

High beams Push the lever forward until you hear a click.

Low beams When in high beams, pull the lever back to return to low beams.

Flashing the high beams

Pull the lever back, and release it.

➢Light Switches

If you leave the power mode in VEHICLE OFF (LOCK) while the lights are on, a chime sounds when the driver's door is opened.

When the lights are on, the lights on indicator in the instrument panel will be on.

Indicators P. 88

Do not leave the lights on when the power system is off because it will cause the 12-volt battery to discharge.

If you sense that the level of the headlights is abnormal, have the vehicle inspected by a dealer.

Automatic Operation (automatic lighting control)



Automatic lighting control can be used when the power mode is in ON.

When you turn the light switch to **AUTO**, the headlights and other exterior lights will switch on and off automatically depending on the ambient brightness.


The headlights come on when you unlock a door in dark areas with the headlight switch in **AUTO**.

Once you lock the door, the headlights will go off.

Mutomatic Operation (automatic lighting control)

We recommend that you turn on the lights manually when driving at night, in a dense fog, or in dark areas such as long tunnels or parking facilities.

The light sensor is in the location shown below. Do not cover this light sensor with anything; otherwise, the automatic lighting system may not work properly.

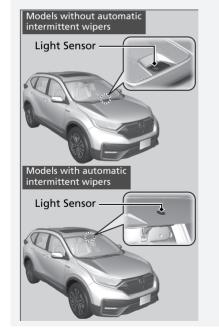


Headlight Integration with Wipers

The headlights automatically come on when the wipers are used several times within a certain number of intervals with the headlight switch in **AUTO**. The headlights automatically go off a few minutes later if the wipers are stopped.

Mutomatic Operation (automatic lighting control)

You can adjust the auto light sensitivity as follows:

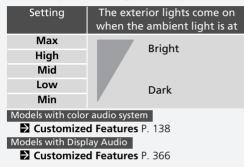

➢Headlight Integration with Wipers

This feature activates while the headlights are off in **AUTO**.

The instrument panel brightness does not change when the headlights come on.

At dark ambient light levels, the automatic lighting control feature turns on the headlights, regardless of the number of wiper sweeps.

You can turn the headlight integration with wipers function on and off.

Models with color audio system
Customized Features P. 138

Models with Display Audio

Customized Features P. 366

Automatic Lighting Off Feature

The headlights, all other exterior lights, and the instrument panel lights turn off 15 seconds after you set the power mode to VEHICLE OFF (LOCK), take the remote with you, and close the driver's door.

If you set the power mode to VEHICLE OFF (LOCK) with the headlight switch on, but do not open the door, the lights turn off after 10 minutes (3 minutes, if the switch is in the **AUTO** position).

The lights turn on again when you unlock or open the driver's door. If you unlock the door, but do not open it within 15 seconds, the lights go off. If you open the driver's door, you will hear a lights on reminder chime.

➢Automatic Lighting Off Feature

You can change the headlight auto off timer setting. Models with color audio system Customized Features P. 138

Models with Display Audio

Customized Features P. 366

Fog Lights*



Daytime Running Lights

The parking/daytime running lights come on when the following conditions have been met:

When the low beam headlights are on, turn the fog light switch on to use the fog lights.


- The power mode is in ON.
- The headlight switch is **AUTO** or **OFF**.
- The parking brake is released.

The lights remain on even if you set the parking brake. Setting the power mode to VEHICLE OFF will turn off the daytime running lights.

The daytime running lights are off once the headlight switch is turned on, or when the headlight switch is in **AUTO** and it is getting darker outside.


Auto High-Beam

The front sensor camera detects the light sources ahead of the vehicle such as the lights of a preceding or oncoming vehicle, or street lights. When you are driving at night, the system automatically switches the headlights between low beam and high beam depending on the situation.

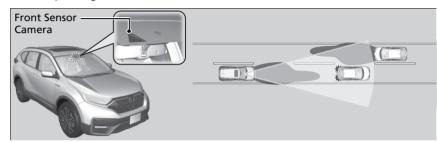

How to Use the Auto High-Beam

When all of the following conditions have been met, the auto high-beam indicator comes on and the auto high-beam is activated.

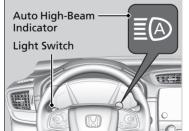

- The power mode is in ON.
- The light switch is in **AUTO**.
- The lever is in the low beam position.
- The headlights have been automatically activated.
- It is dark outside the vehicle.

≫Auto High-Beam

The auto high-beam system does not always operate in every situation. This system is just for assisting the driver. Always observe your surroundings and switch the headlights between high beam and low beam manually if necessary.

If you find the timing of beam changes inconvenient for driving, change the headlight beams manually.

The range and the distance at which the camera can recognize varies depending on conditions surrounding your vehicle.

Regarding the handling of the camera mounted to the inside of the windshield, refer to the following.

Front Sensor Camera P. 544

For the auto high-beam to work properly:

- Do not place an object that reflects light on the dashboard.
- Keep the windshield around the camera clean.
- When cleaning the windshield, be careful not to apply the windshield cleanser to the camera lens.
- Do not attach an object, sticker or film to the area around the camera.
- Do not touch the camera lens.

If the camera receives a strong impact, or repairing of the area near the camera is required, consult a dealer.

If the auto high-beam indicator does not come on even when all the conditions have been met, carry out the following procedure and the indicator will come on.

• Pull the lever toward you for flashing the high beams then release it while driving.

Automatic switching between high-beam and low-beam

When auto-high beam is active, the headlights switch between high beam and low beam based on the following conditions.

Switching to high beam:

All of the following conditions must be met before the high beams turn on.

 Your vehicle speed is 25 mph (40 km/h) or more.



- There are no preceding or oncoming vehicle with headlights or taillights turned on.
- There are few street lights on the road ahead.

Switching to low beam:

One of the following conditions must be met before the low beams turn on

- Your vehicle speed is 15 mph (24) km/h) or less.
- There is a preceding or oncoming vehicle with headlights or taillights turned on.
- There are many street lights on the road ahead

Manual switching between high-beam and low-beam

If you want to manually switch the headlights between high beam and low beam. follow either of the procedures below. Note that when you do this, the auto highbeam indicator will turn off and the auto high-beam will be deactivated.

Using the lever:

Pull the lever toward you for flashing the high beams then release it within about one second while driving.

To reactivate the auto high-beam, pull the lever toward you for flashing the high beams then release it while driving. The auto high-beam indicator will come on

Using the light switch:

Turn the light switch to

▶ To reactivate the auto high-beam, turn the light switch to AUTO when the lever is in the low beam position, the auto high-beam indicator will come on.

How to Use the Auto High-Beam

In the following cases, the auto high-beam system may not switch the headlights properly or the switching timing may be changed. In case of the automatic switching operation does not fit for your driving habits, please switch the headlights manually.

- The brightness of the lights from the preceding or oncoming vehicle is intense or poor.
- Visibility is poor due to the weather (rain, snow, fog, windshield frost, etc.).
- Surrounding light sources, such as street lights, electric billboards and traffic lights are illuminating the road ahead
- The brightness level of the road ahead constantly changes.
- The road is bumpy or has many curves.
- A vehicle suddenly appears in front of you, or a vehicle in front of you is not in the preceding or oncoming direction.
- Your vehicle is tilted with a heavy load in the rear.
- A traffic sign, mirror, or other reflective object ahead is reflecting strong light toward the vehicle.
- The oncoming vehicle frequently disappears under roadside trees or behind median barriers.
- The preceding or oncoming vehicle is a motorcycle, bicycle, mobility scooter, or other small vehicle.

The auto high-beam system keeps the headlight low beam when:

- Windshield wipers are operating at a high speed.
- The camera has detected dense fog.



How to Turn Off the Auto High-Beam

You can turn the auto high-beam system off. If you want to turn the system off or on, set the power mode to ON, then carry out the following procedures while the vehicle is stationary.



To turn the system off:

With the light switch is in **AUTO**, pull the lever toward you and hold it for at least 40 seconds. After the auto high-beam indicator light blinks twice, release the lever.

To turn the system on:

With the light switch is in **AUTO**, pull the lever toward you and hold it for at least 30 seconds. After the auto high-beam indicator light blinks once, release the lever.

➢How to Use the Auto High-Beam

If the Some Driver Assist Systems Cannot Operate: Camera Temperature Too High message appears:

- Use the climate control system to cool down the interior and, if necessary, also use defroster mode with the airflow directed toward the camera.
- Start driving the vehicle to lower the windshield temperature, which cools down the area around the camera.

If the Some Driver Assist Systems Cannot Operate: Clean Front Windshield message appears:

• Park your vehicle in a safe place, and clean the windshield. If the message does not disappear after you have cleaned the windshield and driven for a while, have your vehicle checked by a dealer.


▶ How to Turn Off the Auto High-Beam

If you turn the auto high-beam system off, the system does not operate until you turn the system on.

Park in a safe place before turning the system off or on.

Wipers and Washers

Windshield Wiper/Washer

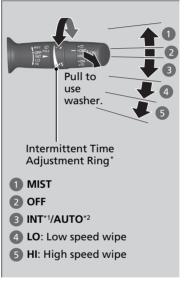

The windshield wipers and washers can be used when the power mode is in ON.

MIST

The wipers run at high speed until you release the lever.

■ Wiper switch (OFF, INT^{*1}, AUTO^{*2}, LO, HI)

Move the lever up or down to change the wiper settings.

Adjusting wiper operation*

Turn the adjustment ring to adjust the wiper operation.

Lower speed, fewer sweeps



Higher speed, more sweeps

Washer

Sprays while you pull the lever toward you. When you release the lever for more than one second, the spray stops, the wipers sweep two or three more times to clear the windshield, then stop.

➢Wipers and Washers

NOTICE

Do not use the wipers when the windshield is dry. The windshield will get scratched, or the rubber blades will get damaged.

NOTICE

In cold weather, the blades may freeze to the windshield.

Operating the wipers in this condition may damage the wipers. Use the defogger to warm the windshield, then turn the wipers on.

NOTICE

Turn the washers off if no washer fluid comes out. The pump may get damaged.

Models with intermittent time adjustment ring

If the vehicle speeds up while the wipers are operating intermittently, the length of the wipe interval shortens.

When the vehicle speeds up, the wiper operation's shortest delay setting (4) and the **LO** setting become the same.

If the wipers stop operating due to an obstacle such as the build-up of snow, park the vehicle in a safe place. Rotate the wiper switch to **OFF**, and set the power mode to ACCESSORY or VEHICLE OFF, then remove the obstacle.

*1: Models with manual intermittent operation

*2: Models with automatic intermittent operation

* Not available on all models

Automatic Intermittent Wipers*



When you push the lever down to **AUTO**, the windshield wipers sweep once, and go into the automatic mode.

The wipers operate intermittently, at low speed, or at high speed and stops in accordance with the amount of rainfall the rainfall sensor detects.

AUTO sensitivity adjustment

When the wiper function is set to **AUTO**, you can adjust the sensitivity of the rainfall sensor (using the adjustment ring) so that wipers will operate in accordance with your preference.

Sensor sensitivity



Low Sensitivity

High Sensitivity

Wipers and Washers

The wiper motor may stop motor operation temporarily to prevent an overload. Wiper operation will return to normal within a few minutes, once the circuit has returned to normal.

➢Automatic Intermittent Wipers[∗]

The rainfall sensor is in the location shown below.




NOTICE

AUTO should always be turned **OFF** before the following situations in order to prevent severe damage to the wiper system:

- Cleaning the windshield
- Driving through a car wash
- No rain present

Rear Wiper/Washer

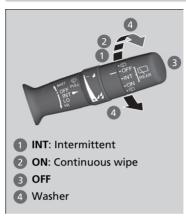

The rear wiper and washer can be used when the power mode is in ON.

■ Wiper switch (OFF, INT, ON) Change the wiper switch setting according to the amount of rain.

■ Washer () Sprays while you rotate the switch to this position. Hold it to activate the wiper and to spray the washer. Once released, the washer spray will stop and the rear wiper will return to its selected switch setting after a few sweeps.

Operating in reverse


When you shift the transmission to \mathbb{R} with the windshield wipers activated, the rear wiper operates automatically as follows even if its switch is off.

| Front Wiper Position | Rear Wiper Operation |
|-------------------------------------------------------------|----------------------|
| INT * (Intermittent) AUTO * (Intermittent) | Intermittent |
| LO (Low speed wipe) HI (High speed wipe) | Continuous |

Rear Defogger/Heated Door Mirror* Button

Rear Defogger/Heated Door Mirror* Button

Press the rear defogger and heated door mirror* button to defog the rear window and mirrors* when the power mode is in ON.

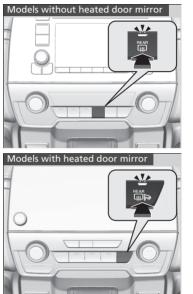

The rear defogger and heated door mirror^{*} automatically switch off after 10-30 minutes depending on the outside temperature. However, if the outside temperature is 32°F (0°C) or below, it does not automatically switch off.

≥Rear Defogger/Heated Door Mirror * Button

This system consumes a lot of power, so turn it off when the window has been defogged. Also, do not use the system for a long time while the power system is stopped. This may weaken the 12-volt battery, making it difficult to turn the power system on.

Models with heated door mirror

When the power mode is set to ON and the outside temperature is below 41°F (5°C), the heated door mirror may automatically activate for 10 minutes.

Brightness Control



When the brightness of the meter will be reduced, you can use the brightness control knob to adjust instrument panel brightness. **Brighten:** Turn the knob to the right. **Dim:** Turn the knob to the left.

You will hear a beeper when the brightness reaches minimum or maximum. Several seconds after you have adjusted the brightness, you will be returned to the previous screen.

Brightness level indicator


The brightness level is shown on the driver information interface while you are adjusting it.

➢Brightness Control

The brightness of the instrument panel will be reduced when the following conditions have been met:

- The power mode is in ON.
- The light switch is in any position other than off and it is dark outside.

The brightness can be set differently for when the exterior lights are on, and when they are off.

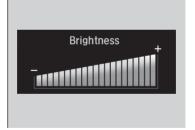

Driving Position Memory System*

You can store two driver's seat positions (except for power lumbar) with the driving position memory system.

When you unlock and open the driver's door with a remote transmitter or the smart entry system, the seat adjusts automatically to one of the two preset positions.

When you enter the vehicle, the driver information interface briefly shows you which remote transmitter you used to unlock the vehicle.

- **DRIVER 1** transmitter is linked to memory button **1**.
- **DRIVER 2** transmitter is linked to memory button **2**.



Driving Position Memory System*

Using the audio/information screen, you can disable the automatic seat adjustment function.


Customized Features P. 366

System Operation

The system will not operate if:

- The vehicle speed is above 3 mph (5 km/h).
- The transmission is out of the P position.
- Either memory button is pressed while the seat is in motion.
- The seat position is adjusted while in operation.
- The memory **1** or **2** position is set fully to the rear.

Storing a Position in Memory

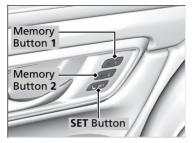

- **1.** Set the power mode to ON. Adjust the driver's seat to the desired position.
- 2. Press the SET button.
 - You will hear a beep, and the memory button indicator light will blink.
- **3.** Press and hold memory button 1 or 2 within five seconds of pressing the **SET** button.
 - Once the seat position has been memorized, the indicator light on the button you pressed stays on.

Recalling the Stored Position

| Memory Button 1 Memory Button 2 | |
|------------------------------------------|---|
| Button 1 | |
| Memory | / |
| Memory | |
| | |
| Button 2 | |
| | |
| | |
| | |

- **1.** Put the transmission into **P**.
- 2. Apply the parking brake.
- **3.** Press a memory button (1 or 2).
- You will hear a beep, and the indicator light will blink.

The seat will automatically move to the memorized position. When it has finished moving, you will hear a beep, and the indicator light stays on.

Storing a Position in Memory

After you press the **SET** button, the storing operation will be canceled when:

- You do not press the memory button within five seconds.
- You readjust the seat position before the doublebeep.
- You set the power mode to any position except ON.


Recalling the Stored Position

The seat will stop moving if you:

- Press the **SET** button, or a memory button (1 or 2).
- Adjust the seat position.
- Put the transmission into a position other than **P**.

Adjusting the Steering Wheel

The steering wheel height and distance from your body can be adjusted so that you can comfortably grip the steering wheel in an appropriate driving posture.

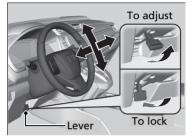

- **1.** Pull the steering wheel adjustment lever up.
- The steering wheel adjustment lever is under the steering column.
- **2.** Move the steering wheel up or down, and in or out.
 - Make sure you can see the instrument panel gauges and indicators.
- **3.** Push the steering wheel adjustment lever down to lock the steering wheel in position.
 - After adjusting the position, make sure you have securely locked the steering wheel in place by trying to move it up, down, in, and out.

Main Adjusting the Steering Wheel

Adjusting the steering wheel position while driving may cause you to lose control of the vehicle and be seriously injured in a crash.


Adjust the steering wheel only when the vehicle is stopped.

Adjusting the Mirrors

Interior Rearview Mirror

Adjust the angle of the rearview mirror when you are sitting in the correct driving position.

Rearview Mirror with Day and Night Positions*

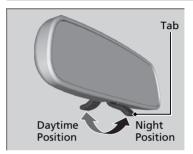


Flip the tab to switch the position. The night position will help to reduce the glare from headlights behind you when driving after dark.

➢Adjusting the Mirrors

Keep the inside and outside mirrors clean and adjusted for best visibility.

Adjust the mirrors before you start driving. **▶** Front Seats P. 205


Automatic Dimming Rearview Mirror*

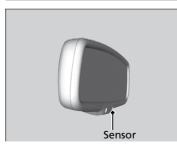

When you are driving after dark, the automatic dimming rearview mirror reduces the glare from headlights behind you. This feature is always active. Automatic Dimming Rearview Mirror*

The auto dimming function cancels when the transmission is in $[\mathbf{R}]$.


Power Door Mirrors

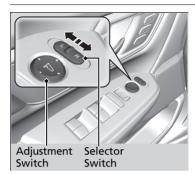

You can adjust the door mirrors when the power mode is in ON.

■ Mirror position adjustment L/R selector switch: Select the left or right mirror. After adjusting the mirror, return the switch to the center position. Mirror position adjustment switch: Press the switch left, right, up, or down to move the mirror.


Front Seats

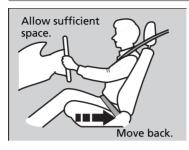

Adjust the driver's seat as far back as possible while allowing you to maintain full control of the vehicle. You should be able to sit upright, well back in the seat and be able to adequately press the pedals without leaning forward, and grip the steering wheel comfortably. The passenger's seat should be adjusted in a similar manner, so that it is as far back from the front airbag in the dashboard as possible.

Adjusting the Seat Positions

Adjusting the front power seat*

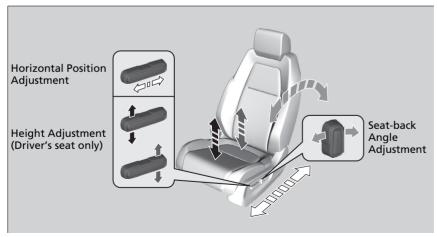


Adjusting the Seats

Sitting too close to a front airbag can result in serious injury or death if the front airbags inflate.

Always sit as far back from the front airbags as possible while maintaining control of the vehicle.


The National Highway Traffic Safety Administration recommends that driver's allow at least 10 inches (25 cm) between the center of the steering wheel and the chest.

Always make seat adjustments before driving.

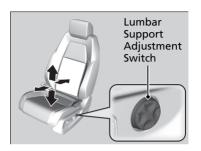

 Lumbar Support Adjustment Switch* (Driver's seat only)
 Press the top: To move the lumbar support up.
 Press the bottom: To move the lumbar support down.
 Press the front: To increase the entire lumbar support.
 Press the rear: To decrease the entire lumbar support.


Adjusting the front manual seat(s)*

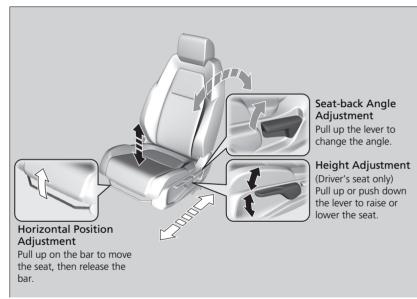

➢Adjusting the front manual seat(s)*

Once a seat is adjusted correctly, rock it back and forth to make sure it is locked in position.

Adjusting the Seat-Backs

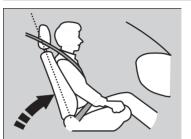

Adjust the driver's seat-back to a comfortable, upright position, leaving ample space between your chest and the airbag cover in the center of the steering wheel.

The front seat passenger should also adjust their seat-back to a comfortable, upright position.

➢Adjusting the Seat-Backs

Reclining the seat-back too far can result in serious injury or death in a crash.

Adjust the seat-back to an upright position, and sit well back in the seat.

Do not put a cushion, or other object, between the seat-back and your back.


Doing so may interfere with proper seat belt or airbag operation.

If you cannot get far enough away from the steering wheel and still reach the controls, we recommend that you investigate whether some type of adaptive equipment may help.

Reclining a seat-back so that the shoulder part of the belt no longer rests against the occupant's chest reduces the protective capability of the belt. It also increases the chance of sliding under the belt in a crash and being seriously injured. The farther a seat-back is reclined, the greater the risk of injury.

Rear Seats

Adjusting the Seat Positions

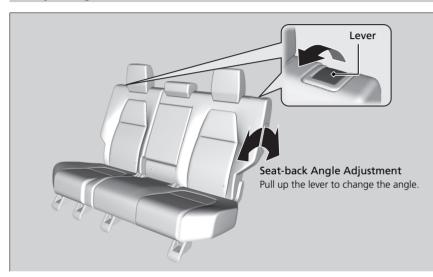

➢Rear Seats

Once a seat is adjusted correctly, rock it back and forth to make sure it is locked in position.

Folding Down the Rear Seats





Release Leve

From the cargo area side

anchor buckle.

the seat-back.

From the rear seat side

ceilina.

seat.

4. Pull the release lever and fold down the seat

latch plate into the slot on the side of the

Seat Belt with Detachable Anchor P 53

lowest position. Put the armrest back into

4. Pull the release lever and fold down the

➢Folding Down the Rear Seats

The rear seat-backs can be folded down to accommodate bulkier items in the cargo area.

Remove any items from the rear seat cushion and floor before you fold down the rear seat.

When returning the seat-back to its original position, push it firmly back. Also, make sure all rear shoulder belts are positioned in front of the seat-back.

Make sure all items in the cargo area or items extending through the opening into the rear seats are properly secured. Loose items can fly forward if you have to brake hard.

Make sure that the folded seat-back does not press against the front passenger seat, as this can cause the weight sensors in the front passenger seat to work improperly.

Passenger Front Airbag Off Indicator P. 68

Make sure the seat-back, head restraints and seat cushion are securely latched back into place before driving.

Maintain a Proper Sitting Position

After all occupants have adjusted their seats and head restraints, and put on their seat belts, it is very important that they continue to sit upright, well back in their seats, with their feet on the floor, until the vehicle is safely parked and the power system is off.

Sitting improperly can increase the chance of injury during a crash. For example, if an occupant slouches, lies down, turns sideways, sits forward, leans forward or sideways, or puts one or both feet up, the chance of injury during a crash is greatly increased.

In addition, an occupant who is out of position in the front seat can be seriously or fatally injured in a crash by striking interior parts of the vehicle or being struck by an inflating front airbag.

Maintain a Proper Sitting Position


Sitting improperly or out of position can result in serious injury or death in a crash.

Always sit upright, well back in the seat, with your feet on the floor.

Head Restraints

Your vehicle is equipped with head restraints in all seating positions.

Adjusting the Front Head Restraints

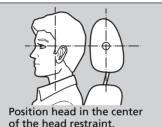

Head restraints are most effective for protection against whiplash and other rearimpact crash injuries when the center of the back of the occupant's head rests against the center of the restraint. The tops of the occupant's ears should be level with the center height of the restraint.

To raise the head restraint: Pull it upward. To lower the head restraint: Push it down while pressing the release button.

➢Adjusting the Front Head Restraints


Improperly positioning head restraints reduces their effectiveness and increases the likelihood of serious injury in a crash.

Make sure head restraints are in place and positioned properly before driving.

In order for the head restraint system to work properly:

- Do not hang any items on the head restraints, or from the restraint legs.
- Do not place any objects between an occupant and the seat-back
- Install each restraint in its proper location.

Changing the Rear Seat Head Restraint Position

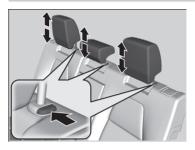

A passenger sitting in the rear seat should adjust the height of their head restraint to an appropriate position before the vehicle begins moving. **To raise the head restraint:** Pull it upward. **To lower the head restraint:** Push it down while pressing the release button.

Removing and Reinstalling the Head Restraints

Head restraints can be removed for cleaning or repair.

To remove a head restraint:

Pull the restraint up as far as it will go. Then push the release button, and pull the restraint up and out.

To reinstall a head restraint:

Insert the legs back in place, then adjust the head restraint to an appropriate height while pressing the release button. Pull up on the restraint to make sure it is locked in position.


Removing and Reinstalling the Head Restraints

Failure to reinstall, or correctly reinstall, the head restraints can result in severe injury during a crash.

Always replace the head restraints before driving.

Armrest

Using the Front Seat Armrest

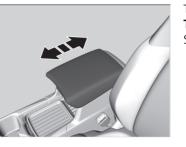


The console lid can be used as an armrest. **To adjust:** Slide the armrest to a desired position.

Using the Rear Seat Armrest

Pull down the armrest in the center seat-back.

Interior Lights

Interior Light Switches

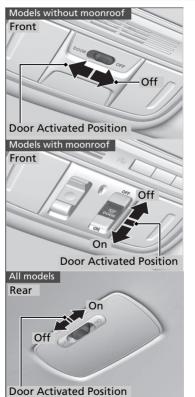

ON

The interior lights come on regardless of whether the doors are open or closed.

Door activated

The interior lights come on in the following situations:

- When any doors are opened.
- You unlock the driver's door.
- When the power mode is set to VEHICLE OFF (LOCK).

The interior lights remain off regardless of whether the doors are open or closed.

➢Interior Light Switches

In the door activated position, the interior lights fade out and go off about 30 seconds after the doors are closed.

The lights go off after about 30 seconds in the following situations:

- When you unlock the driver's door but do not open it.
- When you set the power mode to VEHICLE OFF (LOCK) but do not open a door.

You can change the interior lights dimming time. Models with color audio system

Customized Features P. 138 Models with Display Audio

Customized Features P. 366

The interior lights go off immediately in the following situations:

- When you lock the driver's door.
- When you close the driver's door in ACCESSORY mode.
- When you set the power mode to ON.

To avoid draining the 12-volt battery, do not leave the interior light on for an extended length of time when the power system is off.


If you leave any of the doors open in VEHICLE OFF (LOCK) mode, the interior lights go off after about 15 minutes.

Map Lights Map Lights When the interior light switch is in the door activated The map lights can be turned on and off by position and any door is open, the map light will not pressing the lenses. go off when you press the lenses. Cargo Area Lights Cargo Area Lights The cargo area lights do not have an on/off switch. In The cargo area lights comes on when you case the tailgate is left open for an extended period open the tailgate. of time, they automatically go out in 30 minutes.

Controls

Storage Items

Glove Box

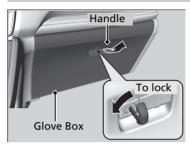


Pull the handle to open the glove box. You can lock the glove box with the built-in key.

➢Glove Box

An open glove box can cause serious injury to your passenger in a crash, even if the passenger is wearing the seat belt.

Always keep the glove box closed while driving.

Center Console Box

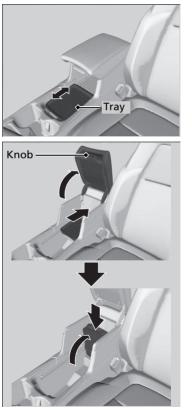

You can change the position of the tray by sliding it forward or back.


If you want to make greater use of the console box:

1. Pull the knob to open the armrest.

2. Slide the tray back.

3. Hold the front of the tray and pull it up.

Beverage Holders

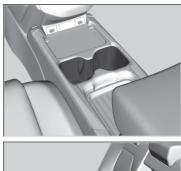

Front seat beverage holders

Are located in the console between the front seats.

Rear seat beverage holders

Fold the armrest down to use the rear seat beverage holders.


Beverage Holders

NOTICE

Spilled liquids can damage the upholstery, carpeting, and electrical components in the interior.

Be careful when you are using the beverage holders. Hot liquid can scald you.



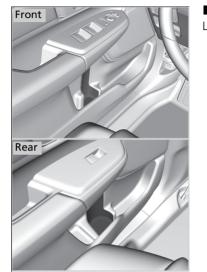

Door side beverage holders Located in the side pockets of all doors.

Coat Hook




There is a coat hook on the rear left grab handle. Pull it down to use it.

■Coat Hook

The coat hook is not designed for large or heavy items.

Tie-down Anchors

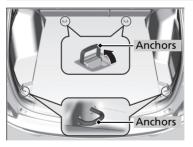

The tie-down anchors on the cargo area floor can be used to install a net for securing items.

➢Tie-down Anchors

Do not let anyone access items in the cargo area while driving. Loose items can cause injury if you have to brake hard.

Cargo Hook



The cargo hook on the driver's side of the cargo area can be used to hang light items.

Cargo Hook

NOTICE

Do not hang a large object or an object that weighs more than 6 lbs (3 kg) on the cargo hook. Hanging heavy or large objects may damage the hook.

Sunglasses Holder



To open the sunglasses holder, press and release the indent. To close, press it again until it latches.

You can store eyeglasses and other small items in this holder.

Conversation mirror

The sunglasses holder comes with a mirror. Open the sunglasses holder fully, then push it back to the first detent.


You can use the mirror to view the rear seats.

Sunglasses Holder

Keep the holder closed while driving except when accessing stored items.



Rear Cargo Cover

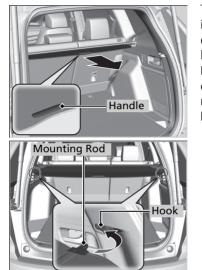

The rear cargo cover can be used to conceal items in the cargo area and protect them from direct sunlight.

To extend:

Lift up on the handle at the center edge of the cover to unhook each end, then pull the cover rearward and clip the mounting rods in the hooks at both sides of the tailgate opening.

➢Rear Cargo Cover


Do not let anyone access items in the cargo area while driving. Loose items can cause injury if you have to brake hard.

Do not stack objects higher than the top of the seat in the cargo area. They could block your view and be thrown about the vehicle during a sudden stop.

To prevent rear cargo cover damage:

- Do not place items on the rear cargo cover.
- Do not put weight on the rear cargo cover.

Be sure that each mounting rod sets in its respective retention groove when you retract the rear cargo cover. If they are not set in the grooves, the rods may rattle as they contact the surrounding surfaces.

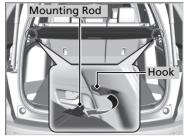

To retract:

Slip the rods out of the hooks, then slowly roll it back until it is completely retracted.




To remove:

Push either end of the housing inward, then lift it out of its position.

Other Interior Convenience Items

Accessory Power Socket

The accessory power socket can be used when the power mode is in ACCESSORY or ON.

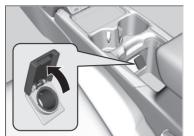

Accessory power socket in the center console box

Slide the tray back and open the cover to use it

Accessory Power Socket

NOTICE

Do not insert an automotive type cigarette lighter element.

This can overheat the accessory power socket.


The accessory power socket is designed to supply power for 12-volt DC accessories that are rated 180 watts (15 amps) or less.

To prevent 12-volt battery drain, only use the accessory power socket with the power system on.

When the accessory power socket is not in use, close the cover to prevent any small foreign objects from getting into the accessory power socket.

Wireless Charger*

To use the wireless charger, the power mode must be in ACCESSORY or ON. Charge a compatible device on the area indicated by the I mark as follows:

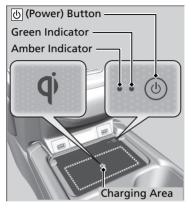

- 1. To turn the system on and off, press and hold the 🕑 (power) button.
- When the system is activated, the green indicator light comes on.
- **2.** Place the device you want to charge on the charging area.
 - The system will automatically start charging the device, and the amber indicator light will come on.
 - Make sure that the device is compatible with the system, and placed with the chargeable side in the center of the charging area.
- **3.** When charging is completed, the green indicator light will come on.
 - Depending on the device, the amber indicator light will stay on.

>₩ireless Charger*

Metal objects between the charge pad and the device to be charged will get hot and can burn you.

- Always remove foreign objects from the charge pad before charging the device.
- Be sure the surface is clear of dust and other debris before charging.
- Do not spill liquids (i. e. water, drinks, etc.) on the charger and the device.
- Do not use oil, grease, alcohol, benzine or thinner for cleaning the charge pad.
- Do not cover the system with towels, clothing, or other objects while charging etc.
- Avoid spraying aerosols which may come in contact with the charge pad surface.

This system consumes a lot of power. Do not use the system for a long time when the power system is off. This may weaken the 12-volt battery, making it difficult to turn the power system on.

When using the wireless charger, check the user's manual that came with the compatible device you want to charge.

When charging does not start

Perform one of the solutions in the following table.

| Indicator | | Cause | Solution |
|---------------------|---------------------------------|-------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Green & Amber | Blinking simulta- neously | There is an obstacle(s) between the charging area and the device. | Remove the obstacle(s). |
| | | The device is not within the charging area. | Move the device to the center of the charging area where \mathfrak{P} is located. |
| Amber | Blinking | The wireless charger is faulty. | Contact a dealer for repairs. |

≫Wireless Charger*

NOTICE

Do not place any magnetic recording media or precision machines within the charging area while charging.

The data on your cards such as credit cards can be lost because of the magnetic effect. Also precision machines such as watches may malfunction.

"Qi" and marks are the registered trademarks owned by Wireless Power Consortium (WPC).

In the following cases, charging may stop or not start:

- The device is already fully charged.
- The temperature of the device is extremely high while charging.
- You are at a place that emits strong electromagnetic waves or noises such as TV station, electric power plant, or gas station.

A device may not charge if the size or shape of its chargeable side is not appropriate for use with the charging area.

Not all devices are compatible with the system.

During the charging phase, it is normal for the charging area and device to heat up.

Charging may be briefly interrupted when:

- All the doors or the tailgate are closed
- to avoid interference with the proper functioning of the smart entry system.
- The position of the device is altered.

Do not charge more than one device at a time on a charging area.


FCC statement

RF Exposure Notice:

This wireless charger complies with FCC RF exposure guidelines at the distance of 3.94 inches (10 cm).

Keep a distance of at least 3.94 inches (10 cm) between all occupants and the wireless charger when charging.

Don't remove the wireless charger yourself; contact a dealer for assistance.

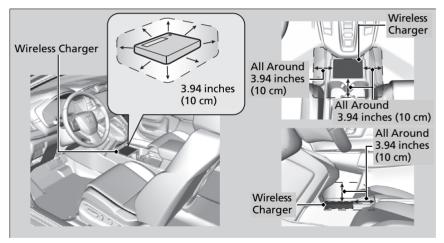

>>Wireless Charger *

so appears on the audio/information screen when the device is being charged by the wireless charger.

FCC statement

This product complies with the appropriate requirements or the required standards of FCC (Federal Communication Commission), described below:

This device complies with Part 18 of the FCC rules. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used per the instructions, may cause harmful interference to radio communications.


In order to use safely:

- Remove any metal objects from the charge pad before charging a device.
- Do not open the charger case.
- Do not use the charger if it malfunctions. Contact a dealer.

If the charger interferes with radio communications, attempt to correct the interference:

• Press and hold the switch on the charger for a few seconds to turn off the charger.

Heated Steering Wheel*

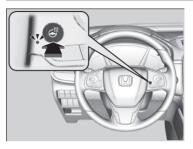

The power mode must be in ON to use the heated steering wheel.

Press the button on the right side of the steering wheel.

When a comfortable temperature is reached, press the button again to turn it off.

The heated steering wheel is turned off every time you start the power system, even if you turned it on the last time you drove the vehicle.

➢Heated Steering Wheel[∗]

Do not use the heated steering wheel continuously when the power system is off. Under such conditions, the 12-volt battery may be weakened, making the power system difficult to start.

Seat Heaters*



The power mode must be in ON to use the seat heaters.



Press the seat heater button:

Once - The HI setting (three indicators on) Twice - The MID setting (two indicators on) Three times - The LO setting (one indicator on) Four times - The OFF setting (no indicators on)

When the power mode is turned on after it is turned off, the previous setting of seat heaters is maintained.

≥Seat Heaters*

Heat induced burns are possible when using seat heaters.


Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use seat heaters.


Do not use the seat heaters even in LO when the power system is off. Under such conditions, the 12volt battery may be weakened, making the power system difficult to start.

After a certain period of time, the strength setting for the seat heater will automatically be reduced by one level at a time until the seat heater shuts off. The elapsed time varies according to the interior environment.

Using Automatic Climate Control

The automatic climate control system maintains the interior temperature you select. The system also selects the proper mix of heated or cooled air that raises or lowers the interior temperature to your preference as quickly as possible.

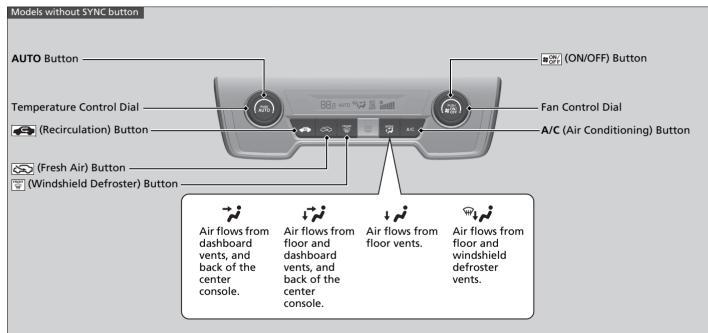

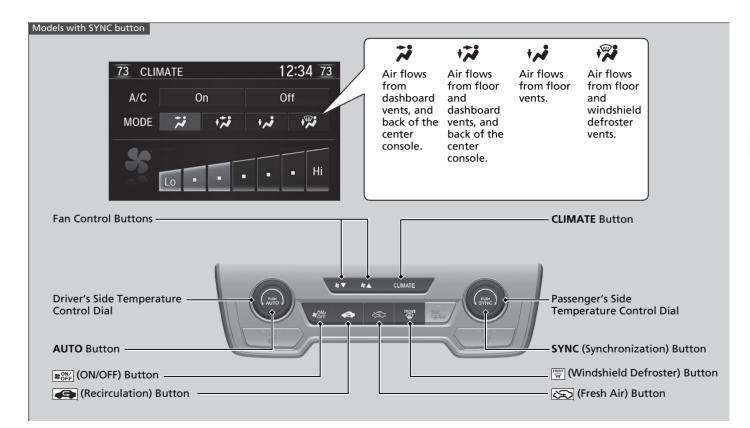

Use the system when the power system is on.

1. Press the AUTO button.

Models without SYNC button

2. Adjust the interior temperature using the temperature control dial.

Models with SYNC button

2. Adjust the interior temperature using the driver's side or passenger's side control dial.

All models

3. Press the SOFF (ON/OFF) button to cancel.

Controls

➢Using Automatic Climate Control

Models with SYNC button

Press the **CLIMATE** button to display **A/C**, **MODE**, and fan control information on the audio/information screen to operate manually. Select icon to turn **On** or **Off A/C**, change the vent mode, or change the fan speed. If any buttons are pressed while using the climate control system in auto, the function of the button that was pressed will take priority.

All models

The AUTO indicator will go off, but functions unrelated to the button that were pressed will be controlled automatically.

To prevent cold air from blowing in from outside, the fan may not start immediately when the **AUTO** button is pressed.

If the interior is very warm, you can cool it down more rapidly by partially opening the windows, turning the system on auto, and setting the temperature to low. Change the fresh mode to recirculation mode until the temperature cools down.

When you set the temperature to the lower or upper limit, **Lo** or **Hi** is displayed.

Pressing the $\boxed{\mathbf{s}_{FF}^{ON}}$ button switches the climate control system between on and off. When turned on, the system returns to your last selection.

While ECON mode is active, the climate control system may have reduced cooling performance.


Switching between the recirculation and fresh air modes

Press the (recirculation) or (c) (fresh air) button to switch the mode depending on environmental conditions.

Recirculation mode (indicator on): Recirculates air from the vehicle's interior through the system.

Fresh air mode (indicator on): Maintains outside ventilation. Keep the system in fresh air mode in normal situations.

Defrosting the Windshield and Windows

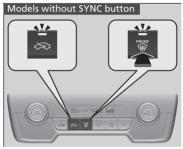

Pressing the 🕎 (windshield defroster) button turns the air conditioning system on and automatically switches the system to fresh air mode.


Press the witten again to turn off, the system returns to the previous settings.


Defrosting the Windshield and Windows

For your safety, make sure you have a clear view through all the windows before driving.

Do not set the temperature near the upper or lower limit.

When cold air hits the windshield, the outside of the windshield may fog up.

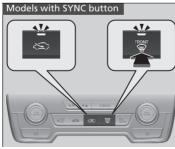

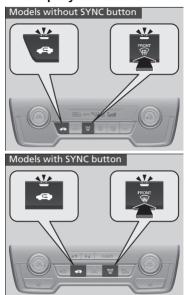

To rapidly defrost the windows


Press the main button.
 Press the button.

➢To rapidly defrost the windows

After defrosting the windows, switch over to fresh air mode. If you keep the system in recirculation mode, the windows may fog up from humidity. This impedes visibility.



Synchronization Mode*

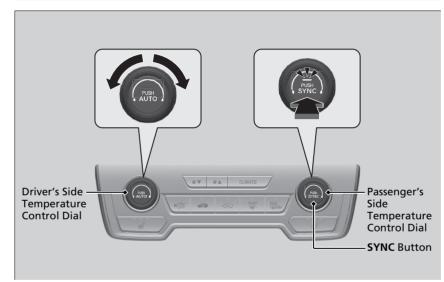

You can set the temperature synchronously for the driver's side and the passenger's side in synchronization mode.

1. Press the SYNC button.

► The system switches to synchronization mode.

2. Adjust the temperature using the driver's side temperature control dial.

Press the **SYNC** button to return to dual mode.

Synchronization Mode*

When you press the $\fbox{ }$ button, the system changes to synchronization mode.


When the system is in dual mode, the driver's side temperature and the passenger's side temperature can be set separately.

* Not available on all models

Automatic Climate Control Sensors



The automatic climate control system is equipped with sensors. Do not cover or spill any liquid on them.

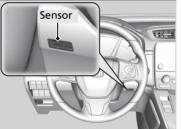

Features

This chapter describes how to operate technology features.

Audio System

| About Your Audio System | 240 | | | |
|--------------------------------|-----|--|--|--|
| USB Port(s) | | | | |
| Audio System Theft Protection | 243 | | | |
| Audio Rémote Controls | 244 | | | |
| Models with color audio system | | | | |
| Audio System Basic Operation | | | | |
| Audio/Information Screen | 248 | | | |
| Adjusting the Sound | 252 | | | |
| Display Setup | | | | |
| Playing AM/FM Radio | | | | |
| Plaving an iPod | | | | |
| Playing Pandora [®] | | | | |
| Playing a USB Flash Drive | | | | |

| Playing Bluetooth® Audic | | | | | |
|-----------------------------|--|--|--|--|--|
| Siri [®] Eyes Free | | | | | |
| Models with Display Audio | | | | | |
| | | | | | |

Audio System Basic Operation


| Audio/Information Screen | 269 |
|----------------------------------|-----|
| Adjusting the Sound | 290 |
| Display Setup | 291 |
| Voice Control Operation | 293 |
| Playing AM/FM Radio | |
| Playing SiriusXM® Radio | 301 |
| Playing an iPod | |
| Song By Voice [™] (SBV) | 311 |
| Playing Pandora® | 315 |
| Playing a USB Flash Drive | |
| | |

| Playing Bluetooth® Audio | 320 | | |
|----------------------------------------------------------|------------|--|--|
| HondaLink® | 322 | | |
| Wi-Fi Connection | 327 | | |
| Siri [®] Eyes Free | 329 | | |
| Apple CarPlay [™] | 330 | | |
| Android Auto™ | 333 | | |
| Audio Error Messages | 337 | | |
| General Information on the A | Audio | | |
| System | 342 | | |
| Customized Features | 359, 366 | | |
| HomeLink [®] Universal Transco | eiver* 392 | | |
| Bluetooth [®] HandsFreeLink [®] 395, 4 | | | |
| Compass* | 453 | | |

About Your Audio System

The audio system features AM/FM radio and SiriusXM[®] Radio service^{*}. It can also play USB flash drives, and iPod, iPhone and *Bluetooth[®]* devices.

You can operate the audio system from the buttons and switches on the panel, the remote controls on the steering wheel, or the icons on the touchscreen interface^{*}.

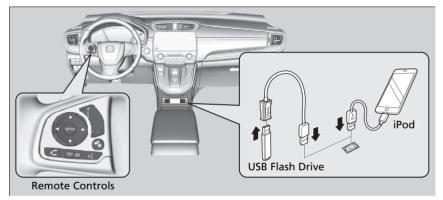

➢About Your Audio System

SiriusXM[®] Radio^{*} is available on a subscription basis only. For more information on SiriusXM[®] Radio^{*}, contact a dealer.

General Information on the Audio System P. 342

SiriusXM[®] Radio^{*} is available in the United States and Canada, except Hawaii, Alaska, and Puerto Rico.

SiriusXM®* is a registered trademark of SiriusXM Radio, Inc.

iPod, iPhone and iTunes are trademarks of Apple Inc.

State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

USB Port(s)

On the front of the center console

Install the iPod USB connector or the USB flash drive to the USB port.

*1

*2

On the front of the center console USB Port (1.0A)

The USB port (1.0A) is for playing audio files on a USB flash drive, connecting a cellular phone, and charging devices.

USB Port (1.5A)*

The USB port (1.5A) is for charging devices, playing audio files and connecting compatible phones with Apple CarPlay[™] or Android Auto[™].

► To prevent any potential issues, be sure to use an Apple MFi Certified Lightning Connector for Apple CarPlayTM, and for Android AutoTM, the USB cables should be certified by USB-IF to be compliant with USB 2.0 Standard.

≥USB Port(s)

- Do not leave the iPod or USB flash drive in the vehicle. Direct sunlight and high temperatures may damage it.
- We recommend using an extension cable with the USB port.
- Do not connect the iPod or USB flash drive using a hub.
- Do not use a device such as a card reader or hard disk drive, as the device or your files may be damaged.
- We recommend backing up your data before using the device in your vehicle.
- Displayed messages may vary depending on the device model and software version.

If the audio system does not recognize the iPod, try reconnecting it a few times or reboot the device. To reboot, follow the manufacturer's instructions provided with the iPod or visit *www.apple.com/ipod*.

The USB port can supply up to 1.5A/2.5A of power. It does not output 1.5A/2.5A unless the device requests.


For amperage details, read the operating manual of the device that needs to be charged.

Under certain conditions, a device connected to the port may generate noise in the radio you are listening to.

*1: Models with color audio system

*2: Models with Display Audio

* Not available on all models

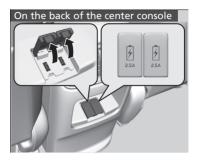

On the back of the center console*

The USB ports (2.5A) are only for charging devices.

≫USB Port(s)

USB Port (2.5A)*

This port is for battery charge only. You cannot play music even if you have connected a music player to it.

Audio System Theft Protection


The audio system is disabled when it is disconnected from the power source, such as when the battery is disconnected or goes dead. In certain conditions, the system may display a code entry screen. If this occurs, reactivate the audio system.

Reactivating the audio system

- **1.** Set the power mode to ON.
- 2. Turn on the audio system.
- 3. Press and hold the audio system power button for more than two seconds.
 - ► The audio system is reactivated when the audio control unit establishes a connection with the vehicle control unit. If the control unit fails to recognize the audio unit, you must go to a dealer and have the audio unit checked.

Audio Remote Controls

Allow you to operate the audio system while driving. The information is shown on the driver information interface.

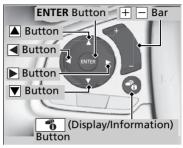

► **Buttons** Press ► or ▼ to cycle through the audio mode as follows:

Models with color audio system

 $\label{eq:FM1} \begin{array}{l} \mathsf{FM1} \xrightarrow{} \mathsf{FM2} \xrightarrow{} \mathsf{AM} \xrightarrow{} \mathsf{USB/iPod} \xrightarrow{} \\ \mathsf{Pandora}^{\circledast} \xrightarrow{} \mathsf{Bluetooth}^{\circledast} \ \mathsf{Audio} \end{array}$

Models with Display Audio

 $\label{eq:states} \begin{array}{l} \mathsf{FM} \longrightarrow \mathsf{AM} \longrightarrow \mathsf{Sirius} \mathsf{XM}^{\circledast} \longrightarrow \mathsf{USB} \longrightarrow \mathsf{iPod} \\ \longrightarrow \mathsf{Bluetooth}^{\circledast} \ \mathsf{Audio} \longrightarrow \mathsf{Pandora}^{\circledast} \longrightarrow \mathsf{Apps} \\ \longrightarrow \mathsf{Audio} \ \mathsf{Apps} \end{array}$

Audio Remote Controls

Some modes appear only when an appropriate device or medium is used.

Depending on the *Bluetooth*[®] device you connect, some functions may not be available.

Press the 🖻 🗂 (Hang-up/back) button to go back to the previous command or cancel a command.

Press the (Display/information) button to switch display.

Switching the Display P. 126

Features

ENTER Button

Models with Display Audio

- When listening to a USB flash drive
- **1.** From the audio screen in the driver information interface, press **ENTER** to display the folder list.
- **2.** Press \blacktriangle or \bigtriangledown to select a folder.
- 3. Press ENTER to display a list of tracks in that folder.
- **4.** Press **A** or **V** to select a track, then press **ENTER**.

- When listening to an iPod
- **1.** From the audio screen in the driver information interface, press **ENTER** to display the iPod music list.
- **2.** Press \blacktriangle or \bigtriangledown to select a category.
- **3.** Press **ENTER** to display a list of items in the category.
- **4.** Press \blacktriangle or \bigtriangledown to select an item, then press **ENTER**.
 - ▶ Press ENTER and press ▲ or ▼ repeatedly until the desired mode you want to listen to is displayed.
- When listening to Pandora®
- **1.** From the audio screen in the driver information interface, press **ENTER** to display the station list.
- **2.** Press \blacktriangle or \bigtriangledown to select an item, then press **ENTER**.
- When listening to Bluetooth® Audio
- **1.** From the audio screen in the driver information interface, press **ENTER** to display the track list.
- **2.** Press \blacktriangle or \blacksquare to select a track, then press **ENTER**.
- + (Volume) Bar

Press +: To increase the volume.


Press —: To decrease the volume.

Buttons

- When listening to the radio
 Press : To select the next preset radio station.
 Press : To select the previous preset radio station.
 Press and hold : To select the next strong station.
 Press and hold : To select the previous strong station.
 When listening to an iPod, USB flash drive, or *Bluetooth*[®] Audio
 Press : To skip to the next song.
 Press : To go back to the beginning of the current or previous song.
 When listening to a USB flash drive or *Bluetooth*[®] Audio*
 Press and hold : To skip to the next folder.
 Press and hold : To go back to the previous folder.
 - **Press** To skip to the next track.
 - **Press and hold :** To select the next station.
 - **Press and hold C**: To select the previous station.

Models with color audio system

To use the audio system, the power mode must be in ACCESSORY or ON.

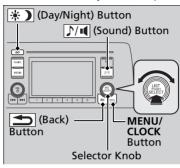

| Menu Display | | |
|--------------|---------|---------|
| | | N 12:34 |
| Menu | | |
| <i>П</i> | Scan | |
| 303 | Setting | IS |
| | | |

Use the selector knob or **MENU/CLOCK** button to access some audio functions.

Press $\stackrel{\scriptstyle{\smile}}{\scriptstyle{\smile}}$ to switch between the normal and extended display for some functions.

Selector knob: Rotate left or right to scroll through the available choices. Press \Im to set your selection.

MENU/CLOCK button: Press to select any mode.

The available modes include wallpaper, display, clock, language setup, and play modes. Play mode choices include scan, random, repeat, and so on.

(Back) button: Press to go back to the previous display.

 \mathcal{M} (Sound) button: Press to select the sound setting mode.

(Day/Night) button: Press to change the audio/information screen brightness.

Press the * button, then adjust the brightness using $\textcircled{\circ}$.

Each time you press the button, the mode switches between the daytime mode, nighttime mode and off mode.

Mudio System Basic Operation

These indications are used to show how to operate the selector knob.

Rotate 🗇 to select.

Press $\ensuremath{\underline{\circlearrowright}}$ to enter.

Menu Items

- Adjust Clock P. 148
 Wallpaper Setup P. 250
 Display Setup P. 253
 Scan P. 255, 263
 Play Mode P. 258, 263
 RDS Settings P. 255
- Bluetooth P. 264
- Bluetooth P. 264


Press the buttons on the steering wheel to change any audio setting.

Audio Remote Controls P. 244

Audio/Information Screen

Displays the audio status and wallpaper. From this screen, you can go to various setup options.

Switching the Display

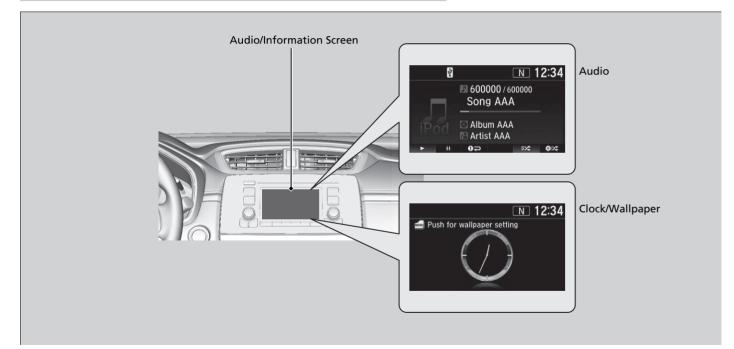

Audio

Shows the current audio information.

Clock/Wallpaper

Shows a clock screen or an image you import.

Change display


- **1.** Press the **MENU/CLOCK** button.
- **2.** Rotate \bigcirc to select **Settings**, then press \bigotimes .
- 3. Rotate 🗇 to select Display Change, then press ö.
- **4.** Rotate 🗇 to select **Wallpaper**, then press 🕹.
 - ▶ If you want to return to the audio/information screen, select Audio.

Wallpaper Setup

You can change, store, and delete the wallpaper on the audio/information screen.

Import wallpaper

You can import up to three images, one at a time, for wallpaper from a USB flash drive.

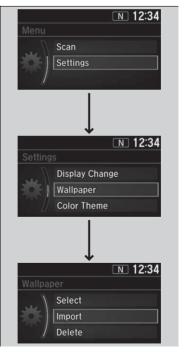

1. Connect the USB flash drive to the USB port.

DSB Port(s) P. 241

- 2. Press the **MENU/CLOCK** button.
- 3. Rotate ⑦ to select Settings, then press . .
- 5. Rotate ⁽⑦ to select **Import**, then press ⁽⊗). ► The picture name is displayed on the list.
- 6. Rotate [©] to select a desired picture, then press [©].
 - ► The selected picture is displayed.
- **7.** Press 🕹 to save the picture.
- 8. Press 🕹 to select OK.
- **9.** Rotate ⁽[¬]) to select a location to save the picture, then press ⁽_¬).
 - The display will return to the wallpaper setting screen.

≫Wallpaper Setup

- When importing wallpaper files, the image must be in the USB flash drive's root directory. Images in a folder cannot be imported.
- The file name must be fewer than 64 characters.
- The file format of the image that can be imported is BMP (bmp) or JPEG (jpg).
- The individual file size limit is 2 MB.
- The maximum image size is 1,920 x 936 pixels. If the image size is less than 480 x 234 pixels, the image is displayed in the middle of the screen with the extra area appearing in black.
- Up to 255 files can be selected.
- If the USB flash drive does not have any pictures, the error message appears.
- The wallpaper setup is limited while driving.

Select wallpaper

- 1. Press the MENU/CLOCK button.
- **2.** Rotate \bigcirc to select **Settings**, then press \bigotimes .
- 3. Rotate 👘 to select Wallpaper, then press 🕹.
- **4.** Rotate \bigcirc to select **Select**, then press \bigotimes .
 - ► The screen changes to the wallpaper list.
- **5.** Rotate \bigcirc to select a desired wallpaper, then press \bigotimes .

To view wallpaper once it is set

- 1. Press the **MENU/CLOCK** button.
- **2.** Rotate \bigcirc to select **Settings**, then press \bigotimes .
- 3. Rotate 🗇 to select Display Change, then press 🕹.
- 4. Rotate "[™] to select Wallpaper, then press [™].
- **5.** Press the **(Back)** button until the top screen is displayed.

Delete wallpaper


- 1. Press the MENU/CLOCK button.
- 2. Rotate 🗇 to select Settings, then press 🕹.
- 3. Rotate 👘 to select Wallpaper, then press 🕹.
- 4. Rotate 🗇 to select **Delete**, then press 🕹.
 - The screen changes to the wallpaper list.
- **5.** Rotate \bigcirc to select a wallpaper that you want to delete, then press \circlearrowright .
- **6.** Rotate \bigcirc to select **Yes**, then press \bigotimes .
 - ▶ The display will return to the wallpaper setting screen.

≫Wallpaper Setup

To go back to the previous screen, press the (Back) button.

When the file size is large, it takes a while to be previewed.

Adjusting the Sound

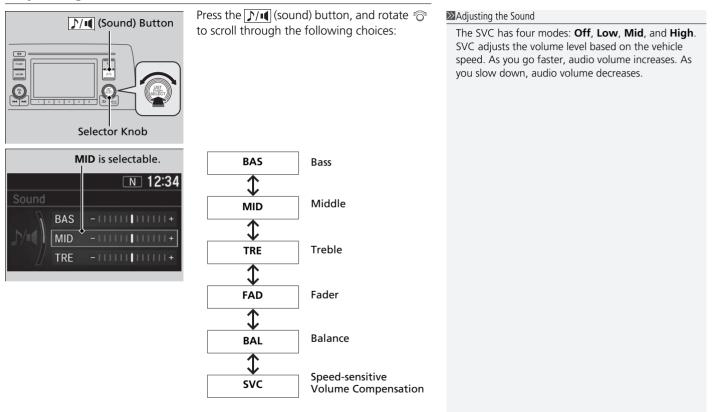

Rotate \bigcirc to adjust the sound setting, then press \bigotimes .

Display Setup

You can change the brightness or color theme of the audio/information screen.

Changing the Screen Brightness

| | N 12:34 |
|-----|------------------------------------------------|
| Dis | play Adjustment |
| | Brightness - |
| | Contrast - I I I I I I I I I I I I I I I I I I |

- **1.** Press the **MENU/CLOCK** button.
- 2. Rotate [™] to select **Settings**, then press [™].
- **3.** Rotate ^r[©] to select **Display Adjustment**, then press ...
- 5. Rotate "[™] to adjust the setting, then press [™] .

Changing the Screen's Color Theme




- 1. Press the **MENU/CLOCK** button.
- 2. Rotate [™] to select Settings, then press .
- 3. Rotate [®] to select **Color Theme**, then press ⊘.
- **4.** Rotate ⁽⑦⁺ to select the setting you want, then press ⁽⊗).

Changing the Screen Brightness

You can change the **Contrast** and **Black Level** settings in the same manner.

Playing AM/FM Radio

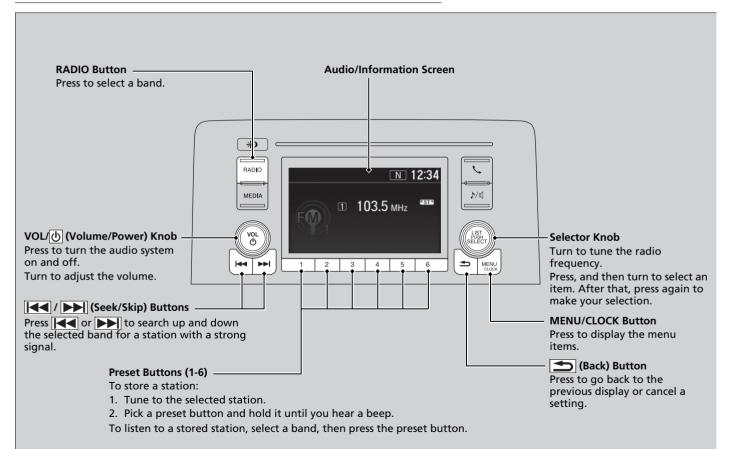

Radio Data System (RDS)

Provides text data information related to your selected RDS capable FM station.

■ To find an RDS station from Station List

1. Press ઙ while listening to an FM station. **2.** Rotate ^(¬) to select the station, then press ⊗.

Update List

Updates your available station list at any time. **1.** Press ઙ while listening to an FM station. **2.** Rotate (중 to select **Update List**, then press ઙ.

Radio text

Displays the radio text information of the selected RDS station.

- 1. Press the **MENU/CLOCK** button.
- **2.** Rotate \bigcirc to select **Settings**, then press \bigotimes .
- 3. Rotate 🗇 to select RDS Settings, then press 🕹.
- 4. Rotate 🗇 to select Radio Text, then press 🕹.

Scan

Samples each of the strongest stations on the selected band for 10 seconds. **1.** Press the **MENU/CLOCK** button.

2. Rotate 🗇 to select Scan, then press 🕹.

To turn off scan, press 🕹.

➢Playing AM/FM Radio

The **ST** indicator appears on the display indicating stereo FM broadcasts. Stereo reproduction in AM is not available.

You can store 6 AM stations and 12 FM stations into the preset memory. FM1 and FM2 let you store 6 stations each.

Switching the Audio Mode

Press the audio source selecting buttons on the steering wheel.

Audio Remote Controls P. 244


≥Radio Data System (RDS)

When you select an RDS-capable FM station, the RDS automatically turns on, and the frequency display changes to the station name. However, when the signals of that station become weak, the display changes from the station name to the frequency.


Playing an iPod

Connect the iPod using your dock connector to the USB port, then press the **MEDIA** button.

DSB Port(s) P. 241

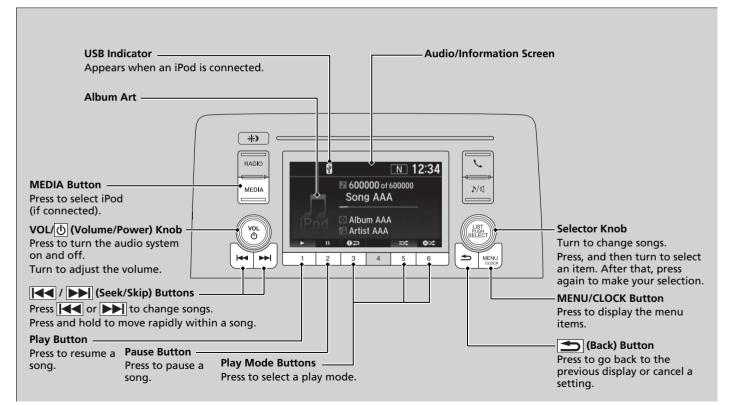

How to Select a Song from the iPod Music List with the Selector Knob

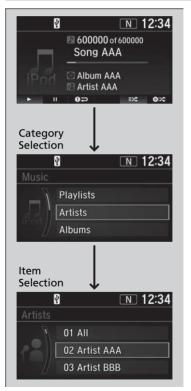

1. Press i to display the iPod music list.

2. Rotate 🗇 to select a category.

- **3.** Press 🕹 to display a list of items in the category.
- **4.** Rotate \bigcirc to select an item, then press \bigotimes .
 - Press S and rotate r repeatedly until a desired item you want to listen is displayed.

➢Playing an iPod


Available operating functions vary on models or versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the audio/information screen.

Dipod/USB Flash Drive P. 337

How to Select a Play Mode

You can select repeat and shuffle modes when playing a song.

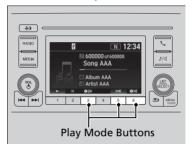

Available mode icons appear above the play mode buttons. Press the button corresponding to the mode you want to select.

How to Select a Play Mode

Play Mode Menu Items

Shuffle Albums: Plays all available albums in a selected category (playlists, artists, albums, songs, genres, or podcasts, audiobooks, and composers) in random order.

Shuffle All: Plays all available songs in a selected category (playlists, artists, albums, songs, genres, podcasts, audiobooks, and composers) in random order.

OP Repeat One Track: Repeats the current song.

You can also select a play mode by pressing the **MENU/CLOCK** button.

Rotate 'ô' to select **Play Mode**, then press 送. Rotate 'ô' to select a mode, then press 送. To turn it off, rotate 'ô' to select **Normal Play**, then press 送.


To turn off a play mode Press the selected button.

Playing Pandora®

Your audio system allows you to listen to music from the Pandora® app on a compatible smartphone.

This function is available when the phone is paired and connected to the vehicle's *Bluetooth*[®] HandsFreeLink[®] (HFL) system, or with an iPhone, you can connect using your USB cable to the USB port.

- Phone Setup P. 401
- DSB Port(s) P. 241

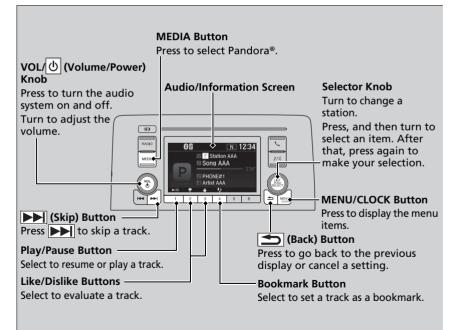

➢Playing Pandora[®]

Pandora®, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc., used with permission. Pandora is only available in certain countries. Visit the Pandora website for more information.

To find out if your phone is compatible with this feature, visit *automobiles.honda.com/handsfreelink/*, or call 1-888-528-7876.

To use this service in your vehicle, the Pandora® app must first be installed on your phone. Visit *www.pandora.com*. for more information.

Pandora® is free, personalized radio that plays music and comedy you'll love. Just start with the name of one of your favorite artists, tracks, comedians or composers and Pandora® will create a custom station that plays similar tracks. Pandora® also features hundreds of genre stations ranging from Dubstep to Smooth Jazz to Power Workout.

If you cannot operate Pandora® through the audio system, it may be streaming through *Bluetooth*® Audio. Make sure Pandora® mode on your audio system is selected.

| How to Create a Station | 1 | How to Create a Station |
|---------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| You can create a station when play | ving Pandora [®] . 1. Press the MENU/CLOCK button. | Available operating functions vary on software versions. Some functions may not be available on the vehicle's audio system. If there is a problem, you may see an error message on the audio/information screen. ▶ Pandora® P. 339 Pandora® may limit the total number of skips allowed on the service. If you dislike a track after the skip limit has been reached, your feedback will be saved but the current track will continue to play. |
| Menu P Bookmark New Station Play Mode | 2. Rotate r [©] to select New Station , then press ≚ . | To change stations, press ö on the main Pandora® screen, and rotate 🕃 to select Station List , and then select a new station. |
| New Station Genre Current Artist Current Track | 3. Rotate ⁽[¬]) to select an item, then press ⁽→). You can select Genre, Current Artist, or Current Track. | |


Feature

Playing a USB Flash Drive

Your audio system reads and plays sound files on a USB flash drive in either MP3, WMA. AAC^{*1} or WAV format.

Connect your USB flash drive to the USB port, then press the **MEDIA** button.

DSB Port(s) P. 241

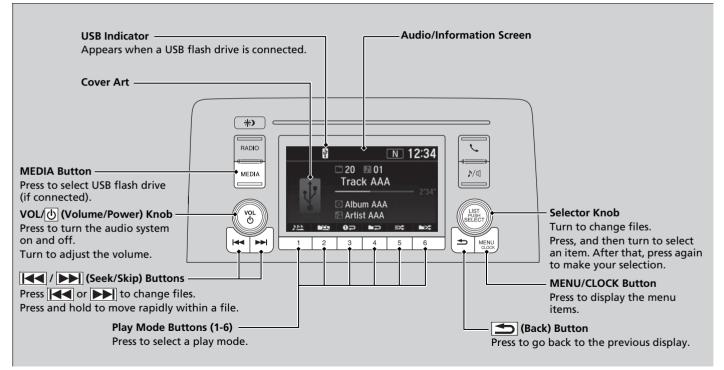

*1:Only AAC format files recorded with iTunes are playable on this unit.

| How to Select a File from | m a Folder with the Selector Knob | ≫Playing a USB Flash Drive |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Constant of the second | Press ĕ to display a folder list. Rotate [™] to select a folder. | Use the recommended USB flash drives. General Information on the Audio System P. 342 Files in WMA format protected by digital rights management (DRM) cannot be played. The audio system displays Unplayable File, and then skips to the next file. If there is a problem, you may see an error message on the audio/information screen. iPod/USB Flash Drive P. 337 |
| 01 Folder 01 02 Folder 02 03 Folder 03 Track Selection Image: Constraint of the selection Image: Conselection Image: Con | Press ♂ to display a list of files in that folder. Rotate ۞ to select a file, then press ♂. | |

How to Select a Play Mode

You can select repeat, random, and scan modes when playing a file.



To turn off a play mode Press the selected button. Available mode icons appear above the play mode buttons. Press the button corresponding to the mode you want to select.

How to Select a Play Mode

Play Mode Menu Items

Repeat

Repeat One Folder: Repeats all files in the current folder.

0 Repeat One Track: Repeats the current file.

Random

Random in Folder: Plays all files in the current folder in random order.

EX Random All: Plays all files in random order.

Scan

Scan Folders: Provides 10-second sampling of the first file in each of the main folders.

Scan Tracks: Provides 10-second sampling of all files in the current folder.

You can also select a play mode by pressing the **MENU/CLOCK** button.


Rotate 🗇 to select **Play Mode**, then press ö. Rotate 🗇 to select a mode, then press ö. To turn it off, rotate 🌍 to select **Normal Play**, then press ö.

Playing Bluetooth® Audio

Your audio system allows you to listen to music from your *Bluetooth*-compatible phone.

This function is available when the phone is paired and connected to the vehicle's *Bluetooth*[®] HandsFreeLink[®] (HFL) system.

Phone Setup P. 401

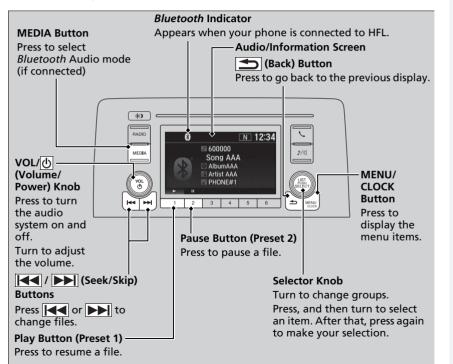

≥Playing *Bluetooth*® Audio

Not all *Bluetooth*-enabled phones with streaming audio capabilities are compatible with the system. For a list of compatible phones, visit *automobiles.honda.com/handsfreelink/*, or call 1-888-528-7876.

In some states, it may be illegal to perform some data device functions while driving.


Only one phone can be used with HFL at a time. When there are more than two paired phones in the vehicle, the system automatically connects to the prioritised phone. You can assign priority to a phone in the **Priority Device Setup**.

If more than one phone is paired to the HFL system, there will be a delay before the system begins to play.

In some cases, the name of the artist, album, or track may not appear correctly.

Some functions may not be available on some devices.

To Play *Bluetooth*[®] Audio Files

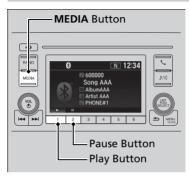

- **1.** Make sure that your phone is paired and connected to HFL.
- 2. Press the **MEDIA** button until the *Bluetooth*[®] Audio mode is selected.

If the phone is not recognized, another HFLcompatible phone, which is not compatible for *Bluetooth*[®] Audio, may already be connected.

To Play Bluetooth® Audio Files

To play the audio files, you may need to operate your phone. If so, follow the phone maker's operating instructions.

The pause function may not be available on some phones.


If any audio device is connected to the USB port, you may need to press the **MEDIA** button repeatedly to select the *Bluetooth*[®] Audio system.

Switching to another mode pauses the music playing from your phone.

To pause or resume a file

Press the **Play** or **Pause** button to select a mode.

How to Select a Song from the Music Search List with the Selector Knob

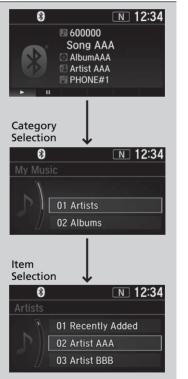

1. Press 🕹 to display the music search list.

2. Rotate 🗇 to select a category.

- 3. Press 些 to display a list of items in the category.
- **4.** Rotate \bigcirc to select an item, then press \bigotimes .
 - Press S and rotate r repeatedly until a desired item you want to listen is displayed.


How to Select a Song from the Music Search List with the Selector Knob

Depending on the *Bluetooth*[®] device you connect, some or all of the categories may not be displayed.

Siri[®] Eyes Free

You can talk to Siri using the <u>w</u> (Talk) button on the steering wheel when your iPhone is paired to the *Bluetooth*[®] HandsFreeLink[®] (HFL) system. **Phone Setup** P. 401

Using Siri[®] Eyes Free

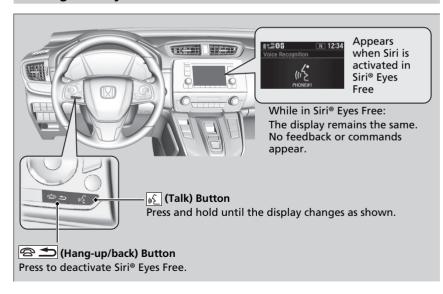

≫Siri® Eyes Free

Siri is a trademark of Apple Inc.

Check Apple Inc. website for features available for Siri.

We recommend against using Siri other than in Siri® Eyes Free while operating a vehicle.


≥Using Siri® Eyes Free

Some commands work only on specific phone features or apps.

This audio system cannot operate the audio functions by using Siri® Eyes Free.

Models with Display Audio

To use the audio system function, the power mode must be in ACCESSORY or ON.

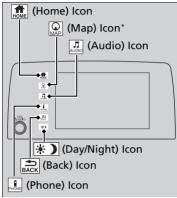

| | Navigation | Audio |
|---|------------|-------------|
| | Phone 📔 | |
| (| Settings 🔅 | O HondaLînk |

(Home): Select to go to the home screen.
 Switching the Display P. 269
 (Map)*: Select to display the map screen.

Refer to the Navigation System Manual

(Audio): Select to display the audio screen. (Phone): Select to display the phone screen.

(Back): Select to go back to the previous screen when the icon is illuminated.

(Day/Night): Select to change the audio/ information screen brightness.

Select R once and select - or + to make an adjustment.

Each time you select (*), the mode switches among the daytime mode, nighttime mode and off mode.

Mudio System Basic Operation

Audio Menu Items

- Station List P. 298, 300
- Music Search List P. 309, 318
- Scan P. 299, 307, 319
- ▶ Play Mode P. 310, 319

Audio/Information Screen

Displays the audio status and wallpaper. From this display, you can go to various setup options.

Switching the Display


Using the 👩 (display/information) button

Press the (display/information) button to change the display.



You can edit, add, and delete the contents shown on the driver information interface.

Customizing the Meter P. 274

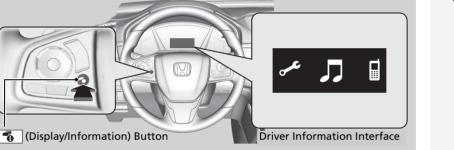

■ Using the audio/information screen



Select for the screen.

Select the following icons on the home screen or after selecting App List (.....).

Phone

Displays the HFL information.

■ Bluetooth[®] HandsFreeLink[®] P. 419

≥Using the audio/information screen

Touchscreen operation

- Use simple gestures including touching, swiping and scrolling to operate certain audio functions.
- Some items may be grayed out during driving to reduce the potential for distraction.
- You can select them when the vehicle is stopped or use voice commands.
- Wearing gloves may limit or prevent touchscreen response.
- You can change the touchscreen sensitivity setting. Customized Features P. 366

🔳 Info

Displays Trip Computer, Voice Info, Clock/Wallpaper, or System/Device Information. Select MENU on the Info Menu screen to see all available options: Trip Computer, Voice Info, Clock/Wallpaper and System/Device Information.

Trip Computer:

- **Current Drive** tab: Displays the current trip information.
- **History of Trip A** tab: Displays information for the three previous drives. The information is stored every time you reset Trip A.

To delete the history manually, select **Delete history** on the **History of Trip A**

tab. The confirmation message appears on the screen, then select **Yes**.

Voice Info: Displays the All Commands list.

Clock/Wallpaper: Displays the clock and wallpaper.

System/Device Information:

- System Info: Displays the software version of the audio system.
- USB Info: Displays the memory usage of the USB device.

Audio

Displays the current audio information.

Settings

Enters the customizing menu screen. Customized Features P. 366

■ Navigation*

Displays the navigation screen.

Refer to the Navigation System Manual

HondaLink

Displays the HondaLink[®] screen. ▶ HondaLink[®] P. 322

Smartphone Connection

Displays the Apple CarPlay[™] or Android Auto[™]. Apple CarPlay[™] P. 330 Android Auto[™] P. 333

App List ()

Adds or removes apps or widgets on the home screen. **D** Home Screen P. 280

Instrument Panel

Selects from three customizable settings for the driver information interface.

Changing the Home Screen Icon Layout



- 1. Select 💼.
- **2.** Select and hold an icon.
 - The screen switches to the customization screen.
- **3.** Drag and drop the icon to where you want it to be.
- 4. Select OK.
 - The screen will return to the home screen.

Customizing the Meter

You can edit, add, or delete the meter contents on the driver information interface.



- 1. A
- 2. Settings
- 3. System
- 4. Configuration of Instrument Panel

Customizing the Meter

You can store up to three customized configurations. To select or customize a configuration, select **Swap Config.**.

When you select **Swap Config.** during customization, the settings you changed will be saved.

When you select and during customization, the settings you changed will not be saved and you will be returned to the **Instrument Panel** screen.

Editing order

To change the order of the icons on the driver information interface, first select:



1. Edit Order

- **2.** Select the icon you want to move.
 - You will see arrows on both sides of the selected icon.

- **3.** Select the left or right arrow repeatedly to move the icon to your desired position.
- 4. Select OK.
 - The screen will return to the **Instrument Panel** screen.

Editing order

You can use an alternative method to change the order of the icons. First select:

1. Edit Order


- 2. Select and hold the icon you want to move.
- 3. Drag and drop the icon to where you want it to be.

4. Select **OK**.

The screen will return to the **Instrument Panel** screen.

Adding contents

You can add icons to the driver information interface. To add icons, first select:

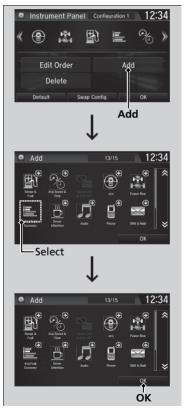

- 2. Select an icon you want to add.
 - You will see a plus mark on the upper right hand corner of the selected icon.

- 3. Select OK.
 - ► The screen will return to the **Instrument Panel** screen.

➢Adding contents

Icons that are grayed out cannot be selected.

If an icon has a plus mark in the upper-right corner, it means that the icon has already been added.

Deleting contents

To delete contents on the driver information interface, first select:



1. Delete

- **2.** Select an icon you want to delete.
 - ► The icon with an X on the upper right hand corner can be deleted.

- 3. Select OK.
 - The screen will return to the **Instrument Panel** screen.

Deleting contents

- You can also delete contents by selecting:
- 1. Delete or Edit Order
- 2. Select and hold an icon you want to delete.
- 3. Drag and drop the icon to the trash icon.
- 4. Select OK.
- The screen will return to the **Instrument Panel** screen.

Wallpaper Setup

You can change, store, and delete the wallpaper on the audio/information screen.

Import wallpaper

You can import up to five images, one at a time, for wallpaper from a USB flash drive.



| Add New W | allpaper | 12:34 |
|-----------|----------|-------|
| | CCC.jpg | - |
| | DDD.jpg | |
| | EEE.jpg | 100 |
| | AAA.jpg | ~ |
| | BBB.jpg | |

- **1.** Connect the USB flash drive to the USB port.
 - DSB Port(s) P. 241
- 2. Select Settings.
- 3. Select Clock.
- Select Clock/Wallpaper Type, select Next, then open the Wallpaper tab.
- 5. Select Add New.
- ► The picture name is displayed on the list.
- 6. Select a desired picture.
 - The preview is displayed on the left side on the screen.
- 7. Select **Start Import** to save the data.
 - The display will return to the wallpaper list.

≫Wallpaper Setup

The wallpaper you set up on **Clock/Wallpaper Type** cannot be displayed on the driver information interface.

- When importing wallpaper files, the image must be in the USB flash drive's root directory. Images in a folder cannot be imported.
- The file name must be fewer than 256 bytes.
- The file format of the image that can be imported is BMP (bmp) or JPEG (jpg).
- The individual file size limit is 5 MB.
- The maximum image size is 4,096 × 4,096 pixels. If the image size is less than 800 × 480 pixels, the image is displayed in the middle of the screen with the extra area appearing in black.
- If the USB flash drive does not have any pictures, the **No files detected** message appears.

After changing the screen interface design, you can change the wallpaper by following procedure.

- 1. Select
- 2. Select 🕢
- 3. Select and hold empty space on the home screen. The pop-up menu appears on the screen.
- 4. Select Change wallpaper.
- 5. Select Gallery, Live wallpapers, or Wallpapers.

Select wallpaper

- 1. Select Settings.
- 2. Select Clock.
- 3. Select Clock/Wallpaper Type, select Next, then open the Wallpaper tab.
 - ▶ The screen changes to the wallpaper list.
- 4. Select a desired wallpaper.
 - ▶ The preview is displayed on the left side on the screen.
 - ▶ The pop-up menu appears on the screen.
- 5. Select Set.
 - ▶ The display will return to the wallpaper list.

To view wallpaper once it is set


- 1. Select 💼.
- 2. Select Info.
- 3. Select MENU.
- 4. Select Clock/Wallpaper.

Delete wallpaper

- 1. Select Settings.
- 2. Select Clock.
- **3.** Select **Clock/Wallpaper Type**, select **Next**, then open the **Wallpaper** tab.
 - The screen changes to the wallpaper list.
- 4. Select a wallpaper that you want to delete.
 - ▶ The preview is displayed on the left side on the screen.
 - ▶ The pop-up menu appears on the screen.
- 5. Select Delete.
 - ► A confirmation message appears on the screen.
- 6. Select Yes to delete completely.
 - ▶ The display will return to the wallpaper list.

■Wallpaper Setup

From the pop-up menu, select **Preview** to see a preview at full-size screen.

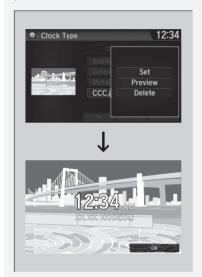


To go back to the previous screen, select **OK**, or select **EX**.

When the file size is large, it takes a while to be previewed.

To delete all wallpapers you add, select $\ensuremath{\textbf{Delete}}\xspace$ All, then $\ensuremath{\textbf{Yes}}\xspace.$

Home Screen

To change to a next screen

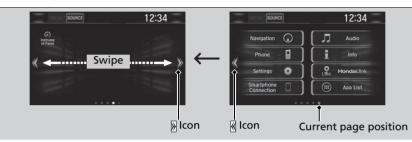

Selecting $\langle\!\!\langle\!\!\langle n \rangle\!\!\rangle$, or swiping the screen left or right changes to the next screen.

➢Home Screen

The home screen has 5 pages (fixed). You cannot add any more pages.

Select **from** to go directly back to the first page of the home screen from any page.

■ To use apps or widgets



- 1. Select 💼
- 2. Select App List ().
 - ► The apps screen appears.
- **3.** Select the app or widget you want to use.

Preinstalled app list:

- **Calculator**: Displays Calculator.
- **Downloads**^{*1}: Displays the data downloaded from the web browser and so on.
- **App Installer**: Check with a Honda dealer for apps that are available for installation.

To use apps or widgets

Select and hold a selected app or widget to add that app's or widget's shortcut on the home screen.

Pre-installed apps may not start up normally. If this occurs, you need to reset the system.

Defaulting All the Settings P. 391

If you perform **Factory Data Reset**, it may reset all the settings to their factory default.

Defaulting All the Settings P. 391

In case those apps still do not startup normally even after **Factory Data Reset**, contact your dealer.

Do not install apps other than those confirmed by a Honda dealer. Installation of unauthorized apps may introduce data corruption risks to your vehicle's information and your privacy.

You can delete user installed apps by the following procedure.

- 1. Select 💼.
- 2. Select Settings.
- 3. Select System.
- 4. Select the Others tab.
- 5. Select Detail Information.
- 6. Select an App that you want to delete.
- 7. Select Delete.

Pre-installed apps cannot be deleted.

*1: Downloads app cannot be used because there is no Browser function in this system.

To add app or widget icons on the home screen

App or widget icons can be added on the home screen.

12:34

Add App Add Widget Change wallpaper



Select and hold.

Select .
 Select .

- **3.** Select and hold empty space on the home screen.
 - ► The pop-up menu appears on the screen.

- 4. Select Add App or Add Widget.
 - ► The apps/widget screen appears.




- **5.** Select and hold an app or widget icon you want to add.
 - ► The screen switches to the customization screen.

- **6.** Drag and drop the icon to where you want it to be.
- 7. Select OK.
 - The screen will return to the home screen.

To move icons on the home screen

You can change location on the home screen.

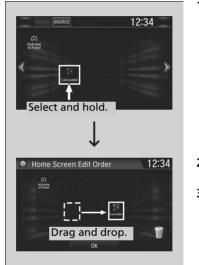

- **1.** Select and hold an icon.
 - The screen switches to the customization screen.

2. Drag and drop the icon to where you want it to be.

- 3. Select OK.
 - ► The screen will return to the home screen.

≥To move icons on the home screen

You can also move the **Phone**, **Info**, **Audio**, **Settings**, **Navigation**^{*}, **HondaLink**, **Smartphone Connection**, **App List** (), and **Instrument Panel** icons in the same manner.

■ To remove icons on the home screen

You can delete the icons on the home screen.



- **1.** Select and hold an icon.
- The screen switches to the customization screen.

To remove icons on the home screen

You cannot delete the Phone, Info, Audio, Settings, Navigation^{*}, HondaLink, Smartphone Connection, App List (()), and Instrument Panel icons.

Apps or widgets will not be deleted by deleting the icon on the home screen.

- **2.** Drag and drop the icon you want to remove to the trash icon.
 - ► The icon is removed from the home screen.
- 3. Select OK.
 - ► The screen will return to the home screen.

Status Area



- **1.** Swipe down from the top of the screen.
 - The status area appears.

- 2. Select an item to see the details.
- **3.** Select area.

Changing the Screen Interface

You can change the screen interface design.



MENU SOURCE N 12:34

- 1. Select 👧
- 2. Select Settings.
- 3. Select System.
- 4. Select the Others tab.
- 5. Select Change Skin.
- **6.** Select **Next**, then a confirmation message appears on the screen. Select **Yes**.

➢Changing the Screen Interface

After changing the screen interface design, you can change the wallpaper by following procedure.

- 1. Select 💼.
- 2. Select «
- Select and hold empty space on the home screen. The pop-up menu appears on the screen.
- 4. Select Change wallpaper.
- 5. Select Gallery, Live wallpapers, or Wallpapers.

If you change the screen interface, some of the setting items will change.

Customized Features P. 366

Menu Customize

You can change menu icons on the right side of **Audio**, **Phone**, and **Info** screen.



Drag and drop

Drag and drop

Menu Icon

12:34

12:34

- Select any of the three icons (Audio/ Phone/Info) on the screen, then select and hold the menu icon.
 - Selecting the or icon, you can change Audio, Phone, or Info on the Menu Customize screen.

2. Select and hold the menu icon you want to change, then drag and drop the icon to the bottom.

- **3.** Select and hold the menu icon you want to add, then drag and drop the icon above.
- 4. Select OK.

Menu Customize

You can also use the method below to change the menu icon:

Select Settings→System→Home tab→Menu Icon Position

To change

A

To add

1

Menu Customize

Default

Menu Customize

Default



Closing Apps

You can close specific apps running in the background on the system.



- **1.** Select and hold **f**.
- 2. Select the Active tab.
 - If you select the Active/History tab, you can close the apps that are currently running and delete the app activity history simultaneously.
- 3. Select an app you want to close.

4. Select Clear.

The display will return to the app list.

➢Closing Apps

If you have a number of apps running in the background and something goes wrong with the audio system, some of those apps may not work properly. If this happens, close all the apps and relaunch the app/apps that you want to use.

To close all apps on the system, select **Clear All**, then **Yes**.

You cannot close the HondaLink® and Garmin* apps.

Adjusting the Sound

| | 1. Select 🛄. | ➢Adjusting the Sound |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Audio Menu 12:34 Scan Music Search Sound Setting | Select MENU. Select Sound. | The SVC has four modes: Off , Low , Mid , and High . SVC adjusts the volume level based on the vehicle speed. As you go faster, audio volume increases. As you slow down, audio volume decreases. You can also adjust the sound by the following procedure. 1. Select 2. Select Settings . |
| Display="block">Sound 12:34 BAS FAD-BAL-SUBW SVC BASS - + MIDDLE - + TREBLE - + Default OK | Select a tab from the following choices: BAS-MID-TRE: Bass, Middle, Treble FAD-BAL-SUBW*: Fader, Balance, Subwoofer* SVC: Speed Volume Compensation | Select Settings. Select Audio. Select Sound. |
| | | |

Display Setup

You can change the brightness or color theme of the audio/information screen.

Changing the Screen Brightness

| Display Settings | | | | | | 12:34 |
|------------------|--|--|---|--|----|-------|
| Brightness | | | | | L | |
| Contrast | | | l | | | |
| Black Level | | | 1 | | | |
| | | | | | ОК | |

- 1. Select 💼.
- 2. Select Settings.
- 3. Select System.
- 4. Select the **Display** tab.
- 5. Select Display Settings.
- 6. Select the setting you want.
- 7. Select OK.

➢Changing the Screen Brightness

You can change the **Contrast** and **Black Level** settings in the same manner.

Changing the Screen's Color Theme


| System Settings | 12:34 |
|-------------------------|-----------|
| C / All / Home | Blue |
| | Amber |
| Background Color | Red |
| Touch Panel Sensitivity | Violet |
| | BlueGreen |
| | OK |

- 1. Select 💼.
- 2. Select Settings.
- 3. Select System.
- 4. Select the **Display** tab.
- 5. Select Background Color.
- 6. Select Next, then select the setting you want.
- 7. Select OK.

Changing the Screen's Color Theme

You cannot change the **Background Color** if you change the screen interface design.

Selecting an Audio Source

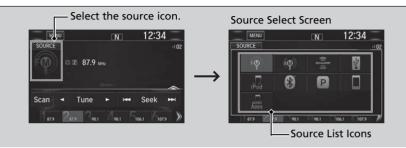

Select the current source icon, then select an icon on the source list to switch the audio source.

Limitations for Manual Operation

Certain manual functions are disabled or inoperable while the vehicle is in motion. You cannot select a grayed-out option until the vehicle is stopped.

Selecting an Audio Source

If you startup preinstalled audio apps, to apply is displayed on the screen.

These preinstalled apps cannot be displayed on the source select screen.

You can startup those audio apps from Apps.

Voice Control Operation

Your vehicle has a voice control system that allows hands-free operation. The voice control system uses the \mathbb{K} (Talk) and \mathbb{C} (hang-up/back) buttons on the steering wheel and a microphone near the map lights on the ceiling.

Voice Recognition

To achieve optimum voice recognition when using the voice control system:

 Make sure the correct screen is displayed for the voice command that you are using.

The system recognizes only certain commands. Available voice commands

Voice Portal Screen P. 294

Close the windows and moonroof.

- Adjust the dashboard and side vents so air does not blow onto the microphone on the ceiling.
- Speak clearly in a natural speaking voice without pausing between words.
- Reduce any background noise if possible. The system may misinterpret your command if more than one person is speaking at the same time.

➢Voice Control Operation

When you press the $\underline{\mathbb{M}}$ button, a helpful prompt asks what you would like to do. Press and release the $\underline{\mathbb{M}}$ button again to bypass this prompt and give a command.

➢Voice Recognition

The voice control system can only be used from the driver's seat because the microphone unit removes noises from the front passenger's side.

Voice Portal Screen

| Voice Portal Voice | 12:3 |
|-----------------------|---------------|
| Voice | Portal |
| Phone Call | Navigation |
| Music Search | HondaLink |
| Audio | Voice Setting |
| Climate Control | Voice Help |

When the $\underline{\mathscr{W}}$ (Talk) button is pressed, available voice commands appear on the screen.

For a complete list of commands, say "Voice Help" after the beep or select **Voice Help**.

You can see the list of commands in **Voice Info** on the **Info Menu** screen. Select **Info**, then select **MENU**.

The system only recognizes the commands on the following pages, at certain screens. Free form voice commands are not recognized.

*1: Models with navigation system

Phone Call

This can be only used when the phone is connected. When the system recognizes the *Phone call* command, the screen will change to the voice recognition screen for phone commands.

- Dial by number
- Call history
- Redial
- Call <Your Contact Name>
- Call <Phone Number>
- Call Police
- Call 911

Phone Call commands are not available if using Apple CarPlay[™].

Music Search

This can be only used when the iPod or USB device is connected.

■ Climate Control^{*1}

When the system recognizes the *Climate Control* command, the screen will change the dedicated screen to the climate control voice recognition screen.

Climate Control Commands^{*1} P. 296

Audio*1

When the system recognizes the *Audio* command, the screen will change to the audio voice recognition screen.

- Audio On/Off
- Radio FM/AM/SXM
- PANDORA
- iPod
- USB
- Other Sources

Pandora[®] cannot be used while Android Auto[™] is active.

■ Navigation^{*1}

The screen changes to the navigation screen.

Refer to the Navigation System Manual

HondaLink

This can be only used when the phone is connected.

■ Voice Setting

The screen changes to the **Voice Recog.** tab on the **System Settings** screen.

Voice Help

You can see a list of the available commands on the screen.

- Useful Commands
- Phone Commands
- Audio Commands*
- Climate Control Commands*
- General Commands
- Music Search Commands
- On Screen Commands

Useful Commands

The system accepts these commands on the voice portal top screen.

- Call <Phone Number>
- Call <Your contact Name>
- What time is it?
- What is today's date?

*1: Models with navigation system

Phone Commands

The system accepts these commands on the dedicated screen for the voice recognition of the phone.

- Call by number
- Call by name
- Call <Phone Number>
- Call <Your contact Name>

Audio Commands^{*1}

The system accepts these commands on the dedicated screen for the voice recognition of the audio.

Radio FM Commands

- Radio tune to <87.7-107.9> FM
- Radio tune to <87.7 -107.9> HD <1-8> FM
- Radio FM preset # (#:1-12)

Radio AM Commands

- Radio tune to <530-1710> AM
- Radio AM preset # (#:1-6)

Radio SXM Commands

• SXM channel <1-999>

- SXM channel <channel name, category name, traffic and weather city name, sports team name>
- Radio SXM preset <1-12>

Pandora[®] Commands

• PANDORA play

iPod Commands

- iPod play
- *iPod play track # (#:1-30)*
- Music Search
- What album is this?
- What am I listening to?

USB Commands

- USB play
- USB play track # (#:1-30)
- Music Search
- What album is this?
- What am I listening to?

Bluetooth[®] audio Commands

• Bluetooth audio play

NOTE:

Bluetooth[®] Audio commands may not work on some phones or *Bluetooth*[®] Audio devices.

* Not available on all models

On Screen Commands

When **On Screen Commands** is selected, the explanation screen is displayed.

Music Search Commands

The system accepts these commands on the **Music Search** screen.

Using Song By Voice

Song By Voice[™] is a feature that allows you to select music from your iPod or USB device using Voice Commands. To activate this mode, you must press the <a>[w] (Talk) button and say: "Music search".

Song By Voice Commands

- What am I listening to?
- Who am I listening to?
- Who is this?
- What's playing?
- Who's playing?
- What album is this?

Play Commands

- Play artist <Name>
- Play track/song <Name>
- Play album <Name>
- Play genre/category <Name>
- Play playlist <Name>
- Play composer <Name>

List Commands

- List artist <Name>
- List album <Name>
- List genre/category <Name>
- List playlist <Name>
- List composer <Name>

General Commands

- What time is it?
- What is today's date?

Climate Control Commands^{*1}


- Climate Control On
- Climate Control Off
- Fan Speed <1-7>
- Temperature max heat
- Temperature max cool
- Temperature <57-87> degrees
- Defrost On
- Defrost Off
- Air conditioner On
- Air conditioner Off
- More
- Vent
- Dash and floor
- Floor vents
- Floor and Defrost
- Climate Control Automatic
- Fan Speed up/down
- Temperature up
- Temperature down

NOTE:

These commands toggle the function on and off, so the command may not match your intended action.

*1: Models with navigation system

Playing AM/FM Radio

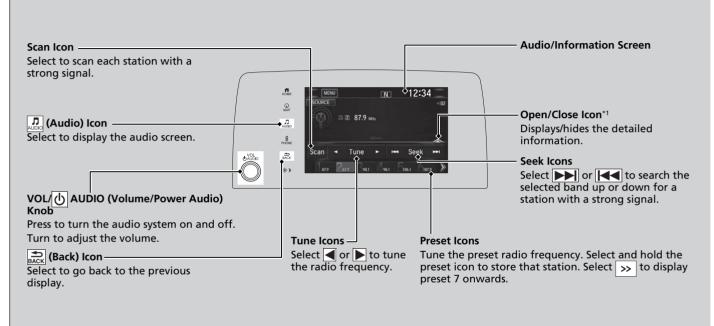

*1:Some or all of the lists may not be displayed.

Preset Memory

To store a station:

- 1. Tune to the selected station.
- 2. Select and hold the preset number for the station you want to store.

You can also store a preset station by the following procedure.

- **1.** Tune to the selected station.
- 2. Select the open/close icon to display a list.
- 3. Select the Preset tab.
- **4.** Select and hold the preset number for the station you want to store.

Station List

Lists the strongest stations on the selected band.

- 1. Select the open/close icon to display a list.
- 2. Select the Station List tab.
- 3. Select the station.

Manual update

Updates your available station list at any time.

- **1.** Select the open/close icon to display a list.
- 2. Select the Station List tab.
- 3. Select Refresh.

Preset Memory

The **ST** indicator appears on the display indicating stereo FM broadcasts. Stereo reproduction in AM is not available.

Switching the Audio Mode Press the \frown or \bigtriangledown button on the steering wheel or select **SOURCE** on the screen.

Audio Remote Controls P. 244

You can store 6 AM stations and 12 FM stations into preset memory.

HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio, and "Arc" logos are proprietary trademarks of iBiquity Digital Corp.



🔳 Scan

Samples each of the strongest stations on the selected band for 10 seconds. To turn off scan, select **Cancel** or $\boxed{=}_{\text{BACK}}$

HD Subchannel

Displays the subchannel list when an HD Radio[™] station is selected while listening to an FM station.

- 1. Select MENU.
- 2. Select HD Radio Subchannel.
- 3. Select the channel number.

Radio Data System (RDS)

Provides text data information related to your selected RDS-capable FM station.

■ To find an RDS station from Station List

1. Select the open/close icon to display a list while listening to an FM station.

- 2. Select the Station List tab.
- 3. Select the station.

Manual update

Updates your available station list at any time.

- **1.** Select the open/close icon to display a list while listening to an FM station.
- 2. Select the Station List tab.
- 3. Select Refresh.

Radio text


Displays the radio text information of the selected RDS station.

- 1. Select MENU.
- 2. Select View Radio Text.

■Radio Data System (RDS)

When you select an RDS-capable FM station, the RDS automatically turns on, and the frequency display changes to the station name. However, when the signals of that station become weak, the display changes from the station name to the frequency.

Playing SiriusXM[®] Radio

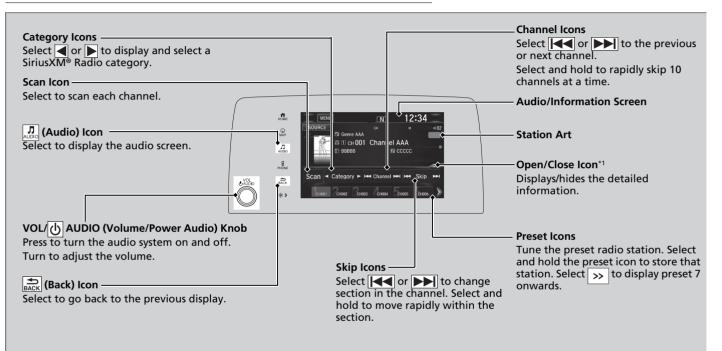

*1:Some or all of the lists may not be displayed.

To Change the Tune Mode

- 1. Select MENU.
- 2. Select Tune Mode.
- 3. Select Channel Mode or Category Mode.

▶ Playing SiriusXM[®] Radio

In the channel mode, all available channels are selectable. In the category mode, you can select a channel within a category (Jazz, Rock, Classical, etc.).

There may be instances when SiriusXM® Radio does not broadcast all the data fields (artist name, title). This does not indicate a problem with your audio system.

SiriusXM® Radio stations load in ascending order, which can take about a minute. Once they have loaded you will be able to scroll up or down to make your selections.

Switching the Audio Mode

Press the \blacktriangle or \bigtriangledown button on the steering wheel or select **SOURCE** on the screen.

Audio Remote Controls P. 244

Tune Start:

When you change to a preset channel, a song being played on that channel restarts from the beginning with this function. This can be turned on or off from the **Audio Settings** screen.

Customized Features P. 366

Preset Memory

To store a channel:

- **1.** Tune to the selected channel.
- 2. Press and hold the preset number for the station you want to store.
- 3. Select OK.

You can also store a channel by the following procedure.

- **1.** Tune to the selected channel.
- 2. Select the open/close icon to display a list.
- 3. Select the Preset tab.
- 4. Select and hold the preset number for the station you want to store.

Multi-channel preset (for music channels only)

You can store up to five of your preferred music channels in total.

| MENU | | | | | 12:34 | 4 |
|--------|----|-----|-------|------|--------|------|
| | сн | 000 | sxm | RADI | O ID | H 02 |
| Catego | | Cł | annel | | Preset | Ľ |
| сн001 | | Cha | annel | AAA | | 1 * |
| сн002 | | Cha | annel | BBB | | - |
| сн003 | | Cha | annel | CCC | | 1 |
| сн004 | | Cha | annel | DDD | | |
| сн005 | | Cha | annel | EEE | | ∥ ¥ |

- **1.** Tune a station.
- 2. Select the open/close icon to display a list.
- 3. Select the Preset tab.
- **4.** Select and hold the preset number you want to add a music channel.
 - A message appears if there are no available presets.
- 5. Select Combine.

➢Playing SiriusXM[®] Radio

You can store 12 SiriusXM $^{\otimes}$ channels into the preset memory.

➢Multi-channel preset (for music channels only)

To store a multi-channel preset, you need to setup the **Multiple Channel Mix Preset** setting to **On**. Customized Features P. 366

Listening to Featured Channels

Suggested channel listing received from SiriusXM[®] can be displayed and selected.

- **1.** Select the open/close icon to display a channel list.
- 2. Select the Channel tab.
- **3.** Select the featured channel list title you want to listen to.
 - ▶ The selected channel list of the title is displayed.
- 4. Select the channel.

➢Listening to Featured Channels

Up to three featured channels by SiriusXM[®] can be displayed.

Featured channel lists are at the top of the channel list.

Replay Function

The system can record up to the last 60 minutes of your currently tuned channel's broadcast, as well as the last 30 minutes of your preset channel's broadcast, starting from the moment you turn the vehicle on. If you tuned to a preset channel, the system records up to 60 minutes of a broadcast instead of up to 30 minutes. You can rewind and replay the last 30 or 60 minutes of a broadcast.

- 1. Select MENU.
- 2. Select Playback.

3. Move the time marker to the position you want to replay.

The following items are available on the pop-up screen:

(Skip Down): Skips to the previously stored channel. Select and hold to fast-rewind the current selection.

(Skip Up): Skips to the next channel. Select and hold to fast-forward the current selection.

(15sec Back): Select to skip back 15 seconds in the current selection. Select and hold to fast-rewind the current selection.

(15sec Skip): Select to skip forward 15 seconds in the current selection. Select and hold to fast-forward the current selection.

Select **OK** to close the pop-up menu. Replay in playback mode continues.

To play or pause on playback mode:

1. Select MENU.

2. Select Play/Pause.

Returning to real-time broadcast


- 1. Select MENU.
- 2. Select Go to Live.

➢Replay Function

The system starts storing broadcast in memory when the power mode is turned ON. You can go back to the program from that point.

You can no longer replay any program once the power mode is turned off as it erases memory. You can check how long the program has been stored in memory from the audio/information screen.

After 30 or 60 minutes of recording the system will automatically start deleting the oldest data.

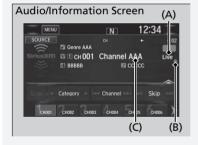

(A): Shows how much time the replayed segment is behind the real-time broadcast(B): Replayed segment

(C): Length stored in memory

Live Sports Alert

While listening to other channels, you can receive sports alerts such as scores from the games of your favorite teams.

To set up a favorite team

| SportsFlash Setup | 12:34 |
|-------------------|-------|
| 01 New Entry | |
| 02 New Entry | |
| 03 New Entry | |
| 04 New Entry | |
| 05 New Entry | |

1. Select 💼

2. Select Settings.

3. Select Audio.

4. Select SportsFlash Setup.

5. Select Favorite Team.

6. Select a team.

To set up an alert message

- 1. Select 💼
- 2. Select Settings.
- 3. Select Audio.
- 4. Select SportsFlash Setup.
- 5. Select Interrupt.
- 6. Select On(One Time) or On(Continue).

➢Live Sports Alert

The sports alert function is available in SiriusXM[®] mode only.

∑To set up a favorite team

Sports alerts cut in only when SiriusXM® mode is on. Selecting **On(One Time)** from the customize settings disables the alert feature next time you turn the power mode to ON.

Customized Features P. 366

You can also set up a favorite team by the following procedure.

- 1. Select Audio.
- 2. Select MENU.
- 3. Select Setting.
- 4. Select SportsFlash Setup.

To set up an alert beep

- 1. Select 💼.
- 2. Select Settings.
- 3. Select Audio.
- 4. Select SportsFlash Setup.
- 5. Select Interrupt Beep.
- 6. Select On.

Traffic and Weather Information

You can receive traffic and weather information.

- 1. Select 🚮.
- 2. Select Settings.
- 3. Select Audio.
- 4. Select Traffic & Weather Setup.
- 5. Select the region.

When you do not want to receive the information, select **Unregistered**.

Scan

Sample each channel on the selected mode for 10 seconds.

- 1. Select Scan.
- 2. Select Scan Channels.
 - > You can select the desired channel by songs using **Scan Song in Preset**.

To turn off scan, select **Cancel**.

■To set up an alert beep

You can also set up an alert beep by the following procedure.

- 1. Select Audio.
- 2. Select **MENU**.
- 3. Select Setting.
- 4. Select SportsFlash Setup.

Traffic and Weather Information

The traffic and weather information function at SiriusXM[®] mode only.

You can also set up the traffic and weather information by the following procedure.

- 1. Select Audio.
- 2. Select **MENU**.
- 3. Select Setting.
- 4. Select Traffic & Weather Setup.

≫Scan

The "Scan Songs in Preset" function is based on TuneScan™ technology of SiriusXM®.


The "Featured Channels" function is based on Featured Favorites[™] technology of SiriusXM[®].

TuneScan[™] and Featured Favorites[™] are registered trademarks of SiriusXM[®] Radio, Inc.

Playing an iPod

Connect the iPod using your USB connector to the USB port, then select the iPod mode.

USB Port(s) P. 241

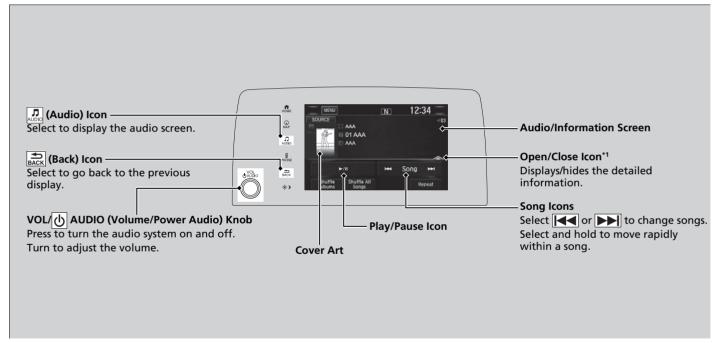

*1:Some or all of the lists may not be displayed.

How to Select a Song from the Music Search List



Item Selection

| D | Music Search | 12:34 |
|---|--------------|-------|
| | | |
| | All | |
| | AAA | |
| | BBB | |
| | CCC | |
| | | |
| | | |

1. Select MENU and select Music Search.

2. Select the items on that menu.

➢Playing an iPod

Available operating functions vary on models or versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the audio/information screen.

DiPod/USB Flash Drive P. 337

If you operate any music app on your iPhone/iPod while the phone is connected to the audio system, you may no longer be able to operate the same app on the audio/information screen. Reconnect the device if necessary.

Select **Switch USB Device** in the **Audio Menu** screen to switch to another USB device.

If an iPhone is connected via Apple CarPlay[™], the iPod/USB source is unavailable and audio files on the phone can only be played within Apple CarPlay[™].

How to Select a Play Mode

You can select shuffle and repeat modes when playing a file.

Select a play mode.



■ To turn off a play mode

Select the mode you want to turn off.

➢How to Select a Play Mode

Play Mode Menu Items

Shuffle Albums: Plays all available albums in a selected list (playlists, artists, albums, songs, podcasts, genres, composers, or audiobooks) in random order.

Shuffle All Songs: Plays all available files in a selected list (playlists, artists, albums, songs, podcasts, genres, composers, or audiobooks) in random order.

Repeat: Repeats the current track.

Song By Voice[™] (SBV)

Use SBV to search for and play music from your USB flash drive or iPod using voice commands.

To enable SBV

| System Settings | 12:3 |
|------------------------|------|
| 🕻 / Display 🗸 Sound/Be | |
| | |
| Voice Prompt | On |
| | |
| Song by Voice | Off |
| | |
| | |

- 1. Select 💼.
- 2. Select Settings.
- 3. Select System.
- 4. Select the Voice Recog. tab.
- 5. Select Song by Voice.
- 6. Select Next, then select On or Off.

Song By Voice[™] (SBV)

Setting options:

- **On** (factory default): Song By Voice[™] commands are available.
- Off: Disable the feature.

Searching for music using SBV



- 1. Set the Song by Voice setting to On.
- 2. Press the <u>⊮</u> (Talk) button and say "*Music* Search" to activate the SBV feature for the USB flash drive and iPod.
- 3. Then, say a next command.
 - Example 1: Say "(List)'Artist A'" to view a list of songs by that artist. Select the desired song to start playing.
 - Example 2: Say "Play 'Artist A'" to start playing songs by that artist.
- **4.** To cancel SBV, press the (hang-up/back) button on the steering wheel. The selected song continues playing.

Once you have canceled this mode, you need to press the <u>w</u> button and say "*Music Search*" again to re-activate this mode.

Searching for music using SBV

Song By Voice[™] Commands List

Song By Voice Commands P. 296

NOTE:

Song By Voice[™] commands are available for tracks stored on the USB flash drive or iPod.

You can add phonetic modifications of difficult words so that it is easier for SBV to recognize artists, songs, albums, and composers in voice commands.

Phonetic Modification P. 313

SBV is not available when using Apple CarPlay ${}^{\rm TM}$. Use Siri® Eyes Free instead.

Phonetic Modification

Add phonetic modifications of difficult or foreign words so that it is easier for SBV to recognize artists, songs, albums, and composers in voice commands when searching for music on the USB flash drive or iPod.

| Delete / | All | 0K | New Modification |
|--------------|-----------------------------------|------------------------------------------------|----------------------------|
| 🌣 New I | Modificat | tion | 12:3 |
| N | Addifying the | phonetics w | ill apply to all |
| N ai c | fodifying the | phonetics w albums, and c od or USB. Pro | ill apply to all composers |
| N ai c | lodifying the rtist, tracks, i | phonetics w albums, and c od or USB. Pro | ill apply to all composers |

1. Select 💼.

2. Select Settings.


- 3. Select System.
- 4. Select the Voice Recog. tab.
- 5. Select Song by Voice Phonetic Modification.
- 6. Select New Modification.

7. Select USB or iPod.

Phonetic Modification

Song by Voice Phonetic Modification is grayed out when **Song By Voice** is set to **Off**.

You can store up to 2,000 phonetic modification items.

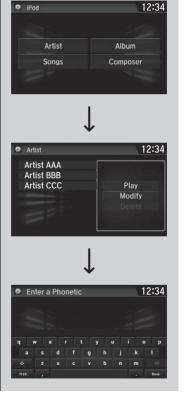

- 8. Select the item to modify (e.g., Artist).
- The list of the selected item appears on the screen.
- 9. Select an entry to modify.
 - ▶ The pop-up menu appears on the screen.
 - To listen to the current phonetic modification, select Play.
 - To delete the current phonetic modification, select **Delete**.

10.Select Modify.

11.Select the phonetic spelling you want to use (e.g., "*Artist A*") when prompted.

12.Select Done.


► The artist "*No Name*" is phonetically modified to "*Artist A*." When in the SBV mode, you can press the [](Talk) button and use the voice command "*Play 'Artist A'*" to play songs by the artist "*No Name*."

Playing Pandora®

Your audio system allows you to listen to music from the Pandora[®] app on a compatible smartphone.

This function is available when the phone is paired and connected to the vehicle's *Bluetooth*[®] HandsFreeLink[®] (HFL) system, or with an iPhone, you can connect using your USB cable to the USB port.

- Phone Setup P. 427
- DSB Port(s) P. 241

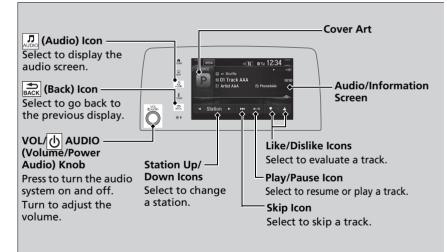

*1:Some or all of the lists may not be displayed.

➢Playing Pandora[®]

Pandora[®], the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc., used with permission. Pandora is only available in certain countries. Visit the Pandora website for more information.

To find out if your phone is compatible with this feature, visit *automobiles.honda.com/handsfreelink/*, or call 1-888-528-7876.

To use this service in your vehicle, the Pandora® app must first be installed on your phone. Visit *www.pandora.com*. for more information.

Pandora[®] is free, personalized radio that plays music and comedy you'll love. Just start with the name of one of your favorite artists, tracks, comedians or composers and Pandora[®] will create a custom station that plays similar tracks. Pandora[®] also features hundreds of genre stations ranging from Dubstep to Smooth Jazz to Power Workout.

If you cannot operate Pandora® through the audio system, it may be streaming through *Bluetooth*® Audio. Make sure Pandora® mode on your audio system is selected.

If your phone is connected to Android Auto[™], Pandora[®] is only available through the Android Auto[™] interface. Visit the Android Auto[™] website to check compatibility.

Pandora[®] Menu

You can operate some of the Pandora[®] menu items from your vehicle's audio system. The available items are:

- Bookmark
- Station List
- New Station
- Switch USB device
- Sound
- Setting

Operating a menu item

| Audio Menu | 12:34 |
|-------------|-------------------|
| | 1.00 |
| Bookmark | Station List |
| New Station | Switch USB device |
| | 1.2 |
| Sound | Setting |

1. Select MENU.

2. Select an item.

≫Pandora® Menu

Available operating functions vary on software versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the audio/information screen.

Pandora® P. 339

Pandora® may limit the total number of skips allowed on the service. If you dislike a track after the skip limit has been reached, your feedback will be saved but the current track will continue to play.


To change stations, activate the Pandora® menu, select **Station List**, and then select a new station. It also changes stations on the main Pandora® screen.

Playing a USB Flash Drive


Your audio system reads and plays sound files on a USB flash drive in either MP3, WMA. AAC^{*1} or WAV format.

Connect your USB flash drive to the USB port, then select the USB mode.

DSB Port(s) P. 241

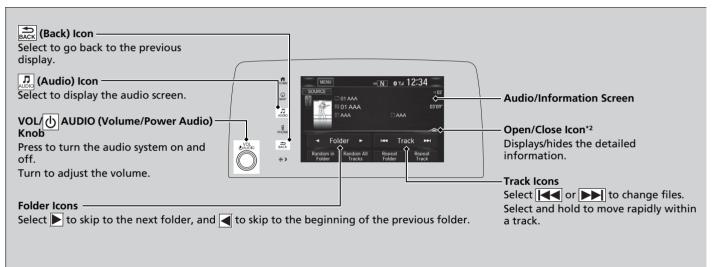

*1:Only AAC format files recorded with iTunes are playable on this unit. *2:Some or all of the lists may not be displayed.

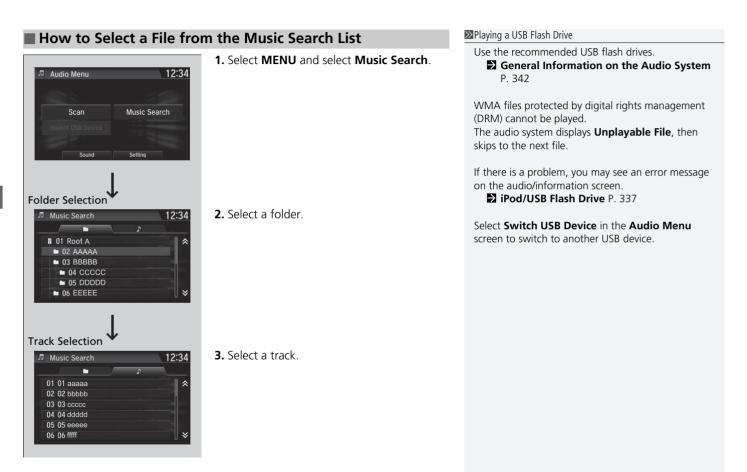

How to Select a Play Mode

You can select scan, repeat, and random modes when playing a file.

| lio Menu | 12:34 |
|----------|--------------|
| | |
| Scan | Music Search |
| | |
| | |
| Sound | Setting |

- Scan
- 1. Select MENU.
- 2. Select Scan.
- 3. Select a play mode.

Random/Repeat

Select a play mode.

➢How to Select a Play Mode

Play Mode Menu Items

Scan

Scan Folders: Provides 10-second sampling of the first file in each of the main folders.

Scan Tracks: Provides 10-second sampling of all files in the current folder.

Random/Repeat

Random in Folder: Plays all files in the current folder in random order.

Random All Tracks: Plays all files in random order. Repeat Folder: Repeats all files in the current folder. Repeat Track: Repeats the current file.

SOURCE 12:34 SOURCE 101 AAA 102 104 AAA 103097 AAA AAA • Folder • I+ Track • I Random in Random All Reseat Reseat Folder Track

■ To turn off a play mode


To turn off Scan, select are or **Cancel**. To turn off Random or Repeat, select the mode you want to turn off.

Playing Bluetooth® Audio

Your audio system allows you to listen to music from your *Bluetooth*-compatible phone.

This function is available when the phone is paired and connected to the vehicle's *Bluetooth*[®] HandsFreeLink[®] (HFL) system.

Phone Setup P. 427

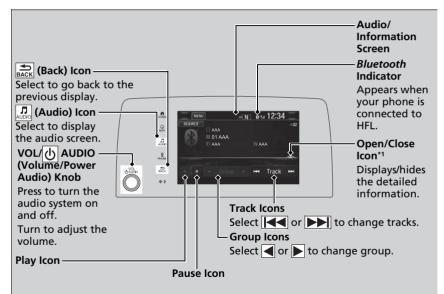

*1:Depending on the *Bluetooth*[®] device you connect, some or all of the lists may not be displayed.

≥Playing *Bluetooth*® Audio

Not all *Bluetooth*-enabled phones with streaming audio capabilities are compatible. For a list of compatible phones, visit *automobiles.honda.com/handsfreelink/*, or call 1-888-528-7876.

It may be illegal to perform some data device functions while driving.

Only one phone can be used with HFL at a time. When there are more than two paired phones in the vehicle, the system automatically connects to the prioritised phone. You can assign priority to a phone in the **Priority Device Settings**.

The connected phone for *Bluetooth®* Audio can be different.

If more than one phone is paired to the HFL system, there may be a delay before the system begins to play.

In some cases, the name of the artist, album, or track may not appear correctly.

Some functions may not be available on some devices.

If a phone is currently connected via Apple CarPlay™ or Android Auto[™], *Bluetooth*[®] Audio from that phone is unavailable. However, a second previously paired phone can stream *Bluetooth*[®] Audio by selecting **Connect** from the **Bluetooth Device List** screen.

Phone Setup P. 427

To Play *Bluetooth*[®] Audio Files



1. Make sure that your phone is paired and connected to the system.

Phone Setup P. 427

2. Select the *Bluetooth®* Audio mode.

If the phone is not recognized, another HFLcompatible phone, which is not compatible for *Bluetooth*[®] Audio, may already be connected.

To Play Bluetooth® Audio Files

To play the audio files, you may need to operate your phone. If so, follow the phone maker's operating instructions.

Switching to another mode pauses the music playing from your phone.

You can change the connected phone in the *Bluetooth*[®] settings on the **Audio Menu** screen by the following procedure.

- 1. Select **MENU**.
- 2. Select Setting.

To pause or resume a file

Select the play icon or pause icon.

Searching for Music

| 🎵 Audi | o Menu | | 12:34 |
|--------|--------|---------|-------|
| | | | |
| | | | |
| | Music | Search | |
| | | | |
| | Sound | Setting | |

- 1. Select MENU.
- 2. Select Music Search.

3. Select a search category (e.g., Albums).

- 4. Select an item.
 - ► The selection begins playing.

Searching for Music

Depending on the *Bluetooth*[®] device you connect, some or all of the lists may not be displayed.

HondaLink®

HondaLink[®] connects you to the latest information from Honda. You can connect your phone wirelessly through Wi-Fi or *Bluetooth*[®].

Wi-Fi Connection P. 327

Phone Setup P. 427

HondaLink[®] Menu



Places*

Displays restaurants, gas stations, Honda dealers, etc. and provides navigation instructions to those locations via the navigation system.

Vehicle

Displays instruction messages when the vehicle needs service.

Help & Support

Displays tips on vehicle usage and provides information on roadside assistance and the customer service center.

HondaLink[®]

The HondaLink[®] connect app is compatible with most iPhone and Android phones.

Some cell phone carriers charge for tethering and smartphone data use. Check your phone's data subscription package.

If there is an active connection to Apple CarPlay[™] or Android Auto[™], HondaLink[®] can only be connected through Wi-Fi.

Messages from Honda

Displays helpful and important information from Honda.

Weather*

Displays a weekly five-day weather forecast for any location you want. You can change the ZIP Code at any time.

To Set Up to Connect HondaLink[®] Service

Use the following procedure to connect to the HondaLink® service.

To enable the HondaLink[®] service

| Info Settings | 12:3 |
|----------------------------|------|
| / All / Clock / H | |
| Diagnostic & Location Data | Ôn |
| | Off |
| Default | |

- 1. Select 💼
- 2. Select Settings.
- 3. Select Info.
- 4. Select the HondaLink tab.
- 5. Select Diagnostics & Location Data.
- 6. Select On.



To complete the procedure, you must consent to the collection and transmission of data pertaining to your vehicle.

Enable once: Allows only one time. (Prompt shows again next time.)
Always Enable: Allows anytime. (Prompt does not show again.)
Cancel: Does not allow this consent.

* Not available on all models

To link with HondaLink®



You can see this screen after launching HondaLink[®].


Vehicle Information and Message from Honda Tips

Using the shortcut operation, you can quickly gain access to new messages.



- **1.** In the header area, a message appears to notify you of a new message.
 - When the message is received, a notification ring can be heard.

2. The notification message is replaced by an icon which remains displayed until the new message is read.

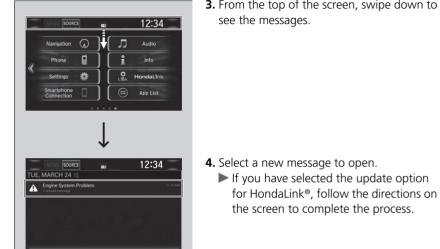

3. From the top of the screen, swipe down to

Wehicle Information and Message from Honda Tips

When you update HondaLink[®], you must keep the engine running and maintain a constant connection with HondaLink®.

If the update is interrupted, the system will automatically resume the process. If, however, a week has elapsed since the process was first interrupted, you must repeat the process from the beginning.

You can update HondaLink[®] by selecting **Message** from Honda on the HondaLink[®] menu.

Wi-Fi Connection

You can connect the Display Audio to the Internet using Wi-Fi and browse websites or use online services on the audio/information screen. If your phone has wireless hotspot capabilities, the system can be tethered to the phone. Use the following steps to setup.

Wi-Fi mode (setting for the first time)

| Bluetooth / W | i-Fi | 12 | 2:3 |
|-----------------|-----------|-------|-----|
| | Bluetooth | Wi-Fi | Ĺ |
| Wi-Fi On/Off S | tatus | Off | |
| | | | |
| Wi-Fi Informati | on | | |
| | | | |
| Default | | ОК | |



- 1. Select 💼
- 2. Select Settings
- 3. Select Bluetooth / Wi-Fi.
- 4. Select the Wi-Fi tab.
- Select Wi-Fi On/Off Status, select Next, then On.
- 6. Select Yes.
- 7. Select Wi-Fi Device List.
 - Make sure your phone's Wi-Fi setting is in access point (tethering) mode.
 - Select the phone you want to connect to the system.
 - If you do not find the phone you want to connect in the list, select Scan.

8. Select Add.

- If needed, enter a password for your phone and select **Done**.
- When the connection is successful, the ricon is displayed on the top of the screen.
- **9.** Select **1** to go back to the home screen.

Wi-Fi mode (setting for the first time)

You cannot go through the setting procedure while a vehicle is moving. Park in a safe place to set the audio system in Wi-Fi mode.

Some cell phone carriers charge for tethering and smartphone data use. Check your phone's data subscription package.

Check your phone manual to find out if the phone has Wi-Fi connectivity.

You can confirm whether Wi-Fi connection is on or off with the rice icon on the **Wi-Fi Device List** screen. Network speed will not be displayed on this screen.

Wi-Fi mode (after the initial setting has been made)

Make sure your phone's Wi-Fi setting is in access point (tethering) mode.

Wi-Fi mode (after the initial setting has been made)


iPhone users

You may need to go through an initial setup for Wi-Fi connection again after you boot your phone.

Siri[®] Eyes Free

You can talk to Siri using the <u>(k)</u> (Talk) button on the steering wheel when your iPhone is paired to the *Bluetooth*[®] HandsFreeLink[®] (HFL) system. **Phone Setup** P. 427

Using Siri[®] Eyes Free

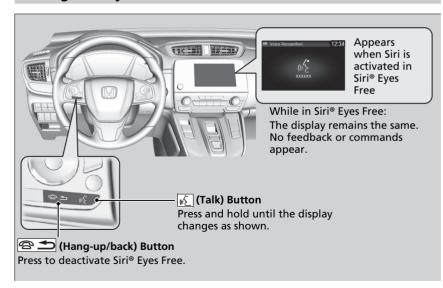

∑Siri® Eyes Free

Siri is a trademark of Apple Inc.

Check Apple Inc. website for features available for Siri.

We recommend against using Siri other than in Siri® Eyes Free while operating a vehicle.


≥Using Siri® Eyes Free

Some commands work only on specific phone features or apps.

Apple CarPlay[™]

If you connect an Apple CarPlay[™]-compatible iPhone to the system via the 1.5A USB port, you can use the audio/information screen, instead of the iPhone display, to make a phone call, listen to music, view maps (navigation), and access messages. Subsequence USB Port(s) P. 241

I Apple CarPlay™ Menu

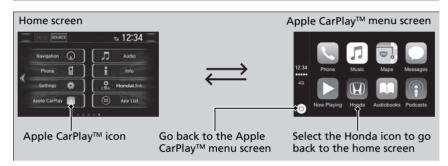

Phone

Access the contact list, make phone calls, or listen to voice mail.

Messages

Check and reply to text messages, or have messages read to you.

Music

Play music stored on your iPhone.

≫Apple CarPlay[™]

Only iPhone 5 or newer versions with iOS 8.4 or later are compatible with Apple CarPlay $^{\rm TM}.$

Park in a safe place before connecting your iPhone to Apple CarPlay[™] and when launching any compatible apps.

To use Apple CarPlay[™], connect the USB cable to the 1.5A USB port. Other USB ports will not enable Apple CarPlay[™] operation.

DSB Port(s) P. 241

To directly access the Apple CarPlay[™] phone function, select **Phone** on the home screen. While connected to Apple CarPlay[™], calls are only made through Apple CarPlay[™]. If you want to make a call with *Bluetooth*[®] HandsFreeLink[®], turn Apple CarPlay[™] OFF or detach the USB cable from your iPhone.

Setting Up Apple CarPlay[™] P. 331

When your iPhone is connected to Apple CarPlay[™], it is not possible to use the *Bluetooth*[®] Audio or *Bluetooth*[®] HandsFreeLink[®]. However, other previously paired phones can stream audio via *Bluetooth*[®] while Apple CarPlay[™] is connected. Phone Setup P. 427

For details on countries and regions where Apple CarPlay[™] is available, as well as information pertaining to function, refer to the Apple homepage.

Maps

Display Apple Maps and use the navigation function just as you would on your iPhone.

Models with navigation system

Only one navigation system (pre-installed navigation or Apple CarPlay[™]) can give directions at a time. When you are using one system, directions to any prior destination set on the other system will be canceled, and the system you are currently using will direct you to your destination.

Setting Up Apple CarPlay™

After you have connected your iPhone to the system via the 1.5A USB port, use the following procedure to set up Apple CarPlay[™]. Use of Apple CarPlay[™] will result in the transmission of certain user and vehicle information (such as vehicle location, speed, and status) to your iPhone to enhance the Apple CarPlay[™] experience. You will need to consent to the sharing of this information on the audio/information screen.

■ Enabling Apple CarPlay[™]



Enable once: Allows only once. (Prompt shows again next time.)
Always Enable: Allows anytime. (Prompt does not show again.)
Cancel: Does not allow this consent.

You may change the consent settings under the **Smartphone** settings menu.

■Apple CarPlay[™]

Apple CarPlay™ Operating Requirements & Limitations

Apple CarPlay[™] requires a compatible iPhone with an active cellular connection and data plan. Your carrier's rate plans will apply.

Changes in operating systems, hardware, software, and other technology integral to providing Apple CarPlay[™] functionality, as well as new or revised governmental regulations, may result in a decrease or cessation of Apple CarPlay[™] functionality and services. Honda cannot and does not provide any warranty or guarantee of future Apple CarPlay[™] performance or functionality.

It is possible to use 3rd party apps if they are compatible with Apple CarPlay[™]. Refer to the Apple homepage for information on compatible apps.

Setting Up Apple CarPlay M

You can also use the method below to set up Apple CarPlay™: Select HOME→Settings→Smartphone→

Apple CarPlay

Use of user and vehicle information

The use and handling of user and vehicle information transmitted to/from your iPhone by Apple CarPlay[™] is governed by the Apple iOS terms and conditions and Apple's Privacy Policy.

■ Operating Apple CarPlay[™] with Siri[®]

Press and hold the 🖟 (Talk) button to activate Siri®.



Derating Apple CarPlay[™] with Siri®

Below are examples of questions and commands for $\mathsf{Siri}^{\texttt{0}}.$

- What movies are playing today?
- Call dad at work.
- What song is this?
- How's the weather tomorrow?
- Read my latest email.
- Find a table for four tonight in Chicago.

For more information, please visit www.apple.com/ios/siri.

Android Auto™

When you connect an Android phone to the Display Audio system via the 1.5A USB port, Android Auto[™] is automatically initiated. When connected via Android Auto[™], you can use the audio/information screen to access the Phone, Google Maps (Navigation), Google Play Music, and Google Now functions. When you first use Android Auto[™], a tutorial will appear on the screen.

We recommend that you complete this tutorial while safely parked before using Android $\mathsf{Auto}^{\mathsf{TM}}.$

USB Port(s) P. 241

Auto Pairing Connection P. 335

Mandroid Auto™

To use Android Auto[™], you need to download the Android Auto[™] app from Google Play to your smartphone.

Only Android 5.0 (Lollipop) or later versions are compatible with Android AutoTM. Bluetooth A2DP cannot be used with Android AutoTM phone.

Park in a safe place before connecting your Android phone to Android Auto[™] and when launching any compatible apps.

To use Android Auto[™], connect the USB cable to the 1.5A USB port. Other USB ports will not enable Android Auto[™] operation.

USB Port(s) P. 241

When your Android phone is connected to Android AutoTM, it is not possible to use the *Bluetooth®* Audio. However, other previously paired phones can stream audio via *Bluetooth®* while Android AutoTM is connected.

Phone Setup P. 427

Android Auto™ Menu



1 Maps (Navigation)

Display Google Maps and use the navigation function just as you would with your Android phone. When the vehicle is in motion, it is not possible to make keyboard entries. Stop the vehicle in a safe location to undertake a search or provide other inputs.

Models with navigation system

Only one navigation system (pre-installed navigation or Android Auto[™]) can give directions at a time. When you are using one system, directions to any prior destination set on the other system will be canceled, and the system you are currently using will direct you to your destination.

The audio/information screen shows you turn-by turn driving directions to your destination.

2 Phone (Communication)

Make and receive phone calls as well as listen to voicemail.

B Google Now (Home screen)

Display useful information organized by Android Auto[™] into simple cards that appear just when they're needed.

➢Android Auto[™]

For details on countries and regions where Android AutoTM is available, as well as information pertaining to function, refer to the Android AutoTM homepage.

Android Auto[™] Operating Requirements & Limitations

Android Auto[™] requires a compatible Android phone with an active cellular connection and data plan. Your carrier's rate plans will apply.

Changes in operating systems, hardware, software, and other technology integral to providing Android Auto[™] functionality, as well as new or revised governmental regulations, may result in a decrease or cessation of Android Auto[™] functionality and services. Honda cannot and does not provide any warranty or guarantee of future Android Auto[™] performance or functionality.

It is possible to use 3rd party apps if they are compatible with Android Auto[™]. Refer to the Android Auto[™] homepage for information on compatible apps.

4 Music and audio

Play Google Play Music and music apps that are compatible with Android Auto[™]. To switch between music apps, press this icon.

5 Go back to the Home Screen. **6** Voice

Operate Android Auto[™] with your voice.

Auto Pairing Connection

When you connect an Android phone to the unit via the 1.5A USB port, Android Auto[™] is automatically initiated.

■ Enabling Android Auto™



Enable once: Allows only once. (Prompt shows again next time.)
Always Enable: Allows anytime. (Prompt does not show again.)
Cancel: Does not allow this consent.

You may change the consent settings under the **Smartphone** settings menu.

■Enabling Android Auto[™]

Only initialize Android Auto[™] when you safely parked. When Android Auto[™] first detects your phone, you will need to set up your phone so that auto pairing is possible. Refer to the instruction manual that came with your phone.

You can use the method below to change Android Auto[™] settings after you have completed the initial setup:


Select HOME→Settings→Smartphone→ Android Auto

Use of user and vehicle information

The use and handling of user and vehicle information transmitted to/from your phone by Android Auto[™] is governed by the Google's Privacy Policy.

■ Operating Android Auto[™] with Voice Recognition

Press and hold the 🔬 (Talk) button to operate Android Auto[™] with your voice.

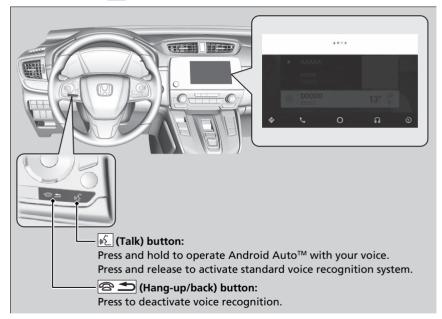

Derating Android Auto[™] with Voice Recognition

Below are examples of commands you can give with voice recognition:

- Reply to text.
- Call my wife.
- Navigate to Honda.
- Play my music.
- Send a text message to my wife.
- Call flower shop.

For more information, please refer to the Android Auto[™] homepage.

You can also activate the voice recognition function by pressing the Q icon in the upper-right corner of the screen.

iPod/USB Flash Drive

If an error occurs while playing an iPod or USB flash drive, you may see the following error messages. If you cannot clear the error message, contact a dealer.

| Error Message | Solution |
|----------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| USB Error ^{*1, *2} | Appears when there is a problem with the audio system. Check if the device is compatible with the audio system. |
| A charging error has occurred with the connected USB device. When safe please check the compatibility of the device and USB cable and try again.*2 | Appears when an incompatible device is connected. Disconnect the device. Then turn the audio system off, and turn it on again. Do not reconnect the device that caused the error. |
| Unsupported Ver ^{*1} Unsupported Version ^{*2} | Appears when an unsupported iPod is connected. If it appears when a supported iPod is connected, update the iPod software to the newer version. |
| Connect Retry ^{*1, *2} | Appears when the system does not acknowledge the iPod. Reconnect the iPod. |
| Unplayable File ^{*1, *2} | Appears when the files in the USB flash drive are copyright protected or an unsupported format. This error message appears for about three seconds, then plays the next song. |
| No Song*1 No Data*2 | iPod Appears when the iPod is empty. USB flash drive Appears when the USB flash drive is empty or there are no MP3, WMA, AAC, or WAV files in the USB flash drive. iPod and USB flash drive Check that compatible files are stored on the device. |
| Unsupported ^{*1, *2} | Appears when an unsupported device is connected. If it appears when a supported device is connected, reconnect the device. |

*1:Models with color audio system *2:Models with Display Audio

| Error Message | Solution |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| Device No Response*1 | Appears when the system does not communicate with a connected device. If it appears when a device is connected, contact your place of device purchase. |
| HUB Unsupported ^{*1} | Appears when only a HUB is connected. If it appears, connect a USB flash drive to the HUB. |

*1:Models with color audio system

Pandora[®]

If an error occurs while playing Pandora[®], you may see the following error messages. If you cannot clear the error message, contact a dealer.

Models with color audio system

| Error Message | Solution |
|--------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No Device Connected | Appears when no device is connected. Check the <i>Bluetooth</i> [®] and USB connection. |
| No Data | Appears when no data is available with Pandora [®] activated.Reboot the app and reconnect the device. |
| To begin listening, select a station from the stations list. | Appears when any station is not selected. Select a station from the station list on the device. |
| PANDORA ver unsupport. | Appears when Pandora [®] version is not supported. Update Pandora [®] to the latest version. |
| No station list on device. Use device to create station. | Appears when there is no station list on the device. Use the device to create a station. |
| PANDORA system maintenance. | Appears when the Pandora® server is in maintenance. Try again later. |
| Unable to play PANDORA. When stopped, log-in to PANDORA. | Appears you do not log in to Pandora [®] . Log in to Pandora [®] . |
| No network connectivity. | Appears when the network is deteriorated. Move the vehicle and check the reception of the signal. |
| Unable to play PANDORA. Please try again later. | Appears when the sending the data is failed for ten times and the device may have a malfunction. Try again later. Move the vehicle and check the reception of the signal. |

| Error Message | Solution |
|----------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Unable to play PANDORA. Music licensing restricts play in this area. | Appears when the vehicle is in the restricted area to listen the music. Move the vehicle and check the reception of the signal. |
| Please check owners manual | Appears when an incompatible device is connected. In order to have any problems on a connected device, there is a possibility that the audio system cannot be recognized the device. Contact a dealer. |

Models with Display Audio

| Error Message | Solution |
|--------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|
| To begin listening, select a station from the Stations list. | Appears when there is no station list on the device. Use the device to create a station. |
| Unable to rate track. Please try again. | Appears when you try to skip a song or select Like/Dislike over the predetermined number of times in an hour. |
| Unable to play PANDORA. Please try again later. | Appears when the commanded operation fails. Try again later. |
| No Data | Appears when no data is available with Pandora [®] activated. Reboot the app and reconnect the device. |
| PANDORA App version is not supported. | Appears when Pandora [®] version is not supported. Update Pandora [®] to the latest version. |
| PANDORA system maintenance. | Appears when the Pandora [®] server is in maintenance. Try again later. |

| Error Message | Solution |
|---------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| Unable to connect Pandora. When stopped, check your mobile phone | Appears when Pandora® is unable to play music. Check your device. |
| | Appears when Pandora [®] app is not installed on your device. Install Pandora [®] app to your device. |

Models with Display Audio

Android/Apps

If an error occurs while using the audio system or apps, you may see the following error messages. If you cannot clear the error message, contact a dealer.

| Error Message*1 | Solution |
|--------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Unfortunately, **** has stopped. | Error has occurred within app, select OK on the screen to close the app. |
| **** is not responding. Would you like to close it? | App is not responding. Select Wait if you can wait for a response from app a little longer. If it does not respond even if you keep waiting, select OK to close the app and start it up. If the error message continues, perform Factory Data Reset . Defaulting All the Settings P. 391 |

*1:****part is variable characters, and will change depending upon where an error occurs.

SiriusXM[®] Radio Service*

Subscribing to SiriusXM[®] Radio

- **1.** You need your radio ID ready before registering for subscription. To see the ID on the screen, select **Channel** 0.
- **2.** Have your radio ID ready, and either call SiriusXM[®] or visit the SiriusXM[®] website to subscribe.

Receiving SiriusXM[®] Radio

Switch to the SiriusXM[®] mode by using the audio remote controls on the steering wheel, or through the audio/information screen, and stay in this mode for about 30 minutes until the service is activated. Make sure your vehicle is in an open area with good reception.

SiriusXM[®] Radio Display Messages

Requested Channel Not Subscribed:

You are not subscribed to the channel selected.

Subscription Updated.:

SiriusXM® radio is receiving information update from the network.

Channel Not Available:

No such channel exists, or the artist or title information is unavailable.

No Signal:

The signal is too weak in the current location.

Check Tuner:

There is a problem with the SiriusXM[®] tuner. Contact a dealer.

Check Antenna:

The SiriusXM® antenna is disconnected. Contact a dealer.

Subscribing to SiriusXM[®] Radio

Contact Information for SiriusXM® Radio: SiriusXM® Radio at www.siriusxm.com/subscribenow or 1-866-635-2349

➢Receiving SiriusXM[®] Radio

The SiriusXM® satellites are in orbit over the equator; therefore, objects south of the vehicle may cause satellite reception interruptions. Satellite signals are more likely to be blocked by tall buildings and mountains the farther north you travel from the equator.

You may experience reception problems under the following circumstances:

- In a location with an obstruction to the south of your vehicle.
- In tunnels
- On the lower level of a multi-tiered road
- Large items carried on the roof rack

Compatible iPod, iPhone, and USB Flash Drives

iPod and iPhone Model Compatibility

Models with color audio system

Model

iPod (5th generation)

iPod classic 80GB/160GB (launch in 2007)

iPod classic 120GB (launch in 2008)

iPod classic 160GB (launch in 2009)

iPod nano (1st to 7th generation) released between 2005 and 2012

iPod touch (1st to 5th generation) released between 2007 and 2012

iPhone 3G/iPhone 3GS/iPhone 4/iPhone 4s/iPhone 5/iPhone 5s/iPhone 5c/iPhone 6/ iPhone 6 Plus

Models with Display Audio

Model

iPod touch (6th generation) released 2015

iPhone 5s/iPhone 6/iPhone 6 Plus/iPhone 6s/iPhone 6s Plus/iPhone SE/iPhone 7/ iPhone 7 Plus/iPhone 8/iPhone 8 Plus/iPhone X/iPhone XS/iPhone XS Max/iPhone XR

USB Flash Drives

- A USB flash drive of 256 MB or higher is recommended.
- Some digital audio players may not be compatible.
- Some USB flash drives (e.g., a device with security lockout) may not work.
- Some software files may not allow for audio play or text data display.
- Some versions of MP3, WMA, AAC, or WAV formats may be unsupported.

iPod and iPhone Model Compatibility

This system may not work with all software versions of these devices.

➢USB Flash Drives

Files on the USB flash drive are played in their stored order. This order may be different from the order displayed on your PC or device.

Honda App License Agreement

END USER LICENSE AGREEMENT

PLEASE CAREFULLY READ THIS END USER LICENSE AGREEMENT (THIS "AGREEMENT") WHICH GOVERNS YOUR USE OF THE SOFTWARE INSTALLED ON YOUR HONDA OR ACURA VEHICLE (YOUR "VEHICLE") AS WELL AS THE APPLICATIONS, SERVICES, FUNCTIONS, AND CONTENT PROVIDED THROUGH THE SOFTWARE (COLLECTIVELY, THE "SERVICES"). YOUR USE OF THE SOFTWARE OR SERVICES WILL SERVE AS YOUR CONSENT TO THE TERMS OF THIS AGREEMENT. THE SOFTWARE IS OWNED (OR LICENSED), PROVIDED, AND/OR OPERATED BY AMERICAN HONDA MOTOR CO. INC., ("HONDA," "US," "WE," OR "OUR"), WITH ITS BUSINESS ADDRESS AT 1919 TORRANCE BLVD., TORRANCE, CA 90501. REFERENCE TO "HONDA" IN THIS AGREEMENT INCLUDES HONDA'S PARENT COMPANY AND ITS AFFILIATES AND DESIGNATED AGENTS. THE SERVICES ARE OWNED (OR LICENSED), PROVIDED, AND/OR OPERATED BY HONDA OR A THIRD-PARTY SERVICE PROVIDER (A "PROVIDER"). REFERENCE TO A "PROVIDER" IN THIS AGREEMENT INCLUDES SUCH PROVIDER'S PARENT COMPANY, AFFILIATES, AND DESIGNATED AGENTS.

A. Description of the Software. The SOFTWARE includes the software, firmware and the like, installed and executing on your VEHICLE during manufacture, and thereafter updated from time to time by HONDA, you or an authorized HONDA dealer (a "DEALER"). The SOFTWARE allows you to access and use a variety of SERVICES, including but not limited to: (a) HONDA applications, services, and content provided through the SOFTWARE (together, "HONDA SERVICES"); and (b) PROVIDER applications, services, and content provided through the SOFTWARE (together, "PROVIDER SERVICES"), each of which may provide access to various information, media, content, and services.

B. SOFTWARE Licensing and Intellectual Property.

1. SOFTWARE. This AGREEMENT grants you a non-exclusive, limited, and revocable license to use the SOFTWARE and SERVICES solely (a) as installed on your VEHICLE by HONDA, (b) as updated on your Vehicle by HONDA, you (but only as and when directed by HONDA), or a DEALER and (c) as permitted under the terms of this AGREEMENT.

2. HONDA Services. The SOFTWARE may provide you with access to various HONDA SERVICES. Installation, activation, or use of HONDA SERVICES may require your consent to additional terms, conditions, and privacy policies applicable to those HONDA SERVICES (the "HONDA TERMS"). You acknowledge and agree that any collection, use, sharing of data generated by your VEHICLE or your use of your VEHICLE, and your use of the HONDA SERVICES shall be subject to this AGREEMENT and any additional HONDA TERMS that may be specifically applicable to such HONDA SERVICES or data generation. The HONDA SERVICES may collect, use, and share such data while you are using the SOFTWARE.

3. Open-Source Software. The SOFTWARE and SERVICES may incorporate software licensed to HONDA under free or open-source licenses which govern HONDA's distribution and your use of such software. HONDA and the third-party authors, licensors, and distributors of such software disclaim all warranties and all liability arising from any and all use or distribution of the software. To the extent such software is provided under terms that differ from the applicable free or open-source licenses, those terms are offered by HONDA alone. Additional information regarding free and open-source software incorporated in the SOFTWARE and SERVICES is available in this manual or within the SOFTWARE.

4. Provider Services. The SOFTWARE may provide you with access to various PROVIDER SERVICES. Installation or use of such PROVIDER SERVICES may require your consent to additional terms, conditions, and privacy policies of the applicable PROVIDER (the "PROVIDER TERMS"). This AGREEMENT restricts the manner in which you can install and use PROVIDER SERVICES but does not grant you a license or permission to use such PROVIDER SERVICES. Your permission to use PROVIDER SERVICES is limited and subject to any license grants, conditions, and limitations included in the PROVIDER TERMS. You acknowledge that any collection, use, sharing of your information, targeted advertising practices by PROVIDERS, and your use of the PROVIDER SERVICES shall be subject to both this AGREEMENT and any applicable PROVIDER TERMS. The PROVIDER SERVICES may collect, use, and share such information while you are using the SOFTWARE.

5. License Limitations and Restrictions on Use.

(a) <u>Limited License</u>. You understand and agree that the SOFTWARE and SERVICES are licensed, not sold, to you solely for use in accordance with this AGREEMENT and any applicable PROVIDER TERMS, and any documentation for the VEHICLE made available to you by HONDA (any "DOCUMENTATION"). HONDA and its licensors reserve all rights in the SOFTWARE and HONDA SERVICES not expressly granted to you under this AGREEMENT. PROVIDERS and their licensors reserve all rights in the PROVIDER SERVICES not expressly granted to you under the applicable PROVIDER TERMS.

(b) <u>Restrictions on Use</u>. The licenses granted under this AGREEMENT do not permit you to use the SOFTWARE or SERVICES on a device other than your VEHICLE. As a condition of using the SOFTWARE and SERVICES, you agree that you may not and will not:

(1) copy, download, distribute, modify, publish, sell, rent, lease, lend, license, sublicense, reuse, or create derivative works of the SOFTWARE or SERVICES or any of the content or other material within the SOFTWARE or SERVICES, including without limitation, HONDA or PROVIDER names, logos, or any other trademarks of HONDA or PROVIDERS or used in association with the SOFTWARE or any SERVICES, except as required to use the SOFTWARE or SERVICES in accordance with this AGREEMENT, any applicable PROVIDER TERMS, and the DOCUMENTATION;

(2) access or use the SOFTWARE or SERVICES in any manner intended to damage or impair the operation of the SOFTWARE or SERVICES or interfere with anyone else's use and enjoyment of the SOFTWARE or SERVICES;

(3) access or attempt to access any system or server on which the SOFTWARE or SERVICES is hosted or modify or alter the SOFTWARE or SERVICES in any way;

(4) use the SOFTWARE or SERVICES for any unlawful purpose, or in violation of any third party rights;

(5) use the SOFTWARE or SERVICES in violation of any applicable traffic regulations, rules or laws, including but not limited to any driver distraction laws, rules or regulations;

(6) violate the terms of this AGREEMENT, any HONDA TERMS, any PROVIDER TERMS or other applicable third-party terms, conditions, and privacy policies; or

(7) reverse engineer, decompile, disassemble, attempt to derive the source code of, nor permit others to reverse engineer, decompile, or disassemble, or attempt to derive the source code of the SOFTWARE or SERVICES, except and only to the extent that such activity is expressly permitted (a) by applicable law notwithstanding this limitation or (b) the terms of applicable free or opensource software licenses.

6. Intellectual Property Rights. All title and intellectual property rights in and to the SOFTWARE and SERVICES, the accompanying DOCUMENTATION, and all copies of the SOFTWARE or SERVICES are owned by HONDA, PROVIDERS, or their suppliers or licensors. This AGREEMENT does not grant you any rights in connection with any trademarks or service marks of HONDA, PROVIDERS, or their licensors, affiliates, or suppliers.

7. Export Restrictions: You acknowledge that the SOFTWARE and SERVICES are subject to U.S., European Union, and other export jurisdictions. You agree to comply with all applicable international and national laws that apply to the SOFTWARE and SERVICES, including the U.S. Export Administration Regulations, as well as end-user, end-use, and destination restrictions issued by the U.S. and other governments.

C. SOFTWARE Operation

1. HONDA reserves the right to suspend or terminate your access to and use of the SOFTWARE or SERVICES if you are found to be in violation of this AGREEMENT or as reasonably deemed necessary by HONDA.

2. <u>Eligibility/Registration/Activation</u>. The SOFTWARE is intended for and available to individuals who (a) are of legal age of majority in their jurisdiction of residence (and at least 18 years of age), or are younger than 18 years of age and possess a valid driver's license issued by their jurisdiction of residence, and (b) own or have permissive access to a compatible VEHICLE. We do not knowingly collect any information, including personal information, from children under 13. If we learn or are notified that we have collected personal information of a child under 13, we will immediately take steps to delete such information.

3. <u>Use of PROVIDER SERVICES through the SOFTWARE.</u> Certain PROVIDER SERVICES made available through the SOFTWARE may require that you register or otherwise have an account with the PROVIDER and agree to PROVIDER TERMS. Any use of any of such PROVIDER SERVICES within the SOFTWARE is subject to this AGREEMENT and the applicable PROVIDER TERMS. HONDA does not exercise control over such PROVIDER SERVICES and is not responsible or liable for the availability, security, or content of such PROVIDER SERVICES, and the inclusion of any PROVIDER SERVICES does not imply a referral from, the approval of, or the endorsement by HONDA of such PROVIDER SERVICES. HONDA is not responsible or liable, directly or indirectly, for any damage relating to or resulting from your use of the PROVIDER SERVICES.</u>

4. <u>Links to Third Party Sites:</u> The SOFTWARE may provide you with the ability to access third-party sites and content through the use of the SOFTWARE or SERVICES. The third-party sites and content are not under the control of HONDA. HONDA is not responsible or liable, directly or indirectly, for such third-party websites and their content or for any damage relating to or resulting from your access or use of such websites and content.

5. <u>Unauthorized Use and Abuse.</u> You are responsible for ensuring your (and any authorized third parties') use of the SOFTWARE and SERVICES remains in compliance with this AGREEMENT and all other applicable HONDA TERMS and PROVIDER TERMS. You acknowledge and agree that any use of the SOFTWARE or SERVICES occurring through your VEHICLE will be deemed your actions and that HONDA and PROVIDERS may rely upon such actions. You agree to immediately notify us if you suspect fraudulent or abusive activity involving the SOFTWARE or SERVICES. If you so notify us or if we otherwise suspect fraudulent or abusive activity, you agree to cooperate with us in any fraud investigation and to use any fraud prevention measures we prescribe. Your failure to immediately notify us or cooperate to use such measures will result in your liability for all fraudulent usage or abusive activity associated with your VEHICLE.

6. <u>SOFTWARE Updates</u>. The SOFTWARE and SERVICES may be updated when your VEHICLE is serviced by a DEALER or remotely, over-theair, by HONDA from time to time; such updates may occur with or without further notice or your future consent. The SOFTWARE may be updated at HONDA's discretion and for any purpose including, without limitation, to patch or otherwise improve the SOFTWARE or SERVICES functionality, security, or stability. All updates to the SOFTWARE and SERVICES are subject to this AGREEMENT and any other applicable HONDA TERMS and PROVIDER TERMS.

7. <u>Uninstalling, Removing, and Replacing the SOFTWARE.</u> Replacing SOFTWARE or HONDA SERVICES with software or firmware not provided and installed by HONDA or a DEALER will render all representations and warranties for the SOFTWARE, HONDA SERVICES, and VEHICLE functionality reliant upon the SOFTWARE or HONDA SERVICES null and void.

D. SOFTWARE Operational Notices and Warnings

1. <u>Vehicle Geolocation Information</u>. You acknowledge that your VEHICLE may be equipped with certain traffic and map features. The traffic feature will automatically collect and transmit, through GPS technology, your Vehicle's current location (longitude and latitude), travel direction and speed ("VEHICLE GEOLOCATION INFORMATION") to HONDA and PROVIDERS. The VEHICLE GEOLOCATION INFORMATION") to HONDA and PROVIDERS. The VEHICLE GEOLOCATION INFORMATION") to HONDA and PROVIDERS. The VEHICLE GEOLOCATION INFORMATION is used by HONDA and PROVIDERS to provide traffic and navigation-related information to you, but may also be used to provide other SERVICES or offers to you. HONDA will not use such VEHICLE GEOLOCATION INFORMATION for its own marketing efforts, or provide such information to unaffiliated third parties for their own purposes, without your express consent.

2. <u>Potential Map Inaccuracy and Route Safety.</u> Maps used by this system may be inaccurate because of changes in roads, traffic controls, routing, or driving conditions. Always use good judgment and common sense when following suggested routes. Do not follow the route suggestions if doing so would result in an unsafe or illegal driving maneuver, if you would be placed in an unsafe situation, or if you would be directed into an area that you consider unsafe. Do not rely on any navigation features included in the system to route you to emergency services. Not all emergency services such as police, fire stations, hospitals, or clinics are likely to be contained in the map database for such navigation features. Ask local authorities or an emergency services operator for such locations and routes. The driver is ultimately responsible for the safe operation of the vehicle and therefore, must evaluate whether it is safe to follow the suggested directions. Any navigation features are provided only as an aid. Make your driving decisions based on your observations of local conditions and existing traffic regulations. Navigation features are not a substitute for your personal judgment. Any route suggestions made by the SOFTWARE or SERVICES should never replace any local traffic regulations or your personal judgment or knowledge of safe driving practices.

3. <u>Speech Recognition</u>: You acknowledge and understand that HONDA and PROVIDERS may record, retain, and use voices commands when you use the speech recognition components of the SOFTWARE or SERVICES. You and all VEHICLE operators and passengers (a) consent to the recording and retention of voice commands in support of providing speech recognition components and (b) release HONDA and PROVIDERS from all claims, liabilities, and losses that may result from any use of such recorded voice commands. Recognition errors are inherent in speech recognition. It is your responsibility to monitor any speech recognition functions included in the system and address any errors. Neither HONDA nor PROVIDERS will be liable for any damages arising out of errors in the speech recognition process.

4. <u>Distraction Hazards.</u> Navigation features may require manual (non-verbal) input or setup. Attempting to perform such set-up or insert data while driving can seriously distract your attention and could cause a crash or other serious consequences; the ability to undertake such interactions may also be limited by state or local law, which laws you are responsible to know and follow. Even occasional short scans of the screen may be hazardous if your attention has been diverted away from your driving at a critical time. Pull over and stop the vehicle in a safe and legal manner before attempting to access a function of the system requiring prolonged attention. Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could result in a crash.

E. Information Collection and Storage

1. Information Collection, Use, Transmission and Storage of Data. Consent to Use of Data: You agree that HONDA and PROVIDERS may collect and use your information gathered in any manner as part of product support services related to the SOFTWARE or related services. HONDA may share such information with third parties, including, without limitation, PROVIDERS, third party software and services suppliers, their affiliates and/or their designated agents, solely to improve their products or to provide services or technologies to you. HONDA, third party software and systems suppliers, their affiliates and/or their affiliates and/or their affiliates and/or their affiliates and/or their designated agent may disclose this information to others, but not in a form that personally identifies you.

2. <u>Information Storage.</u> Depending on the type of multimedia system you have in your VEHICLE, certain information may be stored for ease of use of the SOFTWARE including, without limitation, search history, location history in certain applications, previous and saved destinations, map locations within certain applications, and device numbers and contact information.

(a) <u>Vehicle Health Information</u>. Your VEHICLE may remotely transmit information regarding the status and health of your VEHICLE ("VEHICLE INFORMATION") to HONDA without notification to you. VEHICLE INFORMATION may contain VEHICLE maintenance and malfunction status that is derived from VEHICLE diagnostic data and includes, but is not limited to, status of powered doors and windows, battery life data, battery charging data, VEHICLE speed, coolant temperature, air compressor revolution, output power, warning codes, diagnostic trouble codes, fuel injection volume, and engine rotations per minute. VEHICLE HEALTH INFORMATION may be used by HONDA for research and development, to deliver HONDA SERVICES and information to you, and to contact you, and is retained only for a period of time necessary to fulfill these goals.

(b) <u>VEHICLE Geolocation Data (non-navigation/map based).</u> If you opt-in to geolocation-based SERVICES, your vehicle's geolocation data (latitude and longitude) will be automatically sent from your VEHICLE to HONDA and PROVIDERS.

(c) You understand that the inputting or uploading of information to your VEHICLE's multimedia system or the SOFTWARE or SERVICES is at your own risk and that HONDA is not responsible for unauthorized access to or use of any personal or other information. All information uploaded to the SOFTWARE and SERVICES may be stored on your VEHICLES's multimedia system and you understand that the security and safety of your VEHICLE's multimedia system is your sole responsibility. F. NO WARRANTY. You understand and agree that your use of the SOFTWARE and SERVICES are solely at your own risk and that you will be solely responsible for any damage to your VEHICLE's multimedia system or any other equipment or any loss of data that may result from your use of the SOFTWARE or SERVICES. THE SOFTWARE AND SERVICES ARE PROVIDED ON AN "AS IS" AND "AS AVAILABLE" BASIS WITHOUT ANY WARRANTY OF ANY KIND. EXPRESSED. IMPLIED OR STATUTORY. WE SPECIFICALLY DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT. HONDA makes no warranties that the SOFTWARE or SERVICES will meet your requirements, or that the SOFTWARE or SERVICES will be uninterrupted, timely, secure, noninfringing or error free. You understand and agree that you are responsible for any and all charges, costs or expenses associated with your use of the SOFTWARE or SERVICES. Advice or information, whether oral or written, obtained by you from us or through the SOFTWARE or SERVICES are provided for informational purposes only and will not create any warranty not expressly made herein. You should not rely on any such information or advice. We assume no liability or responsibility for any errors or omissions in the SOFTWARE or SERVICES. We do not make any warranty or representation that your use of the material displayed on, or obtained through, the SOFTWARE or SERVICES is non-infringing of any rights of any third party. Any decision or action taken by you on the basis of information or content provided via the application is at your sole discretion and risk. HONDA and PROVIDERS are not responsible or liable for any such decision, or for the accuracy, completeness, usefulness, or availability of any content or information displayed, transmitted, or otherwise made available via the SOFTWARE or SERVICES. To the extent jurisdictions do not allow the exclusion of certain warranties, some of the above exclusions may not apply to you.

G. LIMITATIONS ON LIABILITY. You and HONDA are each waiving important rights.

1. <u>Limitations on YOUR liability</u>. HONDA cannot recover from you any consequential, indirect, incidental, or special damages, or attorney's fees in connection with your use of the SOFTWARE or HONDA SERVICES. HONDA WAIVES TO THE FULLEST EXTENT ALLOWED BY LAW ANY CLAIM FOR DAMAGES OTHER THAN DIRECT, COMPENSATORY DAMAGES AS LIMITED IN THIS AGREEMENT.

2. Limitation on HONDA and PROVIDER liability. Neither HONDA nor PROVIDERS will be liable to you or any other party for consequential, indirect, incidental, special, or punitive damages (including without limitation lost profits) in connection with your use of the SOFTWARE or SERVICES, even if HONDA or PROVIDERS are aware of the possibility of such damages. These limitations apply to all claims, including, without limitation, claims in contract and tort (such as negligence, product liability and strict liability). To the extent that a jurisdiction does not permit the exclusion or limitation of liability as set forth herein our liability is limited to the maximum extent permitted by law in such states. If HONDA or PROVIDERS are found liable to you for any reason, you agree that the aggregate liability of all these parties to you for any claim is limited to ten U.S. dollars (US \$10.00). Neither HONDA nor any PROVIDER would have agreed to provide the SOFTWARE or SERVICES to you if you did not agree to this limitation. This amount is the sole and exclusive liability of HONDA and PROVIDERS to you, and is payable as liquidated damages and not as a penalty. Except where prohibited by law, you may not bring any claim against HONDA or any third-party beneficiary more than two (2) years after the claim arises. We do not have any liability for SOFTWARE or SERVICES interruptions of any length.

(a) <u>Release of HONDA and PROVIDERS</u> For yourself and anyone else claiming under you, you agree to release and discharge HONDA, PROVIDERS, their respective officers, directors, and employees, and each third-party beneficiary from all claims, liabilities and losses in connection with the SOFTWARE or SERVICES, including, but not limited to claims for personal injury or property damage arising from the total or partial failure of performance of the SOFTWARE or SERVICES, even if caused by or based upon the negligence, gross negligence, strict products liability, Deceptive Trade Practices Act violations, bad faith, or breach of warranty of us or the malfunction of the SOFTWARE or SOFTWARE SERVICES. YOU AGREE TO WAIVE TO THE FULLEST EXTENT ALLOWED BY LAW, ANY CLAIM FOR DAMAGES OTHER THAN DIRECT, COMPENSATORY DAMAGES AS LIMITED IN THIS AGREEMENT. YOU HEREBY RELEASE AND DISCHARGE HONDA AND ITS LICENSORS AND CONTRACTORS (INCLUDING ANY THIRD PARTIES PROVIDING ALL OR PART OF THE SOFTWARE OR SERVICES) FROM AND AGAINST ANY CLAIMS, DAMAGES, EXPENSES AND LIABILITY ARISING FROM OR RELATED TO ANY INJURIES, DAMAGES, OR LOSSES TO ANY PERSON (INCLUDING DEATH) OR PROPERTY OF ANY KIND RESULTING IN WHOLE OR PART, DIRECTLY OR INDIRECTLY, FROM YOUR USE OF THE SOFTWARE OR SERVICES.

H. Survival. You agree that the limitations of liability and indemnities in this AGREEMENT will survive even after the AGREEMENT has ended. These limitations of liability apply not only to you, but to anyone using the SOFTWARE or SERVICES via your VEHICLE, to anyone making a claim on your behalf, and to any claims made by your family, employees, customers, or others arising out of or relating to your VEHICLE, the SOFTWARE, or SERVICES.

I. Availability/Interruption. The SOFTWARE and certain SERVICES are made available through your VEHICLE's compatible multimedia system when the VEHICLE is turned on. Certain SERVICES may be available only through your compatible mobile device when it is within the operating range of the VEHICLE and a wireless carrier. The availability of the SOFTWARE and SERVICES may be subject to transmission limitation or interruption, including but not limited to technical obsolesce or sunsetting of the hardware, software or firmware, inside of or external to the Vehicle, required for data transmission or receipt. HONDA does not guarantee that the SOFTWARE, SERVICES, or any portion thereof will be available at all times or in all areas. You acknowledge and agree that HONDA is not responsible for performance degradation, interruption or delays. You acknowledge that HONDA shall not be liable to you if the SOFTWARE or SERVICES in a given location are not available. If the SOFTWARE or SERVICES are not available within your intended location, you agree that your sole remedy shall be to cease using the SOFTWARE and SERVICES.

J. PRODUCT SUPPORT: Product support for the SOFTWARE is provided by HONDA. For product support, please refer to HONDA instructions provided in the DOCUMENTATION. Should you have any questions concerning this AGREEMENT, or if you desire to contact HONDA for any other reason, please refer to the HONDA contact information provided in the DOCUMENTATION.

K. Termination and Transfer.

1. Termination. This AGREEMENT is effective until terminated by you or US. WE may terminate this AGREEMENT for any or no reason, and with or without notice to you. Your rights under this AGREEMENT will terminate automatically without notice from US if you fail to comply with any term of this AGREEMENT. Upon termination of this AGREEMENT, you shall cease all use of the SOFTWARE and SERVICES.

2. Transfer: You may permanently transfer your rights under this AGREEMENT only as part of a sale or transfer of the VEHICLE, provided you retain no copies, you transfer all of the SOFTWARE and HONDA SERVICES (including all component parts, the media and printed materials, and any upgrades), and the recipient agrees to the terms of this AGREEMENT. You agree to notify HONDA upon the sale or transfer of the VEHICLE. To contact HONDA, please refer to the HONDA contact information provided in the DOCUMENTATION.

L. Changes to the SOFTWARE or SERVICES. WE may change, modify, or update the SOFTWARE or SERVICES from time to time. Unless explicitly stated otherwise, any new features or services that augment or enhance the SOFTWARE or SERVICES in the future shall respectively be considered part of the SOFTWARE or SERVICES and subject to this AGREEMENT. WE reserve the right at any time and from time to time to interrupt, restrict, modify, suspend, discontinue, temporarily or permanently, the SOFTWARE or SERVICES (or any portion thereof), with or without notice to you, and you agree that HONDA shall not be liable to you or to any third party for any modification, suspension or discontinuance of the SOFTWARE or SERVICES.

M. ARBITRATION:

PLEASE READ THIS ARBITRATION PROVISION CAREFULLY TO UNDERSTAND YOUR RIGHTS. YOU AGREE THAT ANY CLAIM THAT YOU MAY HAVE IN THE FUTURE MUST BE RESOLVED THROUGH BINDING ARBITRATION. YOU WAIVE THE RIGHT TO HAVE YOUR DISPUTE HEARD IN COURT AND WAIVE THE RIGHT TO BRING CLASS CLAIMS. YOU UNDERSTAND THAT DISCOVERY AND APPEAL RIGHTS ARE MORE LIMITED IN ARBITRATION.

Arbitration is a method of resolving a claim, dispute or controversy without filing a lawsuit. By agreeing to arbitrate, the right to go to court is waived and instead claims, disputes or controversies are submitted to binding arbitration. This provision sets forth the terms and conditions of our agreement. YOU and HONDA agree and acknowledge that this Agreement affects interstate commerce and the Federal Arbitration Act ("FAA") applies. By using the Software, Vehicle, or Services, YOU elect to have disputes resolved by arbitration. YOU, HONDA or any involved third party may pursue a Claim. "Claim" means any dispute between YOU, HONDA, or any involved third party relating to your use of the Software, the Vehicle, or the Services, this Agreement, or our relationship, including any representations, omissions or warranties. "Claim" does not include personal injury or wrongful death claims. YOU or HONDA may seek remedies in small claims court or provisional judicial remedies without arbitrating. In addition, notwithstanding anything herein to the contrary, YOU or HONDA may seek equitable relief in a court of competent jurisdiction.

YOU or HONDA may select arbitration with American Arbitration Association, JAMS or National Arbitration and Mediation. Contact these sponsors for their rules. The hearing will be in the federal district where YOU reside. If agreed, it may be by telephone or written submissions. Filing and arbitrator fees to be paid per the sponsor rules. You may contact the sponsor for a fee waiver. If no fee waivers, HONDA will pay filing and arbitrator fees up to \$5,000, unless law requires more. Each party is responsible for other fees. Arbitrator may award costs or fees to prevailing party, if permitted by law. HONDA will not seek fees, unless the claims are frivolous.

Arbitrator shall be an attorney or current or retired judge familiar with automotive or consumer software. The arbitrator shall follow substantive law, statute of limitations and decide all issues relating to the interpretation, construction, enforceability and applicability of this provision. The arbitrator may order relief permitted by law. This provision is governed and enforceable by the FAA. An award shall include a written opinion and be final, subject to appeal by the FAA.

This provision survives termination of this Agreement or relationship, bankruptcy, assignment or transfer. If part of this provision is unenforceable, the remainder remains in effect. If unenforceability allows arbitration as a class action, then this provision is entirely unenforceable. YOU may opt out within 30 days of your initial use of the Software by sending a signed, written notice to HONDA at Honda Financial Services, P.O. Box 165007, Irving, TX 75016. HONDA reserves the right to make changes to this provision after providing written notice and an opportunity to opt out.

N. Miscellaneous: You may not assign this AGREEMENT without HONDA's prior written consent. This AGREEMENT and any additional HONDA TERMS and PROVIDER TERMS represents the entire agreement between you and US. HONDA may amend the terms of this AGREEMENT by providing you with notices of such updated terms. If you do not consent to be bound by the updated terms, your sole remedy will be to cease using the SOFTWARE and SERVICES. If any part of this AGREEMENT is found invalid, void, or unenforceable, the balance of the AGREEMENT will remain valid and enforceable according to its terms. To the fullest extent permitted by law, and except as explicitly provided otherwise, this AGREEMENT and any disputes arising out of or relating to it will be governed by the laws of the State of California, except that California laws concerning choice of law or conflicts shall not apply if they would cause the substantive law of another jurisdiction to apply. Notwithstanding the foregoing, Section M shall be governed by the Federal Arbitration Act and the laws of the State of California, as applicable, as set forth therein. The failure to enforce any term of this AGREEMENT on one occasion shall not prevent enforcement on any other occasion or the enforcement of any other term. Headings and captions shall not be considered included for purposes of interpretation or application hereof, but are for convenience only.

Models with Display Audio

Legal Information on Apple CarPlay™/Android Auto™

OWNER'S MANUAL LICENSE/LIABILITY STATEMENTS

USE OF APPLE CARPLAY IS SUBJECT TO YOUR AGREEMENT TO THE CARPLAY TERMS OF USE, WHICH ARE INCLUDED AS PART OF THE APPLE IOS TERMS OF USE. IN SUMMARY, THE CARPLAY TERMS OF USE DISCLAIM APPLE AND ITS SERVICE PROVIDERS' LIABILITY IF THE SERVICES FAIL TO PERFORM CORRECTLY OR ARE DISCONTINUED, STRICTLY LIMIT APPLE AND ITS SERVICE PROVIDERS' OTHER LIABILITIES, DESCRIBE THE KINDS OF USER INFORMATION (INCLUDING, FOR EXAMPLE, VEHICLE LOCATION, VEHICLE SPEED, AND VEHICLE STATUS) BEING GATHERED AND STORED BY APPLE AND ITS SERVICE PROVIDERS, AND DISCLOSE CERTAIN POSSIBLE RISKS ASSOCIATED WITH THE USE OF CARPLAY, INCLUDING THE POTENTIAL FOR DRIVER DISTRACTION. SEE APPLE'S PRIVACY POLICY FOR DETAILS REGARDING APPLE'S USE AND HANDLING OF DATA UPLOADED BY CARPLAY.

Features

USE OF ANDROID AUTO IS SUBJECT TO YOUR AGREEMENT TO THE ANDROID AUTO TERMS OF USE WHICH MUST BE AGREED TO WHEN THE ANDROID AUTO APPLICATION IS DOWNLOADED TO YOUR ANDROID PHONE. IN SUMMARY, THE ANDROID AUTO TERMS OF USE DISCLAIM GOOGLE AND ITS SERVICE PROVIDERS' LIABILITY IF THE SERVICES FAIL TO PERFORM CORRECTLY OR ARE DISCONTINUED, STRICTLY LIMIT GOOGLE AND ITS SERVICE PROVIDERS' OTHER LIABILITIES, DESCRIBE THE KINDS OF USER INFORMATION (INCLUDING, FOR EXAMPLE, VEHICLE LOCATION, VEHICLE SPEED, AND VEHICLE STATUS) BEING GATHERED AND STORED BY GOOGLE AND ITS SERVICE PROVIDERS, AND DISCLOSE CERTAIN POSSIBLE RISKS ASSOCIATED WITH THE USE OF ANDROID AUTO, INCLUDING THE POTENTIAL FOR DRIVER DISTRACTION. SEE GOOGLE'S PRIVACY POLICY FOR DETAILS REGARDING GOOGLE'S USE AND HANDLING OF DATA UPLOADED BY ANDROID AUTO.

DISCLAIMER OF WARRANTIES; LIMITATION ON LIABILITY

YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF APPLE CARPLAY OR ANDROID AUTO ("THE APPLICATIONS") IS AT YOUR SOLE RISK AND THAT THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY AND EFFORT IS WITH YOU TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW. AND THAT THE APPLICATIONS AND INFORMATION ON THE APPLICATIONS IS PROVIDED "AS IS" AND "AS AVAILABLE," WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND, AND HONDA HEREBY DISCLAIMS ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE APPLICATIONS AND INFORMATION ON THE APPLICATIONS, EITHER EXPRESS. IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY, QUIET ENJOYMENT, AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY HONDA OR AN AUTHORIZED. REPRESENTATIVE SHALL CREATE A WARRANTY. AS EXAMPLES, AND WITHOUT LIMITATION. HONDA DISCLAIMS ANY WARRANTY REGARDING THE ACCURACY OF DATA PROVIDED BY THE APPLICATIONS, SUCH AS THE ACCURACY OF DIRECTIONS, ESTIMATED TRAVEL TIME, SPEED LIMITS, ROAD CONDITIONS, NEWS, WEATHER, TRAFFIC, OR OTHER CONTENT PROVIDED BY APPLE, GOOGLE, THEIR AFFILIATES, OR THIRD PARTY PROVIDERS: HONDA DOES NOT GUARANTEE AGAINST LOSS OF APPLICATION DATA. WHICH MAY BE LOST AT ANY TIME; HONDA DOES NOT GUARANTEE THAT THE APPLICATIONS OR ANY SERVICES PROVIDED THROUGH THEM WILL BE PROVIDED AT ALL TIMES OR THAT ANY OR ALL SERVICES WILL BE AVAILABLE AT ANY PARTICULAR TIME OR LOCATION. FOR EXAMPLE. SERVICES MAY BE SUSPENDED OR INTERRUPTED WITHOUT NOTICE FOR REPAIR. MAINTENANCE, SECURITY FIXES, UPDATES, ETC., SERVICES MAY BE UNAVAILABLE IN YOUR AREA OR LOCATION, ETC. IN ADDITION, YOU UNDERSTAND THAT CHANGES IN THIRD PARTY TECHNOLOGY OR GOVERNMENT REGULATION MAY RENDER THE SERVICES AND/OR APPLICATIONS OBSOLETE AND/OR UNUSABLE.

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL HONDA OR ITS AFFILIATES BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, CORRUPTION OR LOSS OF DATA, FAILURE TO TRANSMIT OR RECEIVE ANY DATA, BUSINESS INTERRUPTION OR ANY OTHER COMMERCIAL DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO THE APPLICATIONS OR YOUR USE OF OR INABILITY TO USE THE APPLICATIONS OR INFORMATION ON THE APPLICATIONS, HOWEVER CAUSED, REGARDLESS OF THE THEORY OF LIABILITY (CONTRACT, TORT OR OTHERWISE) AND EVEN IF HONDA WERE ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES AND JURISDICTIONS DISALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR DAMAGES, SO THESE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. IN NO EVENT SHALL HONDA'S TOTAL LIABILITY TO YOU FOR ALL DAMAGES (OTHER THAN AS MAY BE REQUIRED BY APPLICABLE LAW IN CASES INVOLVING PERSONAL INJURY) EXCEED THE AMOUNT OF FIVE DOLLARS (\$5.00). THE FOREGOING LIMITATIONS WILL APPLY EVEN IF THE ABOVE STATED REMEDY FAILS OF ITS ESSENTIAL PURPOSE.

About Open Source Licenses

To see the open source license information, follow these steps.

Models with color audio system

- 1. Press the MENU/CLOCK button.
- 2. Rotate 🗇 to select Settings, then press 🕹.
- 3. Rotate 🗇 to select License, then press 🕹.

Models with Display Audio

- 1. Select 💼.
- 2. Select Settings.
- 3. Select System.
- 4. Select the Others tab.
- 5. Select Detail Information.
- 6. Select About device.
- 7. Select Legal information.
- 8. Select Open source licenses.

About Open Source Licenses

Models with color audio system

LICENSE: Copyright © 2001 Bob Trower, Trantor Standard Systems Inc.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.


THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Models with color audio system

Use the audio/information screen to customize certain features.

How to customize

While the vehicle is at a complete stop with the power mode in ON, press the **MENU/CLOCK** button, then select **Settings**. To customize the phone settings, press the **Setting** button, then select **Phone Setup**.

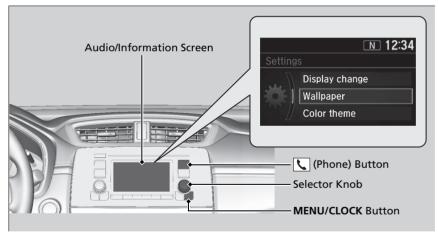

➢Customized Features

When you customize settings:


- Make sure that the vehicle is at a complete stop.
- Put the transmission into **P**.


➢How to customize

These indications are used to show how to operate the selector knob. Rotate \bigcirc to select. Press o to enter.


Customization Flow

Press the MENU/CLOCK button.

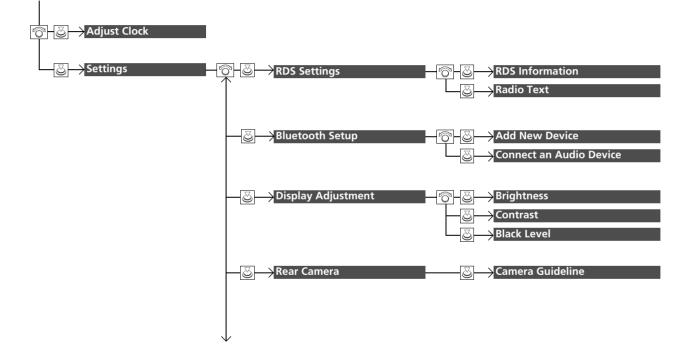

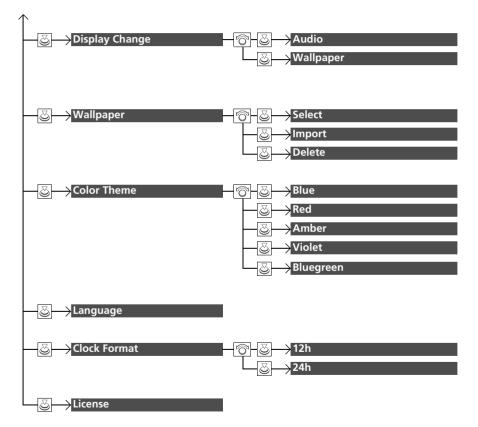

Press the 🔪 button and rotate 🗇 to select Phone Setup, then press 🕹.

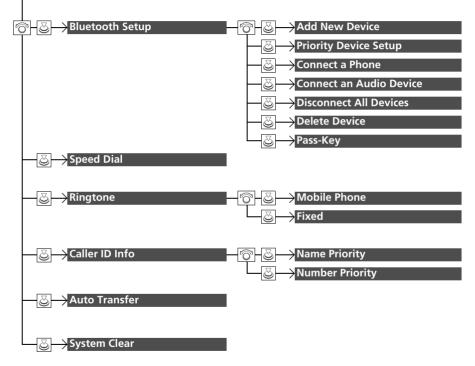

List of customizable options

| Setup Group | Customizable Features | | Description | Selectable Settings |
|----------------|-----------------------|----------------------------|-----------------------------------------------------------------------------|-----------------------|
| Adjust Clock | 2 | | Adjust Clock. Clock P. 148 | — |
| | RDS | RDS Information | Selects whether the RDS information comes on. | On ^{*1} /Off |
| | Settings | Radio Text | Displays the radio text information of the selected RDS station. | — |
| | Bluetooth Setup | | _ | |
| Settings | | Connect an Audio Device | Connects, disconnects or pairs a <i>Bluetooth</i> ® Audio device to HFL. | — |
| | | Brightness | Changes the brightness of the audio/ information screen. | _ |
| | Display Adjustment | Contrast | Changes the contrast of the audio/ information screen. | — |
| | | Black Level | Changes the black level of the audio/ information screen. | _ |
| | Rear Camera | Camera Guideline | Selects whether the guidelines come on the audio/information screen. | On ^{*1} /Off |

| Setup Group | Cust | omizable Features | Description | Selectable Settings |
|----------------|----------------|-------------------|----------------------------------------------------------------------|----------------------------------------------------|
| | Display Change | | Changes the display type. | Audio ^{*1} /Wallpaper |
| | Wallpaper | Select | Changes the wallpaper type. | Clock ^{*1} /Image 1/Image 2/ Image 3 |
| | | Import | Imports an image file for a new wallpaper. Wallpaper Setup P. 250 | _ |
| | | Delete | Deletes an image file for a wallpaper. | Image 1/Image 2/Image 3 |
| ettings | Color Them | e | Changes the background color of the audio/ information screen. | Blue ^{*1} /Red/Amber/Violet/ Bluegreen |
| | Language | | Changes the display language. | English ^{*1} /French/Spanish |
| | Clock Forma | it | Selects the digital clock display from 12H to 24H. | 12h*1/24h |
| | License | | Shows the legal information. | _ |


| Setup Group | Customizable Features | | | Description | Selectable Settings |
|----------------|-----------------------|--------------------------|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------|
| | | Add New Devi | ce | Pairs a new phone to HFL. Phone Setup P. 401 | — |
| | | | Priority | Enables the system to or disables it from automatically establishing a connection with a <i>Bluetooth</i> [®] device which has been assigned priority. | On*1/Off |
| | Diverte eth | Priority Device Setup | | Selects the priority device over another paired phone(s). | — |
| | Bluetooth Setup | A | Audio Priority | Selects the priority device over another paired audio device(s). | — |
| | | Connect a Phone | | Pairs a new phone or connects a paired phone to HFL. Phone Setup P. 401 | — |
| | | Connect an Audio Device | | Connects a Bluetooth® Audio device to HFL. | — |
| Phone Setup | | Disconnect All | Devices | Disconnects a paired phone from HFL. | — |
| | | Delete Device | | Deletes a paired phone. | — |
| | | Pass-Key | | Inputs and changes a code for a paired phone. | — |
| | Speed Dial | | | Edits, adds or deletes a speed dial entry. Speed Dial P. 410 | — |
| | Ringtone | | | Selects the ring tone. | Mobile Phone ^{*1} / Fixed |
| | Caller ID Info | 0 | | Prioritizes the caller's name or phone number as the caller ID. | Name Priority ^{*1/} Number Priority |
| | Auto Transf | er | | Sets calls to automatically transfer from your phone to HFL when you enter the vehicle. | On*1/Off |
| | System Clea | r | | Cancels/Resets all customized items in the Phone Setup group as default. | _ |

Models with Display Audio

Use the audio/information screen to customize certain features.

How to customize

While the vehicle is at a complete stop with the power mode in ON, select **fine**, and **Settings**, then select a setting item.

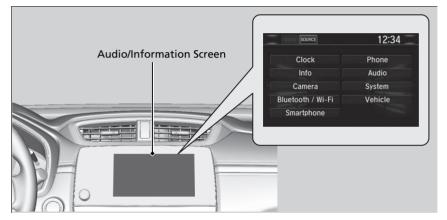


➢Customized Features

When you customize settings:


- Make sure that the vehicle is at a complete stop.
- Put the transmission into **P**.


Customization flow

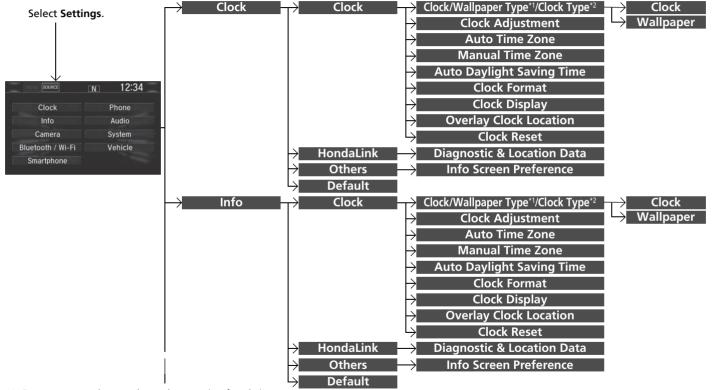


*1: Does not appear when you change the screen interface design.

*2: Appears only when you change the screen interface design.

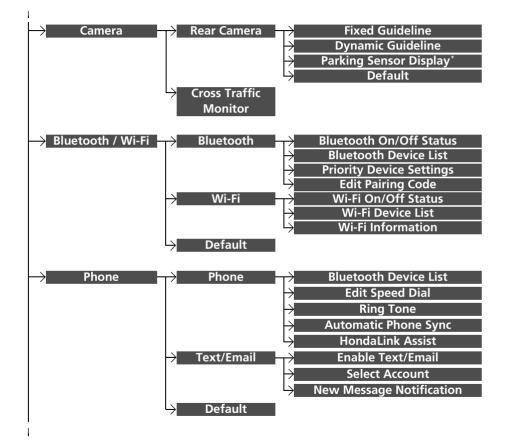


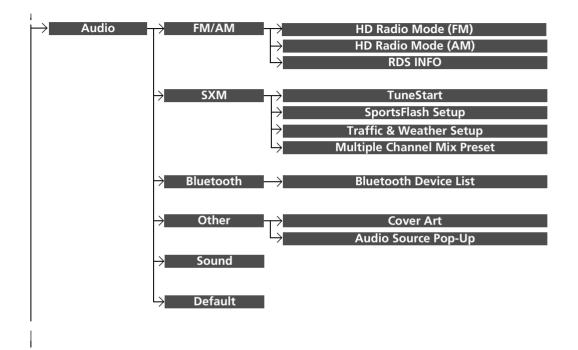

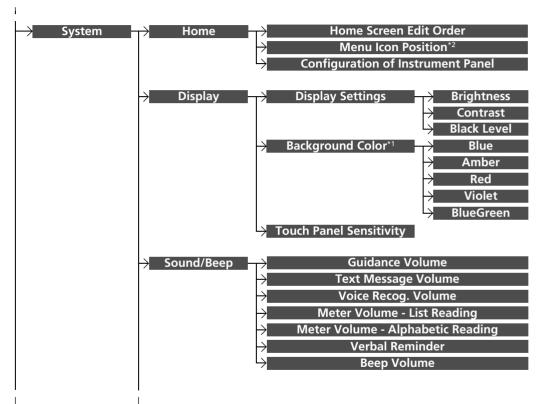


*1: Does not appear when you change the screen interface design.

*2: Appears only when you change the screen interface design.

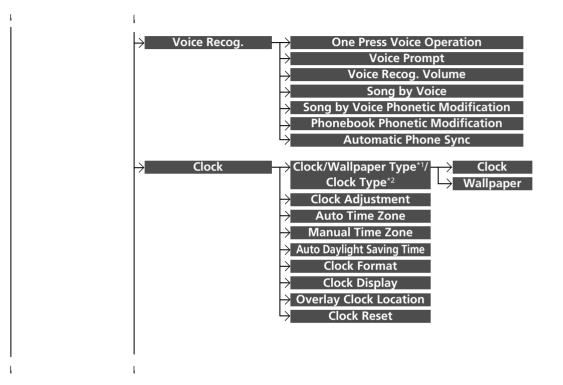


*1: Does not appear when you change the screen interface design.


*2: Appears only when you change the screen interface design.

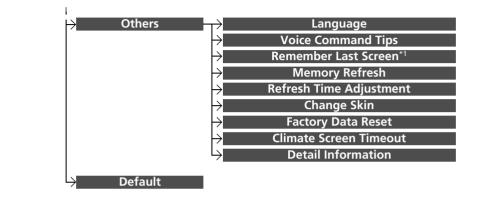

Features

*1: Does not appear when you change the screen interface design.

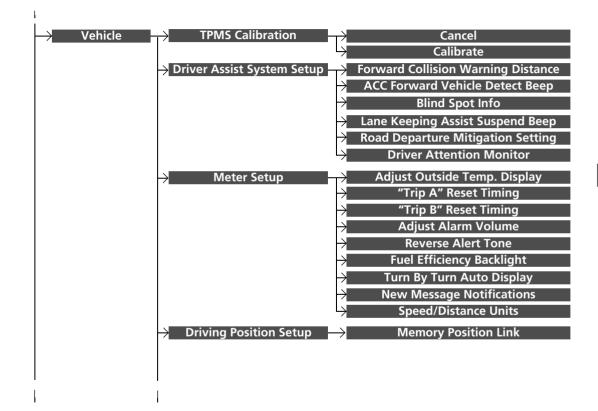

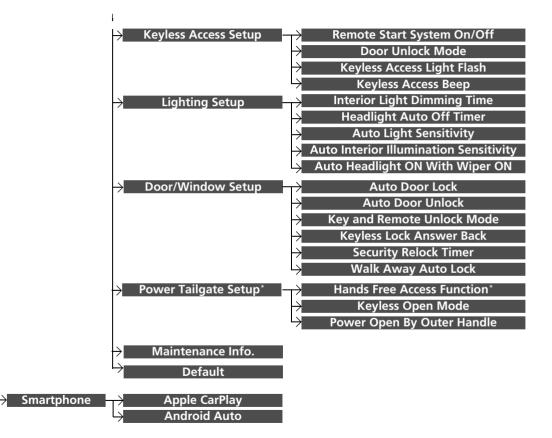

| Setup Group | Customizable Features | | Description | Selectable Settings |
|----------------|-----------------------|-----------------------------------------------------------|------------------------------------------------------------------------------------|---------------------|
| | | Clock/ Clock Wallpaper | | |
| | | Type ^{*1} /Clock Wallpaper Type ^{*2} | | |
| | | Clock Adjustment | | |
| | | Auto Time Zone | | |
| | Clock | Manual Time Zone | | |
| | | Auto Daylight Saving Time | See Info on P. 376 | |
| Clock | | Clock Format | | |
| | | Clock Display | | |
| | | Overlay Clock Location | | |
| | | Clock Reset | | |
| | HondaLink | Diagnostic & Location Dat | a | |
| | Others | Info Screen Preference | | |
| | Default | | Cancels/Resets all customized items in the Clock settings group as default. | Yes/No |

*1:Does not appear when you change the screen interface design. *2:Appears only when you change the screen interface design.

| Setup Group | | Customizable Fe | eatures | Description | Selectable Settings |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------|
| | | Clock/ Wallpaper | Clock | Changes the clock display type. | Analog/Digital ^{*1/} Small Digital/Off |
| | | Type ^{*2/} Clock Type ^{*3} | Wallpaper | Changes the wallpaper type. Imports an image file for a new wallpaper. Deletes an image file for a wallpaper. | Blank/Galaxy ^{*1/} Metallic/Time Zone* |
| | Auto Time Zone through different time zones. Manual Time Zone Changes the time zone manually. Select On to have the GPS automation | tment | Adjusts Clock. | _ | |
| | | Automatically adjusts the clock when driving through different time zones. | On*1/Off | | |
| Info | | Manual Tim | ie Zone | Changes the time zone manually. | |
| Info | | Auto Daylig | Jht Saving Time | Select On to have the GPS automatically adjust the clock to daylight savings time. Select Off to cancel this function. | On*1/Off |
| | | Clock Forma | at | Selects the digital clock display from 12H to 24H. | 12H*1/24H |
| | | Clock Displa | ay | Selects whether the clock display comes on. | On ^{*1} /Off |
| | | Overlay Clo | ck Location | Changes the clock display layout. | Upper Right*1/Upper Left/Lower Right/ Lower Left/Off |
| | | Clock Reset | | Resets the clock settings to the factory default. | Yes/No |

*2:Does not appear when you change the screen interface design. *3:Appears only when you change the screen interface design.

* Not available on all models 376

| Setup Group | Customizable Features | | Description | Selectable Settings |
|----------------|-----------------------|--------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|
| Info | HondaLink | Diagnostic & Location Data | Turns HondaLink [®] on and off. | On ^{*1} /Off |
| | Others | Info Screen Preference | Selects the top menu when the (display/information) button is pressed. Info Top- A brief menu pops up. Info Menu- A full menu pops up. Off- A menu does not pop up. | Info Top/Info Menu*1/Off |
| | Default | | Cancels/Resets all customized items in the Info settings group as default. | Yes/No |
| | | Fixed Guideline | Selects whether the fixed guidelines come on the rear camera monitor. Multi-View Rear Camera P. 566 | On*1/Off |
| Camera | Rear Camera | Dynamic Guideline | Selects whether the guidelines adjust to the movement of the steering wheel. Multi-View Rear Camera P. 566 | On*1/Off |
| Camera | Parking Sensor | Selects whether to turn on the parking sensor display. | Normal View/Split View ^{*1} | |
| | | Default | Cancels/Resets all customized items in the Rear Camera setting group as default. | On*1/Off Normal View/Split |
| | Cross Traffic | Monitor | Turns on and off the cross traffic monitor. | On ^{*1} /Off |

* Not available on all models

| Setup Group | Cu | istomizable Fea | atures | Description | Selectable Setting | |
|----------------------|-----------|--------------------|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|--|
| | | Bluetooth O | n/Off Status | Changes the <i>Bluetooth</i> [®] status. | On ^{*1} /Off | |
| | | Bluetooth De | evice List | Pairs a new phone to HFL, edits or deletes a paired phone. | _ | |
| | Bluetooth | Priority | Priority On/ Off Status | Enables the system to or disables it from automatically establishing a connection with a <i>Bluetooth</i> [®] device which has been assigned priority. | Selectable Settings On*1/Off On*1/Off On*1/Off Random/Fixed*1 On/Off*1 On/Off*1 Yes/No | |
| | | Device Settings | Audio | Selects the priority device over another paired audio device(s). | | |
| Bluetooth / Wi-Fi | | | Phone | Selects the priority device over another paired phone(s). | _ | |
| | | Edit Pairing (| Code | Edits a pairing code. To change the pairing code setting P. 428 | Random/Fixed*1 | |
| | | Wi-Fi On/Off | Status | Changes the Wi-Fi mode. | On/Off *1 | |
| | Wi-Fi | Wi-Fi Device | List | Connects, disconnects, or deletes the Wi-Fi device. | | |
| | | Wi-Fi Inform | ation | Shows the Wi-Fi information of the head unit. | | |
| | Default | | | Cancels/Resets all customized items in the Bluetooth / Wi-Fi group as default. | Yes/No | |

| Setup Group | Cu | stomizable Features | Description | Selectable Settings |
|----------------|------------|--------------------------|----------------------------------------------------------------------------------------------------|-------------------------------------|
| | | Bluetooth Device List | Pairs a new phone to HFL, connects or disconnects a paired phone. Phone Setup P. 427 | — |
| | | Edit Speed Dial | Edits, adds or deletes a speed dial entry. Speed Dial P. 433 | — |
| | Phone | Ring Tone | Selects the ring tone. | Fixed/Mobile Phone ^{*1} |
| Phone | | Automatic Phone Sync | Sets a phonebook and call history data to be automatically imported when a phone is paired to HFL. | On*1/Off |
| Filone | | HondaLink Assist | Turns HondaLink Assist on and off. | On ^{*1} /Off |
| | Text/Email | Enable Text/Email | Turns the text/e-mail message function on and off. | On*1/Off |
| | | Select Account | Selects a text or e-mail message account. | — |
| | | New Message Notification | Selects whether a pop-up alert comes on the screen when HFL receives a new text/e-mail message. | On/Off*1 |
| | Default | | Cancels/Resets all customized items in the Phone settings group as default. | Yes/No |

| Setup Group | Custo | omizable Featu | res | Description | Selectable Settings |
|----------------|----------------------------|------------------------------------------|-------------------|-----------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------|
| | FM/AM mode FM/AM | HD Radio Mode (FM) HD Radio Mode (AM) | | Selects whether the audio system automatically switches to the digital radio waves or receives the analog waves only. | Auto ^{*1} /Analog Only |
| | | RDS INFO | | Turns on and off the RDS information. | On*1/Off |
| Audio | | TuneStart | | Turns on and off, starts the song from the beginning as you change preset stations. | On*1/Off |
| | | | Interrupt | Turns on and off the sports alert function. Selects your favorite sports teams. | Off ^{*1/} On(One Time)/ On(Continue) |
| | SiriusXM [®] mode | SportsFlash Setup | Favorite Team | | _ |
| | SXM | | Interrupt Beep | Causes the system to beep when the sports alert is notified. | Auto*1/Analog Only On*1/Off On*1/Off Off*1/On(One Time)/ |
| | | Traffic & Wea | ather Setup | Selects the region you want to receive the information. | _ |
| | - | Multiple Cha Preset | nnel Mix | Turns multiple channel mix preset on and off. | On*1/Off |

| Setup Group | Customizable Features | | Description | Selectable Settings |
|----------------|-------------------------------------|--------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|---------------------|
| | <i>Bluetooth®</i> mode Bluetooth | Bluetooth Device List | Pairs a new phone to HFL, edits or deletes a paired phone. Phone Setup P. 427 | _ |
| | | iPod or USB mode [Your selected media] Cover Art | Turns the cover art display on and off. | On*1/Off |
| Audio | Other | Audio Source Pop-Up | Selects whether the list of selectable audio source comes on when Audio is selected on the home screen. | On/Off*1 |
| | Sound | | Adjusts the settings of the audio speakers' sound. Adjusting the Sound P. 290 | _ |
| | Default | | Cancels/Resets all customized items in the Audio settings group as default. | Yes/No |
| | | Home Screen Edit Order | Changes the home screen icon layout. | — |
| System | Home | Menu Icon Position*2 | Changes the position of the menu icons on the Audio , Phone , and Info screen. | — |
| | | Configuration of Instrument Panel | Changes the Instrument Panel screen icon layout. | — |

*1:Default Setting *2:Appears only when you change the screen interface design.

| Setup Group | Customizable Features | | eatures | Description | Selectable Settings |
|----------------|-----------------------|---------------------|-----------------------|---------------------------------------------------------------------------------------|----------------------------------------------------|
| | | Display Settings | Brightness | Changes the brightness of the audio/information screen. | — |
| | | | Contrast | Changes the contrast of the audio/information screen. | — |
| | Display | | Black Level | Changes the black level of the audio/information screen. | — |
| System | | Background | d Color ^{*2} | Changes the background color of the audio/ information screen. | Blue ^{*1} /Amber/Red/ Violet/BlueGreen |
| | | Touch Pane | el Sensitivity | Sets the sensitivity of the touch panel screen. | High/Low ^{*1} |
| | Sound/ | Guidance V | 'olume | Changes the sound volume. Adjusts the guidance volume of the navigation system. | 1~6*1~11 |
| | Beep – | Text Messa | ge Volume | Changes the text/e-mail message reading volume. | 1~6 ^{*1} ~11 |

*1:Default Setting *2:Does not appear when you change the screen interface design.

| Setup Group | Customizable Features | | Description | Selectable Settings | | |
|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------|---------------------------------------------------------------------------------------------------------------|-----------------------|------------------------------------|-----------------------|
| | | Voice Recog. Volume | Changes the volume of the voice prompt. | 1~6 ^{*1} ~11 | | |
| | | Meter Volume - List Reading | Changes the list reading volume. | 1~6 ^{*1} ~11 | | |
| | Sound/ Beep | Meter Volume - Alphabetic Reading | Changes the alphabetic reading volume. | 1~6* ¹ ~11 | | |
| | | Verbal Reminder | Turns the verbal reminders on and off. | On ^{*1} /Off | | |
| | | Beep Volume | Changes the beep volume. | Off/1/2*1/3 | | |
| C | One Press Voice Operation Changes the setting of the [] (Talk) button operation Voice Prompt Turns the voice operation. Voice Recog. Volume Changes the volume of the voice prompt. Song by Voice Turns the Song By Voice™ on and off. | | Changes the setting of the 🖟 (Talk) button operation when using the voice operation. | On*1/Off | | |
| System | | | | Voice Prompt | Turns the voice prompt on and off. | On ^{*1} /Off |
| | | Voice Recog. Volume | Changes the volume of the voice prompt. | 1~6 ^{*1} ~11 | | |
| | | Turns the Song By Voice™ on and off. | On ^{*1} /Off | | | |
| | Recog. | Song by Voice Phonetic Modification | Modifies a voice command for music stored in the system or an iPod/iPhone. Phonetic Modification P. 313 | _ | | |
| | | Phonebook Phonetic Modification | Modifies a voice command for the phonebook. Phonetic Modification P. 313 | _ | | |
| | | Automatic Phone Sync | Sets phonebook and call history data to be automatically imported when a phone is paired to HFL. | On/Off | | |

| Setup Group | | Customizable Featu | ires | Description | Selectable Settings | |
|----------------|--------|-----------------------------------------------------------------------------------------------------|-------------|-----------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------|--------|
| | | Clock/Wallpaper Type ^{*2/} Clock Type ^{*3} | Clock | | | |
| | | | Wallpaper | | | |
| | Clock | Clock Adjustment Auto Time Zone Manual Time Zone Auto Daylight Saving Time Clock Format | | - - - See Info on P. 377 | | |
| | | | | | | |
| | | | | | | |
| | | | | - | | |
| | | | | | | System |
| | | Overlay Clock Loca | ation | | | |
| | | | Clock Reset | | | |
| | Others | Language | | | English (United States)*1/Français/ Español | |
| | others | Voice Command T | ips | Alerts you when manual control of the system is disabled to prevent distraction while driving. Only voice commands are available. | On*1/Off | |

*1:Default Setting *2:Does not appear when you change the screen interface design. *3:Appears only when you change the screen interface design.

| Setup Group | Customizable Features | | Description | Selectable Settings |
|----------------|-----------------------|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|
| | | Remember Last Screen*2 | Selects whether the device remembers the last screen. | On/Off*1 |
| | | Memory Refresh | Turns on the audio system automatically and restores the fragmentation of a memory when the power mode is VEHICLE OFF (LOCK). | On*1/Off |
| | | Refresh Time Adjustment | Sets the time for Memory Refresh . | — |
| | Others | Change Skin | Changes the screen interface design. | Yes/No |
| System | | Factory Data Reset | Resets all the settings to their factory default. Defaulting All the Settings P. 391 | Yes/No |
| | | Climate Screen Timeout | Changes the length of time the climate controldisplay stays on when you press the CLIMATEbutton. | Never/5 Seconds/10 Seconds*1/20 Seconds |
| | | Detail Information | Displays the details of the head unit and operating system information. | — |
| | Default | | Cancels /Resets all customized items in the System group as default. | Yes/No |

*1:Default Setting *2:Does not appear when you change the screen interface design.

| Setup Group | Customizable Features | | Description | Selectable Settings | |
|----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------|----------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|
| | TPMS Calibration | | Cancels/Calibrates the tire pressure monitoring system (TPMS). | Cancel ^{*1} /Calibrate | |
| | | Forward Collision Warning Distance | Changes CMBS™ alert distance. | Long/Normal*1/Short | |
| | ACC Forward Venicle Detect Beep vehicle, or when the vehicle goes out of the ACC Low Speed Follow range. Driver Assist System Blind Spot Info Changes the setting for the blind spot information | Driver Assist | | Causes the system to beep when the system detects a vehicle, or when the vehicle goes out of the ACC with Low Speed Follow range. | On/Off ^{*1} |
| Vehicle | | | Blind Spot Info | Changes the setting for the blind spot information. | Audible and Visual Alert ^{*1} /Visual Alert/Off |
| | | Causes the system to beep when LKAS is suspended. | On/Off*1 | | |
| | | Road Departure Mitigation Setting | Changes the setting for the road departure mitigation system. | Normal ^{*1} /Wide/Warning Only/Narrow | |
| | | Driver Attention Monitor | Changes the setting for the driver attention monitor. | Tactile And Audible Alert ^{*1} /Tactile Alert/OFF | |

| Setup Group | Customizable Features | | Description | Selectable Settings |
|----------------|-----------------------|---------------------------------|--------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------|
| | | Adjust Outside Temp. Display | Adjusts the temperature reading by a few degrees. | -5°F ~ ±0°F*1 ~ +5°F |
| | | "Trip A" Reset Timing | Changes the setting of how to reset trip meter A and average fuel economy A. | When Refueled/IGN Off/ Manually Reset ^{*1} |
| | | "Trip B" Reset Timing | Changes the setting of how to reset trip meter B and average fuel economy B. | When Refueled/IGN Off/ Manually Reset ^{*1} |
| Vehicle | Meter | Adjust Alarm Volume | Changes the alarm volume, such as buzzers, warnings, turn signal sound, and so on. | High/Mid ^{*1} /Low |
| Venicie | Setup | Reverse Alert Tone | Causes the beeper to sound when you move to $[\mathbf{R}]$. | On ^{*1} /Off |
| | | Fuel Efficiency Backlight | Turns the ambient meter feature on and off. | On ^{*1} /Off |
| | | | Turn By Turn Auto Display | Selects whether the turn-by-turn display comes on during the route guidance. |
| | | New Message Notifications | Used to select whether a pop-up alert comes on the screen when HFL receives a new text/e-mail message. | On ^{*1} /Off |
| | | Speed/Distance Units | Selects the trip computer units. | mph \cdot miles ^{*1} /km/h \cdot km |

| Setup Group | Customizable Features | | Description | Selectable Settings |
|----------------|------------------------------|----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|----------------------------------------------|
| | Driving Position Setup | Memory Position Link | Turns the driving position memory system on and off. | On*1/Off |
| | Keyless Access Setup | Remote Start System On/Off | Turns the remote engine start feature on and off. | On*1/Off |
| | | Door Unlock Mode | Changes which doors unlock when you grab the driver's door handle. | Driver Door Only*1/All Doors |
| Vehicle | | Keyless Access Light Flash | Causes some exterior lights to flash when you unlock/lock the doors. | On*1/Off |
| | | Keyless Access Beep | Causes the beeper to sound when you unlock/lock the doors. | On*1/Off |
| | Lighting Setup | Interior Light Dimming Time | Changes the length of time the interior lights stay on after you close the doors. | 60seconds/30seconds*1/ 15seconds |
| | | Headlight Auto Off Timer | Changes the length of time the exterior lights stay on after you close the driver's door. | 60seconds/30seconds/ 15seconds*1/0seconds |
| | | Auto Light Sensitivity | Changes the timing for the headlights to come on. | Max/High/Mid ^{*1} /Low/Min |
| | | Auto Interior Illumination Sensitivity | Changes the sensitivity of the brightness of the instrument panel when the headlight switch is in the AUTO position. | Min/Low/Mid ⁻¹ /High/Max |

| Setup Group | Customizable Features | | Description | Selectable Settings |
|----------------|-----------------------|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| Vehicle | Lighting Setup | Auto Headlight ON With Wiper ON | Changes the settings for the wiper operation when the headlights automatically come on while the headlight switch is in the AUTO position. | On*1/Off |
| | | Auto Door Lock | Used to change the setting for when the doors automatically lock. | With Vehicle Speed ^{*1} /Shift from P/Off |
| | | Auto Door Unlock | Changes the setting for when the doors unlock automatically. | All Doors When Driver's Door Opens ^{*1} /All Doors When Shifted to Park/All Doors When Ignition Switched Off/Off |
| | Door/ Window | Key and Remote Unlock Mode | Sets up the driver's door or all the doors to unlock on the first push of the remote. | Driver Door*1/All Doors |
| | Setup | Keyless Lock Answer Back | LOCK/UNLOCK- The exterior lights flash. LOCK (2nd push)- The beeper sounds. | On*1/Off |
| | | Security Relock Timer | Changes the time it takes for the doors to relock and the security system to set after you unlock the vehicle without opening any door. | 90seconds/60seconds/ 30seconds*1 |
| | | Walk Away Auto Lock | Changes the settings for the auto lock function when you walk away from the vehicle. | On/Off*1 |

| Setup Group | Customizable Features | | Description | Selectable Settings |
|----------------|-----------------------------|--------------------------------------------|-----------------------------------------------------------------------------------------------------------------|-----------------------------------------------|
| | | Hands Free Access Function [*] | Changes the setting to open power tailgate by a swift forward in and out kicking motion under the rear bumper. | On*1/Off |
| | Power Tailgate Setup* | Keyless Open Mode | Changes the keyless setting for when the power tailgate opens. | Anytime ^{*1} /When Unlocked |
| Vehicle | · | Power Open By Outer Handle | Changes the setting to open power tailgate by tailgate outer handle. | Off (Manual only)/ On (Power/ Manual)*1 |
| | Maintenan | ce Info. | Used to reset the maintenance minder information display when the maintenance service has been performed. | _ |
| | Default | | Cancels/Resets all customized items in the Vehicle settings group as default. | Yes/No |
| Smartnhana | Apple CarPlay | | Sets up the Apple CarPlay™ connection. | — |
| Smartphone | Android A | uto | Sets up the Android Auto™ connection. | — |

Defaulting All the Settings

Reset all the menu and customized settings as the factory defaults.



- 1. Select 🔝.
- 2. Select Settings.
- 3. Select System.
- 4. Select the Others tab.
- 5. Select Factory Data Reset.
 - A confirmation message appears on the screen.
- Select Next, then select Yes to reset the settings.
- 7. Select Yes again to reset the settings.
 - ► A confirmation message appears on the screen. Select **OK**.
 - ► After selecting **OK**, the system will reboot.

Defaulting All the Settings

When you transfer the vehicle to a third party, reset all settings to default and delete all personal data.

If you perform **Factory Data Reset**, it will reset the preinstalled apps to their factory default.

If you perform **Factory Data Reset**, you cannot use the HondaLink[®] because it becomes off line. The HondaLink[®] P. 322 The HomeLink[®] Universal Transceiver can be programmed to operate up to three remote controlled devices around your home, such as garage doors, lighting, or home security systems.

Important Safety Precautions

Refer to the safety information that came with your garage door opener to test that the safety features are functioning properly. If you do not have the safety information, contact the manufacturer.


Before programming HomeLink, make sure that people and objects are out of the way of the garage or gate to prevent potential injury or damage.

When programming a garage door opener, park just outside the garage door's path.

➢HomeLink[®] Universal Transceiver[∗]

Before programming HomeLink to operate a garage door opener, confirm that the opener has an external entrapment protection system, such as an "electronic eye," or other safety and reverse stop features. If it does not, HomeLink may not be able to operate it.

Training HomeLink

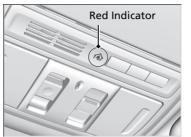

If it is necessary to erase a previously entered learned code:

- Press and hold the two outside buttons for about 20 seconds, until the red indicator blinks. Release the buttons, and proceed to step 1.
- If you are training the second or third button, go directly to step 1.

The instructions on the next page should work for most gate or garage openers, but may not work for all. For detailed instructions about your specific remote opener, visit *http://www.homelink.com* or call (800)355-3515.


➢Training HomeLink Training a Button Retraining a Button Position the remote transmitter you wish to link 1 to 3 inches (3 - 8 cm) from the If you want to retrain a programmed button for a HomeLink button you want to program. new device, you do not have to erase all button memory. You can replace the existing memory code using this procedure: 2. Press and hold the desired HomeLink button. Hold the button on the remote transmitter. Does the HomeLink indicator (LED) change from slowly blinking to **1.** Press and hold the desired HomeLink button constantly on or rapidly blinking? The process should take less than 60 seconds. until the HomeLink indicator begins to blink. NO YES Indicator remains on for about 25 secs. Press and release the Homel ink button Press 3. Press and hold the and release the button on the remote every 2 programmed HomeLink 2. Quickly release the HomeLink button and follow secs. button for about a sec. \leftarrow YES steps 1 - 3 under "Training a Button." You do not Does the HomeLink indicator (LED) change from Does the device (garage need to press and release the HomeLink button slowly blinking to constantly on or rapidly door opener) work? again in step 2. blinking? The process should take less than 60 seconds **Erasing Codes** YES NO To erase all the codes, press and hold the two outside buttons until the HomeLink indicator begins to blink 4. Press and hold the HomeLink button again. (about 10 to 20 secs). You should erase all codes Training before selling the vehicle. HomeLink LED is HomeLink indicator rapidly blinks. Complete constantly on. If you have any problems, see the device's instructions, visit www.homelink.com, or call **A.** The remote has a rolling code. Press the HomeLink at (800) 355-3515. 5. Press and hold the HomeLink "learn" button on the remote-controlled button again. device (e.g. garage door opener). HomeLink® is a registered trademark of Gentex The remote-controlled device Corporation. should operate. **B.** Within 30 secs, press and hold the **Training Complete** programmed HomeLink button for 2 secs.

Models with color audio system

Bluetooth[®] HandsFreeLink[®] (HFL) allows you to place and receive phone calls using your vehicle's audio system, without handling your cell phone.

Using HFL

HFL Buttons

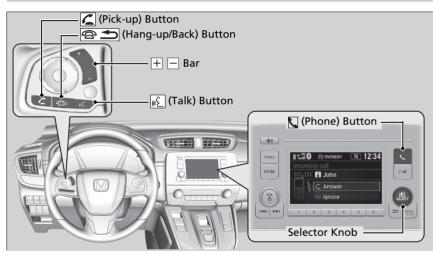

(Pick-up) button: Press to go directly to the phone screen or to answer an incoming call.

(Hang-up/back) button: Press to end a call or to cancel a command.

- (Talk) button: Press to call a number with a stored voice tag.
- **(Phone) button:** Press to go directly to the phone screen.

Selector knob: Rotate \bigcirc to select an item on the screen, then press \bigotimes .

Bluetooth® HandsFreeLink®

Place your phone where you can get good reception.

To use HFL, you need a *Bluetooth*-compatible cell phone. For a list of compatible phones, pairing procedures, and special feature capabilities: Visit *automobiles.honda.com/handsfreelink/*, or call 1-888-528 -7876.


Voice control tips

- Aim the vents away from the ceiling and close the windows, as noise coming from them may interfere with the microphone.
- Press and release the <u>(*)</u> button when you want to call a number using a stored voice tag. Speak clearly and naturally after a beep.
- If the microphone picks up voices other than yours, the command may be misinterpreted.

State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

Up to 20 speed dial entries can be stored. If there is no entry in the system, Speed Dial is disabled.

Up to 20 call histories can be stored. If there is no call history, Call History is disabled.

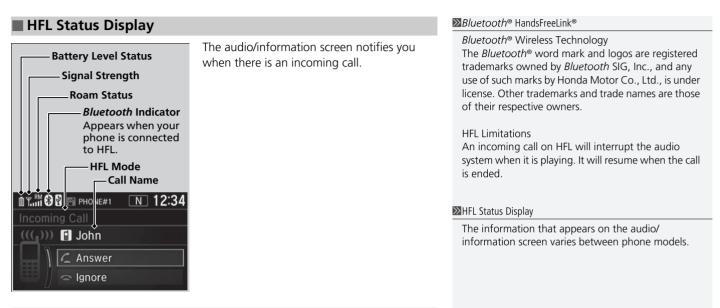


Limitations for Manual Operation

Certain manual functions are disabled or inoperable while the vehicle is in motion. You cannot select a grayed-out option until the vehicle is stopped.


Only previously stored speed dial entries can be called using voice commands while the vehicle is in motion.


Speed Dial P. 410

HFL Menus

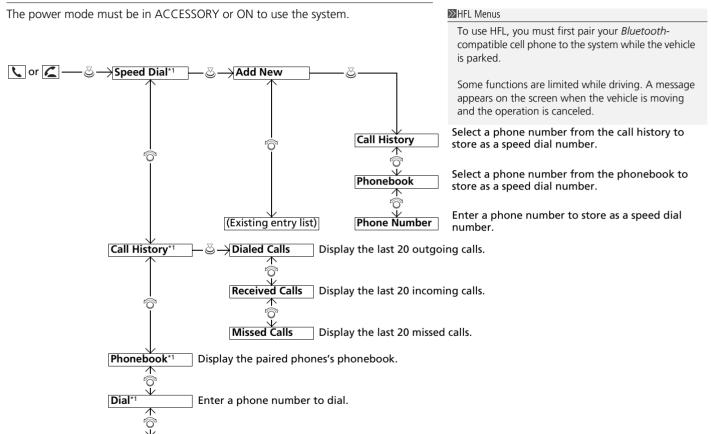


*1: Appears only when a phone is connected to HFL.

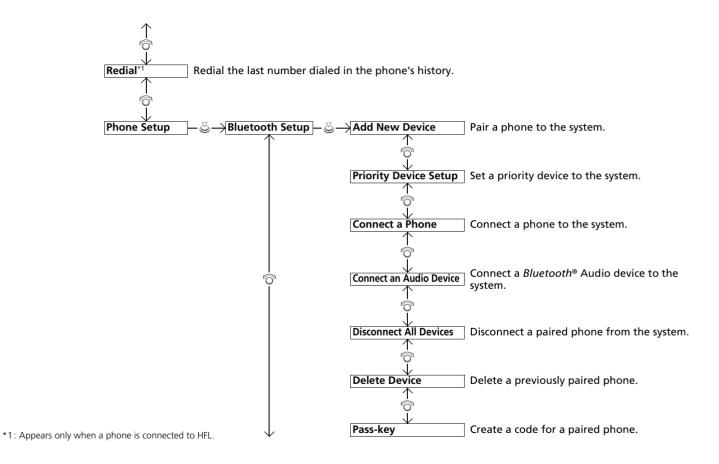


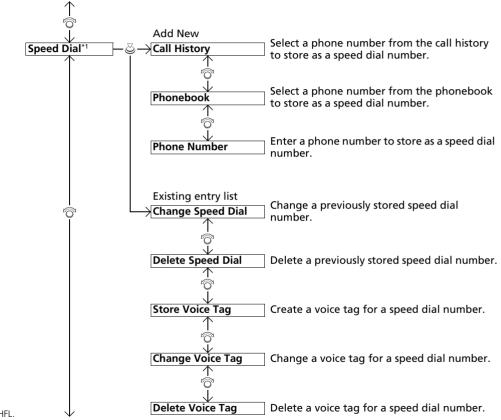

*1: Appears only when a phone is connected to HFL.

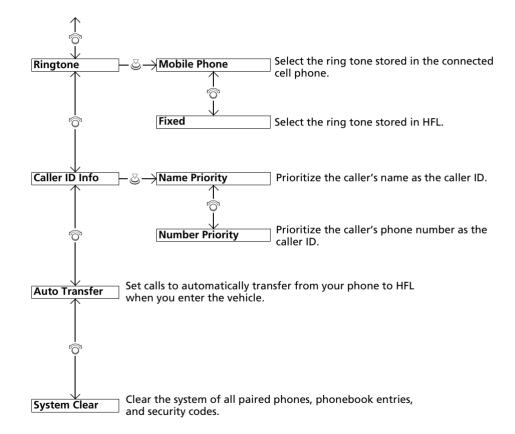

Phone Setup

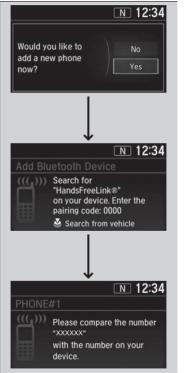

■ To pair a cell phone (No phone has been paired to the system)

- 1. Press the 🔪 button or the 🌈 button.
- **2.** Make sure your phone is in search or discoverable mode
- **3.** Rotate 👘 to select **Yes**, then press 🕹.
 - The audio system will enter a waiting mode for pairing.

4. Select HandsFreeLink® from your phone.

If you want to pair a phone from this audio system, press and follow the prompts.

When your phone appears on the list, select it by pressing \Im .

- **5.** The system gives you a pairing code on the audio/information screen.
 - Confirm if the pairing code on the screen and your phone match. This may vary by phone.
- **6.** A notification appears on the screen if pairing is successful.

≥Phone Setup

Your *Bluetooth*-compatible phone must be paired to HFL before you can make and receive hands-free calls.

Phone Pairing Tips:

- You cannot pair your phone while the vehicle is moving.
- Up to six phones can be paired.
- Your phone's battery may drain faster when it is paired to HFL.
- If your phone is not ready for pairing or not found by the system within 30 seconds, the system will time out and return to idle.


Once you have paired a phone, you can see it displayed on the screen with one or two icons on the right side.

These icons indicate the following:

: The phone can be used with HFL.

The phone is compatible with *Bluetooth*® Audio.

When pairing a phone from this audio system: If your phone doesn't appear on the audio/ information screen, select **Refresh** and search for *Bluetooth*[®] devices using your phone. From your phone, select **HandsFreeLink**[®].

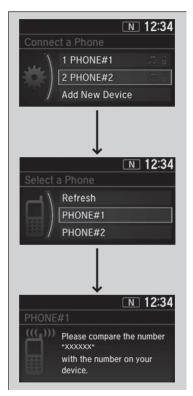

- To pair a cell phone (when a phone has already been paired to the system)
- 1. Press the 🔪 button or the 🔀 button.
- 2. Rotate 💮 to select Yes, then press 🕹 .
- 3. Rotate [™] to select Add New Device, then press [™] .
- **4.** Press ⊘ to select **OK**.
 - ► The screen changes to device list.
- - ► HFL automatically searches for a *Bluetooth*[®] device.
- - If your phone does not appear, select **Refresh** and search for *Bluetooth*[®] devices using your phone. From your phone, select
 - HandsFreeLink[®].
- **7.** The system gives you a pairing code on the audio/information screen.
 - Confirm if the pairing code on the screen and your phone match. This may vary by a phone.




■ To change the currently paired phone

- 1. Press the 🔪 button or the 🔀 button.
- 3. Rotate [©] to select **Bluetooth Setup**, then press [©].
- 4. Rotate ⁽[¬]) to select Connect a Phone, then press [¬]
 ▶ The screen changes to a device list.

- 5. Rotate "⑦" to select a desired device name, then press ⊘.
 - HFL disconnects the connected phone and starts searching for another paired phone.


To change the *Bluetooth*[®] connection priority device setting, select **Priority Device Setup** from the **Bluetooth Setup** screen.

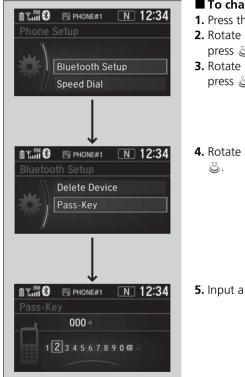

■ To change the pairing code setting

- 1. Press the 🔪 button or the 🔀 button.
- 2. Rotate [™] to select Phone Setup, then press [™].
- 3. Rotate [™] to select **Bluetooth Setup**, then press [™].

5. Input a new pairing code, then press 🕹.

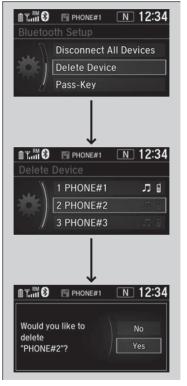

To delete a paired phone

- **1.** Press the 🔪 button or the 🌈 button.
- 2. Rotate [™] to select Phone Setup, then press [™].
- 3. Rotate ⁽[¬]) to select **Bluetooth Setup**, then press ⁽_⊗).
- **4.** Rotate [™] to select **Delete Device**, then press [™] .

► The screen changes to a device list.

6. A confirmation message appears on the screen. Rotate ⁽[¬]) to select Yes, then press [∠]_☉.

Ring Tone

You can change the ring tone setting.



- 1. Press the 🔪 button or the 🔀 button.
- 2. Rotate rote to select Phone Setup, then press S.
- 3. Rotate [™] to select **Ringtone**, then press [™].

■Ring Tone

Mobile Phone: Depending on the make and model of the cell phone, the ring tone stored in the phone will sound if the phone is connected.

Fixed: The fixed ring tone sounds from the speakers.

Calle

Caller's ID Information

You can select a caller's information to be displayed when you have an incoming call.



- 1. Press the 🔪 button or the 🌈 button.
- 2. Rotate ⁽[¬]) to select Phone Setup, then press ⁽⊲).
- 3. Rotate ⑦ to select Caller ID Info, then press ⊘.
- 4. Rotate ⁽⑦⁺ to select a mode you want, then press ⁽⊗).

■Caller's ID Information

Name Priority: A caller's name is displayed if it is stored in the phonebook. **Number Priority:** A caller's phone number is displayed.

Automatic Transferring

If paring between your phone and the system is executed while you are on the phone, the call can be automatically transferred to HFL.



- **1.** Press the 🔪 button or the 🌊 button.
- **3.** Rotate 🗇 to select **Auto Transfer**.
- 4. Press 🕹 to select On or Off.

To Clear the System

Pairing codes, paired phones, all stored voice tags, all speed dial entries, all call history data, and all imported phonebook data are erased.



- 1. Press the 🔪 button or the 🔀 button.
- 2. Rotate [™] to select Phone Setup, then press [™].
- 3. Rotate [™] to select System Clear, then press [™].
- **4.** Rotate \bigcirc to select **Yes**, then press \bigotimes .
- 5. A confirmation message appears on the screen. Rotate ⁽[¬]) to select Yes, then press [⊗].

6. A notification appears on the screen. Press ළ.


Automatic Import of Cellular Phonebook and Call History

When your phone is paired, the contents of its phonebook and call history are automatically imported to HFL.



Mattomatic Import of Cellular Phonebook and Call History

When you select a person from the list in the cellular phonebook, you can see up to three category icons. The icons indicate what types of numbers are stored for that name.

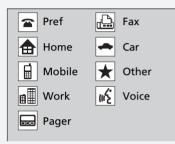

If a name has four or more numbers, ... appears instead of category icons.

On some phones, it may not be possible to import the category icons to HFL.

The phonebook is updated after every connection. Call history is updated after every connection or call.

Speed Dial

Up to 20 speed dial numbers can be stored per phone.

T.MO

PHONE#1
N 12:34
Speed Dial
(Add New)
(Add New)
(Add New)
(Add New)
Call History
Phonebook



To store a speed dial number:

- 1. Press the 🐛 button or the 🚄 button.
- 2. Rotate [™] to select Speed Dial, then press [™]
- 3. Rotate "[™] to select Add New, then press [™].
- 4. Rotate 'ô' to select a place to choose a number from, then press ઙૻ.

From Call History:

Select a number from the call history. From **Phonebook**:

Select a number from the connected cell phone's imported phonebook.

From Phone Number:

- ▶ Input the number manually.
- 5. When the speed dial is successfully stored, you are asked to create a voice tag for the number. Rotate '[¬] to select Yes or No, then press [¬].
- 6. Using the <u>w</u> button, follow the prompts to say the name for the speed dial entry.

Speed Dial

When any preset button is pressed, the **Speed Dial** screen is displayed.

When a voice tag is stored, you can press the $\fbox{1}$ button and call the number using voice commands.



| 🖻 . 📲 🚯 | PHONE#1 N 12:34 |
|---------|-------------------|
| C1 Hor | ne |
| 1 | Change Speed Dial |
| 808 | Delete Speed Dial |
| | Store Voice Tag |
| | |

■ To edit a speed dial

- 1. Press the 🔪 button or the 🌈 button.
- 3. Rotate "⁽)" to select **Speed Dial**, then press ⁽⊴).
- 4. Select an existing speed dial entry.
- 5. Rotate 🗇 to select Change Speed Dial, then press 🕹 .

To delete a speed dial number

- **1.** Press the 🔪 button or the 🌊 button.

- 4. Select an existing speed dial entry.
- 5. Rotate 🗇 to select Delete Speed Dial, then press 🕹.
 - ► A confirmation message appears on the screen. Rotate ⁽[¬]) to select **Yes**, then press ⁽_©).



| 🖹 Y. 🛯 🕅 🚷 | PHONE#1 | <u>N</u> 12:34 |
|------------|---------------------------------------------------|----------------|
| Speed | Dial | |
| | Press the TAL after the beep you would like | , say the name |

- To add a voice tag to a stored speed dial number
- 1. Press the 🔪 button or the 🔀 button.
- 2. Rotate [™] to select Phone Setup, then press [™].
- 3. Rotate ⁽[¬]) to select **Speed Dial**, then press ⁽_⊂).
- 4. Select an existing speed dial entry.
- 5. Rotate 🗇 to select Store Voice Tag, then press 🕹.
- 6. Using the <a>button, follow the prompts to complete the voice tag.

To change a voice tag

- 1. Press the 🔪 button or the 🔀 button.
- 2. Rotate [™] to select Phone Setup, then press [™].
- 3. Rotate ⁽[¬])[¬] to select Speed Dial, then press [¬]_☉.
- **4.** Select an existing speed dial entry.
- 5. Rotate "⁽) to select Change Voice Tag, then press ⁽⊘).
- Using the <u>w</u> button, follow the prompts to complete the voice tag.

Speed Dial

Avoid using duplicate voice tags. Avoid using "home" as a voice tag. It is easier for HFL to recognize a longer name. For example, use "John Smith" instead of "John."



To delete a voice tag

- **1.** Press the \bigcirc button or the \swarrow button.
- 2. Rotate "⁽)⁻ to select Phone Setup, then press ⁽_©).
- 3. Rotate "[™] to select Speed Dial, then press [™].
- 4. Select an existing speed dial entry.
- 5. Rotate ⁽[¬]) to select **Delete Voice Tag**, then press *[©]*.
 - ► A confirmation message appears on the screen. Rotate ⁽?) to select **Yes**, then press ⁽©).

Making a Call

You can make calls by inputting any phone number, or by using the imported phonebook, call history, speed dial entries, or redial.



Making a Call

Any voice-tagged speed dial entry can be dialed by voice from any screen. Press the $\boxed{0}$ button and follow the prompts.

Once a call is connected, you can hear the voice of the person you are calling through the audio speakers.





■ To make a call using the imported phonebook

When your phone is paired, the contents of its phonebook are automatically imported to HFL.

- 1. Press the 🔪 button or the 🌊 button.
- 2. Rotate 🗇 to select Phonebook, then press હ.
- 3. The phonebook is stored alphabetically. Rotate ⁽[¬])[™] to select the initial, then press [¬]_©.
- **4.** Rotate \bigcirc to select a name, then press \bigotimes .
- 5. Rotate [™] to select a number, then press [™]

Dialing starts automatically.

To make a call using a phone number

- 1. Press the 🔪 button or the 🜈 button.
- 2. Rotate 🗇 to select Dial, then press 🖉.
- 3. Rotate [™] to select a number, then press [™]
- 4. Rotate ⁽○) to select **(**, then press **(**).
 ▶ Dialing starts automatically.

To make a call using the imported phonebook

This function is disabled while the vehicle is moving. However, you can call a stored voice-tagged speed dial number using voice commands.

Limitations for Manual Operation P. 396
 Speed Dial P. 410

■To make a call using a phone number

This function is disabled while the vehicle is moving. However, you can call a stored voice-tagged speed dial number using voice commands.

Limitations for Manual Operation P. 396
 Speed Dial P. 410

| T.™ PHONE#1 N 12:34 Redialing (((,))) John | ■ To make a call using redial 1. Press the button or the button. 2. Rotate to select Redial, then press <. ▶ Dialing starts automatically. | ➤To make a call using redial Press and hold the > button to redial the last number dialed in your phone's call history. |
|----------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Call History | ■ To make a call using the call history Call history is stored by Dialed Calls, Received Calls, and Missed Calls. 1. Press the button or the button. 2. Rotate to select Call History, then press . 3. Rotate to select Dialed Calls, Received Calls, or Missed Calls, then press . 4. Rotate to select a number, then press . . Dialing starts automatically. | ➤To make a call using the call history The call history appears only when a phone is connected to HFL, and displays the last 20 dialed, received, or missed calls. |

| â T 8 | 📑 РНО | NE#1 | N | 12:34 |
|-------|--------|-------|-----|-------|
| Speed | Dial | | | |
| | G4 🗄 J | ohn | | |
| | G5 (| Add N | ew) | |
| | G6 (| Add N | ew) | |

■ To make a call using a speed dial entry

- 1. Press the 📐 button or the <u> button</u>.
- 2. Rotate [™] to select Speed Dial, then press [™].
- 3. Rotate [™] to select a number, then press [™]
 - Dialing starts automatically.

➢To make a call using a speed dial entry

When any preset button is pressed, the **Speed Dial** screen is displayed.

Select **Others** to view another paired phone's speed dial list.

When a voice tag is stored, press the \underline{W} button and call the number using voice commands.

Speed Dial P. 410

Any voice-tagged speed dial entry can be dialed by voice from any screen. Press the $\fbox{}$ button and follow the prompts.

Receiving a Call



When there is an incoming call, an audible notification sounds and the **Incoming Call** screen appears.

Press the 🖉 button to answer the call. Press the 🔄 button to decline or end the call.

➢Receiving a Call

Call Waiting

Press the $\overbrace{\mathcal{L}}$ button to put the current call on hold to answer the incoming call.

Press the solution again to return to the current call.

Select **Ignore** to ignore the incoming call if you do not want to answer it.

Press the 🔁 button if you want to hang up the current call.

You can select the icons on the audio/information screen instead of the \checkmark and red buttons. Rotate red to select the icon, then press red.

Options During a Call

The following options are available during a call.

Swap Call: Put the current call on hold to answer the incoming call. **Mute:** Mute your voice.

Transfer Call: Transfer a call from HFL to your phone.

Dial Tones: Send numbers during a call. This is useful when you call a menu-driven phone system.

- T.IIII I
 Image: Phone#1
 N
 12:34

 In Call
 0'50"

 Image: Phone#1
 N
 12:34

 Image: Phone#
- **1.** To view the available options, press the **C** button.
- **2.** Rotate \bigcirc to select the option, then press \bigotimes .
 - Select **Mute** again to turn it off.

➢Options During a Call


Dial Tones: Available on some phones.

Models with Display Audio

Bluetooth[®] HandsFreeLink[®] (HFL) allows you to place and receive phone calls using your vehicle's audio system, without handling your cell phone.

Using HFL

HFL Buttons

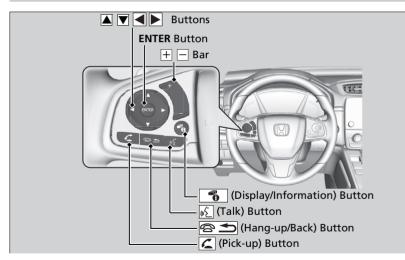

Bluetooth® HandsFreeLink®

Place your phone where you can get good reception.

To use HFL, you need a *Bluetooth*-compatible cell phone. For a list of compatible phones, pairing procedures, and special feature capabilities: Visit *automobiles.honda.com/handsfreelink/*, or call 1-888-528 -7876.

To use the system, the **Bluetooth On/Off Status** setting must be **On**. If there is an active connection to Apple CarPlay^M or Android Auto^M, HFL is unavailable.

How to customize P. 366

Voice control tips

- Aim the vents away from the ceiling and close the windows, as noise coming from them may interfere with the microphone.
- Press the Substantial provided a number using a stored voice tag, a phonebook name, or a number. Speak clearly and naturally after a beep.
- If the microphone picks up voices other than yours, the command may be misinterpreted.
- To change the volume level, select the audio system's **VOL** (Volume) or use the remote audio controls on the steering wheel.

Up to three speed dial entries can be displayed among a total of 20 that can be entered. Speed Dial P. 433

Up to three previous calls can be displayed at a time among a total of 20 that can be entered. If there is no call history, Call History is disabled. (Pick-up) button: Press to go directly to the phone menu on the driver information interface, or to answer an incoming call.

(Hang-up/back) button: Press to end a call, go back to the previous command, or cancel a command.

(Talk) button: Press to access Voice Portal.

buttons: Press to select an item displayed on the phone menu in the driver information interface.

ENTER button: Press to call a number listed in the selected item on the phone menu in the driver information interface.

(display/information) button: Select and press **ENTER** to display **Speed Dial**, **Call History**, or **Phonebook** on the phone menu in the driver information interface.

To go to the **Phone Menu** screen:

Select solution to switch the display to the phone screen.
 Select MENU

≫Bluetooth[®] HandsFreeLink[®]

Bluetooth[®] Wireless Technology


The *Bluetooth*[®] word mark and logos are registered trademarks owned by *Bluetooth* SIG, Inc., and any use of such marks by Honda Motor Co., Ltd., is under license. Other trademarks and trade names are those of their respective owners.

HFL Limitations

An incoming call on HFL will interrupt the audio system when it is playing. It will resume when the call is ended.

HFL Status Display

The audio/information screen notifies you when there is an incoming call.

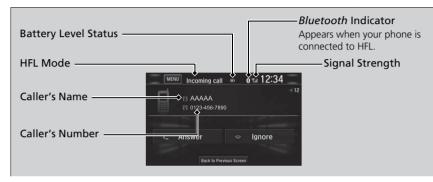

Limitations for Manual Operation

Certain manual functions are disabled or inoperable while the vehicle is in motion. You cannot select a grayed-out option until the vehicle is stopped.

Only previously stored speed dial entries with voice tags, phonebook names, or numbers can be called using voice commands while the vehicle is in motion.

Speed Dial P. 433


➢HFL Status Display

The information that appears on the audio/ information screen varies between phone models.

HFL Menus


The power mode must be in ACCESSORY or ON to use the system.

Phone Settings screen

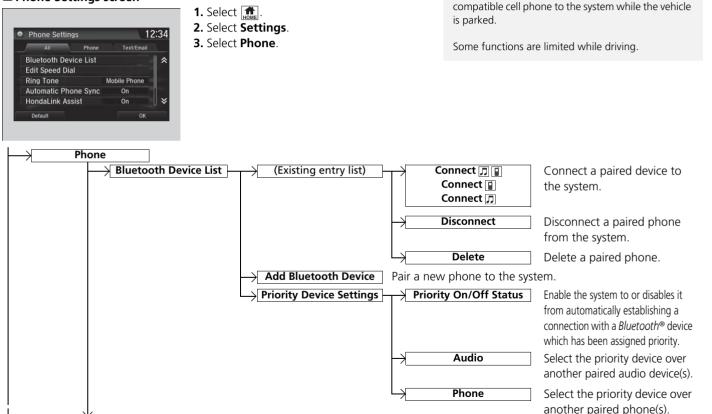

≫HFL Menus

To use HFL, you must first pair your Bluetooth-

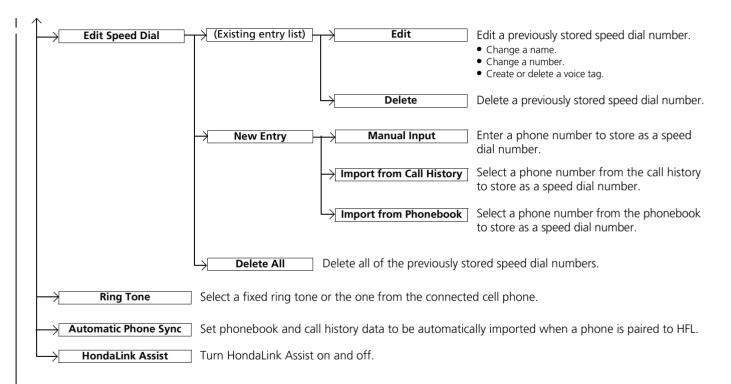




Phone Menu screen





Dial the selected number in the speed dial list. Speed Dial (Existing entry list) Enter a phone number to store as a speed **New Entry** Manual Input dial number > Import from Call History Select a phone number from the call history to store as a speed dial number. Import from Phonebook Select a phone number from the phonebook to store as a speed dial number. Dial the selected number in the speed dial list. Edit Speed Dial (Existing entry list) Enter a phone number to store as a speed New Entry Manual Input dial number Select a phone number from the call history to Import from Call History store as a speed dial number. Import from Phonebook Select a phone number from the phonebook to store as a speed dial number.

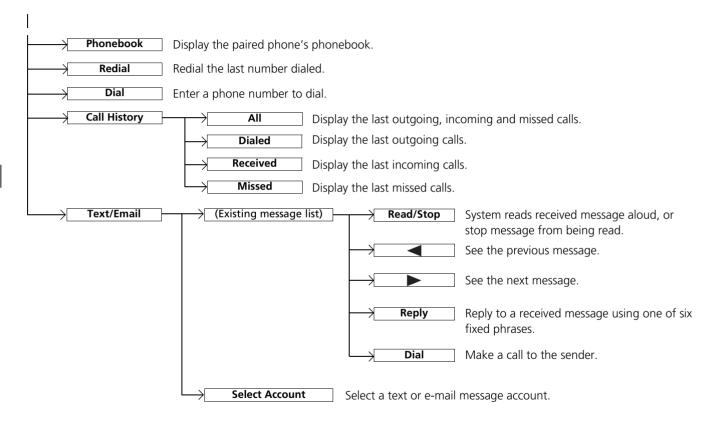

Phone Setup



■ To pair a cell phone (when there is no phone paired to the system)

- 1. Select 📠
- 2. Select Yes.
- **3.** Make sure your phone is in search or discoverable mode.
- 4. Select HandsFreeLink from your phone.
 - If you want to pair a phone from this audio system, select HandsFreeLink Not Found, Continue, and then select your phone when it appears on the list. If your phone does not appear, you can select Refresh to search again.
- **5.** The system gives you a pairing code on the audio/information screen.
 - Confirm if the pairing code on the screen and your phone match. This may vary by phone.
- **6.** A notification appears on the screen if pairing is successful.
 - You can prioritize a *Bluetooth®* device at the same time. Select **Yes** and then a device you want to prioritize.

≥Phone Setup

Your *Bluetooth*-compatible phone must be paired to the system before you can make and receive hands-free calls.

Phone Pairing Tips:

- You cannot pair your phone while the vehicle is moving.
- Up to six phones can be paired.
- Your phone's battery may drain faster when it is paired to the system.
- If your phone is not ready for pairing or not found by the system within three minutes, the system will time out and return to idle.

Once you have paired a phone, you can see it displayed on the screen with one or two icons on the right side.

These icons indicate the following:

: The phone can be used with HFL.

T: The phone is compatible with *Bluetooth*[®] Audio.

If there is an active connection to Apple CarPlay[™], pairing of additional *Bluetooth*-compatible devices is unavailable.



| | All | Bluetoo | th | Wi- | | |
|--------|---------|------------|----|-------|----|------|
| Bluet | | Off Status | | On | | 1 |
| | | evice List | | 011 | | 1^ |
| | | ce Setting | as | | | - |
| Edit I | Pairing | Code | | | | |
| Wi-Fi | On/Off | Status | | Off | | ¥ |
| Defa | | | | | | |
| Dera | uit | ↓ | | | ОК | |
| | | ↓ | | | | |
| | Pairing | Code | | | | 2:34 |
| | | ↓ Code | | | | ::34 |
| | | Code | | | | 2:34 |
| Edit | | | | Fixed | 12 | 2:34 |
| Edit | Pairing | | | Fixed | 12 | 2:34 |

To change the currently paired phone

- **1.** Go to the phone settings screen. **▶** Phone Settings screen P. 422
- 2. Select Bluetooth Device List.
- **3.** Select a phone to connect.
 - HFL disconnects the connected phone and starts searching for another paired phone.
- 4. Select Connect , connect , or Connect .

To change the pairing code setting

- 1. Select 💼.
- 2. Select Settings.
- 3. Select Bluetooth / Wi-Fi.
- 4. Select the **Bluetooth** tab.
- 5. Select Edit Pairing Code.

6. Select Random or Fixed.

➢To change the currently paired phone

If no other phones are found or paired when trying to switch to another phone, HFL will inform you that the original phone is connected again.

To pair other phones, select **Add Bluetooth Device** from the **Bluetooth Device List** screen.

To change the *Bluetooth*[®] connection priority device setting, select **Priority Device Settings** from the **Bluetooth Device List** screen.

➢To change the pairing code setting

The default pairing code is **0000** until you change the setting.

To create your own, select **Fixed**, and delete the current code, then enter a new one.

For a randomly generated pairing code each time you pair a phone, select **Random**.

| All Phone | Text/Email | |
|-----------------------|--------------|-----|
| Bluetooth Device List | | 1 % |
| Edit Speed Dial | | |
| Ring Tone | Mobile Phone | ╟─ |
| Automatic Phone Sync | On | |
| HondaLink Assist | On | ≥ |
| | | |
| Default | ОК | |
| Default | ок | |
| Default | | :34 |
| \downarrow | | :34 |

Disconnect Delete

To delete a paired phone

- 1. Go to the phone settings screen. ⇒ Phone Settings screen P. 422
- 2. Select Bluetooth Device List.
- **3.** Select a phone you want to delete.

4. Select Delete.

5. A confirmation message appears on the screen. Select **Yes**.

To Set Up Text/E-mail Message Options

| All Phone | |
|-------------------|-----|
| | |
| Enable Text/Email | On |
| | |
| | Off |

| All Phone | |
|--------------------------|-----|
| | On |
| | |
| New Message Notification | Off |

- To turn on or off the text/e-mail message function
- 1. Go to the Phone Settings screen. ▶ Phone Settings screen P. 422
- 2. Select the Text/Email tab, then Enable Text/Email.
- 3. Select Next.
 - A pop-up menu appears on the screen.
- 4. Select On or Off.
- To turn on or off the text/e-mail message notice
- 1. Go to the Phone Settings screen. ▶ Phone Settings screen P. 422
- 2. Select the Text/Email tab, then New Message Notification.
- 3. Select Next.
- ► A pop-up menu appears on the screen.
- 4. Select On or Off.

To Set Up Text/E-mail Message Options

To use the text/e-mail message function, it may be necessary to set up on your phone.

To turn on or off the text/e-mail message notice

On: A pop-up notification comes on every time you receive a new message.

Off: The message you receive is stored in the system without notification.

Ring Tone

You can change the ring tone setting.

| Phone Settings | 12:3 |
|----------------|--------------|
| / All / Phone | |
| | |
| | Fixed |
| Ring Tone | |
| | Mobile Phone |
| | |
| | |

- **1.** Go to the **Phone Settings** screen. **▶ Phone Settings screen** P. 422
- 2. Select Ring Tone.
- 3. Select Next, then select Fixed or Mobile Phone.

➢Ring Tone

Fixed: The fixed ring tone sounds from the speakers. **Mobile Phone**: Depending on the make and model of the cell phone, the ring tone stored in the phone will sound if the phone is connected.

Automatic Import of Cellular Phonebook and Call History

| (AB | | GHI | JKL | MNO | > |
|-------------|--|-----|-----|-----|---|
| | | | | | |
| AAA | | | | 8 🛲 | |
| BBB | | | | | |
| | | | | | |

When Automatic Phone Sync is set to On:

When your phone is paired, the contents of its phonebook and call history are automatically imported to the system.

Phone Settings 12:34 All Phone Text/Email **Bluetooth Device List** \$ Edit Speed Dial Mobile Phone Ring Tone Automatic Phone Sync On HondaLink Assist On Default 12:34 Automatic Phone Sync * **Automatic Phone** Synchronization On: Phonebook and call history will be imported.

Off: Phonebook and call history will not be

Changing the Automatic Phone Sync setting

- 1. Go to the Phone Settings screen. **Phone Settings screen** P. 422
- 2. Select Automatic Phone Sync.

Matter Automatic Import of Cellular Phonebook and Call History

When you select a name from the list in the cellular phonebook, you can see up to three category icons. The icons indicate what types of numbers are stored for that name.




On some phones, it may not be possible to import the category icons to the system.

The phonebook is updated after every connection. Call history is updated after every connection or call.

3. Select **On** or **Off**

Speed Dial

Up to 20 speed dial numbers can be stored per phone.

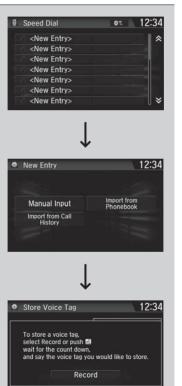


To store a speed dial number:

- 2. Select Speed Dial.
- **3.** Select **New Entry**. From **Import from Call History**:
 - Select a number from the call history.
 - From Manual Input:
 - ▶ Input the number manually.
 - From Import from Phonebook:
 - Select a number from the connected cell phone's imported phonebook.
- When the speed dial is successfully stored, you are asked to create a voice tag for the number. Select Yes or No.

5. Select **Record**, or use the <u>₩</u> button and follow the prompts to complete the voice tag.

Speed Dial

 When a voice tag is stored, press the $\boxed{\mathbb{M}}$ button to call the number using the voice tag. Say the voice tag name.



- 1. Go to the Phone Settings screen. ▶ Phone Settings screen P. 422
- 2. Select Edit Speed Dial.
- **3.** Select an existing speed dial entry.
- From the pop-up menu, select Edit.
- 4. Select Voice Tag.
 - From the pop-up menu, select **Record**.
- Select Record, or use the [∞]/_∞ button and follow the prompts to complete the voice tag.

- Edit Speed Dial
 12:34
 Name
 Play
 Phone No
 12
 Record
 Clear
- To delete a voice tag
- 1. Go to the Phone Settings screen.
 - Phone Settings screen P. 422
- 2. Select Edit Speed Dial.
- 3. Select an existing speed dial entry.
 - From the pop-up menu, select **Edit**.
- 4. Select Voice Tag.
 - From the pop-up menu, select **Clear**.
- **5.** A confirmation message appears on the screen. Select **Yes**.

Speed Dial

Avoid using duplicate voice tags. Avoid using "home" as a voice tag. It is easier for the system to recognize a longer name. For example, use "John Smith" instead of "John."

| | Edit Speed Dia | | 12:34 |
|---|----------------|----|--------|
| 1 | AAA | 81 | |
| | | | |
| | | | Edit |
| | | | |
| | | | Delete |
| | | | |
| | | | |

■ To edit a speed dial

- **1.** Go to the **Phone Settings** screen. **▶ Phone Settings screen** P. 422
- 2. Select Edit Speed Dial.
- **3.** Select an existing speed dial entry.
- From the pop-up menu, select **Edit**.
- 4. Select a setting you want.

■ To delete a speed dial

- **1.** Go to the **Phone Settings** screen. **▶ Phone Settings screen** P. 422
- 2. Select Edit Speed Dial.
- **3.** Select an existing speed dial entry.
 - From the pop-up menu, select **Delete**.
- **4.** A confirmation message appears on the screen. Select **Yes**.

Phonebook Phonetic Modification

Add phonetic modifications or a new voice tag to the phone's contact name so that it is easier for HFL to recognize voice commands.



- To add a new voice tag
- 1. Select 💼.
- 2. Select Settings.
- 3. Select System.
- 4. Select the Voice Recog. tab.
- 5. Select Phonebook Phonetic Modification.
- **6.** Select the phone you want to add phonetic modification to.

➢Phonebook Phonetic Modification

You can store up to 20 phonetic modification items.



7. Select [New Voice Tag].

8. Select a contact name you want to add to.
▶ The pop-up menu appears on the screen.

- 9. Select Modify.
- **10.** Using **Record** or the <u>k</u> button, follow the prompts to complete the voice tag.
- **11.** You will receive a confirmation message on the screen, then select **OK**.



To modify a voice tag

- 1. Select 💼.
- 2. Select Settings.
- 3. Select System.
- 4. Select the Voice Recog. tab.
- 5. Select Phonebook Phonetic Modification.
- **6.** Select the phone you want to modify phonetic modification.
- **7.** Select a contact name you want to modify.
 - The pop-up menu appears on the screen.
- 8. Select Modify.
- **9.** Using **Record** or the <u>6</u> button, follow the prompts to complete the voice tag.
- **10.** You will receive a confirmation message on the screen, then select **OK**.

➢Phonebook Phonetic Modification

You can only modify or delete contact names for the currently connected phone.




■ To delete a modified voice tag

- 1. Select 💼.
- 2. Select Settings.
- 3. Select System.
- 4. Select the Voice Recog. tab.
- 5. Select Phonebook Phonetic Modification.
- **6.** Select the phone for which you want to delete phonetic modification.
- 7. Select a contact name you want to delete.
 - ► The pop-up menu appears on the screen.

8. Select Delete.

- The selected contact name has been selected.
- 9. Select OK.

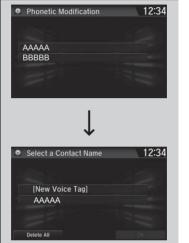

- To delete all modified voice tags
- 1. Select 💼.
- 2. Select Settings.
- 3. Select System.
- 4. Select the Voice Recog. tab.
- 5. Select Phonebook Phonetic Modification
- **6.** Select the phone you want to delete phonetic modification.

► The contact name list appears.

- 7. Select Delete All.
- **8.** You will receive a confirmation message on the screen, then select **Yes**.

Making a Call



You can make calls by inputting any phone number, or by using the imported phonebook, call history, speed dial entries, or redial.

Making a Call

Any voice-tagged speed dial entry can be dialed by voice from most screens.

Press the 🔊 button and say the voice tag name.

Once a call is connected, you can hear the voice of the person you are calling through the audio speakers.

While there is an active connection with Apple CarPlay[™], phone calls can be made only from Apple CarPlay[™].



🛙 Search

12:34

■ To make a call using the imported phonebook

- 1. Select
- 2. Select Phonebook.

3. Select a name.

- You can also search by letter. Select Search.
- Use the keyboard on the touch screen for entering name, if multiple numbers exist select a number.
- 4. Select a number.
 - ▶ Dialing starts automatically.

To make a call using the imported phonebook

You can also select **Phonebook** on the **Phone Menu** screen.

You can call a stored voice-tagged speed dial number using voice commands.

Speed Dial P. 433

| ١ | Dial | | 0 T. | 12:34 |
|---|----------------------|----------------|----------------|---------|
| | | | | - Satis |
| | | | | |
| | | | | |
| | | | | |
| | | 2 ABC | 3 DEF | - |
| | 1 4 сні | 2 ABC 5 JKL | 3 DEF 6 MNO | - |
| | 1 4 GHI 7 PQRS | | | |

| Speed Dial | 🔊 Edit Speed Dial |
|--------------|-------------------|
| 📫 Phonebook | 💪 Redial |
| III Dial | all History |
| ₩ Text/Email | |

| :34 | 12 | | ory | Call hist |
|-----|---------|----------|--------|-----------|
| | Missed | Received | Dialed | |
| ~ | 4:39 PM | July 15 | | Aaa |
| | 2:14 PM | June 16 | | Aaa |
| | 4:06 PM | May 27 | | Aaa |
| | 2:50 PM | May 19 | | YYYY |
| | 5:47 PM | May 12 | | YYYY |
| × | 1:48 PM | May 12 | | YYYY |

To make a call using a phone number

- **1.** Go to the **Phone Menu** screen. Phone Menu screen P 425
- 2. Select Dial
- 3. Select a number.
- ► Use the keyboard on the touch screen for entering numbers.
- 4. Select 📿
 - Dialing starts automatically.

To make a call using redial

- 1. Go to the Phone Menu screen. Phone Menu screen P. 425
- 2. Select Redial
 - Dialing starts automatically.

≥To make a call using a phone number

You can call a stored voice-tagged speed dial number using voice commands.

Speed Dial P. 433

To make a call using the Call History

Call history is stored by All, Dialed,

Received, and Missed.

- 1. Go to the Phone Menu screen.
 - Phone Menu screen P 425
- 2. Select Call History.
- 3. Select All, Dialed, Received, or Missed.
- **4**. Select a number
 - Dialing starts automatically.

∑To make a call using the Call History

The call history displays the last 20 all, dialed, received, or missed calls. (Appears only when a phone is connected to the system.)

| Speed Dial | 0 Tal | 12:34 |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|-------|
| ሳ Aaa | 012-3456789 | * |
| <pre> New Entry> </pre> | | |
| New Entry> | | |
| <pre>Colored Colored C</pre> | | |
| <pre> <new entry=""> </new></pre> | | |
| <pre><new entry=""></new></pre> | | |
| <pre> <new entry=""> </new></pre> | | |

To make a call using a Speed Dial entry

- 2. Select Speed Dial.
- 3. Select a number.
- Dialing starts automatically.

➢To make a call using a Speed Dial entry

When a voice tag is stored, press the <u>⊮</u> button to call the number using the voice tag. Speed Dial P. 433

Any voice-tagged speed dial entry can be dialed by voice from any screen. Press the \fbox button and follow the prompts.

Receiving a Call

| Incoming cal | | ota 12:34 | |
|--------------|----|------------------------|---------------|
| | | | |
| | 90 | | |
| | | | |
| Answer | | Ignore | |
| | | | |
| | | AAAAA 0123-456-7890 | 0123-456-7890 |

When there is an incoming call, an audible notification sounds (if activated) and the **Incoming call** screen appears.

Press the \checkmark button to answer the call. Press the e button to decline or end the call.

■Receiving a Call

Call Waiting

Press the 🗹 button to put the current call on hold to answer the incoming call.

Press the 🖾 button again to return to the current call.

Select **Ignore** to ignore the incoming call if you do not want to answer it.

Press the subtraction of you want to hang up the current call.

You can select the icons on the audio/information screen instead of the \square and \square buttons.

Options During a Call

The following options are available during a call. **Mute**: Mute your voice.

Transfer: Transfer a call from the system to your phone.

Touch Tones: Send numbers during a call. This is useful when you call a menudriven phone system.

The available options are shown on the lower half of the screen.

Select the option.

The mute icon appears when Mute is selected. Select Mute again to turn it off.

➢Options During a Call

Touch Tones: Available on some phones.

You can select the icons on the audio/information screen.

Receiving a Text/E-mail Message

HFL can display newly received text or e-mail messages as well as 20 of the most recently received messages on a linked cell phone. Each received message can be read aloud and replied to using a fixed common phrase.



- **1.** A pop-up appears and notifies you of a new text or e-mail message.
- **2.** Select **Read** to listen to the message.
 - The text or e-mail message is displayed. The system automatically starts reading out the message.
- **3.** To discontinue the message read-out, select **Stop**.

Receiving a Text/E-mail Message

The system does not display any received messages while you are driving. You can only hear them read aloud.

The system can only receive messages that are sent as text (SMS) messages. Messages sent using the data services will not be displayed in the list.

With some phones, you may be able to display up to 20 most recent text and e-mail message.

State or local laws may limit your use of the HFL text/ e-mail message feature. Only use the text/e-mail message feature when conditions allow you to do so safely.


When you receive a text or e-mail message for the first time since the phone is paired to HFL, you are asked to turn the **New Message Notification** setting to **On**.

To turn on or off the text/e-mail message notice P. 430



Selecting a Text/E-mail Message Account

If a paired phone has text or e-mail message accounts, you can select one of them to be active and receive notifications.

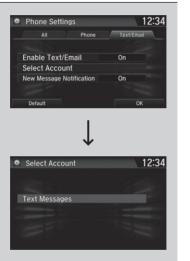

- **1.** Go to the **Phone Settings** screen. **▶ Phone Settings screen** P. 422
- 2. Select the Text/Email tab, then Select Account.
 - ► A pop-up menu appears on the screen.
- **3.** Select **Text Messages** or an e-mail message account you want.

Selecting a Text/E-mail Message Account

You can also select an e-mail message account from the folder list screen or the message list screen.

| 2:34 | Θτ 12 | Text messages |
|------------|------------------|----------------|
| 1 * | May 12 | ААААА |
| | May 12 | BBBBB |
| | May 10 | 22222 |
| | May 7 | DDDDD |
| | Apr. 15 | EEEEE |
| 11 v | Mar. 26 | FFFFF |
| U Ý | | |
| u ∾ | Select | Select Ac |
| | Select Accour | \downarrow |
| nt 2:34 | Select Accour | Select Ac |
| | Select Accour | \downarrow |
| | Select Accour | Select Account |
| | Select Accour | \downarrow |
| | Select Accour | Select Account |
| | Select Accour | Select Account |

You can only receive notifications from one text or e-mail message account at a time.

Displaying Messages

| Message List | |
|----------------|----------------|
| Text messages | @Ta 12:34 |
| 📼 AAAAA | Aug. 19 |
| BBBBB | Aug. 19 |
| 22222 | Aug. 19 |
| DDDDD | Aug. 19 |
| EEEEE | Aug. 5 |
| FFFFF | July 14 🛛 😽 |
| | |
| | t |
| Select Account | • ••• 12:34 |
| Text Message | |
| Text Message | |
| Text Messages | |
| Text Messages | |

Displaying text messages


- **1.** Go to the **Phone Menu** screen. **Phone Menu screen** P. 425
- 2. Select Text/Email.
 - Select account if necessary.
- 3. Select a message.
 - The text message is displayed. The system automatically starts reading the message aloud.

➢Displaying Messages

The \square icon appears next to an unread message.

If you delete a message on the phone, the message is also deleted in the system. If you send a message from the system, the message goes to your phone's outbox.

To see the previous or next message, select () (previous) or () (next) on the message screen.

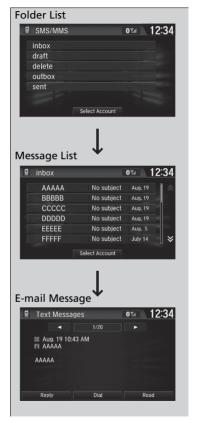

Displaying e-mail messages

- 2. Select Text/Email.
- Select **Select Account** if necessary.
- 3. Select a folder.
- 4. Select a message.
 - The e-mail message is displayed. The system automatically starts reading the message aloud.





Read or Stop reading a message

- **1.** Go to the text or e-mail message screen.
- The system automatically starts reading the message aloud.

Displaying Messages P. 447

Select Stop to stop reading.
 Select Read again to start reading the message from the beginning.

■ Reply to a message

- **1.** Go to the text or e-mail message screen.
- The system automatically starts reading the message aloud.
 - Displaying Messages P. 447
- 2. Select Reply.
- 3. Select the reply message.
 - ▶ The pop-up menu appears on the screen.
- 4. Select Send to send the message.
 - ► **Complete** appears on the screen when the reply message was successfully sent.

■Reply to a message

The available fixed reply messages are as follows:

- Talk to you later, I'm driving.
- I'm on my way.
- I'm running late.
- OK
- Yes
- No

You cannot add, edit, or delete reply messages.

Only certain phones receive and send messages when paired and connected. For a list of compatible phones, visit *automobiles.honda.com/handsfreelink/*, or call 1-888-528-7876.




Making a call to a sender

Go to the text message screen.
 Select Dial.

In Case of Emergency

Automatic collision notification

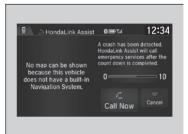

If your vehicle's airbags deploy or if the unit detects that the vehicle is severely impacted, your vehicle automatically will attempt to connect to the HondaLink operator. If connected, information about your vehicle, its location, and its condition can be sent to the operator^{*1}; you also can speak to the operator when connected.

IMPORTANT: For vehicles equipped with HondaLink Assist, owner activation constitutes authorization for Honda to collect information from your vehicle needed to provide the service, and agreement to the Terms of Use at *www.hondalink.com/TermsAndConditions*. In a crash, HondaLink Assist will attempt to notify emergency services but NEITHER Honda-PRO NOR ITS SERVICE PROVIDERS GUARANTEE THAT SUCH NOTIFICATION WILL OCCUR.

Honda reserves the right to terminate HondaLink Assist services at any time or for any reason, and in the future may not be able to provide services due to changes in, or obsolescence of, technology integral to the service or changes in governmental regulation.

*1: Depending on your phone and adequate cellular coverage, your vehicle's location may not be sent to the operator.

➢In Case of Emergency

Your vehicle may not be able to connect to the operator if the battery level is low, the line is disconnected, or you do not have adequate cellular coverage.

You cannot use this emergency service when:

 
- You travel outside the HondaLink service coverage areas.
- There is a problem with the connecting devices, such as the microphones, speakers, or the unit itself.

You cannot operate other phone-related functions using the screen while talking to the operator. Select **Hang Up** to terminate the connection to your vehicle.

Mutomatic collision notification

If the unit fails to connect to the operator, it repeatedly tries until it succeeds.

■ To enable notification



- **1.** Go to the **Phone Settings** screen. **▶ Phone Settings screen** P. 422
- 2. Select the Phone tab, then HondaLink Assist.
 - ► A pop-up menu appears on the screen.
- 3. Select On or Off.

Setting options:

- **On:** Notification is available.
- Off: Disable the feature.

When you set the power mode to ON, the compass self-calibrates, and the compass display appears.

Compass Calibration

If the compass indicates the wrong direction, or the **CAL** indicator blinks, you need to manually calibrate the system.



| ¥ | NW 12:34 |
|-------------|----------|
| Calibration | |
| Push CAL | Start |

- **1.** Set the power mode to ON.
- 2. Press and hold the 🔆 🕽 (day/night) button until the display shows the compass setting menu.
- 3. Rotate "[™] to select **Calibration**, then press [™] .
- 4. When the display changes to Push CAL Start, press &.
- 5. Drive the vehicle slowly in two circles.
 - The compass starts to show a direction after the calibration. The CAL indicator goes off.

➢Compass*

Compass operation can be affected under the following conditions:

- Driving near power lines or stations
- Crossing a bridge
- Passing a large vehicle, or driving near a large object that can cause a magnetic disturbance
- When accessories such as antennas and roof racks are mounted by magnets


➢Compass Calibration

Calibrate the compass in an open area.

While setting the compass:

• The (Back) button returns to the previous screen.

Compass Zone Selection

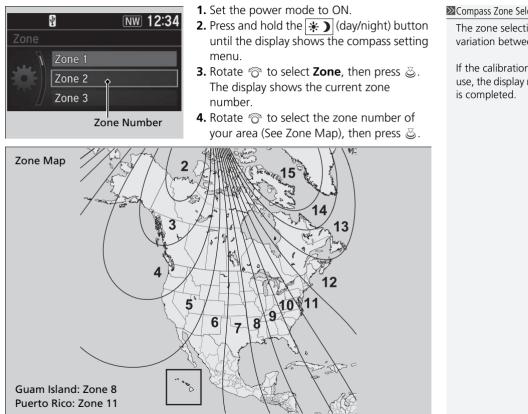

The zone selection is done to compensate the variation between magnetic north and true north.

If the calibration starts while the audio system is in use, the display returns to normal after the calibration

Driving

This chapter discusses driving and refueling.

| Before Driving Towing a Trailer | |
|------------------------------------|-----|
| Towing Your Vehicle | |
| Off-Highway Driving Guidelines | |
| General Information | 463 |
| Important Safety Precautions | 463 |
| Avoiding Trouble | 464 |
| When Driving | |
| Turning on the Power | 465 |
| Precautions While Driving | 471 |
| Transmission | 472 |
| Shifting | 473 |
| SPORT Mode | |

| 480 |
|-------|
| 483 |
| 484 |
| ronic |
| 485 |
| 487 |
| ol |
| 488 |
| 489 |
| IS) - |
| 493 |
| 495 |
| 498 |
| |

| Honda Sensing [®] | 499 |
|-----------------------------------------------------------------------|------|
| Collision Mitigation Braking System [™] (CMBS [™]) | 502 |
| Adaptive Cruise Control (ACC) with Low Speed Follow | 513 |
| Lane Keeping Assist System (LKAS) | 530 |
| Road Departure Mitigation (RDM) System | .539 |
| Front Sensor Camera | 544 |
| Radar Sensor | 546 |
| Braking | |
| Brake System | 547 |
| Anti-lock Brake System (ABS) | |
| Brake Assist System | 554 |
| Parking Your Vehicle | |
| Multi-View Rear Camera | |
| Refueling | 568 |
| Refueling Fuel Economy and CO ₂ Emissions | 571 |

Driving Preparation

Check the following items before you start driving.

Exterior Checks

- Make sure there are no obstructions on the windows, door mirrors, exterior lights, or other parts of the vehicle.
 - Remove any frost, snow, or ice.
 - Remove any snow on the roof, as this can slip down and obstruct your field of vision while driving. If frozen solid, remove ice once it has softened.
 - ▶ When removing ice from around the wheels, be sure not to damage the wheel or wheel components.
- Make sure the hood is securely closed.
 If the hood opens while driving, your front view will be blocked.
- Make sure the tires are in good condition.
 - Check air pressures, and check for damage and excessive wear.
 Checking and Maintaining Tires P. 602
- Make sure there are no people or objects behind or around the vehicle.
 There are blind enable from the inside
 - ► There are blind spots from the inside.

Exterior Checks

NOTICE

When doors are frozen shut, use warm water around the door edges to melt any ice. Do not try to force them open, as this can damage the rubber trim around the doors. When done, wipe dry to avoid further freezing.

Do not pour warm water into the key cylinder. You will be unable to insert the key if the water freezes in the hole.

Heat from the engine and exhaust can ignite flammable materials left under the hood, causing a fire. If you've parked your vehicle for an extended period, inspect and remove any debris that may have collected, such as dried grass and leaves that have fallen or have been carried in for use as a nest by a small animal. Also check under the hood for leftover flammable materials after you or someone else has performed maintenance on your vehicle.

Interior Checks

- Store or secure all items on board properly.
 - Carrying too much cargo, or improperly storing it, can affect your vehicle's handling, stability, stopping distance, and tires, and make it unsafe.
 - Maximum Load Limit P. 459
- Do not pile items higher than the seat height.
 - They can block your view and may be thrown forward in the event of sudden braking.
- Do not place anything in the front seat footwells. Make sure to secure the floor mat.
 - An object or unsecured floor mat can interfere with your brake and accelerator pedal operation while driving.
- If you have any animals on board, do not let them move around in the vehicle.
 They may interfere with driving and a crash could occur.
- Securely close and lock all doors and the tailgate.

Locking/Unlocking the Doors from the Inside P. 160

- Adjust your seating position properly.
 - Adjust the head restraint, too.
 - Adjusting the Seats P. 205
 - Adjusting the Front Head Restraints P. 212
- Adjust the mirrors and steering wheel properly for your driving.
 - Adjust them while sitting in the proper driving position.
 - Adjusting the Steering Wheel P. 202
 - Adjusting the Mirrors P. 203

➢Interior Checks

The headlight aim is set by the factory, and does not need to be adjusted. However, if you regularly carry heavy items in the cargo area, have the aiming readjusted at a dealer or by a qualified technician.

- Be sure items placed on the floor behind the front seats cannot roll under the seats.
 - They can interfere with the driver's ability to operate the pedals, the operation of the seats, or the operation of the sensors under the seats.
- Everyone in the vehicle must fasten their seat belt.

Fastening a Seat Belt P. 51

- Make sure that the indicators in the instrument panel come on when you start the vehicle, and go off soon after.
 - Always have a dealer check the vehicle if a problem is indicated.
 - Indicators P. 88

Maximum Load Limit

The maximum load for your vehicle is 850 lbs (385 kg). See the Tire and Loading Information label attached to the driver's doorjamb.

| Label Example | The comb | TIRE AND L SEATING CAPACIT Ined weight of occupants and | | INT 2 REAR 3 |
|---------------|----------|---------------------------------------------------------------|--------------------|--------------|
| | TIRE | SIZE | COLD TIRE PRESSURE | SEE OWNER'S |
| | FRONT | xxxx/xxxxx xxx | XXXKPA, XXPS1 | MANUAL FOR |
| | REAR | | XXXKPA, XXPS1 | ADDITIONAL |
| | SPARE | XXXX/XXXXX XXXX | XXXKPA, XXPS1 | INFORMATION |

This figure includes the total weight of all occupants, cargo, and accessories, and the tongue load if you are towing a trailer.

Steps for Determining Correct Load Limit -

- (1) Locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs." on your vehicle's placard.
- (2) Determine the combined weight of the driver and passengers that will be riding in your vehicle.
- (3) Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
- (4) The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1,400 lbs. and there will be five 150 lb. passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs.

(1,400 - 750 (5 x 150) = 650 lbs.)

≫Maximum Load Limit

Overloading or improper loading can affect handling and stability and cause a crash in which you can be hurt or killed.


Follow all load limits and other loading guidelines in this manual.

Gross Vehicle Weight Rating (GVWR): The maximum allowable weight of the vehicle, all occupants, all accessories and all cargo.

Specifications P. 664

Gross Axle Weight Rating (GAWR): The maximum allowable weight of the vehicle axle. ► Specifications P. 664 (5) Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in step 4.(6) If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.

In addition, the total weight of the vehicle, all occupants, accessories, cargo, and trailer tongue load must not exceed the Gross Vehicle Weight Rating (GVWR) or the Gross Axle Weight Rating (GAWR). Both are on a label on the driver's doorjamb.

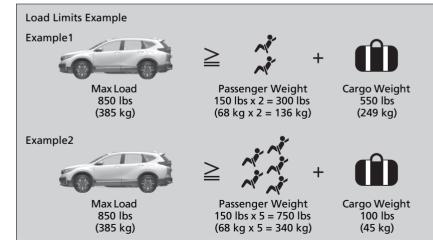

≫Maximum Load Limit

Towing a Trailer:

See Towing a Trailer to determine whether your vehicle is designed to tow a trailer.

Towing a Trailer P. 461

Your vehicle is not designed to tow a trailer. Attempting to do so can void your warranties.

Towing Your Vehicle

Your vehicle is not designed to be towed behind a motor home. If your vehicle needs to be towed in an emergency, refer to the emergency towing information.

Emergency Towing P. 659

General Information

Your vehicle has been designed primarily for use on pavement, however, its higher ground clearance allows you to occasionally travel on unpaved roads. It is not designed for trail-blazing, or other challenging off-highway activities.

If you decide to drive on unpaved roads, you will find that it requires somewhat different driving skills and that your vehicle will handle somewhat differently than it does on pavement. Pay attention to the precautions and tips in this section, and get acquainted with your vehicle before leaving the pavement.

Important Safety Precautions

To avoid loss of control or rollover, be sure to follow all precautions and recommendations:

- Be sure to store cargo properly and do not exceed your cargo load limits.
 ▶ Maximum Load Limit P. 459
- Whenever you drive, make sure you and your passengers always wear seat belts.
- Keep your speed low, and never go faster than the conditions allow.
- It's up to you to continually assess the situation and drive within the limits.

➢Off-Highway Driving Guidelines

Improperly operating this vehicle on or offpavement can cause a crash or rollover in which you and your passengers could be seriously injured or killed.

- Follow all instructions and guidelines in this owner's manual.
- Keep your speed low, and don't drive faster than conditions permit.

Failure to operate your vehicle correctly might result in a crash or a rollover.

- Important Handling Information P. 44
- Precautions While Driving P. 471

Avoiding Trouble

- **Check Out Your Vehicle** before you leave the pavement and make sure that all scheduled maintenance has been completed. Pay special attention to the condition of the tires, and check the tire pressures.
- **Remember** the route you choose presents limits (too steep or bumpy), you have limits (driving skill and comfort), and your vehicle has limits (traction, stability, and power). Failing to recognize these limits will likely put you and your passengers in a hazardous situation.
- Accelerating and Braking should be done slowly and gradually. Trying to start or stop too fast can cause a loss of traction and you could lose control.
- Avoiding Obstacles and Debris in the road reduces the likelihood of a rollover or damage to your suspension or other components.
- Driving on Slopes increases your risk of a rollover, particularly if you attempt to drive across a slope that is too steep. Going straight up or down a slope is usually the safest. If you can't clearly see all conditions or obstacles on a slope, walk it before you drive it. If there is any doubt whether you can safely pass, don't try it. Find another route. If you get stuck when climbing, do not try to turn around. Back down slowly following the same route you took up the hill.
- **Crossing a Stream** Avoid driving through deep water. If you encounter water in your route (a small stream or large puddle, for example), evaluate it carefully before going ahead. Make sure it is shallow, flowing slowly, and has firm ground underneath. If you are not sure of the depth or the ground, turn around and find another route. Driving through deep water can also damage your vehicle. The water can get into the transmission and differential, diluting the lubricant and causing an eventual failure. It can also wash the grease out of the wheel bearings.
- If You Get Stuck, carefully go in the direction that you think will get you unstuck. Do not spin the tires as this will only make things worse and could damage the transmission. If you are unable to free yourself, your vehicle will need to be towed. Front and rear tow hooks are provided for this purpose.

Turning on the Power



Brake Pedal

 Make sure the parking brake is applied.
 The parking brake and brake system indicator comes on for 15 seconds when you pull up the electric parking brake switch.

2. Depress the brake pedal.

■Turning on the Power

Keep your foot firmly on the brake pedal when starting the power system.

The engine is harder to start in cold weather and in thinner air found at altitudes above 8,000 feet (2,400 meters).

When turning on the power system in cold weather, turn off all electrical accessories such as the lights, climate control system, and rear defogger in order to reduce 12V-battery drain.

If the exhaust system sounds abnormal or you can smell exhaust gas inside the vehicle, have your vehicle checked by a dealer. There may be a problem with the engine or exhaust system.

The immobilizer system protects your vehicle from theft. If an improperly coded device is used, the power system does not activate.

Immobilizer System P. 175

When you set the power mode to ON, you may feel as if the brake pedal is sinking down. This is normal.



- **3.** Without depressing the accelerator pedal, press the **POWER** button while depressing the brake pedal.
- 4. Check the **READY** indicator.
 - Keep depressing the brake pedal until the **READY** indicator comes on.
 - The **READY** indicator comes on when the power system is on and you can start driving.
 - If the outside temperature is extremely low, you cannot drive until conditions are improved. In this case, the **READY** indicator does not come on and a warning message appears on the driver information interface.
 - Driver Information Interface
 Warning and Information Messages
 P. 107

Stopping the Power System

You can turn the power system off when the vehicle is completely stopped.

- **1.** Put the transmission into **P**.
- 2. Press the **POWER** button.

Turning on the Power

Bring the smart entry remote close to the **POWER** button if the battery in the smart entry remote is weak.

► If the Smart Entry Remote Battery is Weak P. 641

The power system may not activate if the smart entry remote is subjected to strong radio waves.

Do not hold the **POWER** button to start the power system.

If the power system does not start, wait at least 30 seconds before trying again.

The engine may not run when the vehicle is ready for driving.


You can start driving with the **READY** indicator on. If you press the **POWER** button while depressing the brake pedal with the **READY** indicator on, the power mode is set to VEHICLE OFF and you cannot start driving.

READY Indicator P. 92

Remote Engine Start

You can remotely turn the power system on using the smart entry remote.

■ To turn the power system on

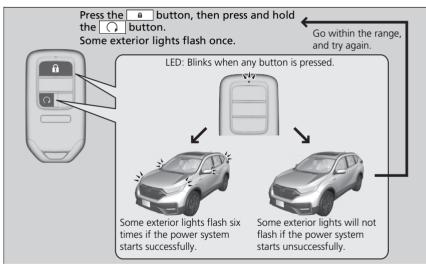

The power system is on for up to 10 minutes without you starting the vehicle. To extend the time for another 10 minutes during the first 10 minutes, press the $\boxed{10}$ button, then press and hold the $\boxed{10}$ button.

Some exterior lights flash six times if a 10-minute extension request was transmitted successfully.

➢Remote Engine Start

Carbon monoxide gas is toxic and can rapidly accumulate in closed or even partly enclosed areas.

Breathing it can cause unconsciousness and even kill you.

Never use the remote engine starter with the vehicle parked in a garage or other areas with limited ventilation.


The remote engine start may violate local laws. Before using the remote engine start, check your local laws.

If there are buildings and obstacles between your vehicle and the remote, the range will be reduced. This distance may vary by external electrical interference.

The power system may not be turned on by the remote engine start if:

- You have disabled a remote engine start setting using the driver information interface* or audio/ information screen*.
- The power mode is not in VEHICLE OFF (LOCK).
- The transmission is in a position other than **P**.
- The hood is open, or any door or the tailgate is unlocked.

■ To turn the power system off

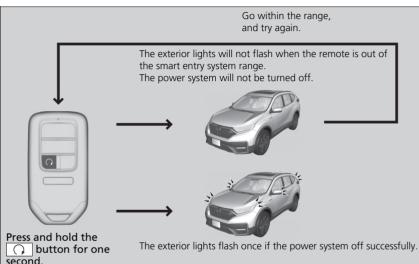

➢Remote Engine Start

- You have already used the remote twice to turn the power system on.
- Another registered smart entry remote is in the vehicle.
- There is an antenna failure.
- The door is unlocked with the built-in key.
- The engine oil pressure is low.
- The engine coolant temperature is extremely high.
- The security system alarm is not set.

≥To turn the power system off

The power system may be turned off while it is on if:

- You do not start the vehicle within 10 minutes of turning the power system on with the button on the smart entry remote.
- The power system is turned off by using the smart entry remote.
- The door is unlocked with the built-in key.
- The hood is open.
- The transmission is in a position other than **P**.
- The engine coolant temperature is extremely high.
- The engine oil pressure is low.
- The Malfunction Indicator Lamp comes on if there is a problem with the emissions control systems.

■Remote Engine Start

While the power system is on, the vehicle will automatically precondition inside the vehicle. When it is warm outside:

• The climate control system is activated in recirculation mode.

When it is cold outside:

- The defroster is activated at a moderately warm temperature.
- The rear defogger and door mirror heaters* are activated.
- The seat and heated steering wheel are activated*
 Heated Steering Wheel* P. 230
 Seat Heaters* P. 231

Starting to Drive

When the power system is turned on using the 🕥 button on the smart entry remote

1. Depress the brake pedal and press the **POWER** button simultaneously.

When the power system is turned on in any case

- Keeping your right foot on the brake pedal, check that the **READY** indicator is on, then put the transmission into D. Select R when reversing.
- **3.** With the parking brake is applied, release the brake pedal and gently depress the accelerator pedal.
 - ▶ Make sure the parking brake and brake system indicator goes off.
 ▶ Parking Brake P. 547

Starting to Drive

You can also release the parking brake by pressing the electric parking brake switch while depressing the brake pedal. When facing downhill, you can start your vehicle more smoothly by manually releasing it with the electric parking brake switch than by releasing it with the accelerator pedal.

When the power system is turned on using the ______ button on the smart entry remote

The power system is turned off when the transmission is taken out of $\boxed{\mathbf{P}}$ before the **POWER** button is pressed. Follow step 1 when starting to drive.

As a hybrid vehicle, the sounds and vibrations from the engine may be absent even though the vehicle is ready for driving. It also makes you fail to recognize that you can start.

Make sure to check if the **READY** indicator is on before you start to drive.

➢Hill start assist system

Hill start assist may not prevent the vehicle from rolling downhill on a very steep or slippery slope, and will not operate on small inclines.

Hill start assist is not a replacement for the parking brake.

Hill start assist will operate even when $\mathsf{VSA}^{\circledast}$ is switched off.

Hill start assist system

Hill start assist keeps the brake engaged briefly to help prevent the vehicle from rolling on inclines as you move your foot from the brake pedal to the accelerator. Put the transmission into \boxed{D} when facing uphill, or \boxed{R} when facing downhill, then release the brake pedal.

Precautions While Driving

Driving Guidelines for Your Utility Vehicle

Utility vehicles have a significantly higher rollover rate than other types of vehicles. To prevent rollovers or loss of control:

- Take corners at slower speeds than you would with a passenger vehicle.
- Avoid sharp turns and abrupt maneuvers whenever possible.
- Do not modify your vehicle in any way that you would raise the center of gravity.
- Roof load capacity is 165 lbs (75 kg), available roof racks/carriers may have lower capacities. Please check accessory's information (Honda accessory).

In Rain

Avoid driving in deep water and on flooded roads. This can damage the engine or driveline, or cause electrical component failure.

Other Precautions

If there is a strong impact with something under the vehicle, stop in a safe location. Check the underside of the vehicle for damage or any fluid leaks.

Precautions While Driving

NOTICE

Do not select a shift button while pressing the accelerator pedal. You could damage the transmission.

NOTICE

If you repeatedly turn the steering wheel at an extremely low speed, or hold the steering wheel in the full left or right position for a while, the electric power steering (EPS) system heats up. The system goes into a protective mode, and limits its performance. The steering wheel becomes harder and harder to operate. Once the system cools down, the EPS system is restored.

Repeated operation under these conditions can eventually damage the system.

Transmission

Creeping

As with a conventional gasoline-powered vehicle with an automatic transmission, this vehicle will creep.

Keep the brake pedal firmly depressed when stopped.

Kickdown

Quickly depressing the accelerator pedal while driving uphill may cause the vehicle to react similar to an automatic transmission vehicle, unexpectedly increasing vehicle speed. Depress the accelerator pedal carefully, especially on slippery roads and curves.

Precautions While Driving

If the power mode is set to ACCESSORY while driving, the engine will shut down and all steering and brake power assist functions will stop, making it difficult to control the vehicle.

Do not press the $\boxed{\mathbf{N}}$ button, as you will lose regenerative braking (and acceleration) performance.

During the first 600 miles (1,000 km) of operation, avoid sudden acceleration or full throttle operation so as not to damage the engine or powertrain.

Avoid hard braking for the first 200 miles (300 km). You should also follow this when the brake pads are replaced.

Driving Guidelines for Your Utility Vehicle

Failure to operate your vehicle correctly might result in a crash or a rollover.

Important Handling Information P. 44
 Precautions While Driving P. 471

Shifting

Change the shift position in accordance with your driving needs.

Shift button positions

Park Used when parking or turning the power on or off. Transmission is locked.

Reverse Used when reversing.

Neutral Transmission is not locked.

Drive

R

N

- Used for normal driving.
- The deceleration paddle selector can be used temporarily.
- The deceleration paddle selector can be used when SPORT mode is on.

≫Shifting

The vehicle can roll away if left unattended without confirming that Park is engaged.

A vehicle that rolls away could cause a crash resulting in serious injury or death.


Always keep your foot on the brake pedal until you have confirmed that \underline{P} is shown on the shift position indicator.

While the High Voltage battery level is full, or the High Voltage battery temperature is low, regenerative braking may become less effective.

To prevent malfunction and unintended engagement:

- Do not spill any liquids on or around shift buttons.
- Do not place or drop any objects on or around shift buttons.
- Do not let passengers or children operate the shift buttons.

■ P (parking) button

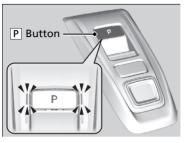

The shift position changes to $\[P\]$ when you press the $\[P\]$ button while the vehicle is parked with the power mode in ON. The indicators on the sides of the $\[P\]$ button come on.

≫Shifting


The beeper sounds and a message appears on the driver information interface when you depress the accelerator pedal with the shift position in [N].

Driver Information Interface Warning and Information Messages P. 107

Change the shift position to D or \mathbb{R} with the brake pedal depressed.

You may occasionally find that it takes longer than usual for the vehicle to start moving when you select $[\mathbf{R}]$, release the brake pedal, and/or depress the accelerator pedal. This may occur when the High Voltage battery level is extremely low, and does not indicate a vehicle malfunction.

Shift Operation

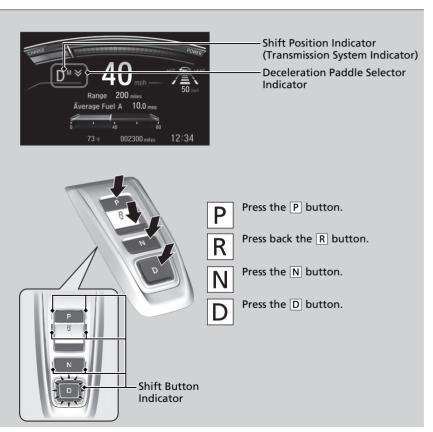

Shift Operation

NOTICE

When you change \boxed{D} to \boxed{R} and vice versa, come to a complete stop and keep the brake pedal depressed. Operating the shift button before the vehicle has come to a complete standstill can damage the transmission.

Use the shift position indicator and the shift button indicator to check the shift position before selecting a shift button.

If the indicator of the currently selected shift position, or all the shift position indicators are blinking simultaneously, there is a problem with the transmission.

Avoid sudden acceleration and have the transmission checked by a dealer as soon as possible.

When shifting positions in extremely low temperatures (-22°F/-30°C), there may be a short delay before the shift position is displayed. Always confirm you are in the correct shift position before driving.

The beeper sounds once when you change to **ℝ**. **Customized Features** P. 138, 366

When opening the driver's door

If you open the driver's door under the following conditions, the shift position automatically changes to [P].

- The vehicle is in stationary with the power mode in ON, or moving at 1 mph (2 km/h) or slower.
- The transmission is in other than **P**.
- You have unfastened the driver side seat belt.
 - ▶ If you manually change the shift position from P with the brake pedal depressed, the shift position will automatically return to P once you release the brake pedal.

When turning off the power mode

If you turn the power system off while the vehicle is stationary, and the transmission is in other than $[\mathbf{P}]$, the shift position automatically changes to $[\mathbf{P}]$.

When opening the driver's door

While the system is designed to automatically change the shift position to \boxed{P} under the described conditions, in the interest of safety you should always select \boxed{P} before opening the driver's door. Make sure to park the vehicle in a safe place.

When Stopped P. 555

If you want to drive the vehicle after the shift position has automatically changed to P under the described conditions, close the door, fasten the seat belt, depress the brake pedal, then change the shift position.


If you leave the vehicle, turn off the power system and lock the doors.

■ If you want to keep the transmission in N position [car wash mode]

With the power system on:

- 1. Press and hold the brake pedal.
- 2. Press and release the N button.
 - **N** (Neutral) hold mode will appear on the driver information interface.
- **3.** Press the **N** button again and hold it for two seconds.
 - The vehicle will enter car wash mode, which must be used when your vehicle is pulled through a conveyor type automatic car wash where you or an attendant do not remain in the vehicle.

If you want to cancel car wash mode, select a position other than $[\mathbf{N}]$.

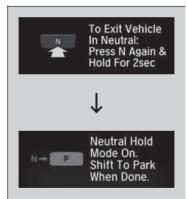

If the **POWER** button is pressed after car wash mode has been activated, the power mode will change to ACCESSORY and a message will be displayed on the driver information interface.

- ► For 15 minutes the transmission remains in **N** with the power mode will remain in ACCESSORY. After that, the transmission automatically changes to **P**.
- Manually changing to P cancels ACCESSORY mode. The P indicator comes on and the power mode changes to OFF. You must always put the transmission into P when car wash mode is no longer needed.

If you want to keep the transmission in N position [car wash mode]

To keep the vehicle in \fbox{N} position, you can also follow this procedure:

While the power system is on, select [N], and then within five seconds, press the **POWER** button.

Note that the transmission may not stay in $\boxed{\mathbf{N}}$ position while any of the following indicators is on:


- Transmission system indicator.
- Malfunction indicator lamp.
- Charging system indicator.

Restriction on selecting a shift position

You cannot select a shift position under certain circumstances that may lead to a crash.

| When the transmission is in: | 1. Under the circumstances of that: | 2. You cannot select: | 3. The shift position remains in/changes to: | How to change the shift position |
|------------------------------|--------------------------------------------------------------------------|------------------------------------|----------------------------------------------|------------------------------------------------------------------|
| Р | The brake pedal is not depressed. | Other shift position | Ρ | Release the accelerator pedal and depress the brake pedal. |
| | The accelerator pedal is depressed. | | | |
| Ν | The vehicle is moving at low speed without the brake pedal depressed. | | N | |
| | The vehicle is moving at low speed with the accelerator pedal depressed. | | | |
| N or D | The vehicle is moving forward. | R | | Park your vehicle in a safe place. |
| R or N | The vehicle is moving backward. | D | | |
| R, N, or D | The vehicle is moving. | Ρ | | |
| P or N | The READY indicator is not on. | A shift position other than P or N | P or N | Make sure that the READY indicator comes on. |

SPORT Mode

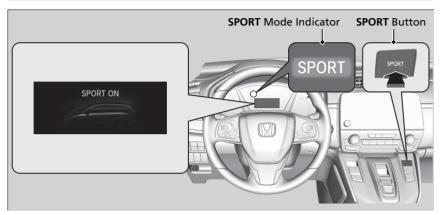

To turn the SPORT mode on and off, press the **SPORT** button.


The SPORT mode increases engine performance and handling. This mode is not recommended for fuel economy enhancement, but suitable for driving on hills or through curves on mountain roads.

The SPORT mode is turned off every time you turn on the power system, even if you turned it on the last time you drove the vehicle.

Deceleration Paddle Selector

When you release the accelerator pedal, you can control the rate of deceleration without removing your hands from the steering wheel. Using the deceleration paddle selector situated on the steering wheel, you can sequentially shift through four stages of deceleration.

When descending a hill, you can use the deceleration paddle selector to help maintain the rate of deceleration, thereby allowing you to keep a safe distance between your vehicle and the vehicle ahead as well as utilize engine braking.

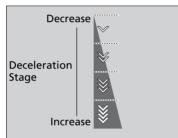

The default deceleration stage is \bowtie . Each paddle selector operation makes a single stage deceleration change.

The deceleration stage may not change if you keep the paddle selector pulled back.

Deceleration Paddle Selector

Rapidly increasing the deceleration rate by quickly shifting the deceleration paddle selector can cause the tires to skid, resulting in a crash that could injure or kill someone.

Always maintain a reasonable rate of deceleration.


If you are descending a hill when you select stage $\[mathbb{w}\]$, the vehicle may enter stage $\[mathbb{w}\]$.

If you pull back right and left paddle selector at the same time, the deceleration stage may not change.

To select the different stages of deceleration:

- Pull back the + selector (right side) to decrease the deceleration stage.
- Pull back the selector (left side) to increase the deceleration stage.

Pull the + selector for a few seconds when you want to cancel the deceleration paddle selector.

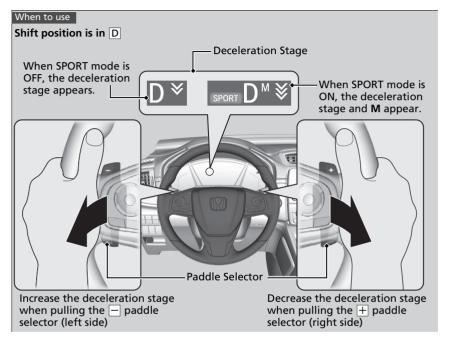

➢Deceleration Paddle Selector

In the following situations, the stage may not change and the stage icon will blink even if you pull back the selector. The deceleration stage may decrease or cancel automatically:

- The High Voltage battery is fully charged or its temperature is too cold or too hot.
- The speed of the vehicle is beyond the deceleration range with SPORT mode off.
- Hybrid system protection is needed.
- The paddle selector is operated while your vehicle is stopped automatically by ACC with Low Speed Follow.

If either paddle selector is operated, ACC with Low Speed Follow will cancel automatically.

When SPORT mode is OFF

If you pull back the paddle selector, the rate of deceleration will change temporarily, and the stage will appear in the driver information interface.


When you want to cancel the deceleration paddle selector, pull the + selector (right side) for a few seconds.

The deceleration paddle selector will cancel automatically and deceleration stage in the driver information interface disappear when you drive with constant speed, situations of acceleration and decelerate just before stopping your vehicle.

When SPORT mode is ON

If you pull back the paddle selector, the rate of deceleration will change and the stage along with **M** will appear in the driver information interface. The deceleration stage will not cancel automatically while SPORT mode is ON. When you want to cancel the deceleration paddle selector, turn the SPORT mode OFF, or pull the + selector (right side) for a few seconds. When canceled, deceleration stage in the driver information interface disappears.

ECON Mode

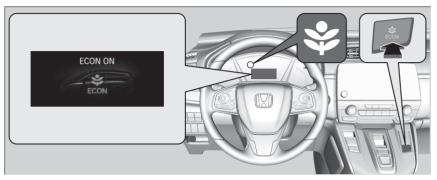

The **ECON** button turns the ECON mode on and off.

The ECON mode helps you improve your fuel economy by adjusting the performance of the climate control system and the accelerator pedal response.

≥ECON Mode

While in ECON mode, the climate control system has greater temperature fluctuations.


Acoustic Vehicle Alerting System

Alerts pedestrians when the vehicle transmission is in a position other than [P] and is traveling at speeds of 22 mph (36 km/h) or less.

Vehicle Stability Assist[™] (VSA[®]), aka Electronic Stability Control (ESC), System

VSA® helps to stabilize the vehicle during cornering if the vehicle turns more or less than what was intended. It also assists in maintaining traction on slippery surfaces. It does so by regulating engine output and selectively applying the brakes.

VSA[®] Operation

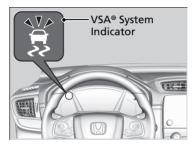

When VSA[®] activates, you may notice that the engine and motor do not respond to the accelerator. You may also notice some noise from the hydraulic system. You will also see the indicator blink.

Wehicle Stability Assist[™] (VSA[®]), aka Electronic Stability Control (ESC), System

The VSA® may not function properly if tire type and size are mixed. Make sure to use the same size and type of tire, and the air pressures as specified.


When the VSA® system indicator comes on and stays on while driving, there may be a problem with the system. While this may not interfere with normal driving, have your vehicle checked by a dealer immediately.

VSA® cannot enhance stability in all driving situations and does not control the entire braking system. You still need to drive and corner at speeds appropriate for the conditions and always leave a sufficient margin of safety.

The main function of the VSA® system is generally known as Electronic Stability Control (ESC). The system also includes a traction control function.

The indicators for the Adaptive Cruise Control (ACC) with Low Speed Follow, Road Departure Mitigation (RDM), Vehicle Stability Assist[™] (VSA®) system, Vehicle Stability Assist[™] (VSA®) OFF, low tire pressure/TPMS, Collision Mitigation Braking System[™] (CMBS[™]), and Parking Brake and Brake System (Amber) may come on along with a message in the Driver Information Interface after reconnecting the 12V-battery. Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer.

VSA[®] On and Off

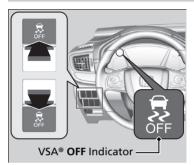

This button is on the driver side control panel. To partially disable VSA[®] functionality/ features, press and hold it until you hear a beep.

Your vehicle will have normal braking and cornering ability, but traction control function will be less effective.

To restore VSA[®] functionality/features, press the (VSA[®] OFF) button until you hear a beep.

VSA[®] is turned on every time you turn the power system on, even if you turned it off the last time you drove the vehicle.

Wehicle Stability Assist[™] (VSA[®]), aka Electronic Stability Control (ESC), System

In certain unusual conditions when your vehicle gets stuck in shallow mud or fresh snow, it may be easier to free it with the VSA® temporarily switched off.

When the B button is pressed, the traction control function becomes less effective. This allows for the wheels to spin more freely at low speed. You should only attempt to free your vehicle with the VSA® off if you are not able to free it when the VSA® is on.

Immediately after freeing your vehicle, be sure to switch VSA® on again. We do not recommend driving your vehicle with the VSA® system switched off.

You may hear a motor sound coming from the engine compartment while system checks are being performed immediately after turning the power system on or while driving. This is normal.

Agile Handling Assist

Lightly brakes each of the front and rear wheels, as needed, when you turn the steering wheel, and helps support the vehicle's stability and performance during cornering.

➢Agile Handling Assist

The agile handling assist cannot enhance stability in all driving situations. You still need to drive and corner at speeds appropriate for the conditions and always leave a sufficient margin of safety.

When the VSA® system indicator comes on and stays on while driving, the agile handling assist does not activate.

You may hear a sound coming from the engine compartment while the agile handling assist is activated. This is normal.

Real Time AWD with Intelligent Control System™

Your vehicle is equipped with the AWD system. When the system senses a loss of front wheel traction, it automatically transfers some power to the rear wheels. This allows you to utilize all available traction and may increase mobility.

You still need to exercise the same care when accelerating, steering, and braking that you would in a two wheel drive vehicle.

If you excessively spin all four wheels and overheat the AWD system, only the front wheels receive power. Stop until the system cools down.

■Real Time AWD with Intelligent Control System[™]

NOTICE

Do not continuously spin the front tires of your vehicle. Continuously spinning the front tires can cause transmission or rear differential damage.

The AWD system may not function properly if tire type and size are mixed. Make sure to use the same size and type of tire, and the air pressures as specified.

Tire and Wheel Replacement P. 608

Tire Pressure Monitoring System (TPMS)

Instead of directly measuring the pressure in each tire, the TPMS on this vehicle monitors and compares the rolling radius and rotational characteristics of each wheel and tire while you are driving to determine if one or more tires are significantly under-inflated.

Low Tire Pressure/TPMS indicator

TPMS Calibration

You must start TPMS calibration every time you:

- Adjust the pressure in one or more tires.
- Rotate the tires.
- Replace one or more tires.

Before calibrating the TPMS:

Set the cold tire pressure in all four tires.
 Checking Tires P. 602

Make sure:

- The vehicle is at a complete stop.
- Change the shift position to **P**.
- The power mode is in ON.

This will cause the low tire pressure/TPMS indicator to come on and a message to appear on the driver information interface.

Tire Pressure Monitoring System (TPMS)

The system does not monitor the tires when driving at low speed.

Conditions such as low ambient temperature and altitude change directly affect tire pressure and can trigger the low tire pressure/TPMS indicator to come on.

Tire pressure checked and inflated in:

- Warm weather can become under-inflated in colder weather.
- Cold weather can become over-inflated in warmer weather.

The low tire pressure/TPMS indicator will not come on as a result of over inflation.

The TPMS may not function properly if tire type and size are mixed. Make sure to use the same size and type of tire.


Checking and Maintaining Tires P. 602

The low tire pressure/TPMS indicator may come on with a delay or may not come on at all when:

- You rapidly accelerate, decelerate, or turn the steering wheel.
- You drive on snowy or slippery roads.
- Tire chains are used.

The low tire pressure/TPMS indicator may come on under the following conditions:

- There is a heavier and uneven load on the tires, such as when towing a trailer, than the condition at calibration.
- Tire chains are used.

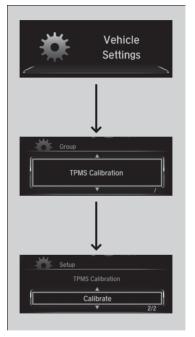

Models with color audio system

You can calibrate the system from the customized features on the driver information interface.

- Press the then /▼ button to select
 Vehicle Settings, then press the ENTER button.
 - TPMS Calibration appears on the display.
- 2. Press the ENTER button.
 - The display switches to the customization setup screen, where you can select Cancel or Calibrate.
- Press the ▲/▼ button and select Calibrate, then press the ENTER button.
 - Calibration Started screen appears, then the display returns to the customization menu screen.
- If the **Calibration Failed to Start** message appears, repeat steps 2-3.
- The calibration process finishes automatically.

➢TPMS Calibration

- The calibration process requires approximately 30 minutes of cumulative driving at speeds between 30-65 mph (48-105 km/h).
- During this period, if the ignition is turned on and the vehicle is not moved within 45 seconds, you may notice the low tire pressure/TPMS indicator comes on briefly. This is normal and indicates that the calibration process is not yet complete.

If the tire chains are installed, remove them before calibrating the TPMS.

If the low tire pressure/TPMS indicator comes on even when the properly inflated specified regular tires are installed, have your vehicle checked by a dealer.

We recommend that the tires be replaced with the same brand, model, and size as the originals. Ask a dealer for details.

Driving

➢TPMS Calibration

The indicators for the Adaptive Cruise Control (ACC) with Low Speed Follow, Road Departure Mitigation (RDM), Vehicle Stability Assist[™] (VSA®) system, Vehicle Stability Assist[™] (VSA®) OFF, low tire pressure/TPMS, Collision Mitigation Braking System[™] (CMBS[™]), and Parking Brake and Brake System (Amber) may come on along with a message in the Driver Information Interface after reconnecting the 12V-battery. Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer.



Models with Display Audio

You can calibrate the system from the customized feature on the audio/information screen.

- 1. Set the power mode to ON.
- 2. Select 💼.
- 3. Select Settings.
- 4. Select Vehicle.
- 5. Select TPMS Calibration.
- 6. Select Cancel or Calibrate.
 - When the calibration is complete, the display returns to the customization menu screen.
- If the **Unable to initialize TPMS.** message appears, repeat step 6.
- The calibration process finishes automatically.

Tire Pressure Monitoring System (TPMS) - Required Federal Explanation

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label.

(If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale



when one or more of your tires is significantly under-inflated.

Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure.

Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability. Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended.

TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly.


Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

Blind spot information System*

Is designed to detect vehicles in specified alert zones adjacent to your vehicle, particularly in harder to see areas commonly known as "blind spots."

When the system detects vehicles approaching from behind in adjacent lanes, the appropriate indicator comes on for a few seconds, providing assistance when you change lanes.

How the system works

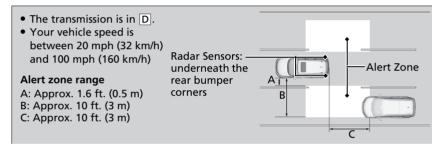

Blind spot information System *

WARNING

Failure to visually confirm that it is safe to change lanes before doing so may result in a crash and serious injury or death. Do not rely only on the blind spot information system when changing lanes.

Always look in your mirrors, to either side of your vehicle, and behind you for other vehicles before changing lanes.

Important Safety Reminder

Like all assistance systems, blind spot information system has limitations. Over reliance on blind spot information system may result in a collision.

The system is for your convenience only. Even if an object is within the alert zone, the following situations may occur.

 The blind spot information system alert indicator may not come on due to obstruction (splashes, etc.) even without the Blind Spot Info Not

Available driver information interface appearing.

• The blind spot information system alert indicator may come on even with the message appearing.

When the system detects a vehicle

Blind spot information System Alert Indicator: Located on the outside rearview mirror on both sides.

- Comes on when:
- A vehicle enters the alert zone from behind to overtake you with a speed difference of no more than 31 mph (50 km/h) from your vehicle.
- You pass a vehicle with a speed difference of no more than 12 mph (20 km/h).
- Blinks and the beeper sounds when: You move the turn signal lever in the direction of the detected vehicle. The beeper sounds three times.



➢Blind spot information System *

The blind spot information system alert indicator may not come on under the following conditions:

- A vehicle does not stay in the alert zone for more than two seconds.
- A vehicle is parked in a side lane.
- The speed difference between your vehicle and the vehicle you are passing is greater than 6 mph (10 km/h).
- An object not detected by the radar sensors approaches or passes your vehicle.
- A vehicle running in the adjacent lane is a motorcycle or other small vehicle.

You can turn off the audible alert, or all the blind spot information system alert using the audio/information screen.

Customized Features P. 366

➢Blind spot information System *

Blind spot information system may be adversely affected when:

- Objects (guard rails, poles, trees, etc,.) are detected.
- An object that does not reflect radio waves well, such as a motorcycle, is in the alert zone.
- Driving on a curved road.
- A vehicle is moving from a far lane to the adjacent lane.
- The system picks up external electrical interference.
- The rear bumper or the sensors have been improperly repaired or the rear bumper has been deformed.
- The orientation of the sensors has been changed.
- In bad weather (Heavy rain, snow, and fog).
- Making a turn at an intersection.
- Driving on a bumpy road.
- Making a short turn that slightly tilts the vehicle.

For proper blind spot information system operation:

- Always keep the rear bumper corner area clean.
- Do not cover the rear bumper corner area with labels or stickers of any kind.
- Take your vehicle to a dealer if you need the rear bumper corner area or the radar sensors to be repaired, or the rear bumper corner area is strongly impacted.

High Voltage Battery

The High Voltage battery gradually discharges even if the vehicle is not in use. As a result, if your vehicle is parked for an extended period of time, the battery charge level will become low. Extended periods of time at a low state of charge will shorten battery life. To maintain the battery state of charge, drive your vehicle for more than 30 minutes at least once every three months.

Extreme high temperatures can affect the battery life. You can minimize the effects by parking the vehicle in the shade during the summer.

➢High Voltage Battery

Be careful not to let the High Voltage battery drain too much. If the battery level becomes close to zero, it will make it impossible to start the engine. Honda Sensing[®] is a driver support system which employs the use of two distinctly different kinds of sensors: a radar sensor located inside the front grille and a front sensor camera mounted to the interior side of the windshield, behind the rearview mirror.

Honda Sensing® has following functions.


■ The functions which do not require switch operations to activate

- Collision Mitigation Braking System[™] (CMBS[™]) ₽. 502
- Road Departure Mitigation (RDM) System ₽ P. 539

■ The functions which require switch operations to activate

- Adaptive Cruise Control (ACC) with Low Speed Follow ₽ P. 513
- Lane Keeping Assist System (LKAS) ₽ P. 530

Operation Switches for the ACC with Low Speed Follow/ LKAS

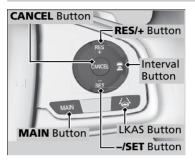

MAIN Button

Press to activate standby mode for ACC with Low Speed Follow and LKAS. Or press to cancel these systems.

LKAS Button

Press to activate or cancel the LKAS.

■ RES/+ and –/SET Buttons

Press **RES/+** button to resume the ACC with Low Speed Follow or increase the vehicle speed.

Press –/SET button to set the ACC with Low Speed Follow or decrease the vehicle speed.


Interval Button

Press the 🖹 (interval) button to change the ACC with Low Speed Follow following-interval.

CANCEL Button

Press to cancel ACC with Low Speed Follow.

Driver Information Interface Content

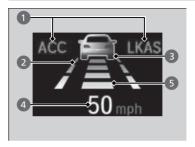

You can see the current state of ACC with Low Speed Follow, and LKAS.

- Indicates that ACC with Low Speed Follow, and LKAS are ready to be activated.
- Indicates that LKAS is activated and whether or not traffic lane lines are detected.
- Indicates whether or not ACC with Low Speed Follow detected the vehicle ahead.
- Indicates that ACC with Low Speed Follow shows the set vehicle speed.
- S Indicates that ACC with Low Speed Follow shows the set vehicle interval.

Collision Mitigation Braking System™ (CMBS™)

Can assist you when there is a possibility of your vehicle colliding with a vehicle or a pedestrian detected in front of yours. The CMBS[™] is designed to alert you when a potential collision is determined, as well as to reduce your vehicle speed to help minimize collision severity when a collision is deemed unavoidable.

➢Collision Mitigation Braking System[™] (CMBS[™])

Important Safety Reminder

The CMBS[™] is designed to reduce the severity of an unavoidable collision. It does not prevent collision nor stop the vehicle automatically. It is still your responsibility to operate the brake pedal and steering wheel appropriately according to the driving conditions.

The CMBS[™] may not activate or may not detect a vehicle in front of your vehicle under certain conditions:

CMBS™ Conditions and Limitations P. 507


For directions on the proper handling of the radar sensor, refer to the following page.

Radar Sensor P. 546

You can read about handling information for the camera equipped with this system.

Front Sensor Camera P. 544

How the system works

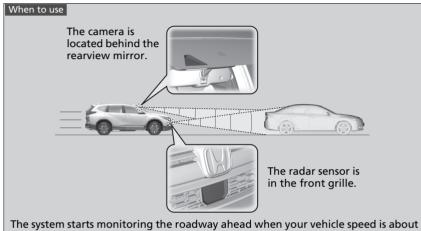

The system starts monitoring the roadway ahead when your vehicle speed is abou 3 mph (5 km/h) and there is a vehicle in front of you.

The CMBS[™] activates when:

- The speed difference between your vehicle and a vehicle or pedestrian detected in front of you becomes about 3 mph (5 km/h) and over with a chance of a collision.
- Your vehicle speed is about 62 mph (100 km/h) or less and the system determines there is a chance of a collision with:

- Vehicles detected in front of you that are stationary, oncoming, or traveling in your same direction.

- A pedestrian who is detected in front of you.
- Your vehicle speed is above 62 mph (100 km/h), and the system determines there is a chance of a collision with a vehicle detected in front of you traveling in your same direction.


➢How the system works

When the CMBSTM activates, it may automatically apply the brake. It will be canceled when your vehicle stops or a potential collision is not determined.

When the system activates

The system provides visual and audible alerts of a possible collision, and stops if the collision is avoided.

Take appropriate action to prevent a collision (apply the brakes, change lanes, etc.)

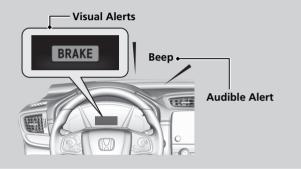

Driving

At system's earliest collision alert stage, you can change the distance (**Long**/ **Normal/Short**) between vehicles at which alerts will come on through driver information interface* or audio/information screen* setting options.

Customized Features P. 138, 366

➢How the system works

The camera in the $\mathsf{CMBS}^{\mathsf{TM}}$ is also designed to detect pedestrians.

However, this pedestrian detection feature may not activate or may not detect a pedestrian in front of your vehicle under certain conditions.

Refer to the ones indicating the pedestrian detection limitations from the list.

CMBS[™] Conditions and Limitations P. 507

Collision Alert Stages

The system has three alert stages for a possible collision. However, depending on circumstances, the CMBS[™] may not go through all of the stages before initiating the last stage.

| Distance between vehicles | | CMBS™ | | |
|---------------------------|--------------------------------------------|--------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|
| | | The sensors detect a vehicle | Audible & Visual WARNINGS | Braking |
| Stage one | NORMAL LONG SHORT Ahead Your Vehicle | There is a risk of a collision with the vehicle ahead of you. | When in Long , visual and audible alerts come on at a longer distance from a vehicle ahead than in Normal setting, and in Short , at a shorter distance than in Normal . | _ |
| Stage two | Your Vehicle Vehicle Ahead | The risk of a collision has increased, time to respond is reduced. | Visual and audible alerts. | Lightly applied |
| Stage three | Your Vehicle Vehicle Ahead | The CMBS [™] determines that a collision is unavoidable. | | Forcefully applied |

CMBS[™] On and Off



Press and hold the button until the beeper sounds to switch the system on or off.

When the CMBS[™] is off:

- The CMBS[™] indicator in the instrument panel comes on.
- A message on the driver information interface reminds you that the system is off.

The CMBS[™] is turned on every time you turn the power system on, even if you turned it off the last time you drove the vehicle.

■Collision Mitigation Braking System[™] (CMBS[™])

The CMBS[™] may automatically shut off, and the CMBS[™] indicator will come and stay on under certain conditions.

CMBS[™] Conditions and Limitations P. 507

When the CMBSTM is activated, it will continue to operate even if the accelerator pedal is partially depressed. However, it will be canceled if the accelerator pedal is deeply depressed.

The indicators for the Adaptive Cruise Control (ACC) with Low Speed Follow, Road Departure Mitigation (RDM), Vehicle Stability Assist[™] (VSA®) system, Vehicle Stability Assist[™] (VSA®) OFF, low tire pressure/TPMS, Collision Mitigation Braking System[™] (CMBS[™]), and Parking Brake and Brake System (Amber) may come on along with a message in the Driver Information Interface after reconnecting the 12V-battery. Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer.

Have your vehicle checked by a dealer if you find any unusual behavior of the system (e.g. the warning message appears too frequently).

CMBS™ Conditions and Limitations

The system may automatically shut off and the CMBS[™] indicator will come on under certain conditions. Some examples of these conditions are listed below. Other conditions may reduce some of the CMBS[™] functions.

Front Sensor Camera P. 544

Environmental conditions

- Driving in bad weather (rain, fog, snow, etc.).
- Sudden changes between light and dark, such as an entrance or exit of a tunnel.
- There is little contrast between objects and the background.
- Driving into low sunlight (e.g., at dawn or dusk).
- Strong light is reflected onto the roadway.
- Driving in the shadows of trees, buildings, etc.
- Roadway objects or structures are misinterpreted as vehicles and pedestrians.
- Reflections on the interior of the front windshield.
- Driving at night or in a dark place such as a tunnel (due to low-light conditions, pedestrians or other vehicles may not be detected).

Roadway conditions

- Driving on a snowy or wet roadway (obscured lane marking, vehicle tracks, reflected lights, road spray, high contrast).
- Driving on curvy, winding, or undulating roads.
- The road is hilly or the vehicle is approaching the crest of a hill.

Vehicle conditions

- Headlight lenses are dirty or the headlights are not properly adjusted.
- The outside of the windshield is blocked by dirt, mud, leaves, wet snow, etc.
- The inside of the windshield is fogged.
- An abnormal tire or wheel condition (wrong sized, varied size or construction, improperly inflated, etc.).
- When tire chains are installed.
- The vehicle is tilted due to a heavy load or suspension modifications.
- The camera temperature gets too high.
- Driving with the parking brake applied.
- When the radar sensor in the front grille gets dirty.
- Driving at night or in a dark place (e.g., a tunnel) with the headlights off.

Detection limitations

- A vehicle or pedestrian suddenly crosses in front of you.
- The distance between your vehicle and the vehicle or pedestrian ahead of you is too short.
- A vehicle cuts in front of you at a slow speed, and it brakes suddenly.
- When you accelerate rapidly and approach the vehicle or pedestrian ahead of you at high speed.
- The vehicle ahead of you is a motorcycle, bicycle, mobility scooter or other small vehicle.
- When there are animals in front of your vehicle.
- When you drive on a curved, winding or undulating road that makes it difficult for the sensor to properly detect a vehicle in front of you.
- The speed difference between your vehicle and a vehicle or pedestrian in front of you is significantly large.
- An oncoming vehicle suddenly comes in front of you.
- Another vehicle suddenly comes in front of you at an intersection, etc.
- Your vehicle abruptly crosses over in front of an oncoming vehicle.
- When driving through a narrow iron bridge.
- When the lead vehicle suddenly slows down.

Limitations applicable to pedestrian detection only

- When there is a group of people in front of your vehicle walking together side by side.
- Surrounding conditions or belongings of the pedestrian alter the pedestrian's shape, preventing the system from recognizing that the person is a pedestrian.
- When the pedestrian is slouching or squatting.
- When the pedestrian is shorter than about 3 feet (1 meter) or taller than about 7 feet (2 meter) in height.
- When a pedestrian blends in with the background.
- When a pedestrian is bent over or squatting, or when their hands or raised or they are running.
- When several pedestrians are walking ahead in a group.
- When the camera cannot correctly identify that a pedestrian is present due to an unusual shape (holding luggage, body position, size).

Automatic shutoff

CMBS[™] may automatically shut itself off and the CMBS[™] indicator comes and stays on when:

- The temperature inside the system is high.
- You drive off-road or on a mountain road, or curved and winding road for an extended period.
- An abnormal tire condition is detected (wrong tire size, flat tire, etc.).
- The camera behind the rearview mirror, or the area around the camera, including the windshield, gets dirty.

Once the conditions that caused CMBS[™] to shut off improve or are addressed (e.g., cleaning), the system comes back on.

With Little Chance of a Collision


The CMBS[™] may activate even when you are aware of a vehicle ahead of you, or when there is no vehicle ahead. Some examples of this are:

When Passing

Your vehicle approaches another vehicle ahead of you and you change lanes to pass.

At an intersection

Your vehicle approaches or passes another vehicle that is making a left or right turn.

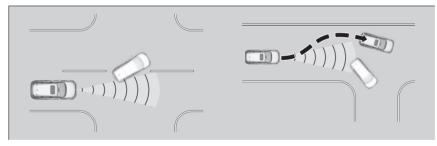

On a curve

When driving through curves, your vehicle comes to a point where an oncoming vehicle is right in front of you.




Through a low bridge at high speed

You drive under a low or narrow bridge at high speed.

Speed bumps, road work sites, train tracks, roadside objects, etc.


You drive over speed bumps, steel road plates, etc., or your vehicle approaches train tracks or roadside objects (such as a traffic sign and guard rail) on a curve or, when parking, stationary vehicles and walls.

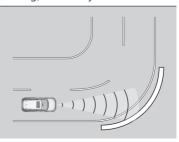

Adaptive Cruise Control (ACC) with Low Speed Follow

Helps maintain a constant vehicle speed and a set following-interval behind a vehicle detected ahead of yours and, if the detected vehicle comes to a stop, can decelerate and stop your vehicle, without you having to keep your foot on the brake or the accelerator.

When ACC with Low Speed Follow slows your vehicle by applying the brakes, your vehicle's brake lights will illuminate.

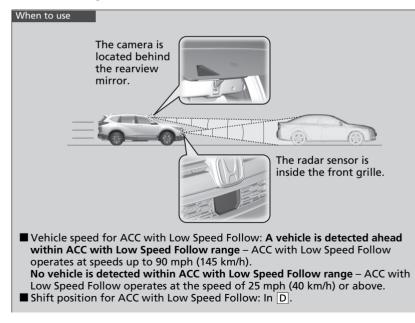

Maptive Cruise Control (ACC) with Low Speed Follow

Improper use of ACC with Low Speed Follow can lead to a crash.

Use ACC with Low Speed Follow only when driving on expressways or freeways and in good weather conditions.

ACC with Low Speed Follow has limited braking capability and may not stop your vehicle in time to avoid a collision with a vehicle that quickly stops in front of you.

Always be prepared to apply the brake pedal if the conditions require.


Important Reminder

As with any system, there are limits to ACC with Low Speed Follow. Use the brake pedal whenever necessary, and always keep a safe interval between your vehicle and other vehicles.

For directions on the proper handling of the radar sensor, refer to the following page.

Radar Sensor P. 546

How to activate the system

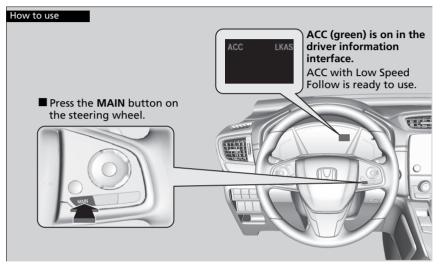

Driving

Mathematical Acceleration Acceleration and Acceleration Acceleration and Acceleration Acceleratio Acceleration Acceleratio

You can read about handling information for the camera equipped with this system.

Front Sensor Camera P. 544

When the **MAIN** button is pressed, both ACC with Low Speed Follow and the Lane Keeping Assist System (LKAS) are either turned on or off.

ACC with Low Speed Follow may not work properly under certain conditions.


ACC with Low Speed Follow Conditions and Limitations P. 520

When not using ACC with Low Speed Follow: Turn off adaptive cruise by pressing the **MAIN** button. This also will turn off the Lane Keeping Assist System (LKAS).

Do not use ACC with Low Speed Follow under the following conditions:

- On roads with heavy traffic or while driving in continuous stop and go traffic.
- On roads with sharp turns.
- On roads with steep downhill sections, as the set vehicle speed can be exceeded by coasting. In such cases, ACC with Low Speed Follow will not apply the brakes to maintain the set speed.
- On roads with toll collection facilities or other objects between lanes of traffic, or in parking areas, or facilities with drive through access.

To Set the Vehicle Speed

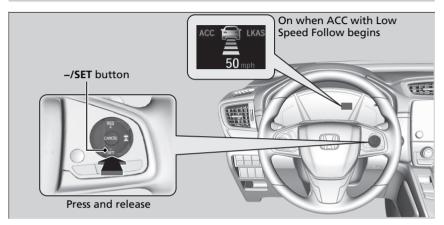


When driving at about 25 mph (40 km/h) or above: Take your foot off the pedal and press the –/SET button when you reach the desired speed. The moment you release the button, the set speed is fixed, and ACC with Low Speed Follow begins.

When driving slower than about 25 mph (40 km/h): If the vehicle is moving and the brake pedal is not depressed, pressing the button fixes the set speed to about 25 mph (40 km/h) regardless of current vehicle speed. If the vehicle is stationary, you can set the vehicle speed even with the brake pedal depressed.

Maptive Cruise Control (ACC) with Low Speed Follow

The indicators for the Adaptive Cruise Control (ACC) with Low Speed Follow, Road Departure Mitigation (RDM), Vehicle Stability Assist[™] (VSA®) system, Vehicle Stability Assist[™] (VSA®) OFF, low tire pressure/TPMS, Collision Mitigation Braking System[™] (CMBS[™]), and Parking Brake and Brake System (Amber) may come on along with a message in the Driver Information Interface after reconnecting the 12V-battery. Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer.

➢To Set the Vehicle Speed

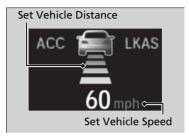

When ACC with Low Speed Follow starts operating, the vehicle icon, distance bars and set speed appear on the driver information interface.

When you use ACC with Low Speed Follow, Straight Driving Assist (a feature of the Electric Power Steering system) is activated. By enabling the steering system to automatically compensate for natural steering pull, Straight Driving Assist makes it easier for you to keep your vehicle in a straight line.

When in Operation

There is a vehicle ahead

ACC with Low Speed Follow monitors if a vehicle ahead of you enters the ACC with Low Speed Follow range. If a vehicle is detected doing so, the ACC with Low Speed Follow system maintains or decelerates your vehicle's set speed in order to keep the vehicle's set following-interval from the vehicle ahead.

To Set or Change Following-Interval P. 524




ACC with Low Speed Follow Range: 394 ft. (120 m)



When a vehicle whose speed is slower than your set speed is detected in front of you, your vehicle starts to slow down.

≫When in Operation

If the vehicle ahead of you slows down abruptly, or if another vehicle cuts in front of you, the beeper sounds, a message appears on the driver information interface.

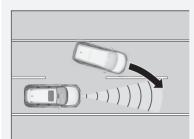

Depress the brake pedal, and keep an appropriate interval from the vehicle ahead.



There is no vehicle ahead



A vehicle icon with dotted-line contour appears on the driver information interface Your vehicle maintains the set speed without having to keep your foot on the brake or accelerator pedal.

If there previously was a vehicle detected ahead that kept your vehicle from traveling at the set speed, ACC with Low Speed Follow accelerates your vehicle to the set speed, and then maintains it.

When you depress the accelerator pedal

You can temporarily increase the vehicle speed. In this case, there is no audible or visual alert even if a vehicle is in the ACC with Low Speed Follow range. ACC with Low Speed Follow stays on unless you cancel it. Once you release the accelerator pedal, the system resumes an appropriate speed for keeping the following-interval while a vehicle ahead is within the ACC with Low Speed Follow range.

When in Operation

Even if the distance between your vehicle and the vehicle ahead is short, ACC with Low Speed Follow may start accelerating your vehicle under the following circumstances:

- The vehicle ahead of you is going at almost the same speed as, or faster than, your vehicle.
- A vehicle that cuts in front of you is going faster than your vehicle, gradually increasing the interval between the vehicles.

Limitations

You may need to use the brake to maintain a safe interval when using ACC with Low Speed Follow. Additionally, ACC with Low Speed Follow may not work properly under certain conditions.

ACC with Low Speed Follow Conditions and Limitations P. 520

A vehicle detected ahead is within ACC with Low Speed Follow range and slows to a stop





Your vehicle also stops, automatically. The **Stopped** message appears on the driver information interface

When the vehicle ahead of you starts again, the vehicle icon on the driver information interface blinks. If you press the **RES/+** or **-/ SET** button, or depress the accelerator pedal, ACC with Low Speed Follow operates again within the prior set speed.

If no vehicle is ahead of you before you resume driving, depress the accelerator pedal and ACC with Low Speed Follow will operate again within the prior set speed. A vehicle detected ahead is within ACC with Low Speed Follow range and slows to a stop

Exiting a vehicle that has been stopped while the ACC with Low Speed Follow system is operating can result in the vehicle moving without operator control.

A vehicle that moves without operator control can cause a crash, resulting in serious injury or death.

Never exit a vehicle when the vehicle is stopped by ACC with Low Speed Follow.

ACC with Low Speed Follow Conditions and Limitations

The system may automatically shut off and the **ACC** indicator will come on under certain conditions. Some examples of these conditions are listed below. Other conditions may reduce some of the ACC functions.

Front Sensor Camera P. 544

Environmental conditions

• Driving in bad weather (rain, fog, snow, etc.).

Roadway conditions

• Driving on a snowy or wet roadway (obscured lane marking, vehicle tracks, reflected lights, road spray, high contrast).

Vehicle conditions

- The outside of the windshield is blocked by dirt, mud, leaves, wet snow, etc.
- An abnormal tire or wheel condition (Wrong size, varied size or construction, improperly inflated, etc.).
- The camera temperature gets too high.
- The parking brake is applied.
- When the front grille is dirty.
- The vehicle is tilted due to a heavy load or suspension modifications.
- When tire chains are installed.

MACC with Low Speed Follow Conditions and Limitations

The radar sensor for ACC with Low Speed Follow is shared with the collision mitigation braking system[™] (CMBS[™]).

Collision Mitigation Braking System™ (CMBS™) P. 502

If you need the radar sensor to be repaired, or removed, or the radar sensor cover is strongly impacted, turn off the system by pressing the **MAIN** button and take your vehicle to a dealer.

Have your vehicle checked by a dealer if you find any unusual behavior of the system (e.g., the warning message appears too frequently).


If the front of the vehicle is impacted in any of the following situations, the radar sensor may not work properly. Have your vehicle checked by a dealer:

- The vehicle mounted onto a bump, curb, chock, embankment, etc.
- You drive the vehicle where the water is deep.
- Your vehicle has a frontal collision.

Driving

Detection limitations

- A vehicle or pedestrian suddenly crosses in front of you.
- The interval between your vehicle and the vehicle or pedestrian ahead of you is too short.
- A vehicle cuts in front of you at a slow speed, and it brakes suddenly.
- When you accelerate rapidly and approach the vehicle or pedestrian ahead of you at high speed.
- The vehicle ahead of you is a motorcycle, bicycle, mobility scooter, or other small vehicle.
- When there are animals in front of your vehicle.
- When you drive on a curved or winding or undulating road that makes it difficult for the sensor to properly detect a vehicle or a pedestrian in front of you.

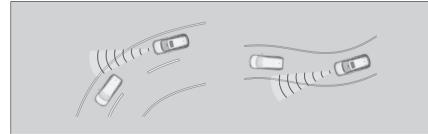


- The speed difference between your vehicle and a vehicle or pedestrian in front of you is significantly large.
- An oncoming vehicle suddenly comes in front of you.
- Your vehicle abruptly crosses over in front of an oncoming vehicle.

• When driving through a narrow iron bridge.




- When the vehicle ahead of you brakes suddenly.
- When the vehicle ahead of you has a unique shape.

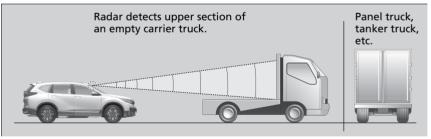

• When your vehicle or the vehicle ahead of you is driving on one edge of the lane.

To Adjust the Vehicle Speed

Increase or decrease the vehicle speed using the **RES/+** or **-/SET** button on the steering wheel.

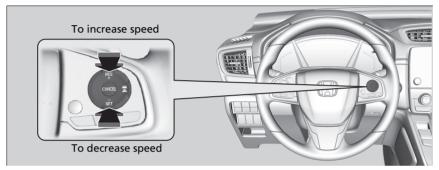

- Each time you press the **RES/+** or **-/SET** button, the vehicle speed is increased or decreased by about 1 mph or 1 km/h accordingly.
- If you keep pressing the RES/+ or -/SET button, the vehicle speed increases or decreases by about 5 mph or 5 km/h accordingly.

■To Adjust the Vehicle Speed

If a vehicle detected ahead is going at a speed slower than your increased set speed, ACC with Low Speed Follow may not accelerate your vehicle. This is to maintain the set interval between your vehicle and the vehicle ahead.

You can switch the displayed set speed measurements on the driver information interface* or audio/information screen* between mph and km/h.

Customized Features P. 138, 366

When you depress the accelerator pedal and then push and release the **-/SET** button, the current speed of the vehicle is set.

To Set or Change Following-Interval



Press the 🖹 (Interval) button to change the ACC with Low Speed Follow followinginterval. Each time you press the button, the followinginterval (the interval behind a vehicle detected ahead of you) setting cycles through extra


long, long, middle, and short followinginterval.

Determine the most appropriate followinginterval setting based on your specific driving conditions. Be sure to adhere to any following-interval requirements set by local regulation. The higher your vehicle's following-speed is, the longer the short, middle, long or extra long following-interval becomes. See the following examples for your reference.

| Following-Interval | | When the Set Speed is: | | |
|--------------------|--|--------------------------------------|--------------------------------------|--|
| | | 50 mph (80 km/h) | 65 mph (104 km/h) | |
| Short | | 81.0 feet 24.7 meters 1.1 sec | 103.3 feet 31.5 meters 1.1 sec | |
| Middle | | 112.2 feet 34.2 meters 1.5 sec | 142.4 feet 43.4 meters 1.5 sec | |
| Long | | 153.5 feet 46.8 meters 2.1 sec | 199.4 feet 60.8 meters 2.1 sec | |
| Extra Long | | 208.3 feet 63.5 meters 2.9 sec | 273.6 feet 83.4 meters 2.9 sec | |

When your vehicle stops automatically because a vehicle detected ahead of you has stopped, the interval between the two vehicles will vary based on the ACC with Low Speed Follow interval setting.

To Cancel

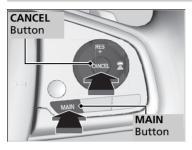

To cancel ACC with Low Speed Follow, do any of the following:

- Press the **CANCEL** button.
- Press the **MAIN** button.
- ACC with Low Speed Follow indicator goes off.
- Depress the brake pedal while the vehicle is moving forward.

≫To Cancel

Resuming the prior set speed: After you have canceled ACC with Low Speed Follow, you can resume the prior set speed while it is still displayed. Press the **RES/+** button.

The set speed cannot be set or resumed when ACC with Low Speed Follow has been turned off using the **MAIN** button. Press the **MAIN** button to activate the system, then set the desired speed.

Automatic cancellation

The beeper sounds and a message appears on the driver information interface when ACC with Low Speed Follow is automatically canceled. Any of these conditions may cause the ACC with Low Speed Follow to automatically cancel:

- Bad weather (rain, fog, snow, etc.)
- When the radar sensor in the front grille gets dirty.
- The vehicle ahead of you cannot be detected.
- An abnormal tire condition is detected, or the tires are skidding.
- Driving on a mountainous road, or driving off road for extended periods.
- Abrupt steering wheel movement.
- When the ABS, VSA[®] or CMBS[™] is activated.
- When the ABS or VSA® system indicator comes on.
- When the vehicle is stopped on a very steep slope.
- When you manually apply the parking brake.
- When the detected vehicle within the ACC with Low Speed Follow range is too close to your vehicle.
- The camera behind the rearview mirror, or the area around the camera, including the windshield, gets dirty.
- When the Maximum Load Limit is exceeded.
- When passing through an enclosed space, such as tunnel.


The ACC with Low Speed Follow automatic cancellation can be also triggered by the following causes. In these cases, the parking brake will be automatically applied.

- The driver's seat belt is unfastened when the vehicle is stationary.
- The vehicle stops for more than 10 minutes.
- The power system is turned off.

➢Automatic cancellation

Even though ACC with Low Speed Follow has been automatically canceled, you can still resume the prior set speed. Wait until the condition that caused ACC with Low Speed Follow to cancel improves, then press the **-/SET** button.

To Switch ACC with Low Speed Follow to Cruise Control

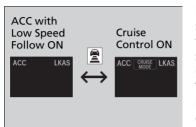

Press and hold the 🖹 (interval) button for one second. **Cruise Mode Selected** appears on the driver information interface for two seconds, and then the mode switches to Cruise.

To switch back to ACC with Low Speed Follow, press and hold the 🖹 button again for one second.

When to use

Desired speed in a range above roughly 25 mph (40 km/h) ~.

To Set the Vehicle Speed

Take your foot off the pedal and press the **–/SET** button when you reach the desired speed.

The moment you release the **-/SET** button, the set speed is fixed, and cruise control begins. The **CRUISE CONTROL** indicator comes on.

When you use cruise control, Straight Driving Assist (a feature of the Electric Power Steering system) is activated.

By enabling the steering system to automatically compensate for natural steering pull, Straight Driving Assist makes it easier for you to keep your vehicle in a straight line.

To Switch ACC with Low Speed Follow to Cruise Control

Always be aware which mode you are in. When you are driving in Cruise mode, the system will not assist you to maintain a following-interval from a vehicle ahead of you.

You can switch the displayed set speed measurements on the driver information interface* or audio/information screen* between mph and km/h. Customized Features P. 138, 366

To Adjust the Vehicle Speed

- Each time you press the **RES/+** or **-/SET** button, the vehicle speed is increased or decreased by about 1 mph or 1 km/h accordingly.
- If you keep pressing the RES/+ or -/SET button, the vehicle speed increases or decreases by about 5 mph or 5 km/h accordingly.

To Cancel

To cancel cruise control, do any of the following:

- Press the **CANCEL** button.
- Press the **MAIN** button.
- Depress the brake pedal.

The **CRUISE CONTROL** indicator goes off.

To Cancel

Resuming the prior set speed:

After cruise control has been canceled, you can still resume the prior set speed by pressing the **RES/+** button while driving at a speed of at least 25 mph (40 km/h) or more.

You cannot set or resume in the following situations:

- When vehicle speed is less than 25 mph (40 km/h)
- When the **MAIN** button is turned off.


At vehicle speeds of 22 mph (35 km/h) or less, cruise control canceled automatically.

Lane Keeping Assist System (LKAS)

Provides steering input to help keep the vehicle in the middle of a detected lane and provides tactile and visual alerts if the vehicle is detected drifting out of its lane.

Tactile and visual alerts

Rapid vibrations on the steering wheel and a warning display alert you that the vehicle is drifting out of a detected lane.

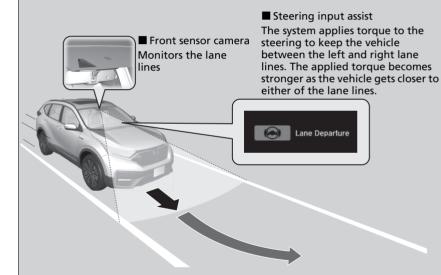

When you operate the turn signals to change lanes, the system is suspended, and resumes after the signals are off.

If you make a lane change without operating the turn signals, the LKAS alerts activate, and torque is applied to the steering.

≥Lane Keeping Assist System (LKAS)

Important Safety Reminders

The LKAS is for your convenience only. It is not a substitute for your vehicle control. The system does not work if you take your hands off the steering wheel or fail to steer the vehicle.

Driver Information Interface Warning and Information Messages P. 107

Do not place objects on the instrument panel. Objects may reflect on the front windshield and prevent correct detection of the traffic lanes.

The LKAS only alerts you when lane drift is detected without a turn signal in use. The LKAS may not detect all lane markings or lane departures; accuracy will vary based on weather, speed, and lane marker condition. It is always your responsibility to safely operate the vehicle and avoid collisions.

The LKAS is convenient when it is used on freeways.

The LKAS may not work properly or may work improperly under the certain conditions:


LKAS Conditions and Limitations P. 536

You can read about handling information for the camera equipped with this system.

Front Sensor Camera P. 544

Lane Keep Support Function

Provides assistance to keep the vehicle in the center of the lane, when the vehicle nears a white or yellow line, steering force of the electric power steering will become stronger.

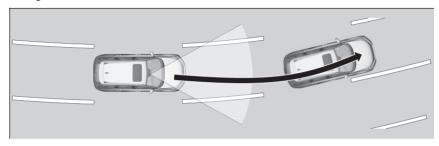

Lane Departure Warning Function

When the vehicle enters the warning area, the LKAS alerts you with slight steering wheel vibration as well as a warning display.

| Warning Area |
|--------------|
| |
| Warning Area |
| |

➢Lane Keeping Assist System (LKAS)

The LKAS may not function as designed while driving in frequent stop and go traffic, or on roads with sharp curves.


When it fails to detect lanes, the system will temporarily be canceled. When a lane is detected, the system will recover automatically.

When the System can be Used

The system can be used when the following conditions are met.

- The lane in which you are driving has detectable lane markers on both sides, and your vehicle is in the center of the lane.
- The vehicle is traveling between about 45 and 90 mph (72 and 145 km/h).
- You are driving on a straight or slightly curved road.
- The turn signals are off.
- The brake pedal is not depressed.
- The wipers are not in continuous operation.

How to activate the system

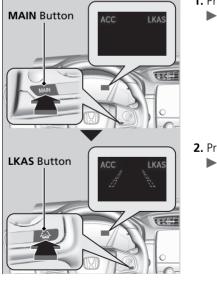


- **1.** Press the **MAIN** button.
- The LKAS is on in the driver information interface. The system is ready to use.

- 2. Press the LKAS button.
 - Lane outlines appear on the driver information interface. The system is activated.

≥Lane Keeping Assist System (LKAS)

If the vehicle drifts toward either left or right lane line due to the system applying torque, turn off the LKAS and have your vehicle checked by a dealer.

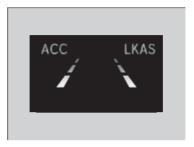

- **3.** Keep your vehicle near the center of the lane while driving.
 - The dotted outer lines change to solid ones once the system starts operating after detecting the left and right lane markings.

To cancel



To cancel the LKAS: Press the **MAIN** or LKAS button.

The LKAS is turned off every time you turn the power system off, even if you turned it on the last time you drove the vehicle.

≫To cancel

Pressing the **MAIN** button also turns ACC with Low Speed Follow on and off.



When the LKAS is suspended, the lane lines on the driver information interface change to contour lines, and the beeper sounds (if activated).

The system operation is suspended if you:

- Set the wipers to **HI**.
 - Turning the wipers off or setting it to LO resumes the LKAS.

Models with automatic intermittent wipers

- Set the wiper switch to AUTO and the wipers operate at high speed.
 - ► The LKAS resumes when the wipers stop or operate at low speed.

All models

- Decrease the vehicle speed to 40 mph (64 km/h) or less.
 - Increasing the vehicle speed to 45 mph (72 km/h) or more resumes the LKAS.
- Depress the brake pedal.
 - The LKAS resumes and starts detecting the lane lines again once you release the brake pedal.

The LKAS may automatically be suspended when:

- The system fails to detect lane lines.
- The steering wheel is quickly turned.
- You fail to steer the vehicle.
- Driving through a sharp curve.
- Driving at a speed in excess of approximately 90 mph (145 km/h).

Once these conditions no longer exist, the LKAS automatically resumes.

The LKAS may automatically be canceled when:

- The camera temperature gets extremely high or low.
- The camera behind the rearview mirror, or the area around the camera, including the windshield, gets dirty.
- The ABS or VSA[®] systems engage.

The beeper sounds if the LKAS is automatically canceled.

LKAS Conditions and Limitations


The system may not detect lane markings and therefore may not keep the vehicle in the middle of a lane under certain conditions, including the following:

Environmental conditions

- Driving in bad weather (rain, fog, snow, etc.).
- Sudden changes between light and dark, such as an entrance or exit of a tunnel.
- There is little contrast between lane lines and the roadway surface.
- Driving into low sunlight (e.g., at dawn or dusk).
- Strong light is reflected onto the roadway.
- Driving in the shadows of trees, buildings, etc.
- Shadows of adjacent objects are parallel to lane markings.
- Roadway objects or structures are misinterpreted as lane markings.
- Reflections on the interior of the front windshield.
- Driving at night or in a dark condition such as a tunnel.

Roadway conditions

- Driving on a snowy or wet roadway (obscured lane marking, vehicle tracks, reflected lights, road spray, high contrast).
- Driving on a road with temporary lane markings.
- Faint, multiple, or varied lane markings are visible on the roadway due to road repairs or old lane markings.

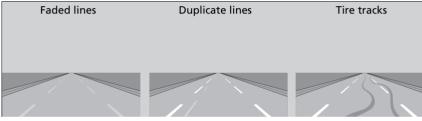


- The roadway has merging, split, or crossing lines (e.g., such as at an intersection or crosswalk).
- The lane markings are extremely narrow, wide, or changing.



- The vehicle in front of you is driving near the lane lines.
- The road is hilly or the vehicle is approaching the crest of a hill.
- Driving on rough or unpaved roads, or over bumpy surfaces.

- When objects on the road (curb, guard rail, pylons, etc.) are recognized as white lines (or yellow lines).
- Driving on roads with double lines.

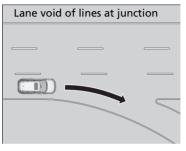

Vehicle conditions

- Headlight lenses are dirty or the headlights are not properly adjusted.
- The outside of the windshield is streaked or blocked by dirt, mud, leaves, wet snow, etc.
- The inside of the windshield is fogged.
- The camera temperature gets too high.
- An abnormal tire or wheel condition (wrong sized, varied size or construction, improperly inflated, etc.).
- The vehicle is tilted due to a heavy load or suspension modifications.

Road Departure Mitigation (RDM) System

Alerts and helps to assist you when the system detects a possibility of your vehicle unintentionally crossing over detected lane markings and/or leaving the roadway altogether.

How the System Works



The front camera behind the rearview mirror monitors left and right lane markings (in white or yellow). If your vehicle is getting too close to detected lane markings without a turn signal activated, the system, in addition to a visual alert, applies steering torque and alerts you with rapid vibrations on the steering wheel, to help you remain within the detected lane.

As a visual alert, the **Lane Departure** message appears on the driver information interface.

If the system determines that its steering input is insufficient to keep your vehicle on the roadway, it may apply braking.

Braking is applied only when the lane markings are solid continuous lines.

The system cancels assisting operations when you turn the steering wheel to avoid crossing over detected lane markings.

If the system operates several times without detecting driver response, the system beeps to alert you.

➢Road Departure Mitigation (RDM) System

Important Safety Reminder

Like all assistance systems, the RDM system has limitations.

Over-reliance on the RDM system may result in a collision. It is always your responsibility to keep the vehicle within your driving lane.

The RDM system only alerts you when lane drift is detected without a turn signal in use. The RDM system may not detect all lane markings or lane or roadway departures; accuracy will vary based on weather, speed and lane marker condition. It is always your responsibility to safely operate the vehicle and avoid collisions.

You can read about handling information for the camera equipped with this system.

Front Sensor Camera P. 544

The RDM system may not work properly or may work improperly under the certain conditions:

RDM Conditions and Limitations P. 542

There are times when you may not notice RDM functions due to your operation of the vehicle, or road surface conditions.

How the System Activates

The system becomes ready to start searching for lane markings when all the following conditions are met:

- The vehicle is traveling between about 45 and 90 mph (72 and 145 km/h).
- The vehicle is on a straight or slightly curved road.
- The turn signals are off.
- The brake pedal is not depressed.
- The wipers are not in continuous operation.
- The vehicle is not accelerating or braking, and the steering wheel is not being turned.
- The system makes a determination that the driver is not actively accelerating, braking or steering.

≥Road Departure Mitigation (RDM) System

If LKAS is off and you have selected **Narrow** from the customised options using the driver information interface* or audio/information screen*, the message below will appear in case the system determines a possibility of your vehicle crossing over detected lane markings.

Driver Information Interface Warning and Information Messages P. 107

Customized Features P. 138, 366



➢How the System Activates


The RDM system may automatically shut off and the $\left\| \int_{\infty} \right\|$ indicator comes and stays on.

Indicators P. 88

RDM system function can be impacted when the vehicle is:

- Not driven within a traffic lane.
- Driven on the inside edge of a curve, or outside of a lane.
- Driven in a narrow lane.

RDM On and Off

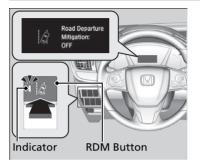

Press the RDM button to turn the system on and off.

The indicator in the button comes on and the message appears on the driver information interface when the system is on.

■RDM On and Off

When you have selected **Warning Only** from the customized options using the driver information interface* or audio/information screen*, the system does not operate the steering wheel and braking.

Customized Features P. 138, 366

The indicators for the Adaptive Cruise Control (ACC) with Low Speed Follow, Road Departure Mitigation (RDM), Vehicle Stability Assist[™] (VSA®) system, Vehicle Stability Assist[™] (VSA®) OFF, low tire pressure/TPMS, Collision Mitigation Braking System[™] (CMBS[™]), and Parking Brake and Brake System (Amber) may come on along with a message in the Driver Information Interface after reconnecting the 12V-battery. Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer.

RDM Conditions and Limitations

The system may not properly detect lane markings and the position of your vehicle under certain conditions. Some examples of these conditions are listed below.

Environmental conditions

- Driving in bad weather (rain, fog, snow, etc.).
- Sudden changes between light and dark, such as an entrance or exit of a tunnel.
- There is little contrast between lane lines and the roadway surface.
- Driving into low sunlight (e.g., at dawn or dusk).
- Strong light is reflected onto the roadway.
- Driving in the shadows of trees, buildings, etc.
- Shadows of adjacent objects are parallel to lane markings.
- Roadway objects or structures are misinterpreted as lane markers.
- Reflections on the interior of the front windshield.
- Driving at night or in a dark condition such as a tunnel.

Roadway conditions

- Driving on a snowy or wet roadway (obscured lane marking, vehicle tracks, reflected lights, road spray, high contrast).
- Driving on a road with temporary lane markings.
- Faint, multiple, or varied lane markings are visible on the roadway due to road repairs or old lane markings.
- The roadway has merging, split, or crossing lines (e.g., such as at an intersection or crosswalk).
- The lane markings are extremely narrow, wide, or changing.
- The vehicle in front of you is driving near the lane lines.
- The road is hilly or the vehicle is approaching the crest of a hill.
- Driving on rough or unpaved roads, or over bumpy surfaces.
- When objects on the road (curb, guard rail, pylons, etc.) are recognized as white lines (or yellow lines).
- Driving on roads with double lines.


Vehicle conditions

- Headlight lenses are dirty or the headlights are not properly adjusted.
- The outside of the windshield is streaked or blocked by dirt, mud, leaves, wet snow, etc.
- The inside of the windshield is fogged.
- The camera temperature gets too high.
- An abnormal tire or wheel condition (wrong sized, varied size or construction, improperly inflated, etc.).
- The vehicle is tilted due to a heavy load or suspension modifications.
- When tire chains are installed.

Front Sensor Camera

The camera, used in systems; such as RDM, LKAS, ACC with Low Speed Follow and CMBS[™], is designed to detect an object that triggers any of the systems to operate their functions.

Camera Location and Handling Tips

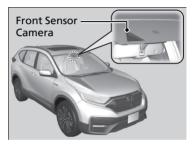

This camera is located behind the rearview mirror.

To help reduce the likelihood that high interior temperatures will cause the camera's sensing system to shut off, when parking, find a shady area or face the front of the vehicle away from the sun. If you use a reflective sun shade, do not allow it to cover the camera housing. Covering the camera can concentrate heat on it.

Front Sensor Camera

Never apply a film or attach any objects to the windshield, the hood, or the front grille that could obstruct the camera's field of vision and cause the system to operate abnormally.

Scratches, nicks, and other damage to the windshield within the camera's field of vision can cause the system to operate abnormally. If this occurs, we recommend that you replace the windshield with a genuine Honda replacement windshield. Making even minor repairs within the camera's field of vision or installing an aftermarket replacement windshield may also cause the system to operate abnormally. After replacing the windshield, have a dealer recalibrate the camera. Proper calibration of the camera is necessary for the system to operate properly.

Front Sensor Camera

Do not place an object on the top of the instrument panel. It may reflect onto the windshield and prevent the system from detecting lane lines properly.


If the Some Driver Assist Systems Cannot Operate:Camera Temperature Too High: To F message appears:

- Use the climate control system to cool down the interior and, if necessary, also use defroster mode with the air flow directed toward the camera.
- Start driving the vehicle to lower the windshield temperature, which cools down the area around the camera.

If the Some Driver Assist Systems Cannot Operate:Clean Front Windshield: message appears:

• Park your vehicle in a safe place, and clean the windshield. If the message does not disappear after you have cleaned the windshield and driven for a while, have your vehicle checked by a dealer.

Radar Sensor

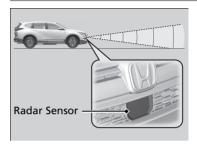

The radar sensor is in the front grille.

≫Radar Sensor

Avoid strong impacts to the radar sensor cover.

For the CMBS[™] to work properly:

- Always keep the radar sensor cover clean.
- Never use chemical solvents or polishing powder for cleaning the sensor cover. Clean it with water or a mild detergent.
- Do not put a sticker on the radar sensor cover or replace the radar sensor cover.

If you need the radar sensor to be repaired, or removed, or the radar sensor cover is strongly impacted, turn off the system by using the CMBS™ OFF button and take your vehicle to a dealer.

CMBS[™] On and Off P. 506

If the vehicle is involved in any of the following situations, the radar sensor may not work properly. Have your vehicle checked by a dealer:

- Your vehicle is involved in a frontal collision.
- Your vehicle drives through deep water or is submerged in deep water.
- Your vehicle strongly strikes a bump, curb, chock, or embankment that could jar the radar sensor.

Braking

Brake System

Parking Brake

Use the parking brake to keep the vehicle stationary when parked. When the parking brake is applied, you can manually or automatically release it.





To apply

The electric parking brake can be applied any time the vehicle has battery, no matter which position the power mode is in.

Pull the electric parking brake switch up gently and securely.

The parking brake and brake system indicator comes on.

To release

The power mode must be in ON in order to release the electric parking brake.

- 1. Depress the brake pedal.
- **2.** Press the electric parking brake switch.
 - ► The parking brake and brake system indicator goes off.

Manually releasing the parking brake using the switch helps your vehicle start slowly and smoothly when facing down hill on steep hills.

≫Braking

When you depress the brake pedal, you may hear a whirring sound from the engine compartment. This is because the brake system is in operation, and it is normal.

➢Parking Brake

You may hear the electric parking brake system motor operating from the rear wheel area when you apply or release the parking brake. This is normal.

The brake pedal may slightly move due to the electric parking brake system operation when you apply or release the parking brake. This is normal.

You cannot apply or release the parking brake if the 12V-battery goes dead.

Jump Starting P. 643

If you pull up and hold the electric parking brake switch while driving, the brakes on all four wheels are applied by the electric servo brake system until the vehicle come to a stop. The electric parking brake then applies, and the switch should be released.

Automatic parking brake feature operation

If the automatic parking brake feature has been activated:

- The parking brake is applied automatically when you set the power mode to OFF.
- To confirm that the parking brake is applied, check if the parking brake and brake system indicator is on.


Activating and deactivating the automatic parking brake feature P. 549

■ To release automatically

Depressing the accelerator pedal releases the parking brake.

You can release the parking brake automatically when:

Use the accelerator pedal to release the brake when you are starting the vehicle facing uphill, or in a traffic jam.

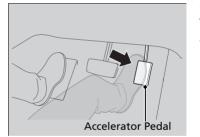

• You are wearing the driver's seat belt.

• The transmission is not in **P** or **N**.

• The power system is on.

Gently depress the accelerator pedal. When on a hill, it may require more accelerator input to release.

► The parking brake and brake system indicator goes off.

➢Parking Brake

In the following situations, the parking brake automatically operates.

- When the vehicle stops more than 10 minutes while ACC with Low Speed Follow is activated.
- When the driver's seat belt is unfastened while your vehicle is stopped automatically by ACC with Low Speed Follow.
- When the power system is turned off while ACC with Low Speed Follow is activated.
- When the vehicle stops with the automatic brake hold system activated for more than 10 minutes.
- When the driver's seat belt is unfastened while your vehicle is stopped and brake hold is applied.
- When the power system is turned off while brake hold is applied.
- When there is a problem with the Brake Hold System while brake hold is applied.

If the parking brake cannot be released automatically, release it manually.

When the vehicle is traveling uphill, the accelerator pedal may need to be pressed farther to automatically release the electric parking brake.

The parking brake cannot be released automatically while the following indicators are on:

- Malfunction indicator lamp
- Transmission system indicator

Activating and deactivating the automatic parking brake feature

With the power mode is ON, carry out the following steps to either activate or deactivate the automatic parking brake feature.

- **1.** Put the transmission into **P**.
- Without depressing the brake pedal, pull up the electric parking brake switch.
 Check that the parking brake and brake system indicator has come on.
- **3.** Pull up and hold the parking brake switch. When you hear a beeping sound, release the switch and within 3 seconds pull up and hold the switch again.
- **4.** When you hear a sound indicating that the procedure is completed, release the switch.
 - ▶ Two beeps indicates that the feature has been activated.
 - ▶ One beep indicates that the feature has been deactivated.
 - ▶ When you have completed activating the feature, the parking brake will remain applied after you turn off the power system.
 - ► To confirm that the parking brake is applied, check if the parking brake and brake system indicator is on.

If you need to temporarily deactivate the feature for when putting your vehicle through a conveyor type car wash. You can follow the procedure explained below.

- **1.** Depress the brake pedal and bring the vehicle to a stop.
- **2.** Set the power mode to VEHICLE OFF and then within 2 seconds push down the parking brake switch.
 - Activation and deactivation settings for the feature will not be affected.
 - Before temporarily deactivating the feature, make sure to first turn off both ACC with Low Speed Follow and the automatic brake hold system.
 - ► To confirm that the parking brake is applied, check if the parking brake and brake system indicator is on.

➢Parking Brake

The parking brake may not be released automatically while the following indicators are on:

- Brake system indicator
- VSA® system indicator
- ABS indicator
- Supplemental restraint system indicator

In cold climates, the parking brake may freeze in place if applied.

When parking the vehicle, chock the wheels and make sure the automatic parking brake feature is deactivated.

Also, when putting your vehicle through a conveyortype car wash or when having your vehicle towed, deactivate the automatic parking brake feature and leave the parking brake released.

Foot Brake

Your vehicle is equipped with disc brakes at all four wheels. The brake assist system increases the stopping force when you depress the brake pedal hard in an emergency situation. The anti-lock brake system (ABS) helps you retain steering control when braking very hard.

Brake Assist System P. 554

Anti-lock Brake System (ABS) P. 553

≫Foot Brake

Check the brakes after driving through deep water, or if there is a buildup of road surface water. If necessary, dry the brakes by lightly depressing the pedal several times.

If you hear a continuous metallic friction sound when applying the brakes, this is caused by the brake wear indicator rubbing on the brake rotor and indicates that the brake pads need to be replaced. Have the vehicle checked by a dealer. If you hear only an occasional squeak or squeal when you initially apply the brake pedal, this may be normal and caused by high frequency vibration of the brake pads against the rotating brake disc.


Applying constant pressure to the brakes while going down a long hill can cause the brakes to heat up, resulting in a loss of stopping power. Therefore, when descending a long hill, release the accelerator pedal and allow regenerative braking to slow the vehicle down. To adjust the rate of deceleration, use the deceleration paddle selector. When the high voltage battery has fully recharged, regenerative braking may not be possible.

High Voltage Battery Charge Level Gauge P. 125
 Deceleration Paddle Selector P. 480

Do not rest your foot on the brake pedal while driving, as it will lightly apply the brakes and cause them to lose effectiveness over time and reduce pad life. It will also confuse drivers behind you.

Automatic Brake Hold

Keeps the brake applied after releasing the brake pedal until the accelerator pedal is pressed. You can use this system while the vehicle is temporarily stopped, like at traffic lights and in heavy traffic.

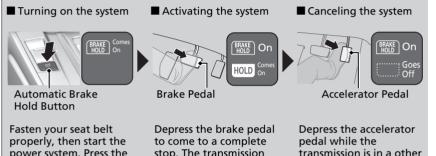

power system. Press the automatic brake hold button.

 The automatic brake hold system indicator comes on. The system is turned on.

stop. The transmission must not be in \mathbf{P} or \mathbf{R} . The automatic brake

- hold indicator comes on. Braking is kept for up to 10 minutes.
- Release the brake pedal after the automatic brake hold indicator comes on.

transmission is in a other than P or N. The system is cancelled and the vehicle starts to move.

 The automatic brake hold indicator goes off. The system continues to be on.

Automatic Brake Hold

AWARNING

Activating the automatic brake hold system on steep hills or slipperv roads may still allow the vehicle to move if you remove your foot from the brake pedal.

If a vehicle unexpectedly moves, it may cause a crash resulting in serious injury or death.

Never activate the automatic brake hold system or rely on it to keep a vehicle from moving when stopped on a steep hill or slippery roads.

Using the automatic brake hold system to park the vehicle may result in the vehicle unexpectedly moving.

If a vehicle moves unexpectedly, it may cause a crash, resulting in serious injury or death

Never leave the vehicle when braking is temporarily kept by automatic brake hold and always park the vehicle by putting the transmission in P and applying the parking brake.

The system automatically cancels when:

- You engage the parking brake.
- You depress the brake pedal and put the transmission into \mathbf{P} or \mathbf{R} .

■ The system automatically cancels and the parking brake is applied when:

- Braking is kept for more than 10 minutes.
- The driver's seat belt is unfastened.
- The power system is turned off.
- There is a problem with automatic brake hold system.

Turning off the automatic brake hold system



Automatic Brake Hold Button While the system is on, press the automatic brake hold button again.

The automatic brake hold system indicator goes off.

If you want to turn off automatic brake hold while the system is in operation, press the automatic brake hold button with the brake pedal depressed.

➢Automatic Brake Hold

While the system is activated, you can turn off the power system or park the vehicle through the same procedure as you normally do.

When Stopped P. 555

Whether the system is on, or the system is activated, the automatic brake hold turns off once the power system is off.

■Turning off the automatic brake hold system

Make sure to turn off the automatic brake hold system before using an automated car wash.

You may hear an operating noise if the vehicle moves while the automatic brake hold system is in operation.

Anti-lock Brake System (ABS)

Helps prevent the wheels from locking up, and helps you retain steering control by pumping the brakes rapidly, much faster than you.

The electronic brake distribution (EBD) system, which is part of the ABS, also balances the front-to-rear braking distribution according to vehicle loading.

You should never pump the brake pedal. Let the ABS work for you by always keeping firm, steady pressure on the brake pedal. This is sometimes referred to as "stomp and steer."

ABS operation

The brake pedal may pulsate slightly when the ABS is working. Depress the brake pedal and keep holding the pedal firmly down. On dry pavement, you will need to press on the brake pedal very hard before the ABS activates. However, you may feel the ABS activate immediately if you are trying to stop on snow or ice.

ABS may activate when you depress the brake pedal when driving on:

- Wet or snow covered roads.
- Roads paved with stone.
- Roads with uneven surfaces, such as potholes, cracks, manholes, etc.

When the vehicle speed goes under 6 mph (10 km/h), the ABS stops.

Manti-lock Brake System (ABS)

NOTICE

The ABS may not function correctly if you use a tire of the wrong size or type.

If the **ABS** indicator comes on while driving, there may be a problem with the system. While normal braking is not affected, there is a possibility that the ABS will not be operating. Have your vehicle checked by a dealer immediately.

The ABS is not designed for the purpose of reducing the time or distance it takes for a vehicle to stop: It is designed to limit brake lockup which can lead to skidding and loss of steering control.

In the following cases, your vehicle may need more distance to stop than a vehicle without the ABS:

• You are driving on rough or uneven road surfaces, such as gravel or snow.

The following may be observed with the ABS system:

- Motor sounds coming from the engine compartment when the brakes are applied, or when system checks are being performed after the engine has been started and while the vehicle accelerates.
- Brake pedal and/or the vehicle body vibration when ABS activates.

These vibrations and sounds are normal to ABS systems and are no cause for concern.

Brake Assist System

Designed to assist the driver by generating greater braking force when you depress the brake pedal hard during emergency braking.

Brake assist system operation

Press the brake pedal firmly for more powerful braking.

When brake assist operates, the pedal may wiggle slightly and an operating noise may be heard. This is normal. Keep holding the brake pedal firmly down.

When Stopped

- **1.** Depress the brake pedal firmly.
- **2.** With the brake pedal depressed, pull up the electric parking brake switch slowly, but fully.
- **3.** Change the shift position to $[\mathbf{P}]$.
- 4. Turn off the power system.
 - ▶ The parking brake and brake system indicator goes off in about 15 seconds.

Always set the parking brake firmly, in particular if you are parked on an incline.

Parking Your Vehicle

The vehicle can roll away if left unattended without confirming that Park is engaged.

A vehicle that rolls away could cause a crash resulting in serious injury or death.

Always keep your foot on the brake pedal until you have confirmed that P is shown on the shift position indicator.

Do not park your vehicle near flammable objects, such as dry grass, oil, or timber. Heat from the exhaust can cause a fire.

≫When Stopped

NOTICE

The following can damage the driveline:

- Depressing the accelerator and brake pedals simultaneously.
- Changing to **P** before the vehicle stops completely.

When facing uphill, do not hold the vehicle by depressing the accelerator pedal.


Doing so may cause the power system to overheat and fail.

In extremely cold temperatures, the parking brake may freeze up if applied. If such temperatures are expected, do not apply the parking brake but, if parking on a slope, either turn the front wheels so they will contact the curb if the vehicle rolls down the slope or block the wheels to keep the vehicle from moving. If you do not take either precaution, the vehicle may roll unexpectedly, leading to a crash.

Parking Sensor System*

The corner and center sensors monitor obstacles around your vehicle, and the beeper, driver information interface and audio/information screen let you know the approximate distance between your vehicle and the obstacle.

■ The sensor location and range

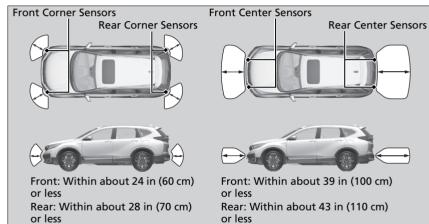

Parking Sensor System*

Even when the system is on, always confirm if there is no obstacle near your vehicle before parking.

The system may not work properly when:


- The sensors are covered with snow, ice, mud or dirt.
- The vehicle is on uneven surface, such as grass, bumps, or a hill.
- The vehicle has been out in hot or cold weather.
- The system is affected by devices that emit ultrasonic waves.
- Driving in bad weather.

The system may not sense:

- Thin or low objects.
- Sonic-absorptive materials, such as snow, cotton, or sponge.
- Objects directly under the bumper.

Do not put any accessories on or around the sensors.

■ Parking sensor system on and off

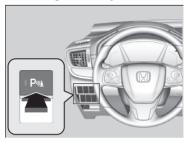

With the power mode in ON, press the parking sensor system button to turn on or off the system. The indicator in the button comes on when the system is on.


The front corner and front center sensors start to detect an obstacle when the transmission is in any position other than [P] or [R], and the vehicle speed is less than 5 mph (8 km/h).

The front corner, rear corner and rear center sensors start to detect an obstacle when the transmission is in \mathbb{R} , and the vehicle speed is less than 5 mph (8 km/h).

≥Parking sensor system on and off

When you set the power mode to ON, the system will be in the previously selected condition.

Screen Operation

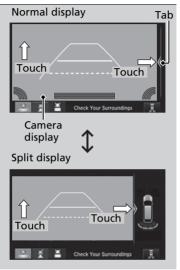

You can switch the display to normal display or split display by touching the tab vicinity or on the camera display.

Screen Operation

If the parking sensor system is off or there is a malfunction in the system, the tab disappears, and the split display returns to the normal display.

You can also switch the display to normal display or split display using the audio/information screen.

■ When the distance between your vehicle and obstacles behind becomes shorter

| Length of the | Distance between the | Bumper and Obstacle | Indicator | Driver Information Interface/ |
|-------------------|---------------------------------------------------------------------------|-----------------------------------------------------------------------------|--------------------|-------------------------------------------------------|
| intermittent beep | Corner Sensors | Center Sensors | Indicator | Audio/Information Screen |
| Moderate | — | Front: About 41-26 in (105-65 cm) Rear: About 45-26 in (115-65 cm) | Blinks in Yellow*1 | |
| Short | Front: About 26-19 in (65-50 cm) Rear: About 30-19 in (75-50 cm) | About 26-19 in (65-50 cm) | Blinks in Amber | Indicators light where the sensor detects an obstacle |
| Very short | About 19-16 in (50-40 cm) | About 19-16 in (50-40 cm) | Biinks in Amder | Check Your proundings |
| Continuous | About 16 in (40 cm) or less | About 16 in (40 cm) or less | Blinks in Red | WARNING: Approaching Object |

*1: At this stage, only the center sensors detect obstacles.

Driving

Turning off All Rear Sensors

- **1.** Make sure that the parking sensor system is not activated. Set the power mode to VEHICLE OFF (LOCK).
- 2. Press and hold the parking sensor system button, and set the power mode to ON.
- **3.** Keep pressing the button for 10 seconds. Release the button when the indicator in the button flashes.
- 4. Press the button again. The indicator in the button goes off.
 - ▶ The beeper sounds twice. The rear sensors are now turned off.

To turn the rear sensors on again, follow the above procedure. The beeper sounds three times when the rear sensors come back on.

Turning off All Rear Sensors

When you shift to $[\underline{\mathbf{R}}]$, the indicator in the parking sensor system button blinks as a reminder that the rear sensors have been turned off.

Cross Traffic Monitor*

Monitors the rear corner areas using the radar sensors when reversing, and alerts you if a vehicle approaching from a rear corner is detected.

The system is convenient when you are backing out of a parking space.


➢Cross Traffic Monitor*

Cross Traffic Monitor cannot detect all approaching vehicles and may not detect an approaching vehicle at all.

Failure to visually confirm that it is safe to back up the vehicle before doing so may result in a collision.

Do not solely rely on the system when reversing; always also use your mirrors, and look behind and to the sides of your vehicle before reversing.

How the System Works

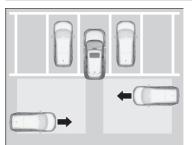

Radar sensors: Underneath the rear bumper corners The system activates when:

- The power mode is in ON.
- The Cross Traffic Monitor system is turned on.

Cross Traffic Monitor On and Off P. 565

- The transmission is in **R**.
- Your vehicle is moving at 3 mph (5 km/h) or lower.

When a vehicle is detected approaching from a rear corner, Cross Traffic Monitor alerts you with a buzzer and a displayed warning.

The system will not detect a vehicle that approaches from directly behind your vehicle, nor will it provide alerts about a detected vehicle when it moves directly behind your vehicle.

The system does not detect or provide alerts for a vehicle that is moving away from your vehicle, and it may alert for pedestrians, bicycles, or stationary objects.

Cross Traffic Monitor*

Cross Traffic Monitor may not detect or may delay alerting an approaching vehicle, or may alert without an approaching vehicle under the following conditions:

- An obstacle, such as another vehicle and a wall, near your vehicle's rear bumper, is blocking the radar sensor's scope.
- Your vehicle is moving at the speed of about 3 mph (5 km/h) or higher.
- A vehicle is approaching at the speed other than between about 6 mph (10 km/h) and 16 mph (25 km/h).
- The system picks up external interference such as other radar sensors from another vehicle or strong radio wave transmitted from a facility nearby.
- Either corner of the rear bumper is covered with snow, ice, mud or dirt.
- When there is bad weather.
- Your vehicle is on an incline.
- Your vehicle is tilted due to a heavy load in the rear.
- Your vehicle is reversing towards a wall, a pole, a vehicle, and so on.

The rear bumper or the sensors have been improperly repaired or the rear bumper has been deformed. Have your vehicle checked by a dealer.

For proper operation, always keep the rear bumper corner area clean.

Do not cover the rear bumper corner area with labels or stickers of any kind.

When the System Detects a Vehicle



An arrow icon appears on the side a vehicle is approaching on the audio/information screen.

When the System Detects a Vehicle

If the $[\underline{\mathbf{s}}]$ on the lower right changes to $[\underline{\mathbf{s}}]$ when the transmission is in $[\mathbf{R}]$, mud snow or ice may have accumulated in the vicinity of the sensor. Check the bumper corners for any obstructions, and thoroughly clean the area if necessary.


If the \Re comes on when the transmission is in \mathbb{R} , there may be a problem with the Cross Traffic Monitor system. Do not use the system and have your vehicle checked by a dealer.

If the display remains the same with the transmission in $[\mathbf{R}]$, there may be a problem with the rear camera system and the Cross Traffic Monitor system. Do not use the system and have your vehicle checked by a dealer.

Cross Traffic Monitor On and Off

You can switch on and off the system using the audio/information screen.

- 1. Select 💼.
- 2. Select Settings.
- 3. Select Camera.
- 4. Select Cross Traffic Monitor.
- 5. Select On or Off, then select OK.

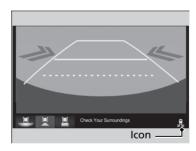


The system can also be turned on and off on the audio/information screen by pressing the CTM icon.

Multi-View Rear Camera

About Your Multi-View Rear Camera

The audio/information screen can display your vehicle's rear view. The display automatically changes to a rear view when the transmission is put into $[\mathbf{R}]$.

Multi-View Rear Camera Display Area

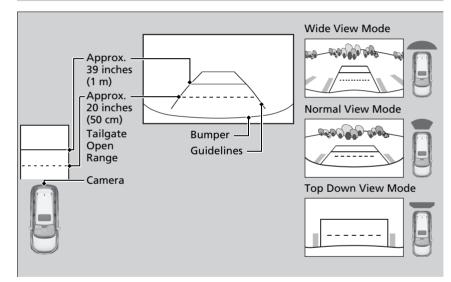

Mabout Your Multi-View Rear Camera

The rear camera view is restricted. You cannot see the corner ends of the bumper or what is underneath the bumper. Its unique lens also makes objects appear closer or farther than they actually are.

Visually confirm that it is safe to drive before backing up. Certain conditions (such as weather, lighting, and high temperatures) may also restrict the rear view. Do not rely on the rearview display which does not give you all information about conditions at the back of your vehicle.

If the camera lens is covered with dirt or moisture, use a soft, moist cloth to keep the lens clean and free of debris.

Models with Display Audio

You can change the **Fixed Guideline** and **Dynamic Guideline** settings.

Customized Features P. 366

Fixed Guideline

On: Guidelines appear when you put the transmission into $[\mathbf{R}]$.

Off: Guidelines do not appear.

Dynamic Guideline

On: Guidelines move according to the steering wheel direction.

Off: Guidelines do not move.

You can view three different camera angles on the rearview display.

Models with color audio system

Press the selector knob to switch the angle.

Models with Display Audio

Touch the appropriate icon to switch the angle.

- 🕮 : Wide view mode
- 🚊 : Normal view mode
- 🚊 : Top down view mode

All models

- If you were last using Wide view mode or Normal view mode, the same view mode will be activated the next time you put the transmission into **R**.
- If you were using Top down view mode before you turned off the power system, Wide view mode will be activated the next time you set the power mode to ON and put the transmission into **R**.
- If you were using Top down view mode and 10 seconds elapsed after you took the transmission out of R, Wide view mode will be activated the next time you put the transmission into R.

≥About Your Multi-View Rear Camera

Models with color audio system

You can change the **Camera Guideline On** or **Off** settings.

Customized Features P. 359

Camera Guideline

On: Guidelines appear when you put the transmission into [**R**]. **Off:** Guidelines do not appear.

Refueling

Fuel Information

Fuel recommendation

Unleaded gasoline, pump octane number 87 or higher

Use of lower octane gasoline can cause a persistent, heavy metallic knocking noise that can lead to engine damage.

Top tier detergent gasoline

Because the level of detergency and additives in gasoline vary in the market, Honda endorses the use of "TOP TIER Detergent Gasoline" where available to help maintain the performance and reliability of your vehicle. TOP TIER Detergent Gasoline meets a new gasoline standard jointly established by leading automotive manufacturers to meet the needs of today's advanced engines.

Qualifying gasoline retailers will, in most cases, identify their gasoline as having met "TOP TIER Detergent Gasoline" standards at the retail location. This fuel is guaranteed to contain the proper level of detergent additives and be free of metallic additives. The proper level of detergent additives, and absence of harmful metallic additives in gasoline, help avoid build-up of deposits in your engine and emission control system.

For further important fuel-related information for your vehicle, or on information on gasoline that does not contain MMT, visit *www.hondacars.com.* for additional information on gasoline. For more information on top tier gasoline, visit *www.toptiergas.com.*

Fuel tank capacity: 14 US gal (53 L)

≫Fuel Information

NOTICE

We recommend quality gasoline containing detergent additives that help prevent fuel system and engine deposits. In addition, in order to maintain good performance, fuel economy, and emissions control, we strongly recommend the use of gasoline that does NOT contain harmful manganese-based fuel additives such as MMT, if such gasoline is available.

Use of gasoline with these additives may adversely affect performance, and cause the malfunction indicator lamp on your instrument panel to come on. If this happens, contact a dealer for service.

Some gasoline today is blended with oxygenates such as ethanol. Your vehicle is designed to operate on oxygenated gasoline containing up to 15% ethanol by volume. Do not use gasoline containing methanol. If you notice any undesirable operating symptoms, try another service station or switch to another brand of gasoline.

How to Refuel

Your fuel tank is not equipped with a fuel filler cap. You can insert the filler nozzle directly into the filler neck. The tank seals itself again when you pull out the filler nozzle.




- **1.** Stop your vehicle with the service station pump on the left side of the vehicle in the rear.
- 2. Turn off the power system.
- **3.** Pull on the fuel fill door release handle under the lower left corner of the dashboard.
 - ► The fuel fill door opens.

➢How to Refuel

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

The fuel filler opening is designed to accept only service station filler nozzles for refueling. Use of smaller diameter tubes (e.g., those used to siphon fuel for other uses) or other non-service station devices can damage the area in and around the filler opening.

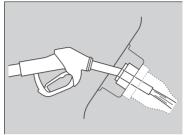

- **4.** Place the end of the filler nozzle on the lower part of filler opening, then insert it slowly and fully.
 - Make sure that the end of the filler nozzle goes down along with the filler pipe.
 - ► Keep the filler nozzle level.
 - ► When the tank is full, the filler nozzle will click off automatically.
 - ► After filling, wait about five seconds before removing the filler nozzle.
- **5.** Shut the fuel fill door by hand.

➢How to Refuel

If the filler nozzle keeps turning off when the tank is not full, there may be a problem with the pump's fuel vapor recovery system. Try filling at another pump. If this does not fix the problem, consult a dealer.

The filler nozzle automatically stops to leave space in the fuel tank so that fuel does not overflow as a result of changes in air temperature.

Do not continue to add fuel after the filler nozzle has automatically stopped. Additional fuel can exceed the full tank capacity.

If you have to refuel your vehicle from a portable container, use the funnel provided with your vehicle.

Refueling From a Portable Fuel Container P. 661

Fuel Economy and CO₂ Emissions

Improving Fuel Economy and Reducing CO₂ Emissions

Achieving fuel economy and reducing CO_2 emissions is dependent on several factors, including driving conditions, load weight, idling time, driving habits, and vehicle condition. Depending on these and other factors, you may not achieve the rated fuel economy of this vehicle.

Maintenance and Fuel Economy

You can optimize your fuel economy with proper maintenance of your vehicle. Always maintain your vehicle in accordance with the messages displayed on the driver information interface.

• Use engine oil with the viscosity recommended.

Recommended Engine Oil P. 584

- Maintain the specified tire pressure.
- Do not load the vehicle with excess cargo.
- Keep your vehicle clean. A buildup of snow or mud on your vehicle's underside adds weight and increases wind resistance.

▶ Improving Fuel Economy and Reducing CO₂ Emissions

Direct calculation is the recommended method to determine actual fuel consumed while driving.



Maintenance

This chapter discusses basic maintenance.

Before Performing Maintenance

| Inspection and Maintenance |
|-------------------------------------------|
| Safety When Performing Maintenance 575 |
| Parts and Fluids Used in Maintenance |
| Service |
| Maintenance Minder™577 |
| Maintenance Under the Hood |
| Maintenance Items Under the Hood 582 |
| Opening the Hood 583 |
| Recommended Engine Oil 584 |
| Oil Check585 |
| Adding Engine Oil586 |
| Changing the Engine Oil and Oil Filter587 |

| Cooling System | 589 |
|------------------------------------------|-----|
| Transmission Fluid | 591 |
| Brake Fluid | 592 |
| Refilling Window Washer Fluid | 593 |
| Replacing Light Bulbs | |
| Checking and Maintaining Wiper Blades | 597 |
| Checking and Maintaining Tires | |
| Checking Tires | 602 |
| Tire and Loading Information Label | 603 |
| Tire Labeling | 603 |
| DOT Tire Quality Grading (U.S. Vehicles) | 605 |
| Wear Indicators | 607 |
| Tire Service Life | 607 |

| Tire and Wheel Replacement | . 608 |
|------------------------------------|-------|
| Tire Rotation | . 609 |
| Winter Tires | . 610 |
| 12-volt Battery | . 611 |
| Remote Transmitter Care | |
| Replacing the Button Battery | . 613 |
| Climate Control System Maintenance | . 614 |
| Cleaning | |
| Interior Care | . 615 |
| Exterior Care | . 617 |
| Accessories and Modifications | . 620 |

Inspection and Maintenance

For your safety, perform all listed inspections and maintenance to keep your vehicle in good condition. If you become aware of any abnormality (noise, smell, insufficient brake fluid, oil residue on the ground, etc.), have your vehicle inspected by a dealer. (Note, however, that service at a dealer is not mandatory to keep your warranties in effect.)

Types of Inspection and Maintenance

Daily inspections

Perform inspections before long distance trips, when washing the vehicle, or when refueling.

Periodic inspections

- Check the brake fluid level monthly.
 Checking the Brake Fluid P. 592
- Check the tire pressure monthly. Examine the tread for wear and foreign objects.
 Checking and Maintaining Tires P. 602
- Check the operation of the exterior lights monthly.
 Replacing Light Bulbs P. 594
- Check the condition of the wiper blades at least every six months.
 Checking and Maintaining Wiper Blades P. 597

➢Inspection and Maintenance

Maintenance, replacement, or repair of emissions control devices and systems may be done by any automotive repair establishment or individuals using parts that are "certified" to EPA standards.

According to state and federal regulations, failure to perform maintenance on the maintenance main items marked with # will not void your emissions warranties. However, all maintenance services should be performed in accordance with the intervals indicated by the driver information interface.

Maintenance Service Items P. 580

If you want to perform complex maintenance tasks that require more skills and tools, you can purchase a subscription to the Service Express website at *www.techinfo.honda.com.*

Authorized Manuals P. 673

If you want to perform maintenance yourself, make sure that you have the necessary tools and skills first. After performing maintenance, update the records in the separate maintenance booklet.

Safety When Performing Maintenance

Some of the most important safety precautions are given here. However, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether you should perform a given task.

Maintenance Safety

- To reduce the possibility of fire or explosion, keep cigarettes, sparks, and flames away from the 12-volt battery, all High Voltage system, and all fuel related parts.
- Never leave rags, towels, or other flammable objects under the hood.
 Heat from the engine and exhaust can ignite them, causing a fire.
- To clean parts, use a commercially available degreaser or parts cleaner, not gasoline.
- Wear eye protection and protective clothing when working with the 12-volt battery or compressed air.
- Engine exhaust contains carbon monoxide, which is poisonous and can kill you.
 Only operate the engine if there is sufficient ventilation.

Safety When Performing Maintenance

Improperly maintaining this vehicle or failing to correct a problem before driving can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations according to the schedules in this owner's manual.

Failure to properly follow maintenance instructions and precautions can cause you to be seriously hurt or killed.

Always follow the procedures and precautions in this owner's manual.

Vehicle Safety

- The vehicle must be in a stationary condition.
 - Make sure your vehicle is parked on level ground, the parking brake is set, and the power system is turned off.
- Be aware that hot parts can burn you.
 - ▶ Make sure to let the power system including the engine and exhaust system cool thoroughly before touching vehicle parts.
- Be aware that moving parts can injure you.
 - Do not activate the power system unless instructed, and keep your hands and limbs away from moving parts. When the power system is on, the engine can automatically start, or the radiator fan may start operating without the engine running.
- Do not touch the high-voltage battery and wiring (orange).

Parts and Fluids Used in Maintenance Service

The use of Honda genuine parts and fluids is recommended when maintaining and servicing your vehicle. Honda genuine parts are manufactured according to the same high quality standards used in Honda vehicles.

Select the Maintenance Minder to see maintenance items that are due soon and to see the percentage of life remaining in the engine oil.

When the engine oil life is less than 15%, a Maintenance Minder message will appear every time you set the power mode to ON, reminding you to bring your vehicle to a dealer for service.


To Use Maintenance Minder™

Displaying the Maintenance Minder Information

Maintenance items, which should be serviced at the same time that you replace the engine oil, appear on the driver information interface.

You can view them on the Maintenance Minder screen at any time.

- 1. Set the power mode to ON.
- 2. Press the 🚯 button several times until 🖋 is displayed.
- **3.** Press **ENTER** to go to the Maintenance Minder screen. The engine oil life appears on the driver information interface along with maintenance items due soon.

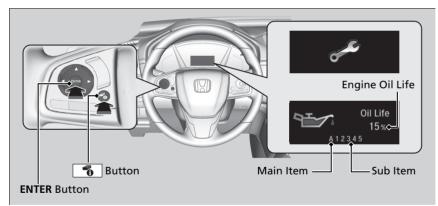

Displaying the Maintenance Minder Information

Based on the engine operating conditions, the remaining engine oil life is calculated and displayed as a percentage.

| Displayed Engine Oil Life (%) | Calculated Engine Oil Life (%) |
|----------------------------------|-----------------------------------|
| 100 | 100 to 91 |
| 90 | 90 to 81 |
| 80 | 80 to 71 |
| 70 | 70 to 61 |
| 60 | 60 to 51 |
| 50 | 50 to 41 |
| 40 | 40 to 31 |
| 30 | 30 to 21 |
| 20 | 20 to 16 |
| 15 | 15 to 11 |
| 10 | 10 to 6 |
| 5 | 5 to 1 |
| 0 | 0 |


There is a list of maintenance main and sub items you can view on the driver information interface.

Maintenance Service Items P. 580

Maintenance Minder Messages on the Driver Information Interface

| Maintenance Message | Oil Life Display | Explanation | Information |
|----------------------------------------------------------------------------|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| _ | Oil Life 50% A 1 2 3 4 5 | When you select the Maintenance Minder screen, it displays codes for maintenance items due at the next engine oil change, along with the percentage of engine oil life remaining. | _ |
| Maintenance Due Soon Maintenance Due Soon A 1 2 3 4 5 | Oil Life 15% A12345 | The engine oil life indicator starts to appear along with other due-soon maintenance item codes when the remaining oil life drops to 15 percent. | The engine oil is approaching the end of its service life. |
| Maintenance Due Now Maintenance Due Now A 1 2 3 4 5 | Oil Life 5% A 1 2 3 4 5 | The remaining engine oil life is 5 to 1 percent. Press the button to switch to another display. | The engine oil has almost reached the end of its service life, and the maintenance items should be inspected and serviced as soon as possible. |
| Maintenance Past Due Maintenance Past Due -10miles A 1 2 3 4 5 | Oil Life -10 miles | The engine oil has passed its service life, and a negative distance appears after driving over 10 miles. The negative distance on the display blinks. | The engine oil life has passed. The maintenance items must be inspected and serviced immediately. |

The system message indicator (\mathbf{j}) comes on along with the Maintenance Minder message.

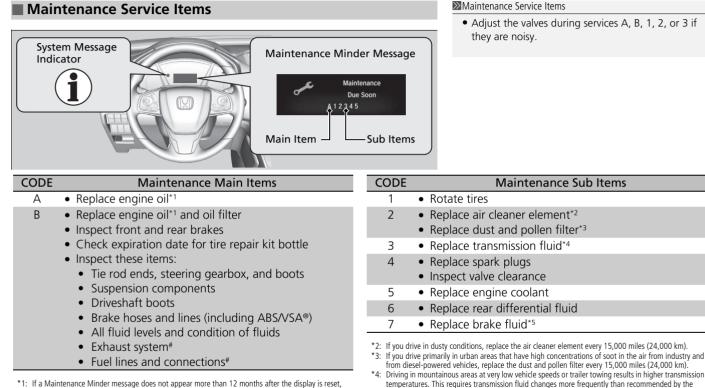

- *1: If a Maintenance Minder message does not appear more than 12 months after the display is reset, change the engine oil every year.
- #: See information on maintenance and emissions warranty.


fluid changed every 47,500 miles (75,000 km) or 3 years. *5: If a Maintenance Minder message does not appear more than 36 months after the display for item 7 is reset, change the brake fluid every 3 years.

Maintenance Minder. If you regularly drive your vehicle under these conditions, have the transmission

Maintenance

Resetting the Display

Reset the maintenance minder information display if you have performed the maintenance service.

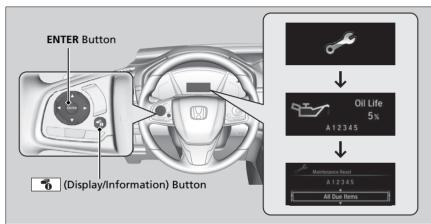

- **1.** Set the power mode to ON.
- 2. Press the 6 (display/information) button repeatedly until the 🖋 appears.
- 3. Press the ENTER button.
- 4. Press and hold the ENTER button for about 10 seconds to enter the reset mode.
- 5. Press ▲ / ▼ to select a maintenance item to reset, or to select All Due Items (You can also select Cancel to end the process).
- 6. Press the ENTER button to reset the selected item.
- 7. Repeat from step 4 for other items you wish to reset.

Resetting the Display

NOTICE


Failure to reset the Maintenance Minder[™] display after a maintenance service results in the system showing incorrect maintenance intervals, which can lead to serious mechanical problems.

The dealer will reset the Maintenance Minder[™] display after completing the required maintenance service. If someone other than a dealer performs maintenance service, reset the Maintenance Minder[™] display yourself.

You can also reset the Maintenance Minder[™] display using the audio/information screen.


How to customize P. 366

Maintenance Items Under the Hood

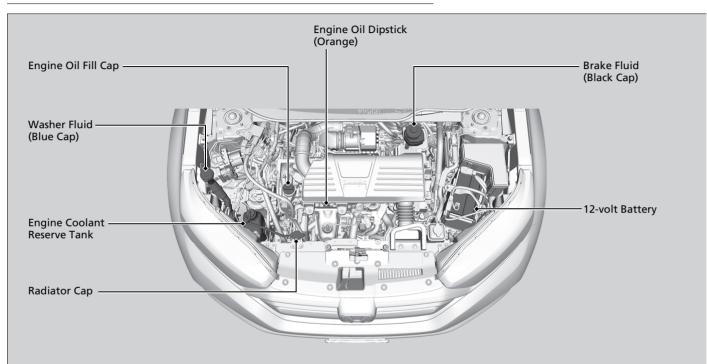

Opening the Hood



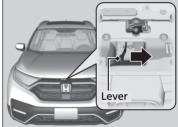

- **1.** Park the vehicle on a level surface, and set the parking brake.
- **2.** Pull the hood release handle under the driver's side lower corner of the dashboard.
 - The hood will pop up slightly.

3. Push the hood latch lever (located under the front edge of the hood to the center) to the side and raise the hood. Once you have raised the hood slightly, you can release the lever.

➢Opening the Hood


The hood support rod can become very hot due to heat from the engine. To ensure against possible burns, do not handle the metal section of the rod: Use the foam grip instead.

NOTICE

Do not open the hood when the wiper arms are raised. The hood will strike the wipers, resulting in possible damage to the hood and/or the wipers.

When closing the hood, check that the hood is securely latched.

If the hood latch lever moves stiffly, or if you can open the hood without lifting the lever, the latch mechanism should be cleaned and lubricated.

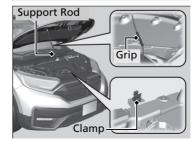

4. Remove the support rod from the clamp using the grip. Mount the support rod in the hood.

When closing, remove the support rod, and stow it in the clamp, then gently lower the hood. Remove your hand at a height of approximately 12 inches (30 cm) and let the hood close.

Recommended Engine Oil

Use a genuine engine oil or another commercial engine oil of suitable type and viscosity (for the ambient temperature) as shown in the image that follows.

Oil is a major contributor to your engine's performance and longevity. If you drive the vehicle with insufficient or deteriorated oil, the engine may fail or be damaged.

| Genuine Engine Oil | Commercial Engine Oil |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Honda Genuine Motor Oil | • Premium-grade 0W-20 detergent oil with an API Certification Seal on the container |
| Honda Genuine Motor Oil 0W-20 * -20 0 20 40 60 80 100°F -30 -20 -10 0 10 20 30 40°C Ambient Temperature | -20 0 20 40 60 80 100°F -30 -20 -10 0 10 20 30 40°C Ambient Temperature |

*1:Formulated to improve fuel economy.

Synthetic oil

You may also use synthetic motor oil if it is labeled with the API Certification Seal and is the specified viscosity grade.

➢Recommended Engine Oil

Engine Oil Additives

Your vehicle does not require oil additives. In fact, they may adversely affect the engine performance and durability.


The following seal indicates the oil is energy conserving and that it meets the American Petroleum Institute's latest requirements.



Oil Check

We recommend that you check the engine oil level every time you refuel. Park the vehicle on level ground.

Turn off the power system. You can check the oil level without the engine having run beforehand. If the engine has been running, wait approximately three minutes before you check the oil.

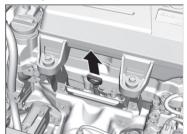

- 1. Remove the dipstick (orange).
- **2.** Wipe the dipstick with a clean cloth or paper towel.
- **3.** Insert the dipstick back all the way into its hole.


≫Oil Check

If the oil level is near or below the lower mark, slowly add oil, being careful not to overfill.

| Upper Mark | k k |
|------------|--------|
|------------|--------|

4. Remove the dipstick again, and check the level. It should be between the upper and lower marks. Add oil if necessary.

Adding Engine Oil

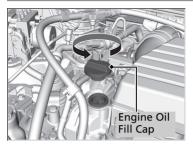

- **1.** Unscrew and remove the engine oil fill cap.
- 2. Add oil slowly.
- **3.** Reinstall the engine oil fill cap, and tighten it securely.
- **4.** Wait for three minutes and recheck the engine oil dipstick.

➢Adding Engine Oil

NOTICE

Do not fill the engine oil above the upper mark. Overfilling the engine oil may result in leaks and engine damage.

If any oil spills, wipe it away immediately. Spilled oil may damage the engine compartment components.


Changing the Engine Oil and Oil Filter

You must change the engine oil and oil filter regularly in order to maintain the engine's lubrication. The engine may be damaged if they are not changed regularly.

Turning the power system on automatically starts the engine if the High Voltage battery charge level gauge shows two segments or less.

High Voltage Battery Charge Level Gauge P. 125

Change the oil and filter in accordance with the maintenance message on the driver information interface.

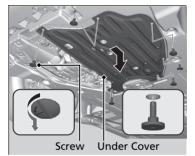



- **1.** Run the engine until it reaches normal operating temperature, and then turn the engine off.
- **2.** Open the hood and remove the engine oil fill cap.
- **3.** Remove the Phillips-head screws and slotted head screws by turning 90° counter-clockwise on the undercarriage and remove the under cover.
- **4.** Remove the drain bolt and washer from the bottom of the engine, and drain the oil into a suitable container.

Changing the Engine Oil and Oil Filter

NOTICE

You may damage the environment if you do not dispose of the oil in a suitable way. If you are changing the oil by yourself, appropriately dispose of the used oil. Put the oil in a sealed container and take it to a recycling center. Do not throw the oil away into a garbage can or onto the ground.

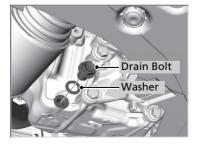

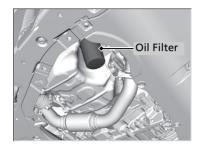

- **5.** Remove the oil filter and dispose of the remaining oil.
- **6.** Check that the filter gasket is not stuck to the engine contact surface.

▶ If it is stuck, you must detach it.

- **7.** Wipe away dirt and dust adhering to the contact surface of the engine block, and install a new oil filter.
 - Apply a light coat of new engine oil to the filter gasket.
- **8.** Put a new washer on the drain bolt, then reinstall the drain bolt.
 - ► Tightening torque:

30 lbf·ft (40 N·m, 4.0 kgf·m)

- **9.** Pour the recommended engine oil into the engine.
 - Engine oil change capacity (including filter): 4.0 US qt (3.8 L)
- **10.** Reinstall the engine oil fill cap securely and start the engine.
- **11.** Run the engine for a few minutes, and then check that there is no leak from the drain bolt or oil filter.
- **12.** Stop the engine, wait for three minutes, and then check the oil level on the dipstick.
 - ▶ If necessary, add more engine oil.
- **13.** Reinstall the under cover in the same order it was removed.

Changing the Engine Oil and Oil Filter

You will need a special wrench to replace the oil filter. You can buy this wrench from a dealer.

When installing the new oil filter, follow the instructions supplied with the oil filter.

Reinstall the engine oil fill cap. Start the engine. The low oil pressure indicator should go off within five seconds. If it does not, turn off the engine, and check your work.

Be sure to verify that the oil filter is designed for your vehicle. A genuine Honda oil filter is recommended for optimum lubrication flow and filtration properties to assure the reliability of the engine.


Cooling System

Specified coolant: Honda Long Life Antifreeze/Coolant Type 2

This coolant is premixed with 50% antifreeze and 50% water. Do not add any straight antifreeze or water.

We recommend you check the engine coolant level every time you refuel. Check the reserve tank first. If it is completely empty, also check the coolant level in the radiator. Add the engine coolant accordingly.

Reserve Tank

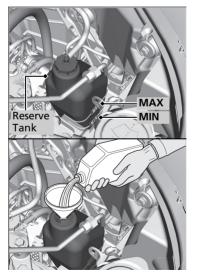

- 1. Make sure the engine and radiator are cool.
- 2. Check the amount of coolant in the reserve tank.
 - If the coolant level is below the MIN mark, add the specified coolant until it reaches the MAX mark.
- 3. Inspect the cooling system for leaks.

➢Cooling System

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.


NOTICE

Genuine Honda engine coolant is a 50/50 mixture of antifreeze and water that can withstand freezing at temperatures as low as about -31°F (-35°C). If your vehicle is consistently subjected to temperatures below this, the concentration of antifreeze in the coolant should be increased. Consult a dealer for details.

If Honda antifreeze/coolant is not available, you may use another major brand of non-silicate coolant as a temporary replacement. Check that it is a high quality coolant recommended for aluminum engines. Continued use of any non-Honda coolant can result in corrosion, causing the cooling system to malfunction or fail. Have the cooling system flushed and refilled with Honda antifreeze/coolant as soon as possible.

Do not add rust inhibitors or other additives to your vehicle's cooling system. They may not be compatible with the coolant or with the engine components.

Radiator

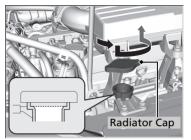

- 1. Make sure the engine and radiator are cool.
- **2.** Turn the radiator cap 1/8 turn counterclockwise and relieve any pressure in the cooling system.
- **3.** Push down and turn the radiator cap counter-clockwise to remove it.
- **4.** The coolant level should be up to the base of the filler neck. Add coolant if it is low.
- **5.** Put the radiator cap back on, and tighten it fully.

≫Radiator

NOTICE

Pour the fluid slowly and carefully so you do not spill any. Clean up any spills immediately; they can damage components in the engine compartment.

Transmission Fluid

Specified fluid: Honda ATF DW-1

Have a dealer check the fluid level and replace if necessary.

Do not attempt to check or change the transmission fluid yourself.

➢Transmission Fluid

NOTICE

Do not mix Honda ATF DW-1 with other transmission fluids.


Using a transmission fluid other than Honda ATF DW-1 may adversely affect the operation and durability of your vehicle's transmission, and damage the transmission.

Any damage caused by using a transmission fluid that is not equivalent to Honda ATF DW-1 is not covered by Honda's new vehicle limited warranty.

Brake Fluid

Specified fluid: Honda Heavy Duty Brake Fluid DOT 3

Checking the Brake Fluid

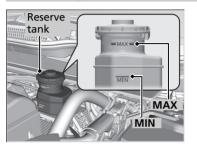

The fluid level should be between the **MIN** and **MAX** marks on the side of the reserve tank.

≫Brake Fluid

NOTICE

Brake fluid marked DOT 5 is not compatible with your vehicle's braking system and can cause extensive damage.

If the specified brake fluid is not available, you should use only DOT 3 or DOT 4 fluid from a sealed container as a temporary replacement.

Using any non-Honda brake fluid can cause corrosion and decrease the longevity of the system. Have the brake system flushed and refilled with Honda Heavy Duty Brake Fluid DOT 3 as soon as possible.

If the brake fluid level is at or below the **MIN** mark, have a dealer inspect the vehicle for leaks or worn brake pads as soon as possible.

Refilling Window Washer Fluid

Check the amount of window washer fluid by looking at the reservoir.

If the level is low, fill the washer reservoir.



Pour the washer fluid carefully. Do not overflow the reservoir.

➢Refilling Window Washer Fluid

NOTICE

Do not use engine antifreeze or a vinegar/water solution in the windshield washer reservoir. Antifreeze can damage your vehicle's paint. A vinegar/water solution can damage the windshield washer pump.

Use only commercially available windshield washer fluid.

Avoid prolonged use of hard water to prevent lime scale build up.

Replacing Light Bulbs

Headlights

Headlights are LED type. Have an authorized Honda dealer inspect and replace the light assembly.

Fog Lights*

Fog lights are LED type. Have an authorized Honda dealer inspect and replace the light assembly.

Parking/Daytime Running Lights

Parking/daytime running lights are LED type. Have an authorized Honda dealer inspect and replace the light assembly.

Front Turn Signal/Front Side Marker Lights

Front turn signal lights/front side marker lights are LED type. Have an authorized Honda dealer inspect and replace the light assembly.

Side Turn Signal/Emergency Indicator Lights*

Door mirror side turn signal lights are LED type. Have an authorized Honda dealer inspect and replace the light assembly.

Brake/Taillights, Rear Turn Signal Lights and Rear Side Marker Lights

Brake/taillights, rear turn signal lights and rear side marker lights are LED type. Have an authorized Honda dealer inspect and replace the light assembly.


Headlights

The headlight aim is set by the factory, and does not need to be adjusted. However, if you regularly carry heavy items in the cargo area or tow a trailer, have the aiming readjusted at a dealer or by a qualified technician.

Taillights and Back-Up Light Bulbs

When replacing, use the following bulbs.

Taillight: LED Back-Up Light: 16W

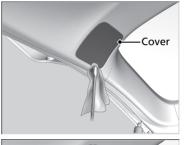

Bulb Socket

- **1.** Remove the cover by prying on the edge using a flat-tip screwdriver.
 - Wrap the flat-tip screwdriver with a cloth to prevent scratches.

- **2.** Turn the socket counter-clockwise and remove it. Remove the old bulb.
- 3. Insert a new bulb.

Taillights and Back-Up Light Bulbs

Taillights are LED type. Have an authorized Honda dealer inspect and replace the light assembly.

Rear License Plate Light

Rear license plate light is LED type. Have an authorized Honda dealer inspect and replace the light assembly.

High-Mount Brake Light

High-mount brake light is LED type. Have an authorized Honda dealer inspect and replace the light assembly.

Checking Wiper Blades

If the wiper blade rubber has deteriorated, it will leave streaks and the hard surfaces of the blade may scratch the window glass.

Changing the Front Wiper Blade Rubber



- **1.** Set the power mode to VEHICLE OFF.
- 2. While holding the wiper switch in the **MIST** position, set the power mode to ON, then to VEHICLE OFF.
 - Both wiper arms are set to the maintenance position as shown in the image.
- **3.** Lift the driver side wiper arm first, then the passenger side.


➢Changing the Front Wiper Blade Rubber

NOTICE

Avoid dropping the wiper arm onto the windshield, it may damage the wiper arm and/or the windshield.






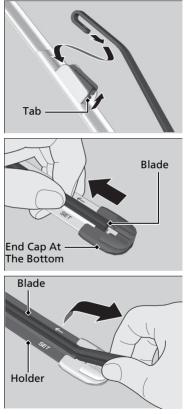


4. Press up on and hold the tab, then slide the holder off the wiper arm.

5. Pull the end of the wiper blade in the direction of the arrow in the image until it is out of the holder's end cap.

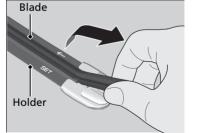


6. Pull the wiper blade in the opposite direction to slide it out of the holder.

Maintenance

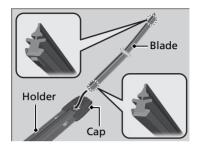

- **7.** Slide the new wiper blade onto the holder from the bottom end.
 - The tab on the holder should fit in the indent of the wiper blade.
- **8.** Slide the holder onto the wiper arm, then push down the lock tab.
- **9.** Lower the passenger side wiper arm first, then the driver side.
- **10.** Set the power mode to ON and hold the wiper switch in the **MIST** position until both wiper arms return to the standard position.

Changing the Rear Wiper Blade Rubber

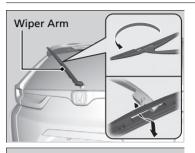


- **1.** Raise the wiper arm off.
- **2.** Pivot the bottom end of the holder up until it comes off from the wiper arm.

➢Changing the Rear Wiper Blade Rubber


NOTICE

Avoid dropping the wiper arm, it may damage the rear window.

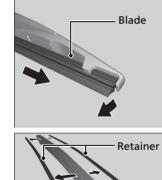

3. Slide the blade out of the holder.

4. Remove the retainers from wiper blade and mount to a new rubber blade.

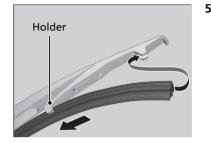

- **5.** Slide the new wiper blade onto the holder.
 - Make sure it is engaged correctly, then install the wiper blade assembly onto the wiper arm.

Checking Tires

To safely operate your vehicle, your tires must be of the proper type and size, in good condition with adequate tread, and properly inflated.

■ Inflation guidelines

Properly inflated tires provide the best combination of handling, tread life, and comfort. Refer to the driver's doorjamb label or specifications page for the specified pressure.

Underinflated tires wear unevenly, adversely affect handling and fuel economy, and are more likely to fail from overheating.

Overinflated tires make your vehicle ride harshly, are more prone to road hazards, and wear unevenly.

Every day before you drive, look at each of the tires. If one looks lower than the others, check the pressure with a tire gauge.

At least once a month or before long trips, use a gauge to measure the pressure in all tires. Even tires in good condition can lose 1–2 psi (10–20 kPa, 0.1–0.2 kgf/cm²) per month.

Inspection guidelines

Every time you check inflation, also examine the tires and valve stems. Look for:

- Bumps or bulges on the side or in the tread. Replace the tire if you find any cuts, splits, or cracks in the side of the tire. Replace it if you see fabric or cord.
- Remove any foreign objects and inspect for air leaks.
- Uneven tread wear. Have a dealer check the wheel alignment.
- Excessive tread wear.
 - Wear Indicators P. 607
- Cracks or other damage around valve stem.

Checking Tires

Using tires that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tire inflation and maintenance.

Measure the air pressure when tires are cold. This means the vehicle has been parked for at least three hours, or driven less than 1 mile (1.6 km). If necessary, add or release air until the specified pressure is reached.

If checked when hot, tire pressure can be as much as 4-6 psi (30–40 kPa, 0.3–0.4 kgf/cm²) higher than if checked when cold.


Whenever tire pressure is adjusted, you must calibrate the TPMS.

Tire Pressure Monitoring System (TPMS) P. 489


Have a dealer check the tires if you feel a consistent vibration while driving. New tires and any that have been removed and reinstalled should be properly balanced.

Tire and Loading Information Label

The label attached to the driver's doorjamb provides necessary tire and loading information.

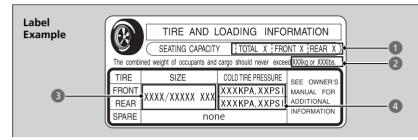

Tire Labeling

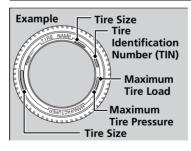

The tires that came on your vehicle have a number of markings. Those you should be aware of are described as shown.


■Tire and Loading Information Label

The tire and loading information label attached to the driver's doorjamb contains:

- 1 The number of people your vehicle can carry.
- 2 The total weight your vehicle can carry. Do not exceed this weight.
- 3 The original tire sizes for front, rear, and spare.

The proper cold tire pressure for front, rear, and spare.

≫Tire Sizes

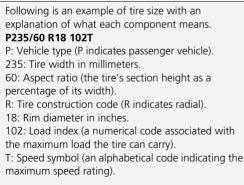

Tire Sizes

Whenever tires are replaced, they should be replaced with tires of the same size.

Tire Identification Number (TIN)

The tire identification number (TIN) is a group of numbers and letters that look like the example in the side column. TIN is located on the sidewall of the tire.

Glossary of Tire Terminology

Cold Tire Pressure – The tire air pressure when the vehicle has been parked for at least three hours or driven less than 1 mile (1.6 km).

Load Rating – Means the maximum load that a tire is rated to carry for a given inflation pressure.

Maximum Inflation Pressure – The maximum tire air pressure that the tire can hold.

Maximum Load Rating – Means the load rating for a tire at the maximum permissible inflation pressure for that tire.

Recommended Inflation Pressure – The cold tire inflation pressure recommended by the manufacturer.

Treadwear Indicators (TWI) – Means the projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread.

➢Tire Identification Number (TIN)

DOT B97R FW6X 2209

DOT: This indicates that the tire meets all requirements of the U.S. Department of Transportation. B97R: Manufacturer's identification mark. FW6X: Tire type code. 22 09: Date of manufacture.

Year Week

DOT Tire Quality Grading (U.S. Vehicles)

The tires on your vehicle meet all U.S. Federal Safety Requirements. All tires are also graded for treadwear, traction, and temperature performance according to Department of Transportation (DOT) standards. The following explains these gradings.

Uniform Tire Quality Grading

Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width.

Treadwear

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. For example, a tire graded 150 would wear one and one-half (1 1/2) times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate. ➢Uniform Tire Quality Grading

For example: Treadwear 200 Traction AA Temperature A

All passenger car tires must conform to Federal Safety Requirements in addition to these grades.

Traction

The traction grades, from highest to lowest, are AA, A, B, and C. Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

Temperature

The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.


≫Traction

Warning: The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning, or peak traction characteristics.

≫Temperature

Warning: The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

Wear Indicators

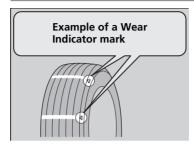

The groove where the wear indicator is located is 1/16 inch (1.6 mm) shallower than elsewhere on the tire. If the tread has worn so that the indicator is exposed, replace the tire. **Worn out tires have poor traction on wet roads.**

Tire Service Life

The life of your tires is dependent on many factors, including driving habits, road conditions, vehicle loading, inflation pressure, maintenance history, speed, and environmental conditions (even when the tires are not in use).

In addition to regular inspections and inflation pressure maintenance, it is recommended that you have annual inspections performed once the tires reach five years old. All tires should be removed from service after 10 years from the date of manufacture, regardless of their condition or state of wear.

Tire and Wheel Replacement

Replace your tires with radials of the same size, load range, speed rating, and maximum cold tire pressure rating (as shown on the tire's sidewall). Using tires of a different size or construction can cause certain vehicle systems such as the ABS and Vehicle Stability Assist™ (VSA®) system to work incorrectly.

It is best to replace all four tires at the same time. If that isn't possible, replace the front or rear tires in pairs.

Make sure that the wheel's specifications match those of the original wheels.

➢Tire and Wheel Replacement


Installing improper tires on your vehicle can affect handling and stability. This can cause a crash in which you can be seriously hurt or killed.

Always use the size and type of tires recommended in this owner's manual.


Tire Rotation

Rotating tires according to the maintenance messages on the driver information interface helps to distribute wear more evenly and increase tire life.

■ Tires without rotation marks

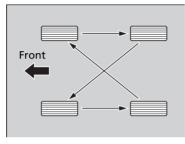

Tires with rotation marks

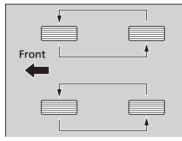


Rotate the tires as shown here.

Rotate the tires as shown here

➢Tire Rotation

Tires with directional tread patterns should only be rotated front to back (not from one side to the other). Directional tires should be mounted with the rotation indication mark facing forward, as shown below.

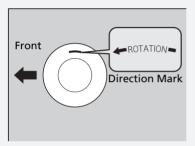

Whenever tires are rotated, you must calibrate the TPMS.

Tire Pressure Monitoring System (TPMS) P. 489

Winter Tires

If driving on snowy or frozen roads, mount all season marked M+S tires, snow tires, or tire chains; reduce speed; and maintain sufficient distance between vehicles when driving.

Be particularly careful when operating the steering wheel or brakes to prevent skidding.

Use tire chains, snow tires, or all season tires when necessary or according to the law.

When mounting, refer to the following points.

For winter tires:

- Select the size and load ranges that are the same as the original tires.
- Mount the tires to all four wheels.

For tire chains:

- Install them on the front tires only.
- Because your vehicle has limited tire clearance, we strongly recommend using the chains listed below:

Models with 235/65R17 tires

Models with 235/55R19 tires

Cable-type: SCC RADIAL CHAIN TC2111MM

Models with 235/60R18 tires

Cable-type: SCC RADIAL CHAIN TC2212MM

- Follow the chain manufacturer's instruction when installing. Mount them as tightly as you can.
- Check that the chains do not touch the brake lines or suspension.
- Drive slowly.

Winter Tires

Using the wrong chains, or not properly installing chains, can damage the brake lines and cause a crash in which you can be seriously injured or killed.

Follow all instructions in this owner's manual regarding the selection and use of tire chains.


NOTICE

Traction devices that are the wrong size or improperly installed can damage your vehicle's brake lines, suspension, body, and wheels. Stop driving if they are hitting any part of the vehicle.

When tire chains are mounted, follow the chain manufacturer's instructions regarding vehicle operational limits.

If your vehicle is equipped with summer tires, be aware that these tires are not designed for winter driving conditions. For more information, contact a dealer.

Checking the 12-volt Battery

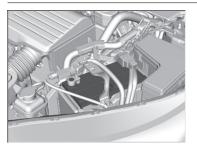

The condition of the battery is monitored by a sensor located on the negative terminal of the battery. If there is a problem with this sensor, the driver information interface will display a warning message. If this happens, have your vehicle inspected by a dealer.

Check the battery terminals for corrosion monthly.

If your vehicle's battery is disconnected or goes dead:

• The audio system is disabled.

Audio System Theft Protection P. 243

• The clock resets*.

Dick P. 148

≥12-volt Battery

The battery gives off explosive hydrogen gas during normal operation.

A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.

When conducting any battery maintenance, wear protective clothing and a face shield, or have a skilled technician do it.

WARNING: Battery post, terminals, and related accessories contain lead and lead compounds. **Wash your hands after handling.**

Charging the 12-volt Battery

Disconnect both battery cables to prevent damaging your vehicle's electrical system. Always disconnect the negative (–) cable first, and reconnect it last.

12-volt Battery

When you find corrosion, clean the battery terminals by applying a baking powder and water solution. Clean the terminals with a damp towel. Cloth/towel dry the battery. Coat the terminals with grease to help prevent future corrosion.

When replacing the battery, the replacement must be of the same specifications. Consult a dealer for more information.

The indicators for the Adaptive Cruise Control (ACC) with Low Speed Follow, Road Departure Mitigation System, Vehicle Stability Assist[™] (VSA®) system, Vehicle Stability Assist[™] (VSA®) OFF, Collision Mitigation Braking System[™] (CMBS[™]), Low Tire Pressure/TPMS, and Parking Brake and Brake System (Amber) may come on along with a message in the Driver Information Interface after reconnecting the 12-volt battery. Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer.


Replacing the Button Battery

If the indicator does not come on when the button is pressed, replace the battery.



Battery type: CR2032

1. Remove the built-in key.

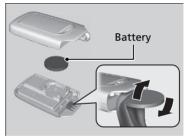

- **2.** Remove the upper half of the cover by carefully prying on the edge with a coin.
 - Wrap a coin with a cloth to prevent scratching the smart entry remote.
 - Remove carefully to avoid losing the buttons.
- **3.** Make sure to replace the battery with the correct polarity.

➢Replacing the Button Battery

CHEMICAL BURN HAZARD

The battery that powers the remote transmitter can cause severe internal burns and can even lead to death if swallowed. Keep new and used batteries away from children.

If you suspect that a child has swallowed the battery, seek medical attention immediately.

NOTICE

An improperly disposed of battery can damage the environment. Always confirm local regulations for battery disposal.

Replacement batteries are commercially available or at a dealer.

Air Conditioning

To ensure proper and safe operation, the Society of Automotive Engineers (SAE J2845) recommends that the refrigerant system only be serviced by trained and certified technicians.

Never repair or replace the air conditioning evaporator (cooling coil) with one removed from a used or salvaged vehicle.

New replacement mobile air conditioning evaporators must be certified (and labeled) as meeting SAE Standard J2842.

Dust and Pollen Filter

The climate control system is equipped with a dust and pollen filter that collects pollen, dust, and other debris in the air. The Maintenance Minder™ messages will let you know when to replace the filter.

We recommend that you replace the dust and pollen filter sooner when using your vehicle in areas with high concentrations of dust.

➢Climate Control System Maintenance

NOTICE

Vented refrigerant is harmful to the environment. To avoid refrigerant from venting, never replace the evaporator with one removed from a used or salvaged vehicle.

Refrigerant in your vehicle's air conditioning system is flammable and can be ignited during servicing if proper procedures are not followed.

The air conditioner label is found under the hood: Safety Labels P. 85 Specifications P. 664

➢Dust and Pollen Filter

If the airflow from the climate control system deteriorates noticeably, and the windows fog up easily, the filter may need to be replaced. Please contact a dealer for replacement.


Cleaning

Interior Care

Use a damp cloth with a mixture of mild detergent and warm water to remove dirt. Use a clean cloth to remove detergent residue.

Cleaning Seat Belts

Use a soft brush with a mixture of mild soap and warm water to clean the seat belts. Let the belts air dry. Wipe the loops of the seat belt anchors using a clean cloth.

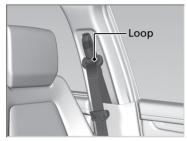

Cleaning the Window

Wipe using a glass cleaner.

➢Interior Care

Do not spill liquids inside the vehicle. Electrical devices and systems may malfunction if liquids are splashed on them.

Do not use silicone based sprays on electrical devices such as audio devices and switches. Doing so may cause the items to malfunction or cause a fire inside the vehicle.

If a silicone based spray is inadvertently used on electrical devices, consult a dealer.

Depending on their composition, chemicals and liquid aromatics may cause discoloration, wrinkles, and cracking to resin-based parts and textiles. Do not use alkali solvents or organic solvents such as benzene or gasoline.

After using chemicals, make sure to gently wipe them away using a dry cloth.


Do not place used cloths on top of resin based parts or textiles for long periods of time without washing.

➢Cleaning the Window

Wires are mounted to the inside of the rear window. Wipe along the same direction as the wires with a soft cloth so as not to damage them.

Be careful not to spill fluids, such as water or glass cleaner, on or around the cover of both the front sensor camera and the rainfall/light sensor*.

Floor Mats

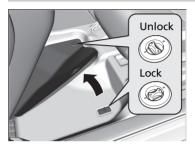

The driver's floor mat hooks over floor anchors, which keep them from sliding forward. To remove a mat for cleaning, turn the anchor knobs to the unlock position. When reinstalling the mat after cleaning, turn the knobs to the lock position.

Do not put additional floor mats on top of the anchored mat.

Maintaining Genuine Leather*

To properly clean leather:

- 1. Use a vacuum or soft dry cloth first to remove any dirt or dust.
- **2.** Clean the leather with a soft cloth dampened with a solution comprised of 90% water and 10% neutral soap.
- **3.** Wipe away any soap residue with a clean damp cloth.
- 4. Wipe away residual water and allow leather to air dry in the shade.

➢Floor Mats

If you use any floor mats that were not originally provided with your vehicle, make sure they are designed for your specific vehicle, fit correctly, and are securely anchored by the floor anchors. Position the rear seat floor mats properly. If they are not properly positioned, the floor mats can interfere with the front seat functions.

Maintaining Genuine Leather*

It is important to clean or wipe away dirt or dust as soon as possible. Spills can soak into leather resulting in stains. Dirt or dust can cause abrasions in the leather. In addition, please note that some dark colored clothing can rub onto the leather seats resulting in discoloration or stains.

Exterior Care

Dust off the vehicle body after you drive.

Regularly inspect your vehicle for scratches on painted surfaces. A scratch on a painted surface can result in body rust. If you find a scratch, promptly repair it.

Washing the Vehicle

Wash the vehicle regularly. Wash more frequently when driving in the following conditions:

- If driving on roads with road salt.
- If driving in coastal areas.
- If tar, soot, bird droppings, insects, or tree sap are stuck to painted surfaces.

Using an Automated Car Wash

- Make sure to follow the instructions indicated on the automated car wash.
- Fold in the door mirrors.
- For models equipped with automatic intermittent wipers, turn the wipers off.

Using High Pressure Cleaners

- Keep sufficient distance between the cleaning nozzle and the vehicle body.
- Take particular care around the windows. Standing too close may cause water to enter the vehicle interior.
- Do not spray high pressure water directly into the engine compartment. Instead, use low pressure water and a mild detergent.

Washing the Vehicle

Do not spray water into the air intake vents. It can cause a malfunction.



Do not spray water onto the capless unit when the fuel fill door is open. It can cause damage to the fuel system or engine.

If you need to lift the wiper arms away from the windshield, first set the wiper arms to the maintenance position.

Changing the Front Wiper Blade Rubber P. 597

≥Using an Automated Car Wash

When using an automated car wash that pulls the vehicle through with a conveyor, make sure the transmission in \boxed{N} position.

If you want to keep the transmission in N position P. 477

Applying Wax

A good coat of automotive body wax helps protect your vehicle's paint from the elements. Wax will wear off over time and expose your vehicle's paint to the elements, so reapply as necessary.

Maintaining the Bumpers and Other Resin Coated Parts

If you get gasoline, oil, engine coolant, or battery fluid on resin coated parts, they may be stained or the coating may peel. Promptly wipe it away using a soft cloth and clean water.

Cleaning the Window

Wipe using a glass cleaner.

Maintaining Aluminum Wheels

Aluminum is susceptible to deterioration caused by salt and other road contaminants. When necessary, as early as possible use a sponge and mild detergent to wipe away these contaminants. Do not use a stiff brush or harsh chemicals (including some commercial wheel cleaners). These can damage the protective finish on aluminum alloy wheels, resulting in corrosion. Depending on the type of finish, the wheels also may lose their luster or appear burnished. To avoid water stains, wipe the wheels dry with a cloth while they are still wet.

➢Applying Wax

NOTICE

Chemical solvents and strong cleaners can damage the paint, metal, and plastic on your vehicle. Wipe away spills immediately.

Maintaining the Bumpers and Other Resin Coated Parts

Ask a dealer about the correct coating material when you want to repair the painted surface of the parts made of resin.

Fogged Exterior Light Lenses

The inside lenses of exterior lights (headlights, brake lights, etc.) may fog temporarily if you have driven in the rain, or after the vehicle has been run through a car wash. Dew condensation also may build up inside the lenses when there is a significant enough difference between the ambient and inside lens temperatures (similar to vehicle windows fogging up in rainy conditions). These conditions are natural processes, not structural design problems in the exterior lights.

Lens design characteristics may result in moisture developing on the light lens frame surfaces. This also is not a malfunction.

However, if you see large amounts of water accumulation, or large water drops building up inside the lenses, have your vehicle inspected by a dealer.

Accessories

When installing accessories, check the following:

- Do not install accessories on the windshield. They can obstruct your view and delay your reaction to driving conditions.
- Do not install any accessories over areas marked SRS Airbag, on the sides or backs of the front seats, on front or side pillars, or near the side windows. Accessories installed in these areas may interfere with proper operation of the vehicle's airbags or may be propelled into you or another occupant if the airbags deploy.
- Be sure electronic accessories do not overload electrical circuits or interfere with proper operation of your vehicle.

Fuses P. 655

• Before installing any electronic accessory, have the installer contact a dealer for assistance. If possible, have a dealer inspect the final installation.

➢Accessories and Modifications

Improper accessories or modifications can affect your vehicle's handling, stability, and performance, and cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding accessories and modifications.

Use of improperly designed, engineered or manufactured high-voltage battery assemblies could cause a fire in your vehicle.

A vehicle fire could result in a crash or injury.

Only use a genuine Honda high-voltage battery assembly, or its equivalent, in your vehicle.

Honda Genuine accessories are recommended to ensure proper operation on your vehicle.

Modifications

Do not modify your vehicle in a manner that may affect its handling, stability, or reliability, or install non-genuine Honda parts or accessories that may have a similar effect.

Even minor modifications to vehicle systems can affect overall vehicle performance. Always make sure all equipment is properly installed and maintained, and do not make any modification to your vehicle or its systems that might cause your vehicle to no longer meet federal, state, province, territory, and local regulations.

The on-board diagnostic port (OBD-II/SAE J1962 connector) installed on this vehicle is intended to be used with automobile system diagnostic devices or with other devices that Honda has approved. Use of any other type of device may adversely affect the vehicle's electronic systems or allow them to be compromised, possibly resulting in a system malfunction, drained battery, or other unexpected problems.

Do not modify or attempt to repair your vehicle's high-voltage hybrid power system or otherwise modify vehicle electrical systems. Disassembling or modifying electrical equipment can result in a crash or a fire.

If you ever need to replace your vehicle's high-voltage battery assembly outside of warranty coverage, we highly recommend that you only use a genuine Honda high-voltage battery assembly. Genuine Honda high-voltage battery assemblies are designed to work with your vehicle's hybrid power system and have been designed, engineered and manufactured to avoid overcharging situations. Non-genuine high-voltage battery assemblies may not have been similarly designed, engineered and manufactured, and installation of such assemblies could result in overcharging, fires, loss of power, or other conditions that may increase the likelihood of a crash or injury.

Handling the Unexpected

This chapter explains how to handle unexpected troubles.

| 10015 | |
|--------------------------------------|-----|
| Types of Tools | 624 |
| If a Tire Goes Flat | |
| Temporarily Repairing a Flat Tire | 625 |
| Handling of the Jack | 639 |
| Power System Won't Start | |
| Checking the Procedure | 640 |
| If the Smart Entry Remote Battery is | |
| Weak | 641 |
| Emergency Power System Off | 642 |
| Jump Starting | 643 |
| Overheating | |
| How to Handle Overheating | 645 |
| | |

Tools

Indicator, Coming On/Blinking


| If the Low Oil Pressure Indicator C | omes |
|-----------------------------------------|--------|
| On | 648 |
| If the 12-volt Battery Charging Syste | em |
| Indicator Comes On | . 648 |
| If the Malfunction Indicator Lamp Co | omes |
| On or Blinks | . 649 |
| If the Brake System Indicator (Red) C | Comes |
| On or Blinks | . 650 |
| If the Brake System Indicator (Red) Con | nes On |
| or Blinks at the Same Time When the | Brake |
| System Indicator (Amber) Comes On. | . 651 |
| | |

| If the Electric Power Steering (EPS) S | System |
|----------------------------------------|---------------------|
| Indicator Comes On | 652 |
| If the Low Tire Pressure/TPMS Indica | ator |
| Comes On or Blinks | 653 |
| If the Transmission System Indicator | ⁻ Blinks |
| along with the Warning Message. | 654 |
| Fuses | |
| Fuse Lesstions | CEE |

| Fuse Locations | 655 |
|-------------------------------------|------|
| Inspecting and Changing Fuses | 658 |
| Emergency Towing | 659 |
| When You Cannot Open the Tailgate . | .660 |
| Refueling | .661 |

Tools

Types of Tools

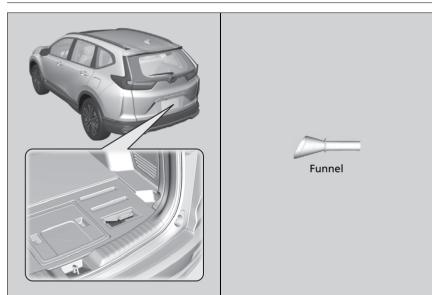

≫Types of Tools

The tools are stored in the cargo area.

Temporarily Repairing a Flat Tire

If the tire has a large cut or is otherwise severely damaged, you will need to have the vehicle towed. If the tire only has a small puncture, from a nail for instance, you can use the temporary tire repair kit so that you can drive to the nearest service station for a more permanent repair.


If a tire goes flat while driving, grasp the steering wheel firmly, and brake gradually to reduce speed. Then stop in a safe place.

- **1.** Park the vehicle on a firm, level, non-slippery surface and apply the parking brake.
- **2.** Put the transmission into **P**.
- **3.** Turn on the hazard warning lights and set the power mode to VEHICLE OFF (LOCK).

➢Temporarily Repairing a Flat Tire


The kit should not be used in the following situations. Instead, contact a dealer or roadside assitance to have the vehicle towed.

- The tire sealant has expired.
- More than one tire is punctured.
- The puncture or cut is larger than 3/16 inch (4.8 mm).
- The tire side wall is damaged or the puncture is outside the contact area.

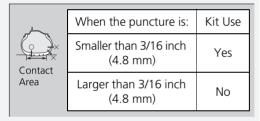

- Damage has been caused by driving with the tire extremely under inflated.
- The tire bead is no longer seated.
- The rim is damaged.

Do not remove a nail or screw that punctured the tire. If you remove it from the tire, you may not be able to repair the puncture using the kit.

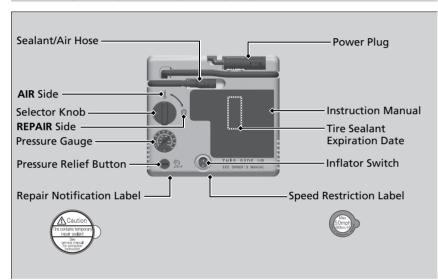


Getting Ready to Temporarily Repair the Flat Tire


Setting Ready to Temporarily Repair the Flat Tire

Repair notification label and speed restriction label are applied to the side of temporary tire repair kit.

When making a temporary repair, carefully read the instruction manual provided with the kit.

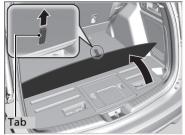

1. Using the tab, fold back the cargo area floor lid.

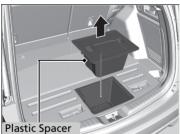


2. Remove the plastic spacer from the cargo area.



- **3.** Unfasten the strap and remove the tire repair kit.
- **4.** Place the kit face up, on flat ground near the flat tire, and away from traffic. Do not place the kit on its side.

➢Injecting Sealant and Air Injecting Sealant and Air **1.** Remove the valve cap from the tire valve Valve Cap stem. Tire sealant contains substances that are harmful and can be fatal if swallowed. If accidentally swallowed, do not induce vomiting. Drink plenty of water and get medical attention immediately. **Tire Valve Stem** For skin or eye contact, flush with cool water and get medical attention if 2. Unwind the sealant/air hose from the kit. Sealant/ necessary. Air Hose In cold temperatures, the sealant may not flow easily. In this situation, warm it up for five minutes before using. The sealant can permanently stain clothing and other materials. Be careful during handling and wipe away any spills immediately. **3.** Attach the sealant/air hose onto the tire Sealant/Air Hose valve stem. Screw it clockwise until it is tight. **Tire Valve Stem**

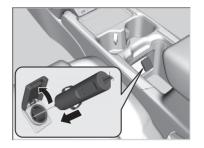

- **4.** Plug in the compressor to the accessory power socket.
 - Be careful not to pinch the cord in a door or window.

Accessory Power Socket P. 226

5. Turn on the vehicle's power system.

Turning on the Power P. 465

Keep the power system on while injecting sealant and air.

Carbon Monoxide Gas P. 84

6. Turn the selector knob to **REPAIR**.

➢Injecting Sealant and Air

Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid build-up of toxic carbon monoxide.

Breathing this colorless, odorless gas can cause unconsciousness and even death. Only run the engine to power the air compressor with the vehicle outdoors.


NOTICE

Do not operate the temporary tire repair kit compressor for more than 15 minutes. The compressor can overheat and become permanently damaged.


Until the sealant injection is complete, the pressure shown on the pressure gauge will appear higher than actual. After the sealant injection is complete the pressure will drop and then begin to rise again as the tire is inflated with air. This is normal. To accurately measure the air pressure using the gauge, turn the air compressor off only after the sealant injection is complete.





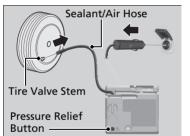

Repair Notification Label

 


- **7.** Press the inflator switch to turn on the kit.
 - The compressor starts injecting sealant and air into the tire.
 - When the sealant injection is complete, continue to add air.
- **8.** After the tire reaches the specified air pressure, turn off the kit.
 - ► To check the pressure, periodically turn off the compressor and read the gauge.
 - Refer to the driver's doorjamb label for the specified pressure.
- **9.** Unplug the power plug from the accessory power socket.
- **10.** Unscrew the sealant/air hose from the tire valve stem. Reinstall the valve cap.
- **11.** Press the pressure relief button until the gauge returns to 0 psi (0 kPa).
- **12.** Apply the repair notification label to the flat surface of the wheel.
 - The wheel surface must be clean to ensure the label adheres properly.

➢Injecting Sealant and Air

If the required air pressure is not reached within 10 minutes, the tire may be too severely damaged for the kit to provide the necessary seal, and your vehicle will need to be towed.

See a dealer for a replacement sealant bottle and proper disposal of an empty bottle.

Distributing the Sealant in the Tire

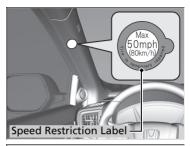

- **1.** Apply the speed restriction label to the location as shown.
- 2. Drive the vehicle for about 10 minutes.
 ▶ Do not exceed 50 mph (80 km/h).
- **3.** Stop the vehicle in a safe place.

- Sealant/Air Hose
- **4.** Recheck the air pressure using the sealant/ air hose on the compressor.



- **5.** Turn the selector knob to **AIR**.
 - Do not turn the air compressor on while checking the pressure.
 - Inflating an Under-inflated Tire P. 636

Distributing the Sealant in the Tire

Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid build-up of toxic carbon monoxide.

Breathing this colorless, odorless gas can cause unconsciousness and even death. Only run the engine to power the air compressor with the vehicle outdoors.

- 6. If the air pressure is
 - Less than 25 psi (175 kPa):

Do not add air or continue driving. The leak is too severe. Call for help and have your vehicle towed.

Emergency Towing P. 659

Models with 235/65R17 104H tires

• Front: 32 psi (220 kPa)/rear: 30 psi (210 kPa) or more:

Models with 235/60R18 103H tires

• Front: 35 psi (240 kPa)/rear: 32 psi (220 kPa) or more:

Models with 235/55R19 101H tires

• 33 psi (230 kPa) or more:

Continue driving for another 10 minutes or until you reach the nearest service station, whichever is sooner. Do not exceed 50 mph (80 km/h). If you have not reached a service station, stop and check the tire pressure.

If the air pressure does not go down after the 10 minute driving, you do not need to check the pressure any more.

Models with 235/65R17 104H tires

• Greater than 25 psi (175 kPa), but less than front: 32 psi (220 kPa)/rear: 30 psi (210 kPa):

Turn the air compressor on to inflate the tire until the tire pressure reaches front: 32 psi (220 kPa)/rear: 30 psi (210 kPa).

▶ Inflating an Under-inflated Tire P. 636

Models with 235/60R18 103H tires

• Greater than 25 psi (175 kPa), but less than front: 35 psi (240 kPa)/rear: 32 psi (220 kPa):

Turn the air compressor on to inflate the tire until the tire pressure reaches front: 35 psi (240 kPa)/rear: 32 psi (220 kPa).

▶ Inflating an Under-inflated Tire P. 636

Models with 235/55R19 101H tires

• Greater than 25 psi (175 kPa), but less than 33 psi (230 kPa):

Turn the air compressor on to inflate the tire until the tire pressure reaches 33 psi (230 kPa).

■ Inflating an Under-inflated Tire P. 636

All models

Then drive carefully for 10 more minutes or until you reach the nearest service station, whichever is sooner. Do not exceed 50 mph (80 km/h). If you have not reached a service station, stop and check the tire pressure.

You should repeat this procedure as long as the air pressure is not within the range indicated for the tire size.





- **7.** Unplug the kit from the accessory power socket.
- **8.** Unscrew the sealant/air hose from the tire valve stem. Reinstall the valve cap.
- **9.** Press the pressure relief button until the gauge returns to 0 psi (0 kPa).
- **10.** Repackage and properly stow the kit.

Inflating an Under-inflated Tire

You can use the kit to inflate a non-punctured under-inflated tire.



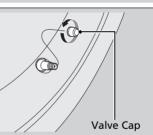

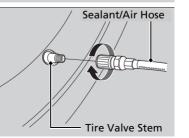

1. Open the trunk floor lid.

Getting Ready to Temporarily Repair the Flat Tire P. 626


- 2. Remove the kit from the case.
- **3.** Place the kit, face up, on flat ground near the flat tire, away from traffic. Do not place the kit on its side.
- 4. Remove the sealant/air hose from the kit.
- 5. Remove the valve cap.

6. Attach the sealant/air hose onto the tire valve stem. Screw it clockwise until it is tight.

➢Inflating an Under-inflated Tire

NOTICE

Do not operate the temporary tire repair kit compressor for more than 15 minutes. The compressor can overheat and become permanently damaged.

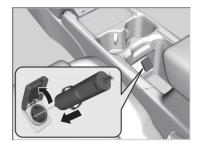



- **7.** Plug in the kit to the accessory power socket.
 - Be careful not to pinch the cord in a door or window.

Accessory Power Socket P. 226 8. Turn on the vehicle's power system.

Turning on the Power P. 465

Keep the power system on while injecting sealant and air.

- Carbon Monoxide Gas P. 84
- 9. Turn the selector knob to AIR.

10. Press the inflator switch to turn on the kit.

The compressor starts to inject air into the tire.

11. Inflate the tire to the specified air pressure.

➢Inflating an Under-inflated Tire


Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid build-up of toxic carbon monoxide.

Breathing this colorless, odorless gas can cause unconsciousness and even death. Only run the engine to power the air compressor with the vehicle outdoors.



- 12. Turn off the kit.
 - Check the pressure gauge on the air compressor.
 - If overinflated, press the pressure relief button.
- **13.** Unplug the kit from the accessory power socket.
- **14.** Unscrew the sealant/air hose from the tire valve stem. Reinstall the valve cap.
- **15.** Press the pressure relief button until the gauge returns to 0 psi (0 kPa).
- **16.** Repackage and properly stow the kit.

Your vehicle has jacking points as shown. When replacing your tires, consult a dealer.

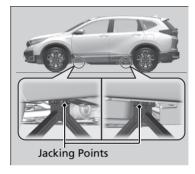

Checking the Procedure

When the **READY** indicator does not come on and the **Ready To Drive** message does not appear on the driver information interface, check the following items and take appropriate action.

➢Checking the Procedure

If you must start the vehicle immediately, use an assisting vehicle or booster battery to jump start it. Jump Starting P. 643

| Checklist | Condition | What to Do |
|-------------------------|--------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Check if the related | The Temperature Is Too Cold For Vehicle To Operate | Driver Information Interface Warning and |
| indicator or driver | message appears. | Information Messages P. 107 |
| information interface | The To Start, Hold Remote Near Start Button message | |
| messages come on. | appears. | If the Smart Entry Remote Battery is Weak |
| | Make sure the smart entry remote is in its operating range. | P. 641 |
| | POWER Button Operating Range P. 183 | |
| | The POWER SYSTEM indicator comes on. | Have your vehicle checked by a dealer. |
| | The transmission system indicator blinks and Transmission | |
| | Problem. Apply Parking Brake When Parked message | If the Transmission System Indicator Blinks along with the Warning Message P. 654 |
| | appears. | along with the warning wessage P. 054 |
| Check the brightness | The interior lights are dim or do not come on at all. | Have the 12-volt battery checked by a dealer. |
| of the interior lights. | The interior lights come on normally. | Check all fuses, or have your vehicle checked by |
| | | a dealer. |
| | | Inspecting and Changing Fuses P. 658 |
| Check the shift | The transmission is not in P. | Put the transmission into P. |
| position. | | |
| Check the | When the immobilizer system indicator is blinking, the power | |
| immobilizer system | system cannot be turned on. | Immobilizer System Indicator P. 99 |
| indicator. | | |

If the Smart Entry Remote Battery is Weak

If the beeper sounds, the **To Start, Hold Remote Near Start Button** message appears on the driver information interface, the **POWER** button flashes, and the **READY** indicator does not come on, turn on the power system as follows:





- 1. Touch the center of the **POWER** button with the **H** logo on the smart entry remote while the **POWER** button is flashing. The buttons on the smart entry remote should be facing you.
 - The POWER button flashes for about 30 seconds.
- Depress the brake pedal and press the POWER button within 10 seconds after the beeper sounds and the POWER button changes from flashing to on.
 - The **READY** indicator comes on.
 - If you don't depress the pedal, the mode will change to ACCESSORY.

Emergency Power System Off

The **POWER** button may be used to turn the power system off due to an emergency situation even while driving. If you must turn the power system off, do either of the following operations:

- Press and hold the **POWER** button for about two seconds.
- Firmly press the **POWER** button three times.

The steering wheel will not lock. However, because turning off the power system disables the power assist the power system provides to the steering and braking systems, it will require significantly more physical effort and time to steer and slow the vehicle. Use both feet on the brake pedal to slow down the vehicle and stop immediately in a safe place.

The transmission automatically changes to [P] after the vehicle comes to a complete stop. Then, the power mode changes to VEHICLE OFF.

Emergency Power System Off

Do not press the **POWER** button while driving unless it is absolutely necessary for the power system to be turned off.

If you press the **POWER** button while driving, the beeper sounds.

Booster Battery

Jump Starting Procedure

Termina

Turn off the power to electric devices, such as audio and lights. Turn off the power system, then open the hood.

1. Open the terminal cover on your vehicle's 12-volt battery positive \oplus terminal.

- 2. Connect the first jumper cable to your vehicle's 12-volt battery ⊕ terminal.
 - **3.** Connect the other end of the first jumper cable to the booster battery ⊕ terminal.
 - Use a 12-volt booster battery only.
 - When using an automotive battery charger to boost your 12-volt battery, select a lower charging voltage than 15-volt. Check the charger manual for the proper setting.
 - **4.** Connect the second jumper cable to the booster battery ⊖ terminal.


➢Jump Starting

A 12-volt battery can explode if you do not follow the correct procedure, seriously injuring anyone nearby.

Keep all sparks, open flames, and smoking materials away from the 12-volt battery.

Securely attach the jumper cables clips so that they do not come off when the engine vibrates. Also be careful not to tangle the jumper cables or allow the cable ends to touch each other while attaching or detaching the jumper cables.

12-volt battery performance degrades in cold conditions and may prevent the engine from starting.

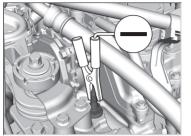

- **5.** Connect the other end of the second jumper cable to the engine mounting bolt as shown. Do not connect this jumper cable to any other part.
- **6.** If your vehicle is connected to another vehicle, start the assisting vehicle's engine and increase its rpm slightly.
- **7.** Attempt to start your vehicle's engine. If it turns over slowly, check that the jumper cables have good metal-to-metal contact.

What to Do After the Engine Starts

Once your vehicle's engine has started, remove the jumper cables in the following order.

- **1.** Disconnect the jumper cable from your vehicle's ground.
- **2.** Disconnect the other end of the jumper cable from the booster battery \bigcirc terminal.
- **3.** Disconnect the jumper cable from your vehicle's 12-volt battery \oplus terminal.
- **4.** Disconnect the other end of the jumper cable from the booster battery \oplus terminal.

Have your vehicle inspected by a nearby service station or a dealer.

➢Jump Starting Procedure

The indicators for the Adaptive Cruise Control (ACC) with Low Speed Follow, Road Departure Mitigation, Vehicle Stability Assist[™] (VSA®) system, Vehicle Stability Assist[™] (VSA®) OFF, Collision Mitigation Braking System[™] (CMBS[™]), low tire pressure/TPMS, and Parking Brake and Brake System (Amber) may come on along with a message in the Driver Information Interface when you set the power mode to ON after reconnecting the 12-volt battery. Drive a short distance at more than 12 mph (20 km/ h). Each indicator should go off. If any do not, have your vehicle checked by a dealer.

How to Handle Overheating

Overheating symptoms are as follows:

- The **High Temperature. Power Reduced.** message appears on the driver information interface.
- The **Stop Driving When Safe. Engine Temperature Too Hot** message appears on the driver information interface.
- Steam or spray comes out of the engine compartment.

The High Temperature. Power Reduced. Message Appears on the Driver Information Interface

The **High Temperature. Power Reduced.** message appears on the driver information interface when the power system temperature is high.

Driver Information Interface Warning and Information Messages P. 107

- **1.** Immediately park the vehicle in a safe place.
 - ▶ Put the transmission into P, and set the parking brake. Turn off all accessories and turn on the hazard warning lights.
- 2. Keep the power mode in ON, and wait until the message disappears.
 - ▶ If the message does not disappear, have your vehicle inspected at a dealer.

The Stop Driving When Safe. Engine Temperature Too Hot Message Appears on the Driver Information Interface

First thing to do

- 1. Immediately park the vehicle in a safe place.
- 2. Turn off all accessories and turn on the hazard warning lights.
 - **No steam or spray present:** Keep the power system on and open the hood.
 - Steam or spray is present: Turn off the power system and wait until it subsides. Then open the hood.

➢How to Handle Overheating


Steam and spray from an overheated engine can seriously scald you.

Do not open the hood if steam is coming out.

NOTICE

Continuing to drive with the **Stop Driving When Safe. Engine Temperature Too Hot** message on the driver information interface may damage the engine.

Next thing to do

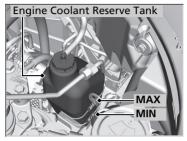

- Check that the cooling fan is operating and turn the power system off once the Stop Driving When Safe. Engine Temperature Too Hot message on the driver information interface disappears.
 - If the cooling fan is not operating, immediately turn the power system off.
- **2.** Once the engine has cooled down, inspect the coolant level and check the cooling system components for leaks.
 - ► If the coolant level in the engine coolant reserve tank is low, add coolant until it reaches the **MAX** mark.
 - If there is no coolant in the engine coolant reserve tank, check that the radiator is cool. Cover the radiator cap with a heavy cloth and open the cap. If necessary, add coolant up to the base of the filler neck, and put the cap back on.

➢How to Handle Overheating

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

If the coolant is leaking, contact a dealer for repairs.

Use water as an emergency/temporary measure only. Have a dealer flush the system with proper antifreeze as soon as possible.

Last thing to do

Once the engine has cooled sufficiently, turn the power system on. If the **Stop Driving When Safe. Engine Temperature Too Hot** message does not appear, resume driving. If it appears again, contact a dealer for repairs.

If the Low Oil Pressure Indicator Comes On



Reasons for the indicator to come on

Comes on when the engine oil pressure is low.

What to do as soon as the indicator comes on

- 1. Immediately park the vehicle on level ground in a safe place.
- 2. If necessary, turn the hazard warning lights on.

What to do after parking the vehicle

- **1.** Turn the power system off and let the engine sit for approximately three minutes.
- 2. Open the hood and check the oil level.
 - Add oil as necessary.
 - Dil Check P. 585
- **3.** Start the engine and check the low oil pressure indicator.
 - ► The indicator goes off: Start driving again.
 - The indicator does not go off within 10 seconds: Immediately turn the power system off and contact a dealer for repairs.

If the 12-volt Battery Charging System Indicator Comes On

| Г | | |
|---|---|---|
| | - | ÷ |
| | | |

Reasons for the indicator to come on

Comes on when the 12-volt battery is not being charged.

What to do when the indicator comes on

Turn off the climate control system, rear defogger, and other electrical systems, and immediately contact a dealer for repairs.

➢If the Low Oil Pressure Indicator Comes On

NOTICE

Running the engine with low oil pressure can cause serious mechanical damage almost immediately.

■If the 12-volt Battery Charging System Indicator Comes On

If you need to stop temporarily, do not turn off the power system. The power system uses the 12-volt battery to activate. You may not be able to turn the power system on again if you have turned it off with this indicator on.

This indicator may blink after starting when the outside temperature is below -22°F (-30°C). It will stop blinking after the battery warms up.

If the Malfunction Indicator Lamp Comes On or Blinks



■ Reasons for the indicator lamp to come on or blink

- Comes on when there is a problem with the engine emissions control system.
- Blinks when engine misfiring is detected.

What to do when the indicator lamp comes on

Avoid high speeds and immediately get your vehicle inspected at a dealer.

What to do when the indicator lamp blinks

Park the vehicle in a safe place with no flammable items and wait at least 10 minutes or more with the engine stopped until it cools.

■If the Malfunction Indicator Lamp Comes On or Blinks

NOTICE

If you drive with the malfunction indicator lamp on, the emissions control system and the engine could be damaged.

If the malfunction indicator lamp blinks again when restarting the engine, drive to the nearest dealer at 31 mph (50 km/h) or less. Have your vehicle inspected.

If the Brake System Indicator (Red) Comes On or Blinks

BRAKE

- The brake fluid is low.
- There is a malfunction in the brake system.

Reasons for the indicator to come on

■ What to do when the indicator comes on while driving

Depress the brake pedal lightly to check pedal pressure.

- If normal, check the brake fluid level the next time you stop.
- If abnormal, take immediate action. If necessary, use the deceleration paddle selector to slow the vehicle using regenerative braking.

Reasons for the indicator to blink

• There is a problem with the electric parking brake system.

What to do when the indicator blinks

Avoid using the parking brake and have your vehicle checked by a dealer immediately.

■If the Brake System Indicator (Red) Comes On or Blinks

Have your vehicle repaired immediately. It is dangerous to drive with low brake fluid. If there is no resistance from the brake pedal, stop immediately in a safe place. If necessary use the deceleration paddle selector to slower your vehicle's speed.

If the brake system indicator (red) and **ABS** indicator come on simultaneously, the electronic brake distribution system is not working. This can result in vehicle instability under sudden braking. Have your vehicle inspected by a dealer immediately.

If the brake system indicator (red) blinks at the same time when the brake system indicator (amber) comes on, the parking brake may not work.

Avoid using the parking brake and have your vehicle checked by a dealer immediately.

If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On P. 651

If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On



BRAKE SYSTEM If the brake system indicator (red) comes on or blinks at the same time when the brake system indicator (amber) comes on, release the parking brake manually or automatically
 ▶ Parking Brake P. 547

• If the brake system indicator (red) continuously comes on or blinks at the same time when the brake system indicator (amber) comes on, stop the vehicle in a safe place and have it inspected by a dealer immediately.

 \blacktriangleright Preventing the vehicle from moving, put the transmission into \square .

• If only the brake system indicator (red) is turned off, avoid using the parking brake and have your vehicle checked by a dealer immediately.

If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On

If you apply the parking brake, you may not be able to release it.

If the brake system indicator (red) and the brake system indicator (amber) come on at the same time, the parking brake is working.

If the brake system indicator (red) blinks at the same time when the brake system indicator (amber) comes on, the parking brake may not work because it is checking the system.

If the Electric Power Steering (EPS) System Indicator Comes On



Reasons for the indicator to come on

- Comes on when there is a problem with the EPS system.
- If you depress the accelerator pedal repeatedly to increase the engine speed while the engine is idling, the indicator comes on, and sometimes the steering wheel becomes harder to operate.

What to do when the indicator comes on

Stop the vehicle in a safe place and turn on the power system again. If the indicator comes on and stays on, immediately have your vehicle inspected by a dealer.

If the Low Tire Pressure/TPMS Indicator Comes On or Blinks



Reasons for the indicator to come on or blink

A tire pressure is significantly low, or the TPMS has not been calibrated. If there is a problem with the TPMS, the indicator blinks for about one minute, and then stays on.

What to do when the indicator comes on

Drive carefully and avoid abrupt cornering and hard braking. Stop your vehicle in a safe place. Check the tire pressure and adjust the pressure to the specified level. The specified tire pressure is on a label on the driver side doorjamb.

- Calibrate the TPMS after the tire pressure is adjusted.
 - TPMS Calibration P. 489

What to do when the indicator blinks, then remains on

Have the tire inspected by a dealer as soon as possible.

If the Low Tire Pressure/TPMS Indicator Comes On or Blinks

NOTICE

Driving on an extremely underinflated tire can cause it to overheat. An overheated tire can fail. Always inflate your tires to the prescribed level.

If the Transmission System Indicator Blinks along with the Warning Message



■ Reasons for the indicator to blink

The transmission is malfunctioning.

What to do when the indicator blinks

• Immediately have your vehicle inspected by a dealer.

If the Transmission System Indicator Blinks along with the Warning Message

You may not be able to turn on the power system.

Make sure to set the parking brake when parking your vehicle.

Call a professional towing service if you need to tow your vehicle.


Emergency Towing P. 659

Fuse Locations

If any electrical devices are not working, set the power mode to VEHICLE OFF and check to see if any applicable fuse is blown.

Engine Compartment Fuse Box Type A

Located near the brake fluid reservoir. Push the tabs to open the box.

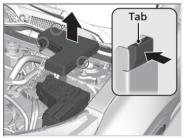


Fuse locations are shown on the fuse box cover. Locate the fuse in question by the fuse number and box cover number.

| Circuit protected and fuse rating | | |
|-----------------------------------|-------------------|--------|
| | Circuit Protected | Amps |
| | OP BLOCK 2 | 40 A |
| | ESB | (40 A) |
| | ABS/VSA FSR | 40 A |
| 1 | R/M 1 | 30 A |
| | IG MAIN 2 | 30 A |
| | R/M 2 | 30 A |
| | MAIN FUSE | 150 A |
| | EPS | 70 A |
| | IG MAIN 1 | 30 A |
| 2 | FUSE BOX OPTION | 40 A |
| Ζ | FUSE BOX 1 | 60 A |
| | FRONT WIPER MOTOR | 30 A |
| | P-ACT | 30 A |
| | REAR DEFROSTER | 40 A |
| | - | (30 A) |
| 3 | FUSE BOX 2 | 40 A |
| 3 | ABS/VSA MOTOR | 40 A |
| | - | (40 A) |
| | BLOWER MOTOR | 40 A |
| | POWER TAILGATE* | (40 A) |
| 4 | OP BLOCK 1* | (40 A) |
| 4 | AWD | (20 A) |
| | IG HOLD 2 | (20 A) |
| 5 | - | - |
| 6 | WASHER | 15 A |


| | Circuit Protected | Amps |
|----|-------------------|--------|
| 7 | IGP | 15 A |
| 8 | FI SUB | 15 A |
| 9 | STOP LIGHTS | 10 A |
| 10 | IG HOLD 1 | 10 A |
| 11 | IGPS | 7.5 A |
| 12 | FI ECU | 10 A |
| 13 | PCU EWP | 10 A |
| 14 | HAZARD | 10 A |
| 15 | IG COIL | 15 A |
| 16 | RFC COIL | 5 A |
| 17 | FRONT DEICER* | (15 A) |
| 18 | BACK UP | 10 A |
| 19 | AUDIO | 15 A |
| 20 | AUDIO AMP* | (20 A) |
| 21 | - | - |
| 22 | SHUTTER GRILLE | 10 A |
| 23 | A/C WATER PUMP | 10 A |
| 24 | HORN | 10 A |
| 25 | _ | - |
| 26 | _ | _ |
| 27 | - | - |

Engine Compartment Fuse Box Type B


Located inside the driver side of the front bumper.

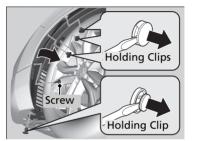

- **1.** Turn the steering wheel to the right.
- **2.** Remove the holding clips and screw, and pull the inner fender back.

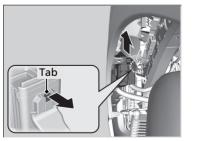

3. Pull the tab to remove the fuse box.

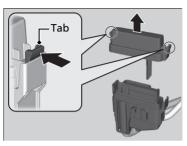

4. Pull out the fuse box inside the inner fender, then push the tabs to open the box.

Fuse locations are shown on the fuse box cover.


Locate the fuse in question by the fuse number and box cover number.

Circuit protected and fuse rating

| | Circuit Protected | Amps |
|---|-------------------|--------|
| | PTC2 | (40 A) |
| | - | (20 A) |
| 1 | PTC4 | (40 A) |
| 1 | EVTC | (20 A) |
| | MAIN FAN | (40 A) |
| | E/W PUMP | (30 A) |

Interior Fuse Box

Located under the dashboard.

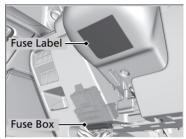



Fuse locations are shown on the label on the steering column lower cover. Locate the fuse in question by the fuse number and label number.

| 🔳 Ci | Circuit protected and fuse rating | | |
|------|-----------------------------------|---------|--|
| | Circuit Protected | Amps | |
| 1 | ACCESSORY | 10 A | |
| 2 | ACC KEY LOCK | 5 A | |
| 3 | IG1 P-DRV | 5 A | |
| 4 | IG1 OPTION 2 | 5 A | |
| 5 | IG1 OPTION | 10 A | |
| 6 | IG1 SRS 2 | 10 A | |
| 7 | IG1 METER | 10 A | |
| 8 | IG1 FUEL PUMP | 15 A | |
| 9 | IG2 A/C | 10 A | |
| 10 | CTR ACCESSORY SOCKET | (20 A) | |
| 11 | IG1 MONITOR | 5 A | |
| 12 | R SIDE DOOR LOCK | 10 A | |
| 13 | L SIDE DOOR UNLOCK | 10 A | |
| 14 | P/W RR L | 20 A | |
| 15 | P/W AS | 20 A | |
| 16 | DOOR LOCK | 20 A | |
| 17 | IG1 TCU | (10 A) | |
| 18 | DR POWER LUMBAR* | (10 A) | |
| 19 | MOONROOF* | (20 A) | |
| 20 | IG1 STARTER | 10 A | |
| 21 | IG1 ACG | 10 A | |
| 22 | IG2 DAYTIME LIGHT | 10 A | |
| 23 | USB CHARGER* | (7.5 A) | |
| 24 | +B OPTION | 5 A | |
| 25 | DR DOOR LOCK | (10 A) | |

| | | - |
|----|-------------------------|--------|
| | Circuit Protected | Amps |
| 26 | R SIDE DOOR UNLOCK | 10 A |
| 27 | P/W RR R | 20 A |
| 28 | P/W DR | 20 A |
| 29 | FR ACCESSORY SOCKET* | 20 A |
| 30 | SMART | 10 A |
| 31 | DR P/SEAT RECLINE* | (20 A) |
| 32 | FR HEATED SEAT* | (20 A) |
| 33 | DR P/SEAT SLIDE* | (20 A) |
| 34 | IG1 ABS/VSA | 10 A |
| 35 | IG1 SRS | 10 A |
| 36 | HAC OPTION | 20 A |
| 37 | +B TRAILER | 15 A |
| 38 | L SIDE DOOR LOCK | 10 A |
| 39 | DR DOOR UNLOCK | (10 A) |
| а | PTG* | (20 A) |
| b | AS P/SEAT SLIDE* | (20 A) |
| с | AS P/SEAT RECLINE* | (20 A) |
| d | SUNSHADE* | (20 A) |
| е | IMA 1 | 10 A |
| f | RR HEATED SEAT * | (20 A) |
| g | HEATED STRG* | (10 A) |
| h | SBW | 15 A |

Inspecting and Changing Fuses

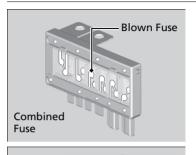

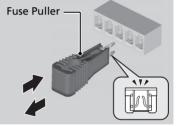

- **1.** Set the power mode to VEHICLE OFF. Turn headlights and all accessories off.
- 2. Remove the fuse box cover.
- **3.** Check the large fuse in the engine compartment.
 - If the fuse is blown, use a Phillips-head screwdriver to remove the screw and replace it with a new one.
- **4.** Inspect the small fuses in the engine compartment and the vehicle interior.
 - If there is a blown fuse, remove it with the fuse puller and replace it with a new one.

➢Inspecting and Changing Fuses

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chances of damaging the electrical system.

Replace fuse with a spare fuse of the same specified amperage.

Use the charts to locate the fuse in question and confirm the specified amperage on the fuse label. **Fuse Locations** P. 655

There is a fuse puller in the engine compartment fuse box type A.

Emergency Towing

Call a professional towing service if you need to tow your vehicle.

Flat bed equipment

The operator loads your vehicle on the back of a truck. **This is the best way to transport your vehicle.**

Emergency Towing

NOTICE


Trying to lift or tow your vehicle by the bumpers will cause serious damage. The bumpers are not designed to support the vehicle's weight.

Improper towing such as towing behind a motorhome or other motor vehicle can damage the transmission.

Never tow your vehicle with just a rope or chain. It is very dangerous since ropes or chains may shift from side to side or break.

What to Do When Unable to Open the Tailgate

If you cannot open the tailgate, use the following procedure.

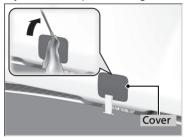

Models with power tailgate

Screwdriver

1. Use a flat-tip screwdriver and remove the cover on the inside of the tailgate.

▶ Wrap the flat-tip screwdriver with a cloth to prevent scratches.


2. To open the tailgate, push the tailgate while pushing the lever to the right with the flat-tip screwdriver.

When You Cannot Open the Tailgate

Following up:

After taking these steps, contact a dealer to have the vehicle checked.


When you open the tailgate from inside, make sure there is enough space around the tailgate, and it does not hit anyone or any object.

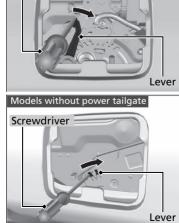

Refueling From a Portable Fuel Container

If you have run out of fuel and need to refuel your vehicle from a portable fuel container, use the funnel provided with your vehicle.



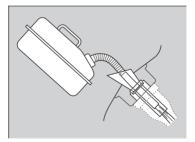

- **1.** Turn off the power system.
- **2.** Press on the edge of the fuel fill door to make it pop up slightly.
 - The fuel fill door opens.
- **3.** Take the funnel out of the tool case in the cargo area.

Types of Tools P. 624

- **4.** Place the end of the funnel on the lower part of filler opening, then insert it slowly and fully.
 - Make sure that the end of the funnel goes down along with the filler pipe.
- **5.** Fill the tank with fuel from the portable fuel container.
 - Pour fuel carefully so you do not spill any.
- **6.** Remove the funnel from the filler neck.
 - Wipe up any fuel from the funnel before storing it.
- 7. Shut the fuel fill door by hand.

Refueling From a Portable Fuel Container

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Turn the power system off, and keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

NOTICE

Do not insert the nozzle of a portable fuel container or any funnel other than the one provided with your vehicle. Doing so can damage the fuel system.

Do not try to pry open or push open the sealed fuel tank with foreign objects. This can damage the fuel system and its seal.

Make sure the fuel in the portable fuel container is gasoline before you refuel.

Information

This chapter includes your vehicle's specifications, locations of identification numbers, and other information required by regulation.

| Specifications | 664 |
|-------------------------------------|-----|
| Identification Numbers | |
| Vehicle Identification Number (VIN) |), |
| Engine Number, Motor Number, a | and |
| Transmission Number | 666 |
| Devices that Emit Radio Waves | 667 |
| Reporting Safety Defects | 668 |

Emissions Testing

| Testing of Readiness Codes | 669 |
|------------------------------|-----|
| Warranty Coverages | 671 |
| Authorized Manuals | 673 |
| Customer Service Information | 674 |

Vehicle Specifications

| CR-V |
|------------------------------------------------------|
| |
| 2 |
| 3 |
| 5 |
| |
| See the certification label on the driver's doorjamb |
| See the certification label on the driver's doorjamb |
| See the certification label on the driver's doorjamb |
| |

Air Conditioning

| Refrigerant Type | HFO-1234yf (R-1234yf) |
|------------------|------------------------------------------------|
| Charge Quantity | 14.6 - 16.4 oz (415 - 465 g) |
| Lubricant Type | ND-OIL 11 (POE) |
| Quantity | 7.32 – 8.24 cu-in (120 – 135 cm ³) |
| | |

Engine Specifications

| Displacement | 121.6 cu | -in (1,993 cm³) | |
|--------------|----------|-----------------|--|
| Spark Plugs | NGK | DILZKAR7D11S | |

🔳 Fuel

| Туре | Unleaded gasoline, Pump octane number of 87 or higher |
|--------------------|-------------------------------------------------------|
| Fuel Tank Capacity | 14 US gal (53 L) |

Washer Fluid

| Tank Capacity | 2.6 US qt (2.5 L) |
|---------------|-------------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |

Light Bulbs

| Light Bulbs | |
|-----------------------------------------------|-------|
| Headlights (Low Beam) | LED |
| Headlights (High Beam) | LED |
| Fog Lights* | LED |
| Front Turn Signal Lights | LED |
| Front Side Marker Lights | LED |
| Parking/Daytime Running Lights | LED |
| Side Turn Signal Lights (on Door Mirrors)* | LED |
| Brake/Taillights | LED |
| Rear Side Marker Lights | LED |
| Rear Turn Signal Lights | LED |
| Back-Up Lights | 16 W |
| Taillights | LED |
| High-Mount Brake Light | LED |
| Rear License Plate Light | LED |
| Interior Lights | |
| Map Lights | 8 W |
| Ceiling Light | 8 W |
| Cargo Area Lights | 5 W |
| Vanity Mirror Lights* | 1.4 W |
| Front Door Inner Handle Lights* | LED |
| Foot Lights* | LED |

| Brake Flu | uid |
|-----------|------------------------------------|
| Specified | Honda Heavy Duty Brake Fluid DOT 3 |
| | |

Continuously Variable Transmission Fluid

| Specified | Honda ATF | DW-1 |
|-----------|-----------|-------------------|
| Capacity | Change | 2.5 US qt (2.4 L) |

Rear Differential Fluid

| Specified | Honda DPS | SF-II |
|-----------|-----------|----------------------|
| Capacity | Change | 1.32 US qt (1.247 L) |

| Engine Oil | | | |
|-------------|----------------------------------------|-------------------|--|
| Recommended | ·Honda Genuine Motor Oil 0W-20 | | |
| Recommended | ·API Premium-grade 0W-20 detergent oil | | |
| Capacity | Change | 3.7 US qt (3.5 L) | |
| | Change including filter | 4.0 US qt (3.8 L) | |

Engine Coolant

| Specified | Honda Long Life Antifreeze/Coolant Type2 |
|-----------|---------------------------------------------|
| Ratio | 50/50 with distilled water |
| | 1.46 US gal (5.52 L) |
| Capacity | (change including the remaining 0.17 US gal |
| | (0.65 L) in the reserve tank) |

Tiro

| Ine | | | |
|----------------------------------------------------------------------|---------------------------------|----------------|------------------------------|
| | | 235/65 | R17 104H |
| | Size*1 | 235/60 | R18 103H |
| | | 235/55R19 101H | |
| | | | 32 (220 [2.2])*2 |
| Regular | Pressure psi (kPa [kgf/cm²]) | Front | 35 (240 [2.4])*3 |
| | | | 33 (230 [2.3]) ^{*4} |
| | | | 30 (210 [2.1])* ² |
| | | Rear | 32 (220 [2.2])*3 |
| | | | 33 (230 [2.3]) ^{*4} |
| Wheel Size | | 17 x 7 1 | 1/2J*2 |
| | Regular | 18 x 7 1 | 1/2J*3 |
| | | 19 x 7 1 | 1/2J*4 |
| *1: Original tire size is mentioned on the tire information label on | | | |


the driver's doorjamb.
*2: Models with 17 inch wheel
*3: Models with 18 inch wheel

*4: Models with 19 inch wheel

Identification Numbers

Vehicle Identification Number (VIN), Engine Number, Motor Number, and Transmission Number

Your vehicle has a 17-digit vehicle identification number (VIN) used to register your vehicle for warranty purposes, and for licensing and insuring your vehicle. The locations of your vehicle's VIN, engine number, motor number, and transmission number are shown as follows.

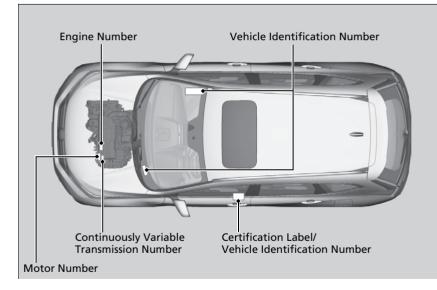

Vehicle Identification Number (VIN), Engine Number, Motor Number, and Transmission Number

The interior vehicle identification number (VIN) is located under the cover.



Each radio frequency device installed in the vehicle conforms to the requirements and standards of the regulation listed below:

As required by the FCC:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In the U.S.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying American Honda Motor Co., Inc.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or American Honda Motor Co., Inc.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to *http://www.safercar.gov*; or write to: Administrator, NHTSA, 1200 New Jersey Avenue, SE., Washington, DC 20590. You can also obtain other information about motor vehicle safety from *http://www.safercar.gov*.

Testing of Readiness Codes

Your vehicle has readiness code as part of the onboard self diagnostic system. Some States use these codes for testing to verify whether your vehicle's emissions components are working properly.

The codes may not be read properly if testing is performed just after the 12-volt battery has gone dead or been disconnected.

To check if they are set, set the power mode to ON, without turning the power system on. The malfunction indicator lamp will come on for several seconds. If it then goes off, the readiness codes are set. If it blinks five times, the readiness codes are not set.

If you are required to have your vehicle tested before the readiness codes are ready, prepare the vehicle for retesting by doing the following:

- **1.** Fill the gas tank to approximately 3/4 full.
- 2. Park the vehicle and leave the power system off for six hours or more.
- 3. Make sure the ambient temperature is between 40°F and 95°F (4°C and 35°C).
- 4. Turn the power system on.

Testing of Readiness Codes

The readiness codes are erased when the 12-volt battery is disconnected, and set again only after several days of driving under a variety of conditions.

If a testing facility determines that the readiness codes are not set, you may be requested to return at a later date to complete the test.

If the testing facility determines the readiness codes are still not set, see a dealer.

- 5. Select a nearby, lightly traveled major highway where you can maintain a speed of 50 to 60 mph (80 to 97 km/h) for at least 20 minutes. Drive on the highway in D. Do not use cruise control. When traffic allows, drive for 90 seconds without moving the accelerator pedal. (Vehicle speed may vary slightly; this is okay.) If you cannot do this for a continuous 90 seconds because of traffic conditions, drive for at least 30 seconds, then repeat it two more times (for a total of 90 seconds).
- **6.** Drive in city or suburban traffic for at least 10 minutes. When traffic conditions allow, let the vehicle coast for several seconds without using the accelerator pedal or the brake pedal.
- 7. Park the vehicle and leave the power system off for 40 minutes.

U.S. Owners

Your new vehicle is covered by these warranties:

New Vehicle Limited Warranty – covers your new vehicle, except for the emissions control systems and accessories, against defects in materials and workmanship.

Emissions Control Systems Defects Warranty and Emissions Performance

Warranty – these two warranties cover your vehicle's emissions control systems. Time, mileage, and coverage are conditional. Please read your warranty booklet for exact information.

Seat Belt Limited Warranty – a seat belt that fails to function properly is covered by a limited warranty. Please read your warranty booklet for details.

Rust Perforation Limited Warranty – all exterior body panels are covered against rusting from the inside out for the specified time period, regardless of mileage.

Accessory Limited Warranty – Honda accessories are covered under this warranty. Time and mileage limits depend on the type of accessory and other factors. Please read your warranty booklet for details.

Replacement Parts Limited Warranty – covers all Honda replacement parts against defects in materials and workmanship.

Replacement 12-Volt Battery Limited Warranty – provides prorated coverage for a replacement battery purchased from your dealer.

Replacement Muffler Lifetime Limited Warranty – provides coverage for as long as the purchaser of the muffler owns the vehicle.

Restrictions and exclusions apply to all these warranties. Please read the Honda warranty information booklet that came with your vehicle for precise information on warranty coverages. Your vehicle's original tires are covered by their manufacturer. Tire warranty information is in a separate booklet.

EPA Contact Information

An owner may obtain further information concerning emission warranties or report violations of the terms of the emission warranties by contacting:

Director, Light-Duty Vehicle Center, U.S. Environmental Protection Agency, Attention: Warranty Claim 2000 Traverwood Drive, Ann Arbor, MI 48105; complianceinfo@epa.gov

Service Express

For electronic copies of service publications, you can purchase a subscription to Service Express. Visit *www.techinfo.honda.com* for pricing and options.

For U.S. Owners

Manuals can be purchased from Helm Incorporated. You can order a manual by phone at 1 (800) 782-4356 (credit card orders only), or online at *www.helminc.com*.

Honda dealership personnel are trained professionals who should be able to deal with any problems you may encounter with your vehicle. If, however, you are faced with a problem that they cannot resolve to your satisfaction, contact Honda Customer Services.

U.S. Owners

American Honda Motor Co., Inc. Honda Automobile Customer Services Mail Stop 100-5E-8A 1919 Torrance Blvd. Torrance, CA 90501-2746 Tel: 1 (800) 999-1009

In Puerto Rico and the U.S. Virgin Islands

Bella International P.O. Box 190816 San Juan, PR 00919-0816 Tel: 1 (787) 620-7546

Customer Service Information

When you call or write, please give us the following information:

- Vehicle Identification Number
 - Vehicle Identification Number (VIN), Engine Number, Motor Number, and Transmission Number P. 666
- Date of purchase
- Odometer reading of your vehicle
- Your name, address, and telephone number
- A detailed description of the problem
- Name of the dealer who sold the vehicle to you

Disclaimer of Pandora®

Requirements to access Pandora®

- Latest version of the Pandora app installed on your Android, Blackberry, or iPhone.
- Registered Pandora account (you can create a free account at www.pandora.com
 http://www.pandora.com/> or on your smartphone)
- Connection to the internet via Wi-Fi or cellular data network.

Limitations

- Access to Pandora requires an active internet connection
- Ability to access Pandora through this system is subject to change without notice
- Certain functionality of Pandora service is not available when accessing the service through this system including, but not limited to, creating new stations, deleting stations, emailing current stations, buying tracks, viewing additional text information, logging in to Pandora, and adjusting Cell Network Audio Quality. Pandora internet radio is a music service not affiliated with HONDA More information is available at http:// www.pandora.com <http://www.pandora.com/>. Pandora, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc., used with permission.
- Mobile access requires a smartphone with an active data plan. Standard data rates may apply.
- Pandora is only available in the United States.

Numbers

| 12-volt Battery | 611 |
|-----------------------------------|-----|
| Charging System Indicator | 648 |
| Maintenance (Checking the 12-volt | |
| Battery) | 611 |
| 12-volt Battery Charging System | |
| Indicator | 648 |
| 4WD | 488 |

Α

| AAC 261, 31 | 7 |
|----------------------------------------|---|
| ABS (Anti-lock Brake System) 55 | 3 |
| Accessories and Modifications 62 | 0 |
| Accessory Power Socket 22 | 6 |
| Adaptive Cruise Control (ACC) with Low | |
| Speed Follow 103, 51 | 3 |
| Additives | |
| Coolant 58 | 9 |
| Engine Oil 58 | 4 |
| Washer 59 | 3 |
| Additives, Engine Oil 58 | 4 |
| Adjusting | |
| Armrest 21 | 4 |
| Front Seats 20 | 5 |
| Head Restraints 21 | 2 |
| Mirrors 20 | 3 |
| Rear Seats 20 | 9 |
| Steering Wheel 20 | 2 |
| Temperature 13 | 6 |
| Adjusting the Sound 252, 29 | 0 |

| Agile Handling Assist | 487 |
|-------------------------------------|----------|
| Air Conditioning System (Climate Co | ontrol |
| System) | 232 |
| Changing the Mode | 235 |
| Defrosting the Windshield and | |
| Windows | 235 |
| Dust and Pollen Filter | 614 |
| Recirculation/Fresh Air Mode | 235 |
| Sensor | 238 |
| Synchronized Mode | 237 |
| Using Automatic Climate Control | 232 |
| Air Pressure | |
| Airbags | 56 |
| Advanced Airbags | 62 |
| Airbag Care | |
| Event Data Recorder | 0 |
| Front Airbags (SRS) | 59 |
| Indicator | 67, 95 |
| Passenger Airbag Off Indicator | |
| Sensors | 56 |
| Side Airbags | 63 |
| Side Curtain Airbags | 65 |
| All-Wheel Drive (AWD) | 488 |
| AM/FM Radio | 254, 297 |
| Android Auto [™] | 333 |
| Anti-lock Brake System (ABS) | 553 |
| Indicator | |
| Apple CarPlay [™] | 330 |
| Armrest | |
| Audio Remote Controls | 244 |
| | |

| Audio System 240 | 0, 247, 268 |
|-------------------------------------|-------------|
| Adjusting the Sound | . 252, 290 |
| AM/FM Radio | ' |
| Android Auto [™] | 333 |
| Apple CarPlay [™] | 330 |
| Audio/Information Screen | . 248, 269 |
| Changing the Home Screen Icon La | yout 273 |
| Changing the Screen Interface | 287 |
| Closing Apps | 289 |
| Customizing the Meter | 274 |
| Display Setup | . 253, 291 |
| Error Messages | 337 |
| General Information | 342 |
| Home Screen | 280 |
| HondaLink® | |
| How to use Siri ® Eyes Free | . 267, 329 |
| iPod | . 256, 308 |
| Limitations for Manual Operation | 292 |
| Menu Customize | 288 |
| MP3/WMA/AAC | . 261, 317 |
| Pandora [®] | . 259, 315 |
| Playing <i>Bluetooth</i> ® Audio | . 264, 320 |
| Playing SiriusXM [®] Radio | 301 |
| Reactivating | 243 |
| Recommended Devices | 343 |
| Remote Controls | 244 |
| Security Code | 243 |
| Selecting an Audio Source | 292 |
| Song By Voice [™] (SBV) | |
| Status Area | |
| Theft Protection | |

| USB Flash Drives |
|-----------------------------------|
| Voice Control Operation 293 |
| Wallpaper Setup 250, 278 |
| Wi-Fi Connection 327 |
| Audio/Information Screen 248, 269 |
| Authorized Manuals |
| Auto Door Locking/Unlocking 163 |
| Auto High-Beam 192 |
| Indicator 99 |
| Automatic Brake Hold 551 |
| Indicator 91, 551 |
| Automatic Brake Hold System |
| Indicator 91 |
| Automatic Intermittent Wipers 196 |
| Automatic Lighting 188 |
| Average Fuel Economy 128 |
| Average Fuel Economy Records 129 |
| Average Speed 128 |
| AWD (All-Wheel Drive) |

В

| Battery 12 |
|-----------------------------|
| Charging System Indicator |
| High Voltage 12, 498 |
| Jump Starting 643 |
| Maintenance (Replacing) 613 |
| Belts (Seat) 47 |
| Beverage Holders 219 |

| Blind spot information System | |
|----------------------------------------------|------|
| Indicator | |
| Bluetooth [®] Audio | |
| Bluetooth® HandsFreeLink® | |
| Booster Seats (For Children) | |
| Brake System | |
| Anti-lock Brake System (ABS) | |
| Automatic Brake Hold | |
| Brake Assist System | 554 |
| Fluid | 592 |
| Foot Brake | 550 |
| Indicator 89 | , 90 |
| Indicator (Red) 650, | 651 |
| Parking Brake | 547 |
| Brightness Control (Instrument Panel) | 199 |
| Bulb Replacement | 594 |
| Brake/Taillights, Rear Turn Signal Lights an | d |
| Rear Side Marker Lights | |
| Front Turn Signal/ Front Side Marker | |
| Lights | 594 |
| Headlights | 594 |
| High-Mount Brake Light | 596 |
| Parking/Daytime Running Lights | 594 |
| Rear License Plate Light | 596 |
| Side Turn Signal/Emergency Indicator | |
| Lights | 594 |
| Taillights and Back-Up Lights | 595 |
| | |

С

| Carbon Monoxide Gas 84 |
|---------------------------------------------|
| Cargo Hook 222 |
| Carrying Cargo 457, 459 |
| Certification Label |
| Changing Bulbs 594 |
| Charging System Indicator |
| Child Safety |
| Childproof Door Locks |
| Child Seat |
| Booster Seats |
| Child Seat for Infants72 |
| Child Seat for Small Children |
| Installing a Child Seat with a Lap/Shoulder |
| Seat Belt |
| Larger Children 82 |
| Rear-facing Child Seat |
| Selecting a Child Seat |
| Childproof Door Locks 162 |
| Cleaning the Exterior |
| Cleaning the Interior |
| Climate Control System 232 |
| Changing the Mode 232 |
| Defrosting the Windshield and |
| Windows |
| Dust and Pollen Filter |
| Recirculation/Fresh Air Mode 235 |
| Sensors 238 |
| Synchronization Mode 237 |
| Using Automatic Climate Control |
| Clock |

| CMBS [™] (Collision Mitigation Braking | Defrosting th |
|--------------------------------------------------|------------------|
| System [™]) | 2 Windows |
| Coat Hook 22 | 1 Detachable A |
| Collision Mitigation Braking System [™] | Devices that |
| (CMBS [™]) | 2 Dimming |
| Compass | 3 Headlights |
| Continuously Variable Transmission | Rearview M |
| Creeping 47 | 2 Dipstick (Eng |
| Kickdown 47 | 2 Directional Si |
| Controls 14 | 7 Display Setup |
| Coolant (Engine) 58 | 9 Display/Infor |
| Adding to the Radiator 59 | Door Mirrors |
| Adding to the Reserve Tank 58 | 9 Doors |
| Overheating 64 | 5 Auto Door l |
| Creeping (Continuously Variable | Auto Door l |
| Transmission) | 2 Keys |
| Cross Traffic Monitor | 2 Locking/Unl |
| Cup Holders | 9 Inside |
| Customer Service Information 674 | 4 Locking/Unl |
| Customized Features 138, 359, 36 | 6 Outside |

D

| Daytime Running Lights | 191 |
|------------------------------|-----|
| Dead Battery | 643 |
| Deceleration Paddle Selector | 480 |
| Indicator | 93 |
| Defaulting All the Settings | 391 |
| Deflation Warning System | |
| Indicator | 97 |

| Defrosting the Windshield and | | Ε |
|--------------------------------------|-------|-------------|
| Windows | 235 | F ee |
| Detachable Anchor | 53 | Eco / |
| Devices that Emit Radio Waves | 667 | Eco I |
| Dimming | | ECO |
| Headlights | 187 | Elap |
| Rearview Mirror | 203 | Elect |
| Dipstick (Engine Oil) | 585 | Inc |
| Directional Signals (Turn Signal) | 186 | Elect |
| Display Setup 253, | , 291 | Eme |
| Display/Information Button | 126 | Emis |
| Door Mirrors | 204 | Engi |
| Doors | 150 | Co |
| Auto Door Locking | 163 | Jur |
| Auto Door Unlocking | 163 | Nu |
| Keys | 150 | Oil |
| Locking/Unlocking the Doors from the | | Sw |
| Inside | 160 | Engi |
| Locking/Unlocking the Doors from the | | Ad |
| Outside | 153 | Ad |
| Lockout Prevention System | 159 | Ov |
| DOT Tire Quality Grading | 605 | Engi |
| Driver Information Interface | 126 | Ad |
| Driver's Seat Lumbar Support | 205 | Ch |
| Driving | 455 | Dis |
| Braking | 547 | Lo |
| Off-Highway Driving Guidelines | 463 | Re |
| Shifting | 473 | EPS (|
| Transmission | 472 | Syst |
| Driving Position Memory System | 200 | EV B |
| Dust and Pollen Filter | | EV Ir |
| | | |

Ε

| Eco Assist [®] System |
|-----------------------------------------|
| Eco Drive Display 19, 130 |
| ECON Mode |
| Elapsed Time 128 |
| Electric Power Steering (EPS) System |
| Indicator |
| Electronic Stability Control (ESC) 485 |
| Emergency |
| Emissions Testing (Readiness Codes) 669 |
| Engine |
| Coolant 589 |
| Jump Starting 643 |
| Number 666 |
| Oil 584 |
| Switch Buzzer 184 |
| Engine Coolant 589 |
| Adding to the Radiator 590 |
| Adding to the Reserve Tank 589 |
| Overheating 645 |
| Engine Oil 584 |
| Adding 586 |
| Checking 585 |
| Displaying Oil Life 578 |
| Low Oil Pressure Indicator 91, 648 |
| Recommended Engine Oil 584 |
| EPS (Electric Power Steering) |
| System |
| EV Button 14 |
| EV Indicator |
| EV Mode Indicator 92 |

| Exhaust Gas Hazard (Carbon Monoxide). | . 84 |
|---------------------------------------|------|
| Exterior Care (Cleaning) | 617 |
| Exterior Mirrors | 204 |

F

| Features | 239 |
|--------------------------------------------|-------|
| Filters | |
| Dust and Pollen | 614 |
| Oil | 587 |
| Flat Tire | 625 |
| Floor Mats | 616 |
| Fluids | |
| Brake | 592 |
| Engine Coolant | 589 |
| Windshield Washer | |
| FM/AM Radio 254 | , 297 |
| Fog Light Indicator | 99 |
| Folding Down the Rear Seats | 210 |
| Foot Brake | |
| Front Airbags (SRS) | 59 |
| Front Seats. | 205 |
| Adjusting | 205 |
| Front Sensor Camera | |
| Fuel 34 | , 568 |
| Fuel Economy and CO ₂ Emissions | |
| Gauge | 124 |
| Instant Fuel Economy | 128 |
| Low Fuel Indicator | |
| Range | |
| Recommendation | |

| Refueling | 568 |
|--------------------------------------------|-----|
| Fuel Economy and CO ₂ Emissions | 571 |
| Fuel Fill Door | 569 |
| Fuses | 655 |
| Inspecting and Changing | 658 |
| Locations 655, 656, | 657 |
| | |

G

Gasoline (Fuel)

| Fuel Economy and CO ₂ Emissions | 571 |
|--------------------------------------------|-----|
| Information | 568 |
| Refueling | 568 |
| Gauges | 124 |
| Glass (care) 615, | 618 |
| Glove Box | 217 |
| | |

Η

| Handling of the Jack | 639 |
|------------------------------------|----------|
| Handling the Unexpected | 623 |
| HandsFreeLink [®] (HFL) | 395, 419 |
| Automatic Import of Cellular Phone | ebook |
| and Call History | 409, 432 |
| Caller's ID Information | 406 |
| Displaying Messages | 447 |
| HFL Buttons | 395, 419 |
| HFL Menus | 397, 422 |
| HFL Status Display | 396, 421 |
| In Case of Emergency | 451 |
| Limitations for Manual Operation | 396, 421 |
| | |

| Making a Call | 413, | 440 |
|---------------------------------------------|-------|------|
| Options During a Call | 418, | 444 |
| Phone Setup | | |
| Phonebook Phonetic Modification | | 436 |
| Receiving a Call | | |
| Receiving a Text/E-mail Message | | 445 |
| Ring Tone | | |
| Selecting a Text/E-mail Message | | |
| Account | | 446 |
| Speed Dial | 410, | 433 |
| To Clear the System | | 408 |
| To Set Up Text/E-mail Message Optic | ns | 430 |
| Hazard Warning Button | | |
| HD Radio™ | | 297 |
| Head Restraints | | 212 |
| Headlights | | 187 |
| Aiming | | 594 |
| Auto High-Beam | | 192 |
| Automatic Operation | | 188 |
| Dimming | | 187 |
| Operating | | 187 |
| Heated Door Mirror Button | | 198 |
| Heated Steering Wheel | | 230 |
| Heaters | | 231 |
| HFL (HandsFreeLink [®]) | 395, | 419 |
| High Beam Indicator | | . 98 |
| High Voltage Battery | | 498 |
| Hill Start Assist System | | 470 |
| HomeLink [®] Universal Transceiver | | 392 |
| Honda App License Agreement | | 344 |
| Honda Sensing [®] | . 35, | 499 |

| HondaLink [®] | 322 |
|---------------------------------|------|
| Hybrid Vehicle | |
| SPORT HYBRID i-MMD (intelligent | |
| Multi-Mode Drive) | . 11 |

I

| Identification Numbers | 666 |
|--------------------------------------|----------|
| Engine, Motor and Transmission | 666 |
| Vehicle Identification | 666 |
| Illumination Control | 199 |
| Knob | 199 |
| Immobilizer System | 175 |
| Indicator | 99 |
| Indicators | 88 |
| 12-volt Battery Charging System | 93, 648 |
| ABS (Anti-lock Brake System) | 95 |
| Adaptive Cruise Control (ACC) with | Low |
| Speed Follow 103, | 104, 514 |
| Auto High-Beam | 99 |
| Automatic Brake Hold | 91, 551 |
| Automatic Brake Hold System | |
| Blind spot information System | 100 |
| Collision Mitigation Braking System | |
| (CMBS) | 105, 106 |
| Deceleration Paddle Selector | 93 |
| ECON Mode | 100, 483 |
| Electric Power Steering (EPS) System | 96, 652 |
| EV | 92 |
| EV Mode | 92 |
| Fog Light | 99 |

| High Beam 98 |
|----------------------------------------------|
| Immobilizer System |
| Lane Keeping Assist System (LKAS) 104 |
| Lights On 99 |
| Low Fuel 94 |
| Low Oil Pressure 91, 648 |
| Low Tire Pressure/TPMS 97, 493, 653 |
| Malfunction Indicator Lamp 92, 649 |
| Parking Brake and Brake System |
| (Amber) 90, 651 |
| Parking Brake and Brake System |
| (Red) 89, 650, 651 |
| Power System |
| READY 92 |
| Road Departure Mitigation (RDM) 101, 102 |
| Seat Belt Reminder 49, 94 |
| Security System Alarm 100 |
| Shift Position |
| SPORT Mode |
| Supplemental Restraint System |
| System Message 98 |
| Transmission System 93, 654 |
| Turn Signal and Hazard Warning |
| Vehicle Stability Assist [™] (VSA®) |
| System 95, 485 |
| VSA® OFF |
| Information |
| Instrument Panel 87 |
| Brightness Control 199 |
| Interior Lights |
| Interior Rearview Mirror 203 |

| iPod 256 | 5, 308 |
|---------------|--------|
| | |
| J | |
| Jump Starting | . 643 |

Κ

| Key Number Tag | 151 |
|---------------------------------|-----|
| Keyless Lockout Prevention | 159 |
| Keys | 150 |
| Lockout Prevention | 159 |
| Master Keys | 150 |
| Number Tag | 151 |
| Rear Door Won't Open | 162 |
| Remote Transmitter | 157 |
| Types and Functions | 150 |
| Kickdown (Continuously Variable | |
| Transmission) | 472 |

L

| Lane Keeping Assist System (LKAS) | 530 |
|-----------------------------------|------|
| LATCH (Child Seats) 75 | , 80 |
| Lights 187, | 594 |
| Auto High-Beam | 192 |
| Automatic | 188 |
| Bulb Replacement | 594 |
| Daytime Running Lights | 191 |
| Fog Lights | 191 |
| High Beam Indicator Light | 98 |
| Interior | 215 |

| Light Switches 187 |
|--------------------------------------|
| Lights On Indicator |
| Turn Signals |
| Load Limits |
| Locking/Unlocking |
| Auto Door Locking/Unlocking 163 |
| Childproof Door Locks 162 |
| From Inside 160 |
| From Outside 153 |
| Keys 150 |
| Using a Key 158 |
| Lockout Prevention System 159 |
| Low Battery Charge |
| Low Fuel Indicator |
| Low Oil Pressure Indicator |
| Low Smart Entry Remote Signal |
| Strength 152 |
| Low Tire Pressure/TPMS Indicator |
| Lower Anchors |
| Luggage (Maximum Load Limit) 459 |
| Lumbar Support 206 |
| Lumbar Support Adjustment Switch 206 |

Μ

| Maintenance | 573 |
|---------------------------------|-----|
| 12-volt Battery | 611 |
| Brake Fluid | 592 |
| Cleaning | 615 |
| Coolant | 589 |
| Maintenance Minder [™] | 577 |

| Oil | 585 |
|---------------------------------|------------|
| Precautions | 574 |
| Radiator | 590 |
| Remote Transmitter | 613 |
| Replacing Light Bulbs | 594 |
| Safety | 575 |
| Service Items | 580 |
| Tires | 602 |
| Transmission Fluid | 591 |
| Under the Hood | 582 |
| Maintenance Minder | . 129, 577 |
| Malfunction Indicator Lamp | |
| Map Lights | |
| Maximum Load Limit | 459 |
| Meters, Gauges | 124 |
| Mirrors | |
| Adjusting | 203 |
| Door | 204 |
| Exterior | |
| Interior Rearview | |
| Modifications (and Accessories) | |
| Moonroof | |
| MP3 | |
| Multi-View Rear Camera | 566 |

Ν

| Navigation | 137 |
|--------------------------|-----|
| Numbers (Identification) | 666 |

0

| Odometer 127 |
|------------------------------------|
| Off-Highway Driving Guidelines 463 |
| Oil (Engine) |
| Adding 586 |
| Checking 585 |
| Displaying Oil Life 578 |
| Low Oil Pressure Indicator 91, 648 |
| Recommended Engine Oil 584 |
| Viscosity 584 |
| Open Source Licenses |
| Opening/Closing |
| Hood 583 |
| Moonroof 182 |
| Power Windows 178 |
| Tailgate 164 |
| Outside Temperature Display 136 |
| Overheating |
| |

Ρ

| Pandora [®] 259, 315 |
|------------------------------------------|
| Panic Mode 177 |
| Parking 555 |
| Parking Brake 547 |
| Parking Brake and Brake System Indicator |
| (Amber) 90, 651 |
| Parking Brake and Brake System Indicator |
| (Red) 89, 650, 651 |
| Parking Sensor System 557 |
| Passenger Front Airbag Off Indicator 68 |

| Passing Indicators187Playing Bluetooth® Audio264, 320POWER Button183 |
|----------------------------------------------------------------------|
| Power System |
| Won't Start 640 |
| Power System Indicator |
| Power Tailgate 167 |
| Power Windows 178 |
| POWER/CHARGE Gauge 124 |
| Precautions While Driving 471 |
| Driving Guidelines for Your Utility |
| Vehicle 471 |
| Rain 471 |
| Pregnant Women 54 |
| Puncture (Tire) |

R

| Radiator | 590 |
|-------------------------------------------------------------------------------------------------------------|--------------------------------|
| Radio (FM/AM)25 | |
| | |
| Radio (SiriusXM [®]) | 301 |
| Radio Data System (RDS) 25 | 55, 300 |
| RDS (Radio Data System) 25 | 55, 300 |
| Readiness Codes (Emissions Testing) | 669 |
| READY Indicator | 92 |
| | |
| Real Time AWD with Intelligent Contr | |
| | ol |
| Real Time AWD with Intelligent Contr System [™] | ol 488 |
| Real Time AWD with Intelligent Contr | ol 488 210 |
| Real Time AWD with Intelligent Contr System [™] Rear Seats (Folding Down) | ol 488 210 203 |
| Real Time AWD with Intelligent Contr System [™] Rear Seats (Folding Down) Rearview Mirror | ol 488 210 203 568 |

| Gasoline | 568, 664 |
|-------------------------------|---------------|
| Low Fuel Indicator | |
| Regulations | 493, 605, 667 |
| Remote Transmitter | 157 |
| Replacement | |
| Battery | 613 |
| Bulbs | 594 |
| Front Wiper Blade Rubber | 597 |
| Fuses | 655, 656, 657 |
| Rear Wiper Blade Rubber | 600 |
| Tires | 608 |
| Reporting Safety Defects | 668 |
| Resetting a Trip Meter | 128 |
| Road Departure Mitigation (RD | M) 539 |
| On and Off | 541 |
| | |

S

| Safe Driving | |
|---------------------------------------------|---|
| Safety Labels | |
| Safety Message 2 | 2 |
| Seat Belts 47 | , |
| Adjusting the Shoulder Anchor 52 | 2 |
| Automatic Seat Belt Tensioners 50 |) |
| Checking 55 | 5 |
| Detachable Anchor 53 | 3 |
| Fastening 51 | |
| Installing a Child Seat with a Lap/Shoulder | |
| Seat Belt 78 | 3 |
| Pregnant Women 54 | ł |

| Reminder | 49 |
|----------------------------------|---------|
| Warning Indicator | 49, 94 |
| Seat Heaters | 231 |
| Seats | 205 |
| Adjusting | 205 |
| Driver's Seat Lumbar Support | 205 |
| Front Seats | 205 |
| Heaters | 231 |
| Rear Seats | 209 |
| Seat Heaters | 231 |
| Security System | 175 |
| Immobilizer System Indicator | 99 |
| Security System Alarm Indicator | 100 |
| Select Button | |
| Operation | 32, 475 |
| Selecting a Child Seat | 74 |
| Selector Knob (Audio) | 247 |
| Setting the Clock | 148 |
| Shift Button | 32 |
| Shift Button Positions | |
| Transmission | |
| Shift Position Indicator | 93, 475 |
| Shoulder Anchor | 52 |
| Side Airbags | 63 |
| Side Curtain Airbags | 65 |
| Siri® Eyes Free 2 | |
| SiriusXM [®] Radio | 301 |
| Smart Entry System | |
| Snow Tires | |
| Song By Voice [™] (SBV) | 311 |
| Spark Plugs | 664 |

| Specifications |
|----------------------------------------|
| Specified Fuel 568, 664 |
| Speedometer 124 |
| SPORT Mode |
| Indicator 94, 479 |
| SRS Airbags (Airbags) 59 |
| Starting the Engine |
| Engine Switch Buzzer 184 |
| Jump Starting 643 |
| Steering Wheel 202 |
| Adjusting 202 |
| Stopping 555 |
| Summer Tires 610 |
| Sunglasses Holder 223 |
| Supplemental Restraint System (SRS) 59 |
| Switches (Around the Steering |
| Wheel) 6, 7, 183 |
| System Message Indicator 98 |

-

Т

| Tailgate | 164 |
|---------------------------------|-----|
| Unable to Open | 660 |
| Temperature | |
| Outside Temperature Display | 136 |
| Temperature Sensor | 136 |
| Temporary Repair Kit (TRK) | 625 |
| Theft Protection | 243 |
| Time (Setting) | 148 |
| Tire Pressure Monitoring System | |
| (TPMS) | 489 |

| Fires | 602 |
|--------------------------------|-----------|
| Air Pressure | 603, 665 |
| Checking and Maintaining | 602 |
| Inspection | 602 |
| Labeling | 603 |
| Puncture (Flat Tire) | 625 |
| Regulations | 605 |
| Rotation | 609 |
| Summer | 610 |
| Temporary Repair Kit (TRK) | |
| Tire Chains | 610 |
| Wear Indicators | 607 |
| Winter | |
| Fonneau Cover | 224 |
| Fools | |
| Fowing a Trailer | 461 |
| Towing Your Vehicle | |
| Behind a Motorhome | 462 |
| Emergency | 659 |
| TPMS (Tire Pressure Monitoring | |
| System) | |
| Fransmission | 472, 473 |
| Number | |
| Operating the Shift Button | |
| Operation | |
| Shift Position Indicator | . 93, 475 |
| Shifting | 473 |
| Fransmission System | |
| Indicator | |
| rrip Knob | 127 |
| Frip Meter | 127 |
| | |

| TRK (Temporary Repair Kit) | 625 |
|---------------------------------|-----|
| Troubleshooting | 623 |
| Blown Fuse 655, 656, | 657 |
| Brake Pedal Vibrates | 38 |
| Buzzer Sounds When Opening Door | 38 |
| Emergency Towing | 659 |
| Noise When Braking | 39 |
| Overheating | 645 |
| Power System Won't Start | 640 |
| Puncture/Flat Tire | 625 |
| Rear Door Won't Open | 162 |
| Warning Indicators | 88 |
| Turn Signals | 186 |
| Turn signals | |
| Indicators (Instrument Panel) | 98 |
| Turning on the Power | |
| Does Not Activate | 640 |
| | |

U

| Unlocking the Doors | 153 |
|------------------------------------|-----|
| Unlocking the Front Doors from the | |
| Inside | 160 |
| USB Flash Drives 261, 317, | 343 |
| USB Port(s) | 241 |

V

| Vanity Mirrors | 9 |
|-----------------------------------------------------------|------------|
| Vehicle Identification Number | 666 |
| Vehicle Stability Assist [™] (VSA [®]) | 485 |
| Off Button | 486 |
| OFF Indicator | |
| System Indicator | 95 |
| Viscosity (Oil) | . 584, 665 |
| Voice Control Operation | 293 |
| Audio Commands | 295 |
| Climate Control Commands | 296 |
| General Commands | 296 |
| Music Search Commands | 296 |
| On Screen Commands | 296 |
| Phone Commands | 295 |
| Useful Commands | 295 |
| Voice Portal Screen | 294 |
| Voice Recognition | 293 |
| VSA [®] (Vehicle Stability Assist [™]) | 485 |

W

| Wallpaper |), 278 | |
|--------------------------------------|--------|--|
| Warning and Information Messages | 107 | |
| Warning Indicator On/Blinking | 648 | |
| Warning Labels | 85 | |
| Warranties (Warranty Manual provided | | |
| separately) | 671 | |
| Watts | 664 | |
| WAV | 1, 317 | |
| Wear Indicators (Tire) | 607 | |

| Wi-Fi Connection | 327 |
|-----------------------------------|----------|
| Window Washers | 195 |
| Adding/Refilling Fluid | 593 |
| Switch | 195 |
| Windows (Opening and Closing) | 178 |
| Windshield | 195 |
| Cleaning | 615, 618 |
| Defrosting/Defogging | 235 |
| Washer Fluid | 593 |
| Wiper Blades | 597 |
| Wipers and Washers | 195 |
| Winter Tires | 610 |
| Snow Tires | 610 |
| Tire Chains | 610 |
| Wiper and Washer | |
| Front | 195 |
| Wipers and Washers | 195 |
| Automatic Intermittent Wipers | 196 |
| Checking and Replacing Wiper Blac | des 597 |
| Rear | 197 |
| Wireless Charger | 227 |
| WMA | 261, 317 |
| Worn Tires | 602 |



31TPG600 OM-13130 00X31-TPG-6000 owners.honda.com

2020 Honda CR-V Hybrid Owner's Manual © 2020 Honda Motor Co., Ltd. — All Rights Reserved

Printed in U.S.A.