


**>> OWNER'S MANUAL
QUICK REFERENCE GUIDE**



The Power to Surprise


Interior Overview

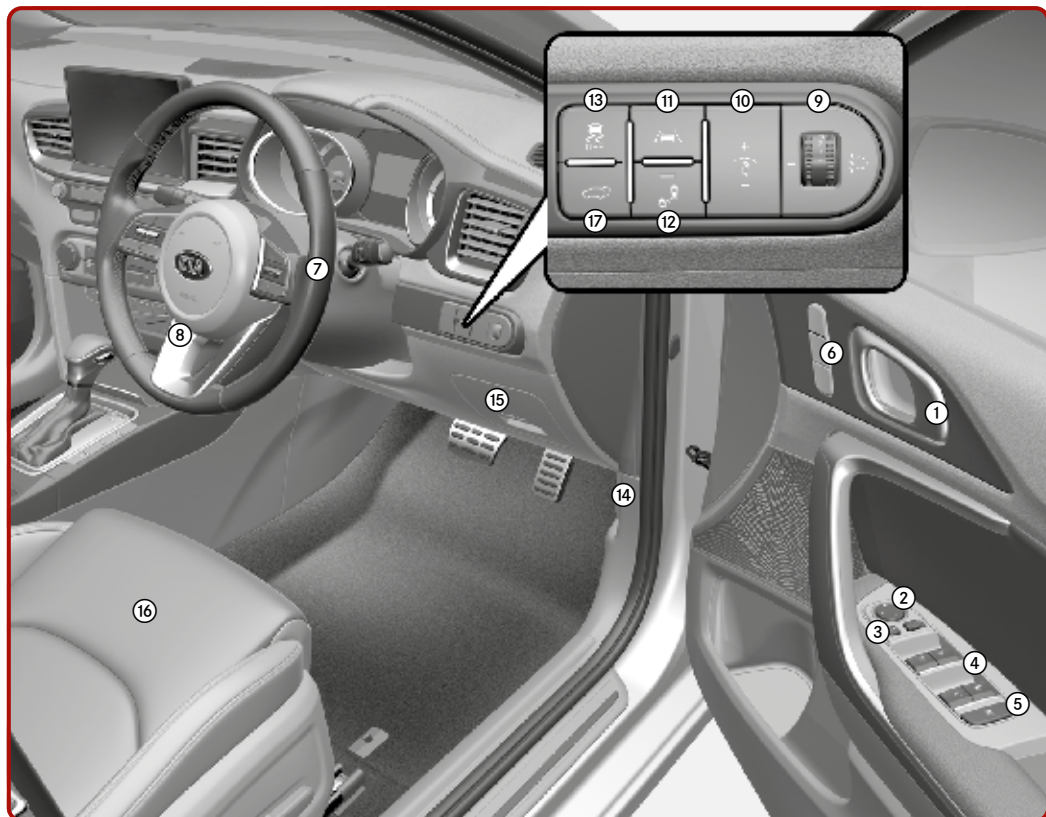

- ① Inside door handle [4]
- ② Outside rearview mirror control switch [4]
- ③ Outside rearview mirror folding switch* [4]
- ④ Power window switches [4]
- ⑤ Power window lock button [4]
- ⑥ Driver position memory button* [3]
- ⑦ Steering wheel [4]
- ⑧ Tilt and telescopic steering column control lever [4]
- ⑨ Headlight leveling control* [4]
- ⑩ Instrument panel illumination control [4]
- ⑪ LKA ON/OFF button [6]
- ⑫ BCW ON/OFF button* [6]
- ⑬ ESC ON/OFF button [6]
- ⑭ Bonnet release lever [4]
- ⑮ Interior fuse box [8]
- ⑯ Seat [3]
- ⑰ Power tailgate open/close button* [4]

* if equipped

[#] Number in brackets indicates chapter in Owner's Manual.
The illustrations in this guide may vary from the actual vehicle.

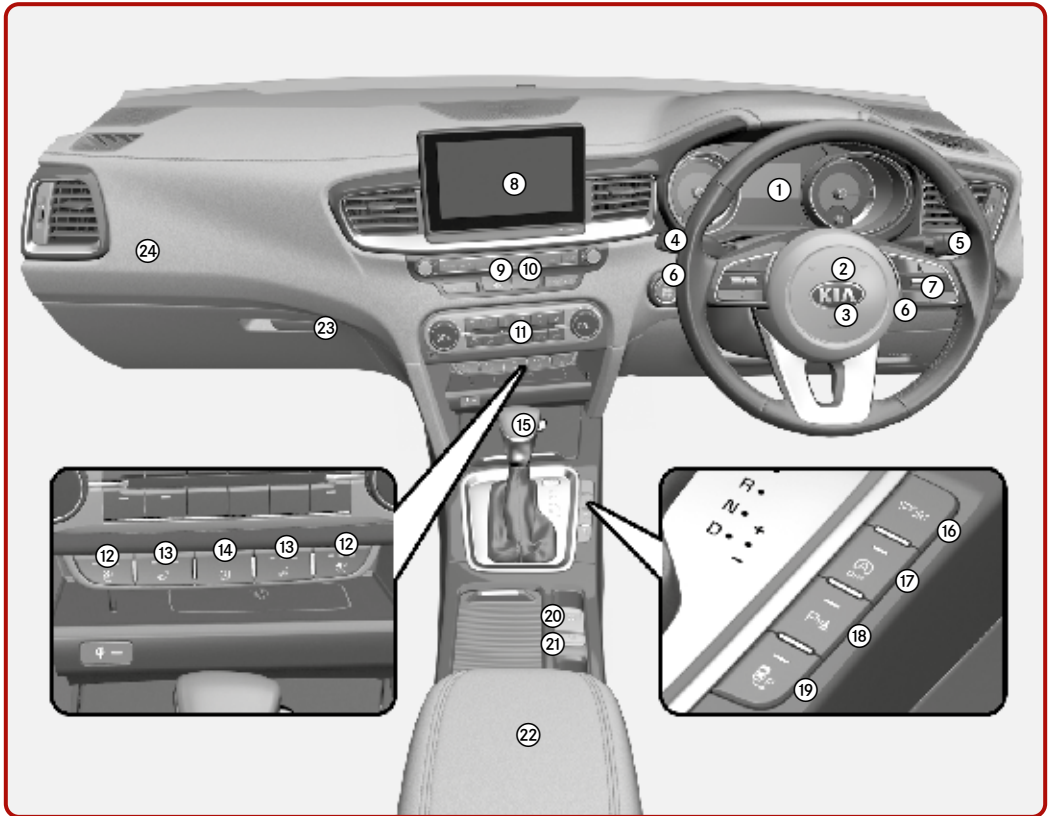

- | | | |
|--|--|---|
| ① Instrument cluster [4] | ⑨ Hazard warning light [7] | ⑱ Parking distance warning ON/OFF button* [4] |
| ② Horn [4] | ⑩ Central door lock switch [4] | ⑲ Parking assist system ON/OFF button* [4] |
| ③ Driver's front air bag [3] | ⑪ Climate control system [4] | ⑳ Electronic parking brake switch* [6] |
| ④ Turn signal/Headlamp control lever [4] | ⑫ Air ventilation seat* [4] | ㉑ Auto Hold button* [6] |
| ⑤ Wiper and washer control lever [4] | ⑬ Seat warmer button* [4] | ㉒ Center console storage box [4] |
| ⑥ Ignition switch or ENGINE START/STOP button* [6] | ⑭ Heated steering wheel button* [4] | ⑳ Glove box [4] |
| ⑦ Cruise control/Smart cruise control buttons* [6] | ⑮ Shift lever [6] | ㉔ Passenger's front air bag [3] |
| ⑧ AVN (Audio/Video/Navigation*) [5] | ⑯ SPORT button* [6] | |
| | ⑰ Idle Stop and Go (ISG) OFF button* [6] | |


Instrument Cluster / Engine Compartment

Instrument cluster [4]



- ① Tachometer
- ② Speedometer
- ③ Engine coolant temperature gauge
- ④ Fuel gauge
- ⑤ Warning and indicator lights
- ⑥ LCD information screen

Engine compartment (Gamma 1.6L MPI Engine) [2]

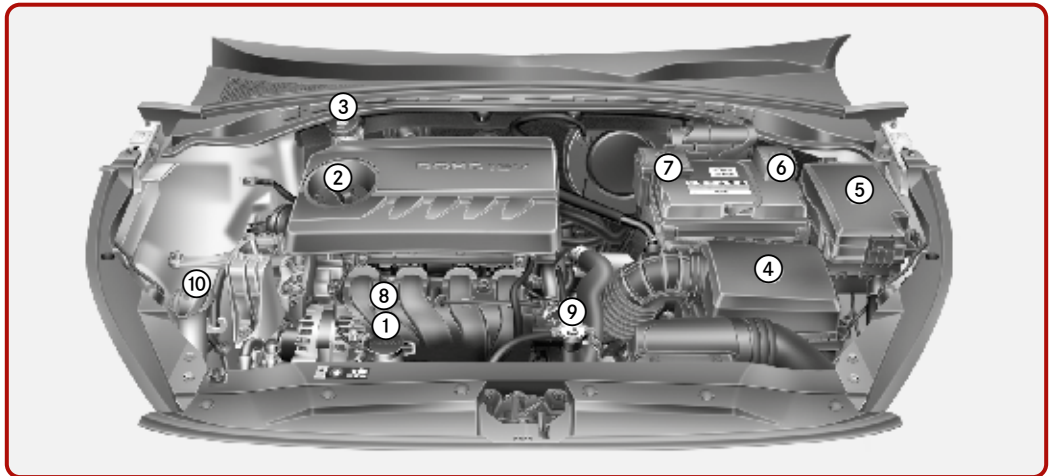


- ① Engine coolant reservoir [8]
- ② Engine oil filler cap [8]
- ③ Brake/clutch* fluid reservoir [8]
- ④ Air cleaner [8]
- ⑤ Engine room fuse box [8]
- ⑥ Negative battery terminal [8]
- ⑦ Positive battery terminal [8]
- ⑧ Engine oil dipstick [8]
- ⑨ Radiator cap [8]
- ⑩ Windscreen washer fluid reservoir [8]

Automatic climate control system* [4]



- | | | |
|--------------------------------|----------------------|-----------------------------------|
| ① Driver's temperature control | ⑤ Air conditioning | ⑨ Mode selection |
| ② AUTO (automatic control) | ⑥ Air intake control | ⑩ Passenger's temperature control |
| ③ Front windscreen defroster | ⑦ Blower OFF | ⑪ SYNC |
| ④ Rear window defroster | ⑧ Fan speed control | |


Windows [4]

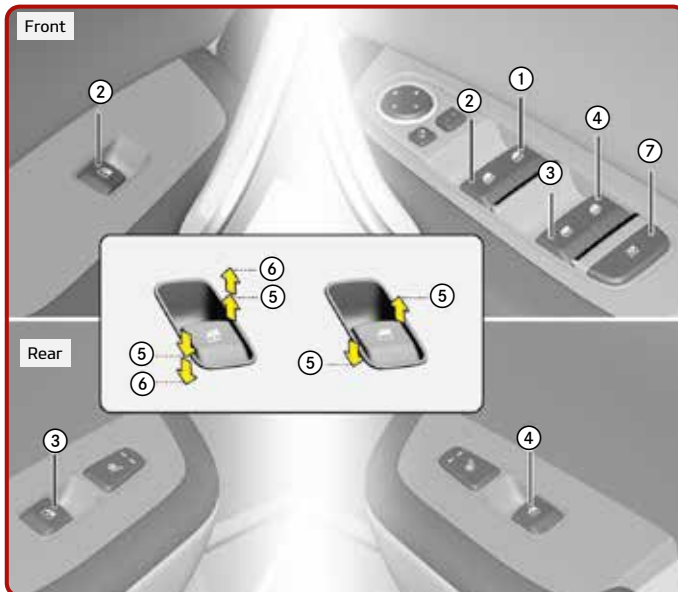

- | |
|--|
| ① Driver's door power window switch |
| ② Front passenger's door power window switch |
| ③ Rear door (left) power window switch |
| ④ Rear door (right) power window switch |
| ⑤ Window opening and closing |
| ⑥ Automatic power window up*/down* |
| ⑦ Power window lock button* |

Note: In cold and wet climates, power windows may not work properly due to freezing conditions.

Door Locks / Tailgate / Bonnet

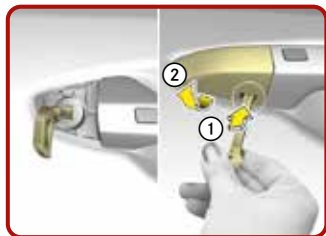

Operating door locks manually [4]

- 1 Press the lever
- 2 Push out the cover



Central door lock switch [4]



Child-protector rear door lock [4]



Opening the tailgate (Shooting Brake) [4]



Closing the tailgate [4]



Emergency tailgate safety release [4]

- 1 Push the mechanical key to the right



Smart tailgate* [4]

Activate the smart tailgate function in the user setting menu.



The smart tailgate operates with a welcome alert if the smart key is detected within 50-100 cm.




The hazard warning lights will blink and chime will sound 2 times and then the tailgate will slowly open.



Opening the bonnet [4]

Pull the release lever to unlatch the bonnet.

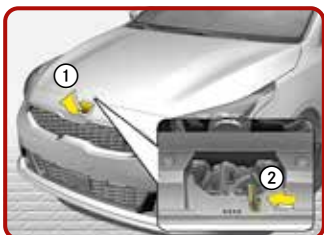

- 1 Lift the bonnet slightly
- 2 Push the secondary latch inside and lift the bonnet

Closing the bonnet

- > Before closing the bonnet, check if all filler caps are correctly installed and any other combustible material must be removed from the engine compartment.
- > Lower the bonnet until it is about 30 cm above the closed position and let it drop to securely lock in place.



Opening the fuel filler lid [4]

With car un-locked press the 3 o'clock position edge of the fuel filler lid.



- ① Fully open the lid
- ② Turn cap counterclockwise to open

Closing the fuel filler

- > Turn the cap clockwise until it "clicks" to ensure it is securely closed.
- > Close the lid and press the edge until it is securely locked.



Adding the urea solution* [8]



Urea solution level gauge* [8]


Low urea solution warning message* [8]

When "Refill Urea tank or vehicle will not start" message is displayed with SCR warning lamp (⚠), the vehicle can't be restarted once the engine is turned off. For the above cases, full replenishment is always recommended.

Note: 1.6 CRDi derivatives of the CEED require an urea solution (also known as DEF (Diesel Exhaust Fluid)) for emission control that is added to a separate tank. The filler for the urea tank is located behind the fuel flap next to the diesel fuel filler.

If the Urea level is not regularly checked and topped up this may cause the vehicle not to start.

Wipers and Washers [4]

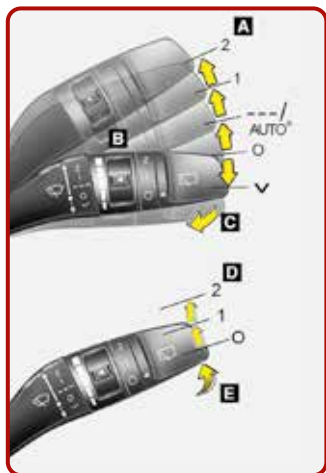

A: Front wiper speed control

- 2 High wiper speed
- 1 Low wiper speed
- Intermittent wipe
- AUTO* Automatic control wipe
- 0 Off
- ∨ Single wipe

B: Intermittent wipe time adjustment


C: Wash with brief wipes (front)*

D: Rear wiper/washer control

- 2 Continuous wipe
- 1 Intermittent wipe*
- 0 Off

E: Wash with brief wipes (rear)

Seat / Air Bag / Child Restraint System

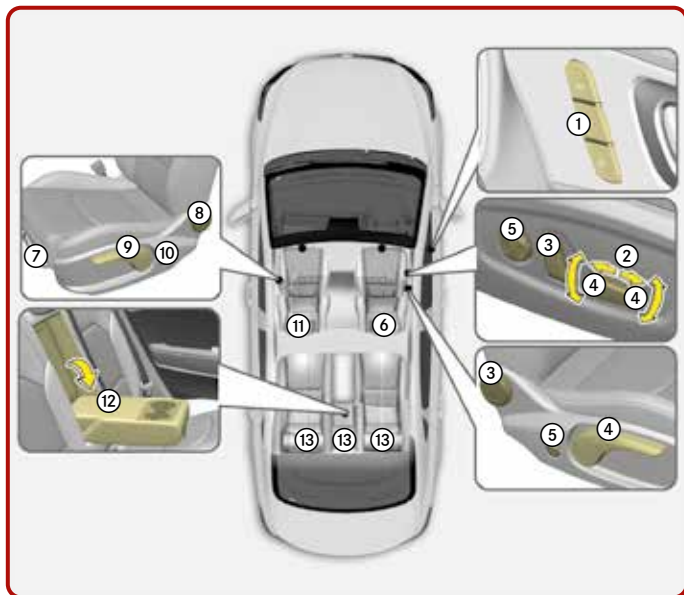

Front seat

- ① Driver position memory system*
- ② Forward and backward
- ③ Seatback angle
- ④ Seat cushion height
- ⑤ Lumbar support*
- ⑥ Headrest

Front passenger's seat

- ⑦ Forward and backward
- ⑧ Seatback angle
- ⑨ Seat cushion height
- ⑩ Lumbar support*
- ⑪ Headrest


Rear seat

- ⑫ Armrest*
- ⑬ Headrest


Seats [3]



Passenger's front air bag ON/OFF switch* [3]

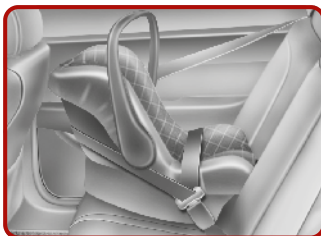

Rearward-facing child restraint system [3]

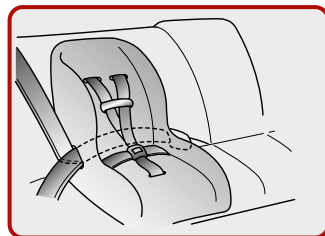

Installing a child restraint system by lap/shoulder belt [3]



Securing with "ISOFIX" system and "Tether Anchorage" system [3]



- ① ISOFIX (i-Size) Anchor Position Indicator
- ② ISOFIX (i-Size) Anchor



Securing with "Tether Anchorage" system [3]

Lighting Control / Steering Wheel / Cruise Control System



Lighting control [4]

- ① OFF
- ② Auto light
- ③ Position light
- ④ Headlight



Tilt & telescopic steering [4]

Steering wheel adjustment:

- ① Pull down the lock release lever
- ② Adjust the steering wheel to the desired angle
- ③ Height adjustment

Lock the steering wheel by pulling up the lock release lever.



Heated steering wheel* [4]

When the ignition switch or engine start/stop button is in the ON position, press the button shown to switch on the heated steering wheel. The indicator on the button will illuminate. To turn off the heating function, press the button once again.



Cruise control system [6]

ON-OFF button (MODE) to activate cruise control system



Set cruise control speed by moving the lever down to SET -



To increase cruise control set speed



To decrease cruise control set speed



Cancel cruise control set speed by pressing the cancel button (O)



Resume cruising speed by moving the lever up to RES +

Towing / Spare Tyre, Jack And Tools / Tyre Mobility Kit


Towing [7]

When towing the vehicle in an emergency without wheel dollies, tow with the front wheels off the ground and:

1. Set the ignition switch in the ACC position.
2. Place the transaxle shift lever in N (Neutral).
3. Release the parking brake.

Emergency towing

If towing is necessary, it is recommended to have it done by an authorised Kia dealer or a commercial tow truck service.

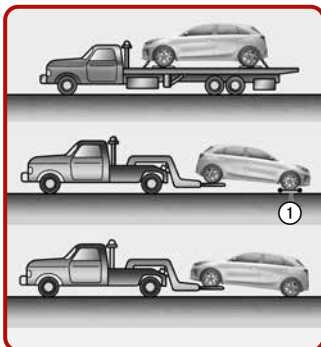

- ① Wheel dollies

⚠ CAUTION

Failure to place the transaxle shift lever in N (Neutral) may cause internal damage to the transaxle.



Removable towing hook [7]

1. Open the tailgate and remove the towing hook from the tool case.
2. Remove the hole cover by pressing the lower part of the cover on the bumper.
3. Install the towing hook by turning it clockwise until it is fully secured.
4. Remove the towing hook and install the cover after use.



Spare tyre, jack and tools* [7]

The shown tools are stored in the luggage compartment. Pull up the luggage box cover to reach this equipment.

- ① Jack handle
- ② Jack
- ③ Wheel brace




Tyre Mobility Kit [7]

Please read the instructions before using the Tyre Mobility Kit.


- ① Compressor
- ② Sealant bottle



With the Tyre Mobility Kit you stay mobile even after experiencing a tyre puncture. After you ensure that the tyre is properly sealed you can drive cautiously on the tyre (up to 200 km (120 miles)) at a max. speed of 80 km/h (50 mph) in order to reach a vehicle or tyre dealer to have the tyre replaced.

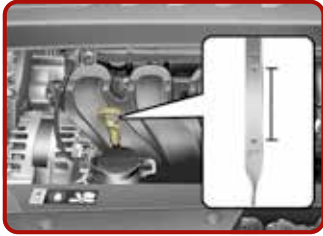

Checking the engine oil level [8]
Pull the dipstick out and check the level. The level should be between F and L.

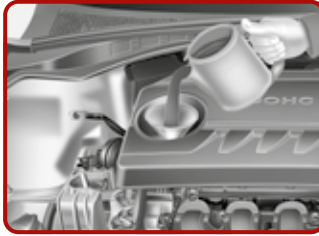

Refilling engine oil [8]
Use only the specified engine oil [9] and avoid spillage.



Checking the washer fluid level [8]
Check the fluid level and add fluid if necessary.

Additional Info*

Idle Stop & Go (ISG)

When enabled, ISG automatically stops the car's engine to reduce fuel consumption and emissions. The ISG function may not work if the car's battery charge status, ambient temperature and/or engine temperature is too low. Air conditioning/heater control settings may also affect ISG function.

Parking brake (handbrake)

When engaging the parking brake, apply the footbrake first and keep it depressed. Then apply the parking brake.

We strongly recommend to leave the car in first or reverse gear or in the 'P' (Park) position on automatics when leaving the car.

Bluetooth®

Many of our cars have Bluetooth® connectivity to enable the driver to safely enjoy the convenience of the mobile phone. For Bluetooth® compatibility please visit the owners section on our website.

Additional Info*

Kia Service App

The Kia Service App – now available for free on iPhone/iPad and Android. With the Kia Service App, you have (almost) all Kia dealers in Europe within reach*. Looking for a showroom or just a service, the app displays all dealers around your current location on the map. With one click you can call a dealer, visit their website or get directions to the showroom.

(* In selected markets only)



Kia Service App



Kia Service App



For full details and instructions on any item contained in this quick reference guide, please read the owner's manual.

Copyright © 2020 Kia Motors Europe GmbH, all rights reserved.
20.000592 - QRG CD - EN-UK RHD



The Power to Surprise