



**Prius**

**OWNER'S MANUAL**



Toyota Motor Europe NV/SA Address: Avenue du bourget  
60 -1140 Brussels, Belgium

2015 TOYOTA MOTOR CORPORATION All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation

<b>Pictorial index</b>	Search by illustration	
<b>1 For safety and security</b>	Make sure to read through them	
<b>2 Instrument cluster</b>	How to read the gauges and meters, the variety of warning lights and indicators, etc.	
<b>3 Operation of each component</b>	Opening and closing the doors and windows, adjustment before driving, etc.	
<b>4 Driving</b>	Operations and advice which are necessary for driving	
<b>5 Interior features</b>	Usage of the interior features, etc.	
<b>6 Maintenance and care</b>	Caring for your vehicle and maintenance procedures	
<b>7 When trouble arises</b>	What to do in case of malfunction or emergency	
<b>8 Vehicle specifications</b>	Vehicle specifications, customizable features, etc.	
<b>Index</b>	Search by symptom	
	Search alphabetically	

For your information .....8  
 Reading this manual..... 12  
 How to search ..... 13  
 Pictorial index ..... 14

**1 For safety and security**

**1-1. For safe use**  
 Before driving.....30  
 For safe driving .....32  
 Seat belts .....34  
 SRS airbags.....39  
 Exhaust gas precautions .....50

**1-2. Child safety**  
 Airbag manual on-off  
 system .....51  
 Riding with children.....53  
 Child restraint systems .....54

**1-3. Emergency assistance**  
 ERA-GLONASS/EVAK .....74

**1-4. Hybrid system**  
 Hybrid system features .....79  
 Hybrid system  
 precautions .....84

**1-5. Theft deterrent system**  
 Immobilizer system .....91  
 Double locking system.....92  
 Alarm .....93

**2 Instrument cluster**

**2. Instrument cluster**  
 Combination meter ..... 100  
 Warning lights and  
 indicators..... 110  
 Main display ..... 117  
 Multi-information  
 display ..... 127  
 Head-up display ..... 160  
 Energy monitor/  
 consumption screen ..... 166

**3 Operation of each component**

**3-1. Key information**  
 Keys ..... 172

**3-2. Opening, closing and locking the doors**  
 Side doors ..... 177  
 Back door ..... 182  
 Smart entry & start  
 system..... 187

**3-3. Adjusting the seats**  
 Front seats ..... 194  
 Rear seats ..... 196  
 Head restraints ..... 199

**3-4. Adjusting the steering wheel and mirrors**  
 Steering wheel ..... 203  
 Inside rear view mirror..... 205  
 Outside rear view  
 mirrors ..... 207

**3-5. Opening and closing the windows and moon roof**  
 Power windows ..... 210  
 Moon roof ..... 215

## 4 Driving

### 4-1. Before driving

Driving the vehicle .....	220
Cargo and luggage .....	231
Trailer towing (2WD models).....	233
Trailer towing (AWD models) .....	243

### 4-2. Driving procedures

Power (ignition) switch.....	244
EV drive mode .....	250
Hybrid transmission .....	253
Turn signal lever .....	259
Parking brake.....	260

### 4-3. Operating the lights and wipers

Headlight switch.....	261
AHB (Automatic High Beam) .....	266
Fog light switch .....	270
Windshield wipers and washer .....	271
Rear window wiper and washer .....	275

### 4-4. Refueling

Opening the fuel tank cap .....	277
------------------------------------	-----

### 4-5. Using the driving support systems

Toyota Safety Sense.....	282
PCS (Pre-Collision System).....	296
LTA (Lane Tracing Assist) .....	307
RSA (Road Sign Assist)....	323
Dynamic radar cruise control with full-speed range .....	329
Cruise control .....	346
Driving mode select switch .....	351
Speed limiter .....	353
BSM (Blind Spot Monitor) .....	356
• The Blind Spot Monitor function .....	372
• The Rear Crossing Traffic Alert function .....	375
Toyota parking assist-sensor .....	381
Parking Support Brake function .....	394
S-IPA (Simple Intelligent Parking Assist System).....	405
GPF (Gasoline Particulate Filter) system .....	440
Driving assist systems.....	441
<b>4-6. Driving tips</b>	
Hybrid vehicle driving tips .....	449
Winter driving tips.....	452

**5 Interior features**

**5-1. Using the air conditioning system and defogger**  
 Automatic air conditioning system .....458  
 Seat heaters .....468

**5-2. Using the interior lights**  
 Interior lights list .....470  
 • Front interior light.....471  
 • Front personal lights .....471  
 • Rear interior light .....472

**5-3. Using the storage features**  
 List of storage features .....473  
 • Glove box .....474  
 • Console box .....474  
 • Cup holders .....475  
 • Bottle holders/  
 door pockets .....476  
 • Auxiliary boxes .....477  
 • Seat back pockets .....478  
 Luggage compartment features.....479

**5-4. Using the other interior features**  
 Other interior features .....485  
 • Sun visors.....485  
 • Vanity mirrors .....485  
 • Power outlets.....486  
 • Wireless charger.....487  
 • Armrest .....493  
 • Coat hooks .....493  
 • Assist grips .....494

**6 Maintenance and care**

**6-1. Maintenance and care**  
 Cleaning and protecting the vehicle exterior ..... 496  
 Cleaning and protecting the vehicle interior ..... 502

**6-2. Maintenance**  
 Maintenance requirements ..... 505

**6-3. Do-it-yourself maintenance**  
 Do-it-yourself service precautions ..... 508  
 Hood..... 511  
 Positioning a floor jack ..... 513  
 Engine compartment ..... 514  
 Tires ..... 528  
 Tire inflation pressure..... 537  
 Wheels ..... 539  
 Air conditioning filter ..... 542  
 Cleaning the hybrid battery (traction battery) air intake vent and filter ..... 545  
 Wiper insert replacement ..... 550  
 Electronic key battery ..... 554  
 Checking and replacing fuses ..... 557  
 Light bulbs ..... 561

## 7 When trouble arises

### 7-1. Essential information

- Emergency flashers .....568
- If your vehicle has to be stopped in an emergency .....569
- If the vehicle is submerged or water on the road is rising .....570

### 7-2. Steps to take in an emergency

- If your vehicle needs to be towed .....572
- If you think something is wrong .....579
- If a warning light turns on or a warning buzzer sounds .....580
- If a warning message is displayed .....589
- If you have a flat tire (vehicles without spare tire) .....598
- If you have a flat tire (vehicles with spare tire) .....618
- If the hybrid system will not start.....634
- If the electronic key does not operate properly .....636
- If the 12-volt battery is discharged .....639
- If your vehicle overheats .....645
- If the vehicle becomes stuck .....650

## 8 Vehicle specifications

### 8-1. Specifications

- Maintenance data (fuel, oil level, etc.) ..... 654
- Fuel information ..... 668

### 8-2. Customization

- Customizable features ..... 670

### 8-3. Initialization

- Items to initialize..... 679

**Index**

What to do if...  
(Troubleshooting) .....682  
Alphabetical index .....686

 
 
For vehicles with navigation system or multimedia system, refer to the “Navigation and multimedia system Owner’s manual” for information regarding the equipment listed below.

- Navigation system
- Audio/video system
- Toyota parking assist monitor
- Panoramic view monitor
- Hands-free system  
(for cellular phone)

Toyota Motor Europe NV/SA, Avenue du Bourget 60 - 1140  
Brussels, Belgium [www.toyota-europe.com](http://www.toyota-europe.com)

Toyota (GB) PLC Great Burgh, Burgh Heath,  
Epsom, Surrey, KT18 5UX, UK





---

## For your information

### Main Owner's Manual

Please note that this manual applies to all models and explains all equipment, including options. Therefore, you may find some explanations for equipment not installed on your vehicle.

All specifications provided in this manual are current at the time of printing. However, because of the Toyota policy of continual product improvement, we reserve the right to make changes at any time without notice.

Depending on specifications, the vehicle shown in the illustrations may differ from your vehicle in terms of color and equipment.

For Eurasian Economic Union: The information on the procedure for the safe use of the vehicle and its systems, presented on the manufacturer's labels on the body in English, is intended only for service workers.

### Accessories, spare parts and modification of your Toyota

Both genuine Toyota and a wide variety of other spare parts and accessories for Toyota vehicles are currently available on the market. Should it be determined that any of the genuine Toyota parts or accessories supplied with the vehicle need to be replaced, Toyota recommends that genuine Toyota parts or accessories, be used to replace them. Other parts or accessories of matching quality can also be used.

Toyota cannot accept any liability or guarantee spare parts and accessories which are not genuine Toyota products, nor for replacement or installation involving such parts. In addition, damage or performance problems resulting from the use of non-genuine Toyota spare parts or accessories may not be covered under warranty.

Also, remodeling like this will have an effect on advanced safety equipment such as Toyota Safety Sense and there is a danger that it will not work properly or the danger that it may work in situations where it should not be working.

---

### Installation of an RF-transmitter system

The installation of an RF-transmitter system in your vehicle could affect electronic systems such as:

- Hybrid system
- Multiport fuel injection system/sequential multiport fuel injection system
- Toyota Safety Sense
- Cruise control system
- Anti-lock brake system
- SRS airbag system
- Seat belt pretensioner system

Be sure to check with any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for precautionary measures or special instructions regarding installation of an RF-transmitter system.

Further information regarding frequency bands, power levels, antenna positions and installation provisions for the installation of RF-transmitters, is available on request at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

High voltage parts and cables on the hybrid vehicles emit approximately the same amount of electromagnetic waves as the conventional gasoline powered vehicles or home electronic appliances despite of their electromagnetic shielding.

Unwanted noise may occur in the reception of the radio frequency transmitter (RF-transmitter).

---

### Vehicle data recording

The vehicle is equipped with sophisticated computers that will record certain data, such as:

- Engine speed/Electric motor speed (traction motor speed)
- Accelerator status
- Brake status
- Vehicle speed
- Operation status of the driving assist systems
- Images from the cameras  
Your vehicle is equipped with cameras. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for the location of recording cameras.
- Hybrid battery (traction battery) status

The recorded data varies according to the vehicle grade level, options and destinations with which it is equipped.

These computers do not record conversations or sounds, and only record images outside of the vehicle in certain situations.

● Data usage

Toyota may use the data recorded in this computer to diagnose malfunctions, conduct research and development, and improve quality.

Toyota will not disclose the recorded data to a third party except:

- With the consent of the vehicle owner or with the consent of the lessee if the vehicle is leased
- In response to an official request by the police, a court of law or a government agency
- For use by Toyota in a lawsuit
- For research purposes where the data is not tied to a specific vehicle or vehicle owner

● Recorded image information can be erased by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

The image recording function can be disabled. However, if the function is disabled, data from when the system operates will not be available.

### Scrapping of your Toyota

The SRS airbag and seat belt pretensioner devices in your Toyota contain explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, this may cause an accident such as fire. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer before you scrap your vehicle.

### “QR Code”

The word “QR Code” is registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

#### WARNING

##### ■ General precautions while driving

**Driving under the influence:** Never drive your vehicle when under the influence of alcohol or drugs that have impaired your ability to operate your vehicle. Alcohol and certain drugs delay reaction time, impair judgment and reduce coordination, which could lead to an accident that could result in death or serious injury.

**Defensive driving:** Always drive defensively. Anticipate mistakes that other drivers or pedestrians might make and be ready to avoid accidents.

**Driver distraction:** Always give your full attention to driving. Anything that distracts the driver, such as adjusting controls, talking on a cellular phone or reading can result in a collision with resulting death or serious injury to you, your occupants or others.

##### ■ General precaution regarding children’s safety

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows, the moon roof, or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

## Reading this manual



### WARNING:

Explains something that, if not obeyed, could cause death or serious injury to people.



### NOTICE:

Explains something that, if not obeyed, could cause damage to or a malfunction in the vehicle or its equipment.




Indicates operating or working procedures. Follow the steps in numerical order.



Indicates the action (pushing, turning, etc.) used to operate switches and other devices.




Indicates the outcome of an operation (e.g. a lid opens).

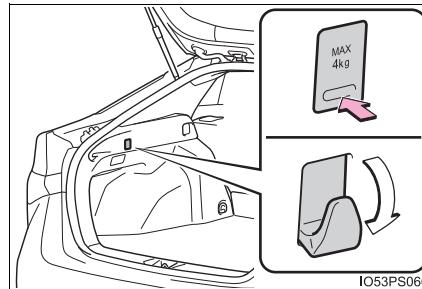

Indicates the component or position being explained.




Means “Do not”, “Do not do this”, or “Do not let this happen”.

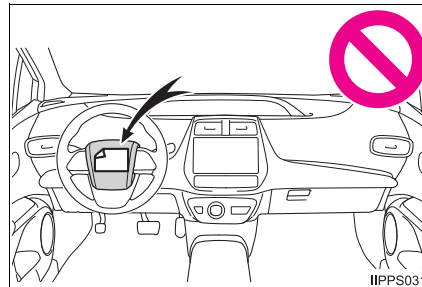

## How to search


### ■ Searching by name

- Alphabetical index ..... P. 686

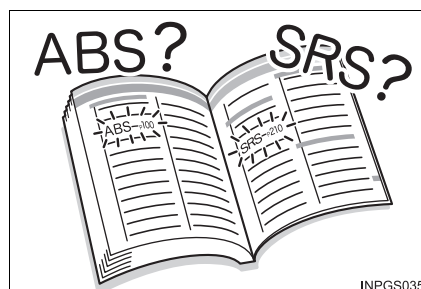

### ■ Searching by installation position

- Pictorial index ..... P. 14

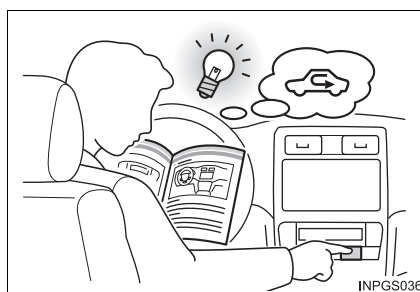


### ■ Searching by symptom or sound

- What to do if...  
(Troubleshooting) ..... P. 682




### ■ Searching by title

- Table of contents ..... P. 2

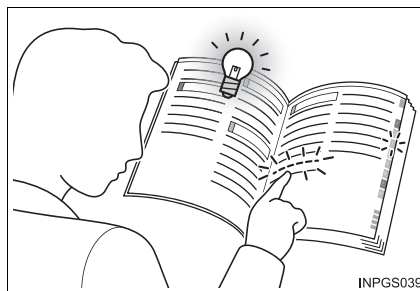

## Pictorial index

### Exterior

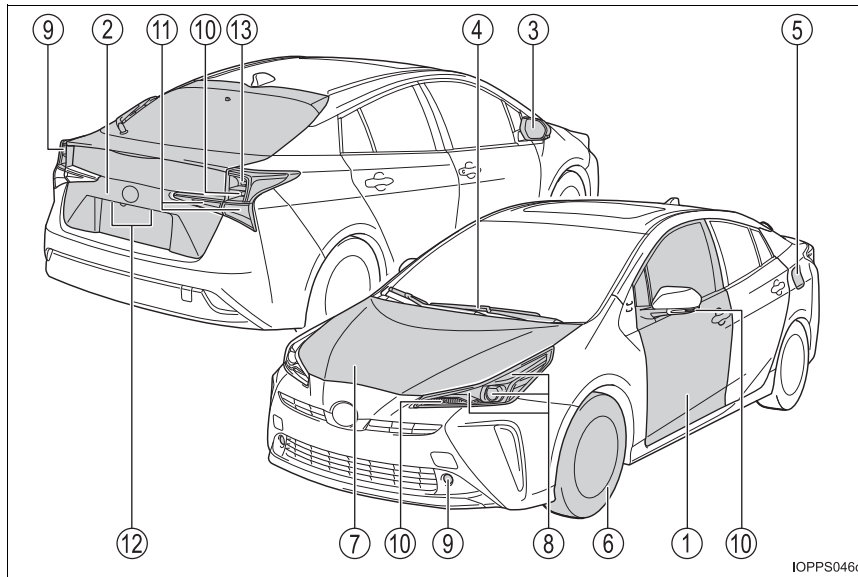

IOPPS046c

- ① **Side doors** ..... **P. 177**
  - Locking/unlocking ..... P. 177
  - Opening/closing the side windows ..... P. 210
  - Locking/unlocking by using the mechanical key ..... P. 636
  - Warning lights/warning messages ..... P. 583, 589
- ② **Back door** ..... **P. 182**
  - Opening from outside ..... P. 182
  - Warning lights/warning messages ..... P. 583, 589
- ③ **Outside rear view mirrors** ..... **P. 207**
  - Adjusting the mirror angle ..... P. 207
  - Folding the mirrors ..... P. 207
  - Defogging the mirrors ..... P. 463



- ④ **Windshield wipers** . . . . . **P. 271**
  - Precautions against winter season . . . . . P. 452
  - Precautions against car wash (vehicles with rain-sensing windshield wipers) . . . . . P. 498
  - Replacing the wiper insert . . . . . P. 550
- ⑤ **Fuel filler door** . . . . . **P. 277**
  - Refueling method . . . . . P. 277
  - Fuel type/fuel tank capacity . . . . . P. 657
- ⑥ **Tires** . . . . . **P. 528**
  - Tire size/inflation pressure . . . . . P. 665
  - Winter tires/tire chain . . . . . P. 452
  - Checking/rotation/tire pressure warning system\*<sup>1</sup> . . . . . P. 528
  - Coping with flat tires . . . . . P. 598, 618
- ⑦ **Hood** . . . . . **P. 511**
  - Opening . . . . . P. 511
  - Engine oil . . . . . P. 658
  - Coping with overheat . . . . . P. 645


**Light bulbs of the exterior lights for driving**  
(Replacing method: P. 561, Watts: P. 667)

- ⑧ **Headlights/front position lights/ daytime running lights** . . . . . **P. 261**
- ⑨ **Front fog lights/rear fog light\*<sup>2</sup>** . . . . . **P. 270**
- ⑩ **Turn signal lights** . . . . . **P. 259**
- ⑪ **Tail lights** . . . . . **P. 261**
- ⑫ **License plate lights** . . . . . **P. 261**
- ⑬ **Back-up light\*<sup>2</sup>**
  - Shifting the shift lever to R. . . . . P. 253

\*<sup>1</sup>: If equipped

\*<sup>2</sup>: They may be located on the opposite side depending on the target region.

■ Instrument panel (Left-hand drive vehicles)

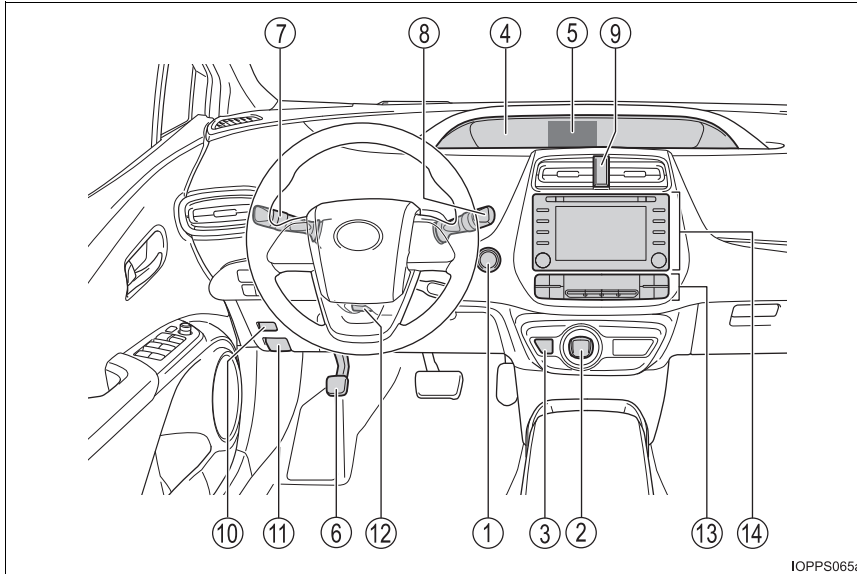


①	<b>Power switch</b> . . . . .	<b>P. 244</b>
	Starting the hybrid system/changing the modes . . . . .	P. 244
	Emergency stop of the hybrid system . . . . .	P. 569
	When the hybrid system will not start . . . . .	P. 634
	Warning messages . . . . .	P. 589
②	<b>Shift lever</b> . . . . .	<b>P. 253</b>
	Changing the shift position . . . . .	P. 253
	Precautions against towing . . . . .	P. 572
③	<b>P position switch</b> . . . . .	<b>P. 254</b>
④	<b>Meters</b> . . . . .	<b>P. 100</b>
	Reading the meters/adjusting the instrument cluster light . . . . .	P. 100, 102
	Warning lights/indicator lights . . . . .	P. 110
	When the warning lights come on . . . . .	P. 580


- ⑤ **Multi-information display** . . . . . **P. 127**
  - Display . . . . . P. 127
  - Energy monitor . . . . . P. 130
  - When the warning messages are displayed . . . . . P. 589
- ⑥ **Parking brake** . . . . . **P. 260**
  - Applying/releasing . . . . . P. 260
  - Precautions against winter season . . . . . P. 452
  - Warning buzzer . . . . . P. 260
- ⑦ **Turn signal lever** . . . . . **P. 259**
  - Headlight switch** . . . . . **P. 261**
    - Headlights/front position lights/tail lights/  
daytime running lights . . . . . P. 261
    - Front fog lights/rear fog light . . . . . P. 270
- ⑧ **Windshield wiper and washer switch** . . . . . **P. 271**
  - Rear window wiper and washer switch** . . . . . **P. 275**
    - Usage . . . . . P. 271, 275
    - Adding washer fluid . . . . . P. 526
- ⑨ **Emergency flasher switch** . . . . . **P. 568**
- ⑩ **Fuel filler door opener** . . . . . **P. 279**
- ⑪ **Hood lock release lever** . . . . . **P. 511**
- ⑫ **Tilt and telescopic steering lock release lever** . . . . . **P. 203**
- ⑬ **Air conditioning system** . . . . . **P. 458**
  - Usage . . . . . P. 458
  - Rear window defogger . . . . . P. 463
- ⑭ **Audio system\***

\*: Refer to “Navigation and multimedia system Owner’s manual”.

■ Switches (Left-hand drive vehicles)

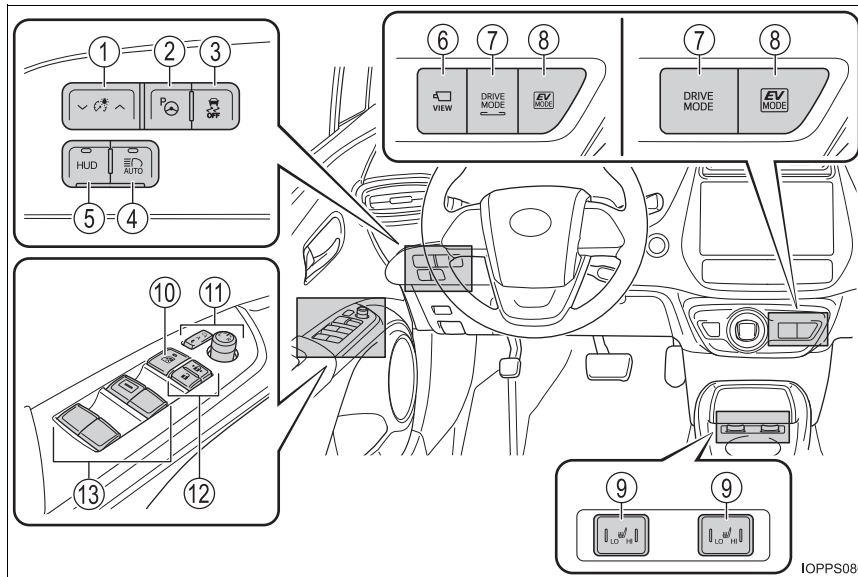

- ① Instrument cluster light control switch . . . . . P. 102
- ② S-IPA (Simple Intelligent Parking Assist System) switch\*1 . . . . . P. 408
- ③ VSC OFF switch . . . . . P. 443
- ④ Automatic High Beam switch\*1 . . . . . P. 266
- ⑤ “HUD” (Head-up display) switch\*1 . . . . . P. 161
- ⑥ Camera switch\*1, 2
- ⑦ Driving mode select switch . . . . . P. 351
- ⑧ EV drive mode switch . . . . . P. 250
- ⑨ Seat heater switches\*1 . . . . . P. 469
- ⑩ Window lock switch . . . . . P. 210
- ⑪ Outside rear view mirror switches . . . . . P. 207
- ⑫ Door lock switches . . . . . P. 179
- ⑬ Power window switches . . . . . P. 210

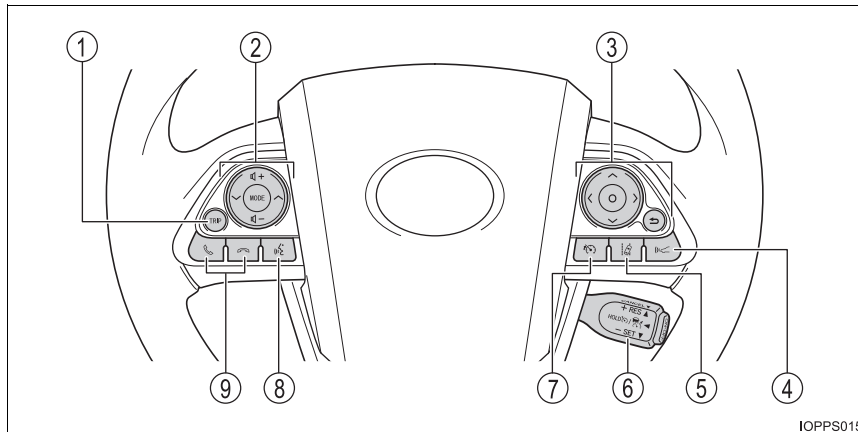


- ① **TRIP switch** ..... P. 121
- ② **Audio remote control switches**<sup>\*2</sup>
- ③ **Meter control switches** ..... P. 101
- ④ **Vehicle-to-vehicle distance switch**<sup>\*1</sup> ..... P. 337
- ⑤ **LTA (Lane Tracing Assist) switch**<sup>\*1</sup> ..... P. 315
- ⑥ **Cruise control switch**  
 Cruise control<sup>\*1</sup> ..... P. 346  
 Dynamic radar cruise control with full-speed range<sup>\*1</sup> ..... P. 329
- ⑦ **Speed limiter switch**<sup>\*1</sup> ..... P. 353
- ⑧ **Talk switch**<sup>\*2</sup>
- ⑨ **Telephone switches**<sup>\*2</sup>

<sup>\*1</sup>: If equipped


<sup>\*2</sup>: Refer to “Navigation and multimedia system Owner’s manual”.

### ■ Interior (Left-hand drive vehicles)

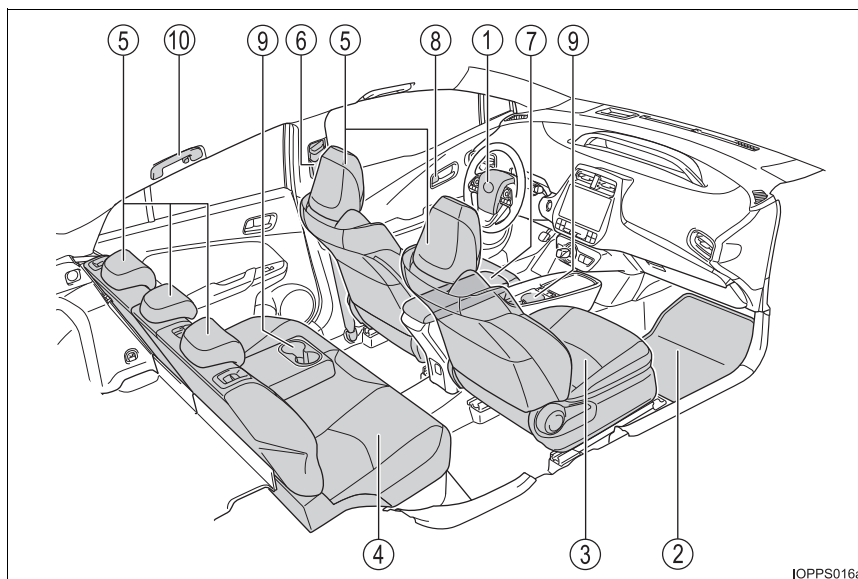

IOPPS016a

- |   |                                  |               |
|---|----------------------------------|---------------|
| ① | <b>SRS airbags</b> .....         | <b>P. 39</b>  |
| ② | <b>Floor mats</b> .....          | <b>P. 30</b>  |
| ③ | <b>Front seats</b> .....         | <b>P. 194</b> |
| ④ | <b>Rear seats</b> .....          | <b>P. 196</b> |
| ⑤ | <b>Head restraints</b> .....     | <b>P. 199</b> |
| ⑥ | <b>Seat belts</b> .....          | <b>P. 34</b>  |
| ⑦ | <b>Console box</b> .....         | <b>P. 474</b> |
| ⑧ | <b>Inside lock buttons</b> ..... | <b>P. 179</b> |
| ⑨ | <b>Cup holders</b> .....         | <b>P. 475</b> |
| ⑩ | <b>Assist grips</b> .....        | <b>P. 494</b> |

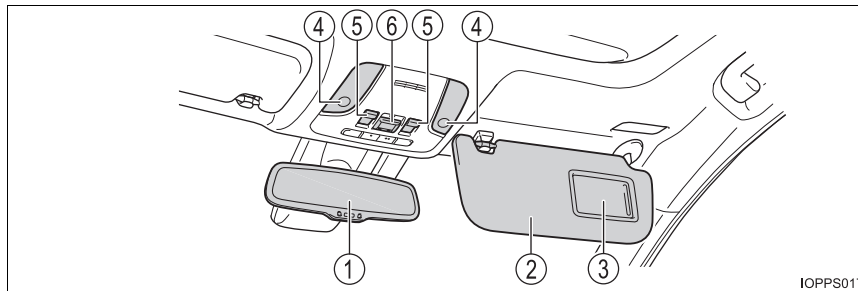

- ① Inside rear view mirror ..... P. 205
- ② Sun visors\*1 ..... P. 485
- ③ Vanity mirrors ..... P. 485
- ④ Interior lights\*2, 3 ..... P. 471, 472
- Personal lights\*3 ..... P. 471
- ⑤ Moon roof switches\*4 ..... P. 215
- ⑥ "SOS" button\*4, 5 ..... P. 74

\*1: NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. (→P. 57)




\*2: The illustration shows the front, but they are also equipped in the rear.

\*3: For vehicles without moon roof, the switch shape may differ.

\*4: If equipped

\*5: The button can not be used in vehicles without ERA-GLONASS/EVAK.

### ■ Instrument panel (Right-hand drive vehicles)

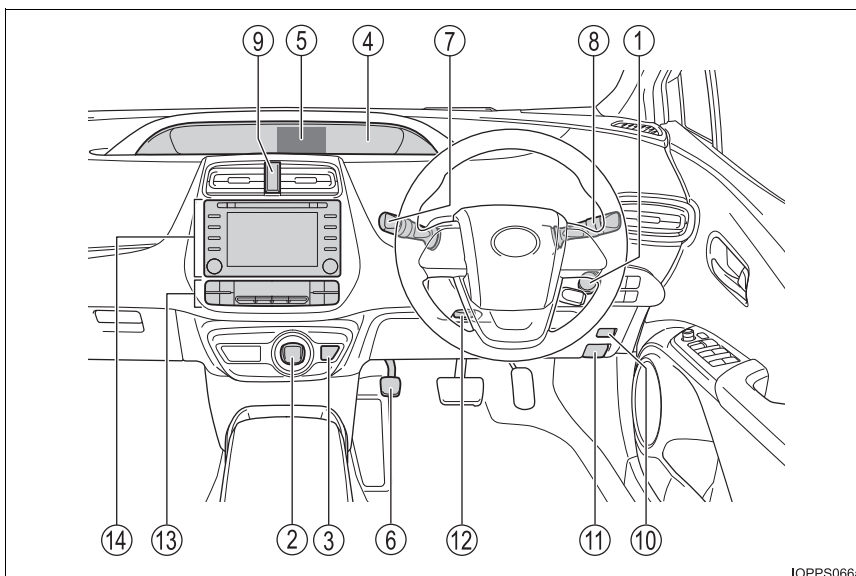

IOPPS066a


- |   |  |               |
|---|--|---------------|
| ① | <b>Power switch</b> . . . . .  | <b>P. 244</b> |
|   | Starting the hybrid system/changing the modes . . . . .                | P. 244        |
|   | Emergency stop of the hybrid system . . . . .                          | P. 569        |
|   | When the hybrid system will not start . . . . .                        | P. 634        |
|   | Warning messages . . . . .   | P. 589        |
| ② | <b>Shift lever</b> . . . . .   | <b>P. 253</b> |
|   | Changing the shift position . . . . .                                  | P. 253        |
|   | Precautions against towing . . . . .                                   | P. 572        |
| ③ | <b>P position switch</b> . . . . .                                     | <b>P. 254</b> |
| ④ | <b>Meters</b> . . . . .  | <b>P. 100</b> |
|   | Reading the meters/adjusting the instrument<br>cluster light . . . . . | P. 100, 102   |
|   | Warning lights/indicator lights . . . . .                              | P. 110        |
|   | When the warning lights come on . . . . .                              | P. 580        |



- ⑤ **Multi-information display** . . . . . **P. 127**
  - Display . . . . . P. 127
  - Energy monitor . . . . . P. 130
  - When the warning messages are displayed . . . . . P. 589
- ⑥ **Parking brake** . . . . . **P. 260**
  - Applying/releasing . . . . . P. 260
  - Precautions against winter season . . . . . P. 452
  - Warning buzzer . . . . . P. 260
- ⑦ **Turn signal lever** . . . . . **P. 259**
  - Headlight switch** . . . . . **P. 261**
    - Headlights/front position lights/tail lights/  
daytime running lights . . . . . P. 261
    - Front fog lights/rear fog light . . . . . P. 270
- ⑧ **Windshield wiper and washer switch** . . . . . **P. 271**
  - Rear window wiper and washer switch** . . . . . **P. 275**
    - Usage . . . . . P. 271, 275
    - Adding washer fluid . . . . . P. 526
- ⑨ **Emergency flasher switch** . . . . . **P. 568**
- ⑩ **Fuel filler door opener** . . . . . **P. 279**
- ⑪ **Hood lock release lever** . . . . . **P. 511**
- ⑫ **Tilt and telescopic steering lock release lever** . . . . . **P. 203**
- ⑬ **Air conditioning system** . . . . . **P. 458**
  - Usage . . . . . P. 458
  - Rear window defogger . . . . . P. 463
- ⑭ **Audio system\***


\*: Refer to “Navigation and multimedia system Owner’s manual”.

### ■ Switches (Right-hand drive vehicles)

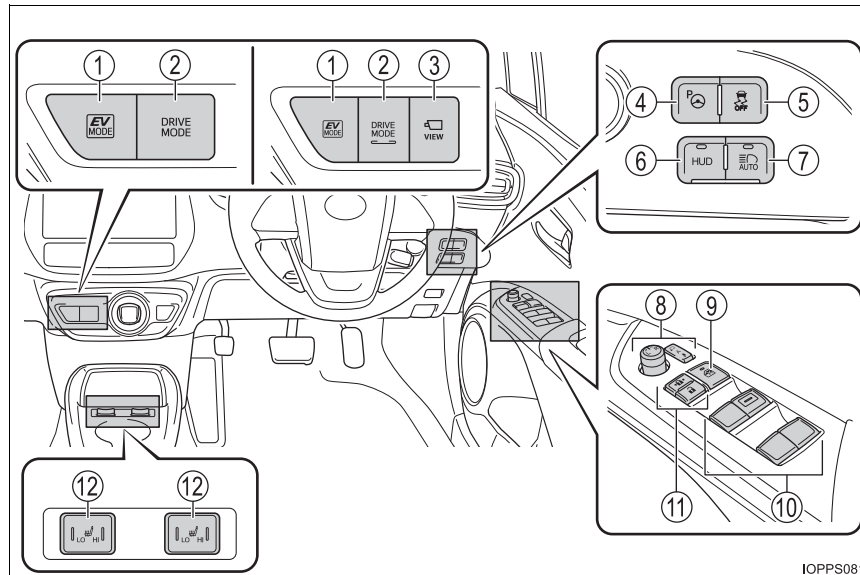

IOPPS081

- ① EV drive mode switch . . . . . P. 250
- ② Driving mode select switch . . . . . P. 351
- ③ Camera switch\*<sup>1, 2</sup>
- ④ S-IPA (Simple Intelligent Parking Assist System) switch\*<sup>1</sup> . . . . . P. 408
- ⑤ VSC OFF switch. . . . . P. 443
- ⑥ “HUD” (Head-up display) switch\*<sup>1</sup> . . . . . P. 161
- ⑦ Automatic High Beam switch. . . . . P. 266
- ⑧ Outside rear view mirror switches. . . . . P. 207
- ⑨ Window lock switch . . . . . P. 210
- ⑩ Power window switches . . . . . P. 210
- ⑪ Door lock switches . . . . . P. 179
- ⑫ Seat heater switches\*<sup>1</sup> . . . . . P. 469

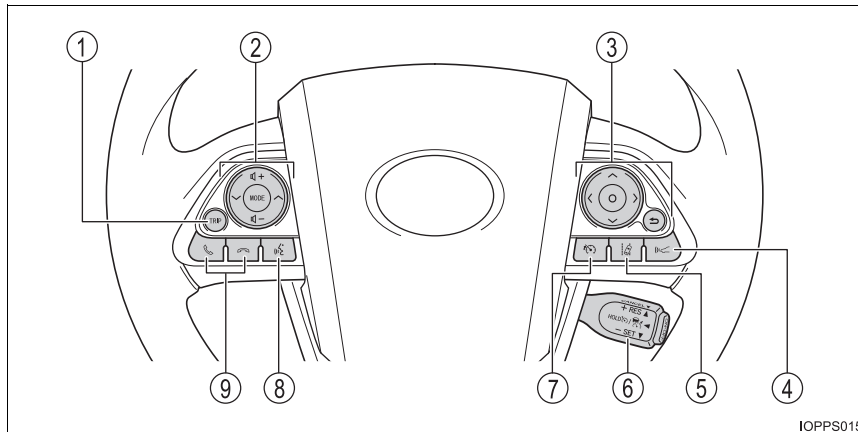


- ① **TRIP switch** ..... P. 121
- ② **Audio remote control switches**<sup>\*2</sup>
- ③ **Meter control switches** ..... P. 101
- ④ **Vehicle-to-vehicle distance switch** ..... P. 337
- ⑤ **LTA (Lane Tracing Assist) switch**<sup>\*1</sup> ..... P. 315
- ⑥ **Cruise control switch**  
 Cruise control<sup>\*1</sup> ..... P. 346  
 Dynamic radar cruise control with full-speed range<sup>\*1</sup> ..... P. 329
- ⑦ **Speed limiter switch**<sup>\*1</sup> ..... P. 353
- ⑧ **Talk switch**<sup>\*2</sup>
- ⑨ **Telephone switches**<sup>\*2</sup>

<sup>\*1</sup>: If equipped


<sup>\*2</sup>: Refer to "Navigation and multimedia system Owner's manual".

### ■ Interior (Right-hand drive vehicles)

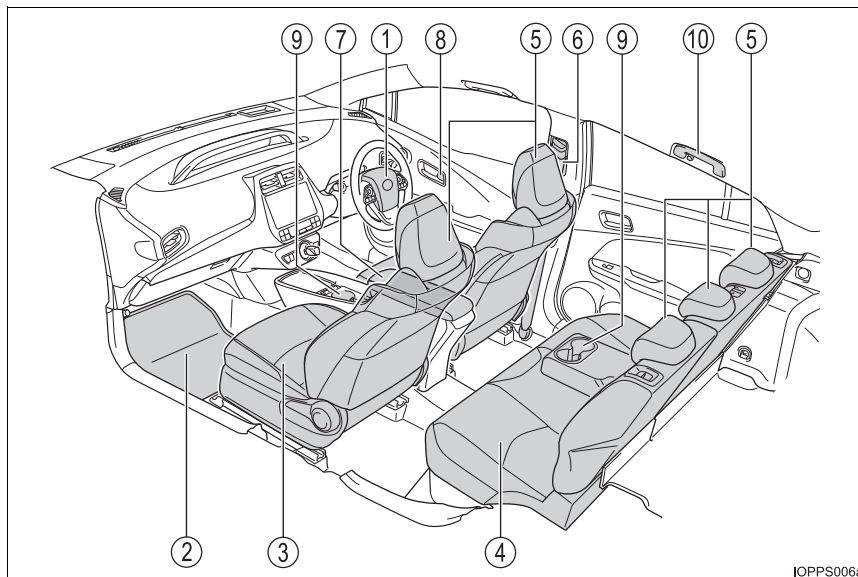

IOPPS006a

① SRS airbags .....	P. 39
② Floor mats .....	P. 30
③ Front seats .....	P. 194
④ Rear seats .....	P. 196
⑤ Head restraints .....	P. 199
⑥ Seat belts .....	P. 34
⑦ Console box .....	P. 474
⑧ Inside lock buttons .....	P. 179
⑨ Cup holders .....	P. 475
⑩ Assist grips .....	P. 494

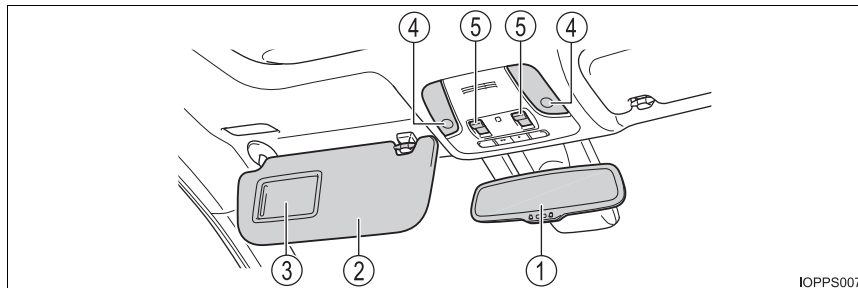

- ① Inside rear view mirror ..... P. 205
- ② Sun visors\*<sup>1</sup> ..... P. 485
- ③ Vanity mirrors ..... P. 485
- ④ Interior lights\*<sup>2, 3</sup> ..... P. 471, 472
- Personal lights\*<sup>3</sup> ..... P. 471
- ⑤ Moon roof switches\*<sup>4</sup> ..... P. 215

\*1: NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. (→P. 57)



\*2: The illustration shows the front, but they are also equipped in the rear.

\*3: For vehicles without moon roof, the switch shape may differ.

\*4: If equipped



**For safety and security****1**


<b>1-1. For safe use</b>	
Before driving.....	30
For safe driving.....	32
Seat belts.....	34
SRS airbags.....	39
Exhaust gas precautions .....	50
<b>1-2. Child safety</b>	
Airbag manual on-off system .....	51
Riding with children.....	53
Child restraint systems .....	54
<b>1-3. Emergency assistance</b>	
ERA-GLONASS/EVAK .....	74
<b>1-4. Hybrid system</b>	
Hybrid system features .....	79
Hybrid system precautions .....	84
<b>1-5. Theft deterrent system</b>	
Immobilizer system .....	91
Double locking system.....	92
Alarm .....	93

## Before driving

### Floor mat


Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

- 1 Insert the retaining hooks (clips) into the floor mat eyelets.

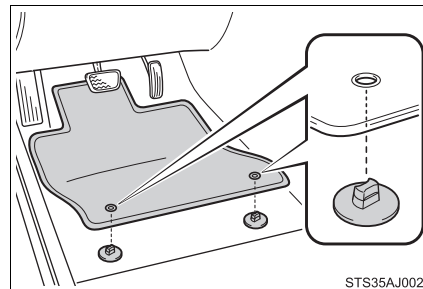

- 2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

\*: Always align the  $\triangle$  marks.

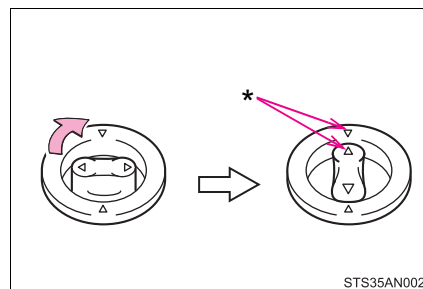

The shape of the retaining hooks (clips) may differ from that shown in the illustration.



**⚠ WARNING**

Observe the following precautions.


Failure to do so may cause the driver's floor mat to slip, possibly interfering with the pedals while driving. An unexpectedly high speed may result or it may become difficult to stop the vehicle. This could lead to an accident, resulting in death or serious injury.

**■ When installing the driver's floor mat**

- Do not use floor mats designed for other models or different model year vehicles, even if they are Toyota Genuine floor mats.
- Only use floor mats designed for the driver's seat.
- Always install the floor mat securely using the retaining hooks (clips) provided.
- Do not use two or more floor mats on top of each other.
- Do not place the floor mat bottom-side up or upside-down.

**■ Before driving**

- Check that the floor mat is securely fixed in the correct place with all the provided retaining hooks (clips). Be especially careful to perform this check after cleaning the floor.
- With the hybrid system stopped and the shift position in P, fully depress each pedal to the floor to make sure it does not interfere with the floor mat.

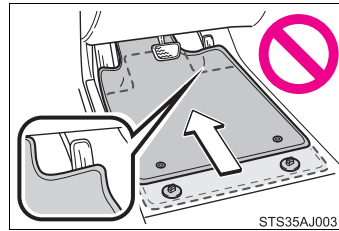


## For safe driving

**For safe driving, adjust the seat and mirror to an appropriate position before driving.**

### Correct driving posture

- ① Adjust the angle of the seat-back so that you are sitting straight up and so that you do not have to lean forward to steer. (→P. 194)
- ② Adjust the seat so that you can depress the pedals fully and so that your arms bend slightly at the elbow when gripping the steering wheel. (→P. 194)
- ③ Lock the head restraint in place with the center of the head restraint closest to the top of your ears. (→P. 199)
- ④ Wear the seat belt correctly. (→P. 34)

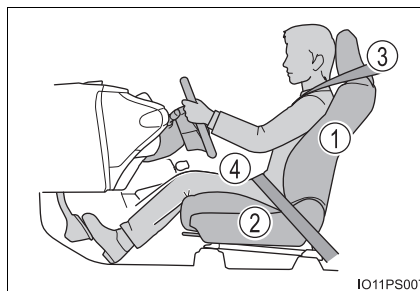

### Correct use of the seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle. (→P. 34)

Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belt. (→P. 54)

### Adjusting the mirrors

Make sure that you can see backward clearly by adjusting the inside and outside rear view mirrors properly. (→P. 205, 207)

 **WARNING**

Observe the following precautions.

Failure to do so may result in death or serious injury.


- Do not adjust the position of the driver's seat while driving.  
Doing so could cause the driver to lose control of the vehicle.
- Do not place a cushion between the driver or passenger and the seatback.  
A cushion may prevent correct posture from being achieved, and reduce the effectiveness of the seat belt and head restraint.
- Do not place anything under the front seats.  
Objects placed under the front seats may become jammed in the seat tracks and stop the seat from locking in place. This may lead to an accident and the adjustment mechanism may also be damaged.
- Always observe the legal speed limit when driving on public roads.
- When driving over long distances, take regular breaks before you start to feel tired.  
Also, if you feel tired or sleepy while driving, do not force yourself to continue driving and take a break immediately.

## Seat belts

**Make sure that all occupants are wearing their seat belts before driving the vehicle.**


### Correct use of the seat belts

- Extend the shoulder belt so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.
- Position the lap belt as low as possible over the hips.
- Adjust the position of the seat-back. Sit up straight and well back in the seat.
- Do not twist the seat belt.

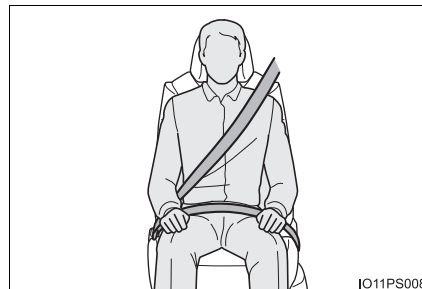

### Fastening and releasing the seat belt


- ① To fasten the seat belt, push the plate into the buckle until a click sound is heard.
- ② To release the seat belt, press the release button with a hand on the plate.

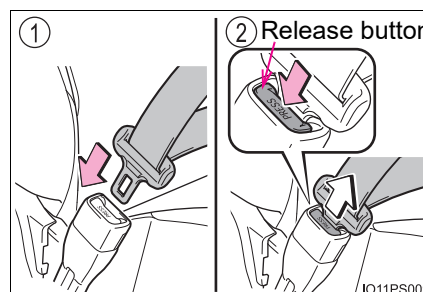

**Adjusting the seat belt shoulder anchor height (front seats)**


- ① Push the seat belt shoulder anchor down while pressing the release button.
- ② Push the seat belt shoulder anchor up while pressing the release button.

Move the height adjuster up and down as needed until you hear a click.

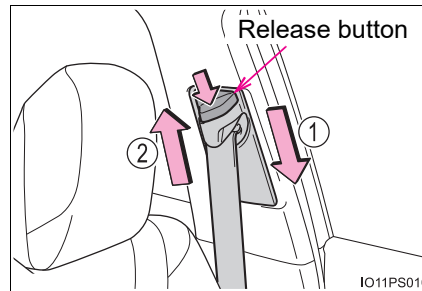**Seat belt pretensioners (front seats and outboard rear seats)**

The pretensioners help the seat belts to quickly restrain the occupants by retracting the seat belts when the vehicle is subjected to certain types of severe frontal or side collision.

The pretensioners do not activate in the event of a minor frontal impact, a minor side impact, a rear impact or a vehicle rollover.

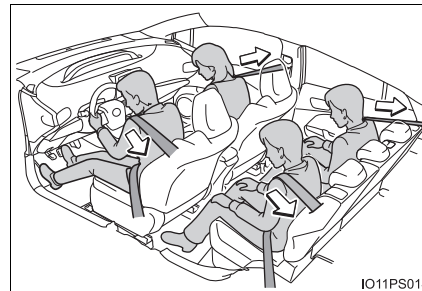

**■ Emergency locking retractor (ELR)**

The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend so that you can move around fully.

**■ Child seat belt usage**

The seat belts of your vehicle were principally designed for persons of adult size.

- Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt. (→P. 54)
- When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions regarding seat belt usage. (→P. 34)

**■ Replacing the belt after the pretensioner has been activated**

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.

**■ Seat belt regulations**

If seat belt regulations exist in the country where you reside, please contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for seat belt replacement or installation.

**⚠ WARNING**

Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident. Failing to do so may cause death or serious injury.

**■ Wearing a seat belt**

- Ensure that all passengers wear a seat belt.
- Always wear a seat belt properly.
- Each seat belt should be used by one person only. Do not use a seat belt for more than one person at once, including children.
- Toyota recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system.
- To achieve a proper seating position, do not recline the seat more than necessary. The seat belt is most effective when the occupants are sitting up straight and well back in the seats.
- Do not wear the shoulder belt under your arm.
- Always wear your seat belt low and snug across your hips.

**⚠ WARNING****■ Pregnant women**

Obtain medical advice and wear the seat belt in the proper way. (→P. 34)

Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants, extending the shoulder belt completely over the shoulder and avoiding belt contact with the rounding of the abdominal area.

If the seat belt is not worn properly, not only the pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking or a collision.

**■ People suffering illness**

Obtain medical advice and wear the seat belt in the proper way. (→P. 34)

**■ When children are in the vehicle**

→P. 69

**■ Seat belt pretensioners**

If the pretensioner has activated, the SRS warning light will come on. In that case, the seat belt cannot be used again and must be replaced at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**WARNING****■ Adjustable shoulder anchor**

Always make sure the shoulder belt is positioned across the center of your shoulder. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the amount of protection in an accident and cause death or serious injuries in the event of a sudden stop, sudden swerve or accident. (→P. 35)


**■ Seat belt damage and wear**

- Do not damage the seat belts by allowing the belt, plate, or buckle to be jammed in the door.
- Inspect the seat belt system periodically. Check for cuts, fraying, and loose parts. Do not use a damaged seat belt until it is replaced. Damaged seat belts cannot protect an occupant from death or serious injury.
- Ensure that the belt and plate are locked and the belt is not twisted. If the seat belt does not function correctly, immediately contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Replace the seat assembly, including the belts, if your vehicle has been involved in a serious accident, even if there is no obvious damage.
- Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Inappropriate handling may lead to incorrect operation.



## SRS airbags

The SRS airbags inflate when the vehicle is subjected to certain types of severe impacts that may cause significant injury to the occupants. They work together with the seat belts to help reduce the risk of death or serious injury.

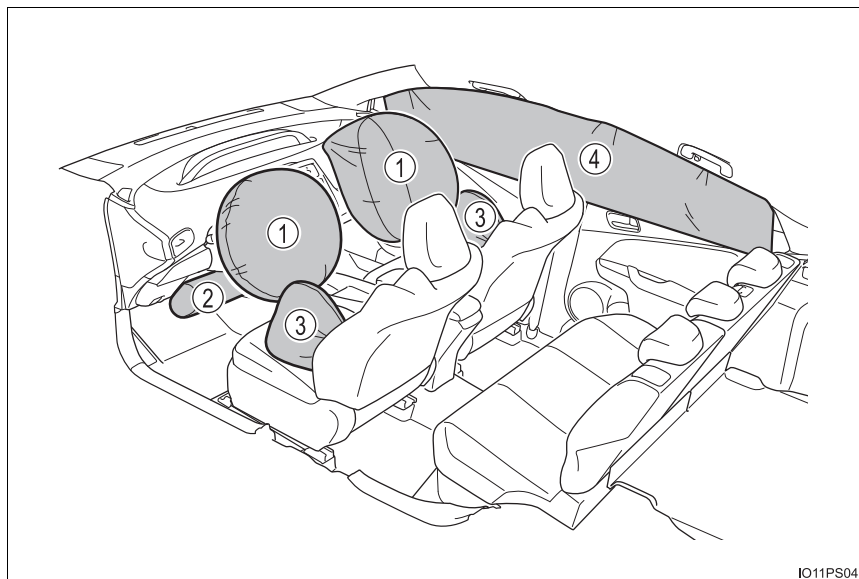

IO11PS047


### ◆ SRS front airbags

- ① SRS driver airbag/front passenger airbag  
Can help protect the head and chest of the driver and front passenger from impact with interior components
- ② SRS knee airbag  
Can help provide driver protection

### ◆ SRS side and curtain shield airbags

- ③ SRS side airbags  
Can help protect the torso of the front seat occupants
- ④ SRS curtain shield airbags  
Can help protect primarily the head of occupants in the outer seats

### SRS airbag system components

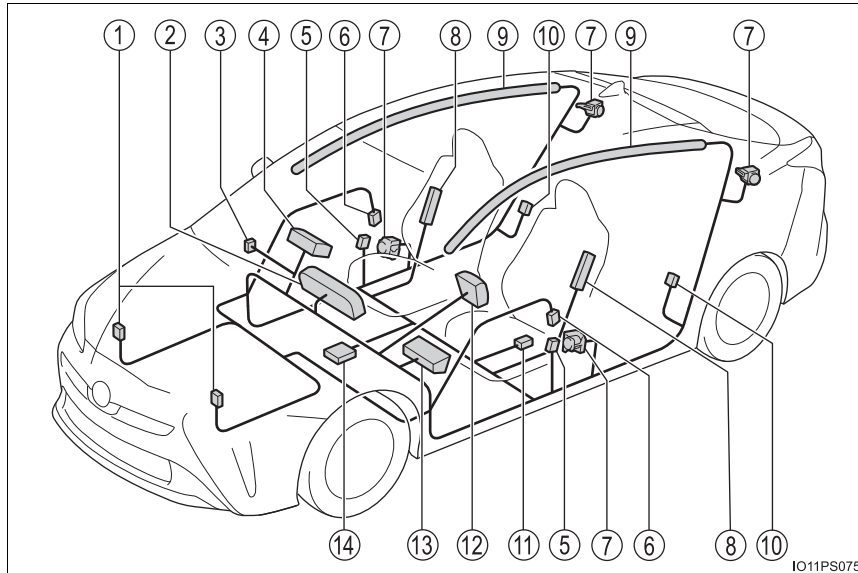

- |   |                                 |
|---|---------------------------------|
| ① Front impact sensors                                | ⑧ Side airbags                  |
| ② SRS warning light and "PASSENGER AIR BAG" indicator | ⑨ Curtain shield airbags        |
| ③ Airbag manual on-off switch                         | ⑩ Side impact sensors (rear)    |
| ④ Front passenger airbag                              | ⑪ Driver's seat position sensor |
| ⑤ Side impact sensors (front)                         | ⑫ Driver airbag                 |
| ⑥ Side impact sensors (front)                         | ⑬ Driver's knee airbag          |
| ⑦ Seat belt pretensioners and force limiters          | ⑭ Airbag sensor assembly        |

The main SRS airbag system components are shown above. The SRS airbag system is controlled by the airbag sensor assembly. As the airbags deploy, a chemical reaction in the inflators quickly fills the airbags with non-toxic gas to help restrain the motion of the occupants.

 WARNING**■ SRS airbag precautions**

Observe the following precautions regarding the SRS airbags. Failure to do so may cause death or serious injury.

- The driver and all passengers in the vehicle must wear their seat belts properly.

The SRS airbags are supplemental devices to be used with the seat belts.

- The SRS driver airbag deploys with considerable force, and can cause death or serious injury especially if the driver is very close to the airbag.

Since the risk zone for the driver's airbag is the first 50 - 75 mm (2 - 3 in.) of inflation, placing yourself 250 mm (10 in.) from your driver airbag provides you with a clear margin of safety. This distance is measured from the center of the steering wheel to your breastbone. If you sit less than 250 mm (10 in.) away now, you can change your driving position in several ways:


- Move your seat to the rear as far as you can while still reaching the pedals comfortably.
- Slightly recline the back of the seat. Although vehicle designs vary, many drivers can achieve the 250 mm (10 in.) distance, even with the driver seat all the way forward, simply by reclining the back of the seat somewhat. If reclining the back of your seat makes it hard to see the road, raise yourself by using a firm, non-slippery cushion, or raise the seat if your vehicle has that feature.
- If your steering wheel is adjustable, tilt it downward. This points the airbag toward your chest instead of your head and neck.

The seat should be adjusted as recommended above, while still maintaining control of the foot pedals, steering wheel, and your view of the instrument panel controls.


- The SRS front passenger airbag also deploys with considerable force, and can cause death or serious injury especially if the front passenger is very close to the airbag. The front passenger seat should be as far from the airbag as possible with the seatback adjusted, so the front passenger sits upright.
- Improperly seated and/or restrained infants and children can be killed or seriously injured by a deploying airbag. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Toyota strongly recommends that all infants and children be placed in the rear seats of the vehicle and properly restrained. The rear seats are safer for infants and children than the front passenger seat. (→P. 54)

**⚠ WARNING****■ SRS airbag precautions**

- Do not sit on the edge of the seat or lean against the dashboard.

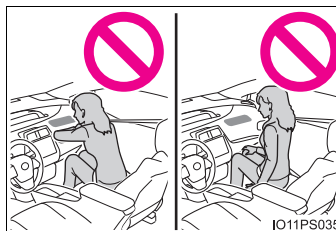


- Do not allow a child to stand in front of the SRS front passenger airbag unit or sit on the knees of a front passenger.
- Do not allow the front seat occupants to hold items on their knees.

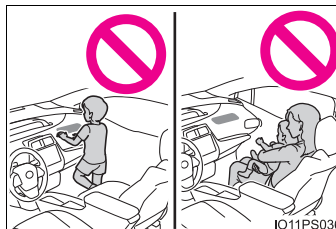

- Do not lean against the door, the roof side rail or the front, side and rear pillars.



- Do not allow anyone to kneel on the passenger seat toward the door or put their head or hands outside the vehicle.

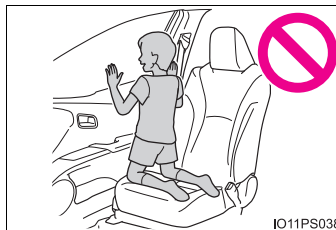


 **WARNING**


■ **SRS airbag precautions**

- Do not attach anything to or lean anything against areas such as the dashboard, steering wheel pad and lower portion of the driver's side instrument panel.

These items can become projectiles when the SRS driver, front passenger and knee airbags deploy.

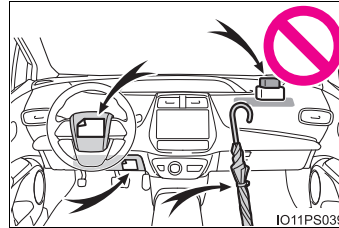

- Do not attach anything to areas such as a door, windshield, side windows, front or rear pillar, roof side rail, and assist grip.

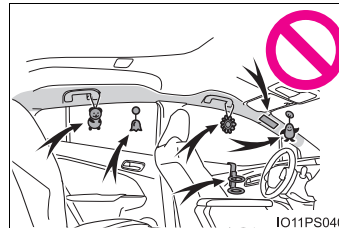

- Do not hang coat hangers or other hard objects on the coat hooks. All of these items could become projectiles and may cause death or serious injury, should the SRS curtain shield airbags deploy.
- If a vinyl cover is put on the area where the SRS knee airbag will deploy, be sure to remove it.
- Do not use seat accessories which cover the parts where the SRS side airbags inflate as they may interfere with inflation of the SRS airbags. Such accessories may prevent the side airbags from activating correctly, disable the system or cause the side airbags to inflate accidentally, resulting in death or serious injury.
- Do not strike or apply significant levels of force to the area of the SRS airbag components or the front doors. Doing so can cause the SRS airbags to malfunction.
- Do not touch any of the component parts immediately after the SRS airbags have deployed (inflated) as they may be hot.

 **WARNING****■ SRS airbag precautions**

- If breathing becomes difficult after the SRS airbags have deployed, open a door or side window to allow fresh air in, or leave the vehicle if it is safe to do so. Wash off any residue as soon as possible to prevent skin irritation.
- If the areas where the SRS airbags are stored, such as the steering wheel pad and front and rear pillar garnishes, are damaged or cracked, have them replaced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**■ Modification and disposal of SRS airbag system components**

Do not dispose of your vehicle or perform any of the following modifications without consulting any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. The SRS airbags may malfunction or deploy (inflate) accidentally, causing death or serious injury.

- Installation, removal, disassembly and repair of the SRS airbags
- Repairs, modifications, removal or replacement of the steering wheel, instrument panel, dashboard, seats or seat upholstery, front, side and rear pillars, roof side rails, front door panels, front door trims or front door speakers
- Modifications to the front door panel (such as making a hole in it)
- Repairs or modifications of the front fender, front bumper, or side of the occupant compartment
- Installation of a grille guard (bull bars, kangaroo bar, etc.), snow plows or winches
- Modifications to the vehicle's suspension system
- Installation of electronic devices such as mobile two-way radios (RF-transmitter) and CD players

**■ If the SRS airbags deploy (inflate)**

- Slight abrasions, burns, bruising etc., may be sustained from SRS airbags, due to the extremely high speed deployment (inflation) by hot gases.
- A loud noise and white powder will be emitted.
- Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as the front seats, parts of the front and rear pillars, and roof side rails, may be hot for several minutes. The airbag itself may also be hot.
- The windshield may crack.
- The hybrid system will be stopped and fuel supply to the engine will be stopped. (→P. 85)
- The emergency flashers will turn on automatically. (→P. 568)
- Vehicles with “ERA-GLONASS/EVAK”: If any of the following situations occur, the system is designed to send an emergency call\* to the “ERA-GLONASS/EVAK control center”, notifying them of the vehicle’s location (without needing to push the “SOS” button) and an agent will attempt to speak with the occupants to ascertain the level of emergency and assistance required. If the occupants are unable to communicate, the agent automatically treats the call as an emergency and helps to dispatch the necessary emergency services. (→P. 74)
  - An SRS airbag is deployed.
  - A seat belt pretensioner is activated.
  - The vehicle is involved in a severe rear-end collision.
  - The vehicle is involved in a rollover accident.

\*: In some cases, the call cannot be made. (→P. 77)

**■ SRS airbag deployment conditions (SRS front airbags)**

- The SRS front airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to an approximately 20 - 30 km/h [12 - 18 mph] frontal collision with a fixed wall that does not move or deform).

However, this threshold velocity will be considerably higher in the following situations:

- If the vehicle strikes an object, such as a parked vehicle or sign pole, which can move or deform on impact
- If the vehicle is involved in an underride collision, such as a collision in which the front of the vehicle “underrides”, or goes under, the bed of a truck
- Depending on the type of collision, it is possible that only the seat belt pretensioners will activate.


### ■ SRS airbag deployment conditions (SRS side and curtain shield airbags)

- The SRS side and curtain shield airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to the impact force produced by an approximately 1500 kg [3300 lb.] vehicle colliding with the vehicle cabin from a direction perpendicular to the vehicle orientation at an approximate speed of 20 - 30 km/h [12 - 18 mph]).
- Both SRS curtain shield airbags may also deploy in the event of a severe frontal collision.

### ■ Conditions under which the SRS airbags may deploy (inflate), other than a collision

The SRS front airbags and SRS curtain shield airbags may also deploy if a serious impact occurs to the underside of your vehicle. Some examples are shown in the illustration.


- Hitting a curb, edge of pavement or hard surface
- Falling into or jumping over a deep hole
- Landing hard or falling

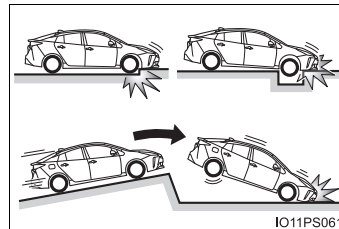

### ■ Types of collisions that may not deploy the SRS airbags (SRS front airbags)

The SRS front airbags do not generally inflate if the vehicle is involved in a side or rear collision, if it rolls over, or if it is involved in a low-speed frontal collision. But, whenever a collision of any type causes sufficient forward deceleration of the vehicle, deployment of the SRS front airbags may occur.

- Collision from the side
- Collision from the rear
- Vehicle rollover

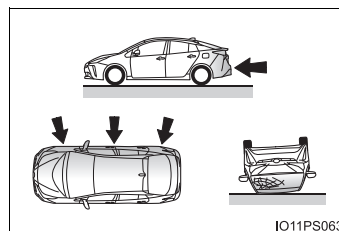




### ■ Types of collisions that may not deploy the SRS airbags (SRS side and curtain shield airbags)


The SRS side and curtain shield airbags may not activate if the vehicle is subjected to a collision from the side at certain angles, or a collision to the side of the vehicle body other than the passenger compartment.

- Collision from the side to the vehicle body other than the passenger compartment
- Collision from the side at an angle

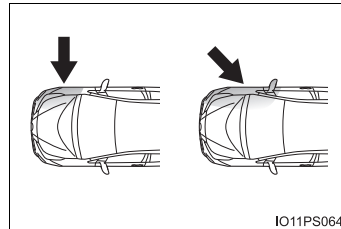


The SRS side airbags do not generally inflate if the vehicle is involved in a frontal or rear collision, if it rolls over, or if it is involved in a low-speed side collision.

- Collision from the front
- Collision from the rear
- Vehicle rollover

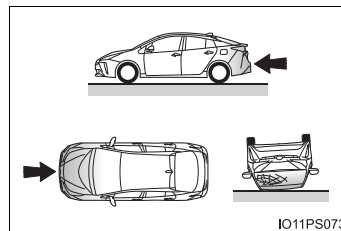

The SRS curtain shield airbags do not generally inflate if the vehicle is involved in a rear collision, if it rolls over, or if it is involved in a low-speed side or low-speed frontal collision.


- Collision from the rear
- Vehicle rollover

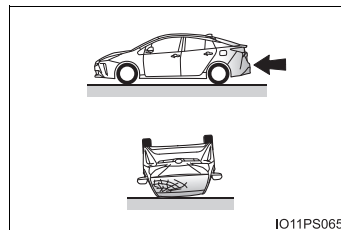


**■ When to contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer**

In the following cases, the vehicle will require inspection and/or repair. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.


- Any of the SRS airbags have been inflated.
- The front of the vehicle is damaged or deformed, or was involved in an accident that was not severe enough to cause the SRS front airbags to inflate.

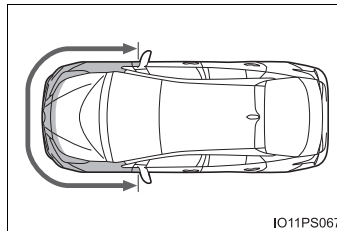


- A portion of a door or its surrounding area is damaged, deformed or has had a hole made in it, or the vehicle was involved in an accident that was not severe enough to cause the SRS side and curtain shield airbags to inflate.

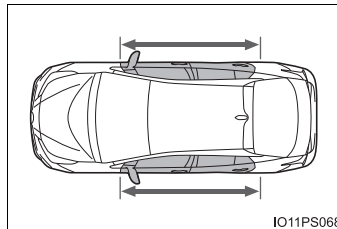


- The pad section of the steering wheel, dashboard near the front passenger airbag or lower portion of the driver's side instrument panel is scratched, cracked, or otherwise damaged.

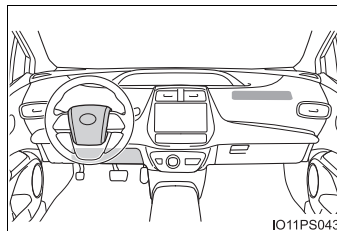

- The surface of the seats with the SRS side airbag is scratched, cracked, or otherwise damaged.

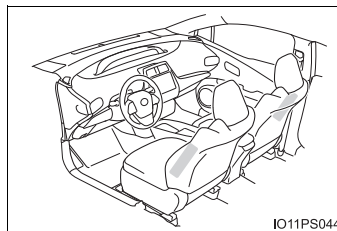

- The portion of the front pillars, rear pillars or roof side rail garnishes (padding) containing the SRS curtain shield airbags inside is scratched, cracked, or otherwise damaged.

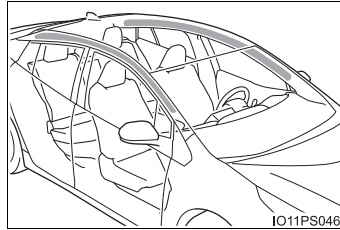

## Exhaust gas precautions

**Harmful substance to the human body is included in exhaust gases if inhaled.**

### WARNING

Exhaust gases include harmful carbon monoxide (CO), which is colorless and odorless. Observe the following precautions.

Failure to do so may cause exhaust gases enter the vehicle and may lead to an accident caused by light-headedness, or may lead to death or a serious health hazard.

#### ■ Important points while driving

- Keep the back door closed.
- If you smell exhaust gases in the vehicle even when the back door is closed, open the side windows and have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

#### ■ When parking

- If the vehicle is in a poorly ventilated area or a closed area, such as a garage, stop the hybrid system.
- Do not leave the vehicle with the hybrid system on for a long time.  
If such a situation cannot be avoided, park the vehicle in an open space and ensure that exhaust fumes do not enter the vehicle interior.
- Do not leave the hybrid system operating in an area with snow build-up, or where it is snowing. If snowbanks build up around the vehicle while the hybrid system is operating, exhaust gases may collect and enter the vehicle.

#### ■ Exhaust pipe

The exhaust system needs to be checked periodically. If there is a hole or crack caused by corrosion, damage to a joint or abnormal exhaust noise, be sure to have the vehicle inspected and repaired by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

## Airbag manual on-off system

**This system deactivates the front passenger airbag.  
Only deactivate the airbag when using a child restraint system  
on the front passenger seat.**

① “PASSENGER AIR BAG” indicator

The “ON” indicator light turns on when the airbag system is on, and about after 60 seconds it goes off. (only when the power switch is in ON mode).


② Airbag manual on-off switch



### Deactivating the airbag for the front passenger

Insert the mechanical key into the cylinder and turn to the “OFF” position.

The “OFF” indicator light turns on (only when the power switch is in ON mode).

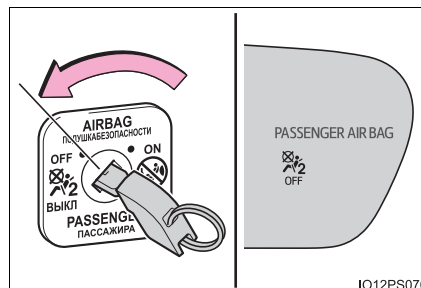

IO12PS070

#### ■ “PASSENGER AIR BAG” indicator information

If any of the following problems occur, it is possible that there is a malfunction in the system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- The “OFF” indicator does not illuminate when the airbag manual on-off switch is set to “OFF”.
- The indicator light does not change when the airbag manual on-off switch is switched to “ON” or “OFF”.

#### ⚠ WARNING

##### ■ When installing a child restraint system

For safety reasons, always install a child restraint system in a rear seat. In the event that the rear seat cannot be used, the front seat can be used as long as the airbag manual on-off system is set to “OFF”.

If the airbag manual on-off system is left on, the strong impact of the airbag deployment (inflation) may cause serious injury or even death.

##### ■ When a child restraint system is not installed on the front passenger seat

Ensure that the airbag manual on-off system is set to “ON”.

If it is left off, the airbag will not deploy in the event of an accident, which may result in serious injury or even death.

## Riding with children

**Observe the following precautions when children are in the vehicle.**

**Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt.**

- It is recommended that children sit in the rear seats to avoid accidental contact with the shift lever, wiper switch etc.
- Use the rear door child-protector lock or the window lock switch to avoid children opening the door while driving or operating the power window accidentally. (→P. 180, 210)
- Do not let small children operate equipment which may catch or pinch body parts, such as the power window, hood, back door, seats etc.

### WARNING

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the side windows, the moon roof (if equipped) or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

## Child restraint systems

**Before installing a child restraint system in the vehicle, there are precautions that need to be observed, different types of child restraint systems, as well as installation methods, etc., written in this manual.**

- Use a child restraint system when riding with a small child that cannot properly use a seat belt. For the child's safety, install the child restraint system to a rear seat. Be sure to follow the installation method that is in the operation manual enclosed with the restraint system.
- The use of a Toyota genuine child restraint system is recommended, as it is safer to use in this vehicle. Toyota genuine child restraint systems are made specifically for Toyota vehicles. They can be purchased at a Toyota dealer.

### Table of contents

Points to remember.....	P. 54
When using a child restraint system .....	P. 56
Child restraint system compatibility for each seating position.....	P. 59
Child restraint system installation method .....	P. 67
• Fixed with a seat belt .....	P. 68
• Fixed with an ISOFIX lower anchorage.....	P. 70
• Using a top tether anchorage.....	P. 72

### Points to remember

- Prioritize and observe the warnings, as well as the laws and regulations for child restraint systems.
- Use a child restraint system until the child becomes large enough to properly wear the vehicle's seat belt.
- Choose a child restraint system appropriate to the age and size of the child.
- Note that not all child restraint systems can fit in all vehicles. Before using or purchasing a child restraint system, check the compatibility of the child restraint system with seat positions. (→P. 59)



 **WARNING****■ When a child is riding**

Observe the following precautions.

Failure to do so may result in death or serious injury.

- For effective protection in automobile accidents and sudden stops, a child must be properly restrained, using a seat belt or child restraint system which is correctly installed. For installation details, refer to the operation manual enclosed with the child restraint system. General installation instructions are provided in this manual.
- Toyota strongly urges the use of a proper child restraint system that conforms to the weight and size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.
- Holding a child in your or someone else's arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield or between the holder and the interior of the vehicle.

**■ Handling the child restraint system**

If the child restraint system is not properly fixed in place, the child or other passengers may be seriously injured or even killed in the event of sudden braking, sudden swerving, or an accident.

- If the vehicle were to receive a strong impact from an accident, etc., it is possible that the child restraint system has damage that is not readily visible. In such cases, do not reuse the restraint system.
- Depending on the child restraint system, installation may be difficult or impossible. In those cases, check whether the child restraint system is suitable for installment in the vehicle (→P. 59). Be sure to install and observe the usage rules after carefully reading the child restraint system fixing method in this manual, as well as the operation manual enclosed with the child restraint system.
- Keep the child restraint system properly secured on the seat even if it is not in use. Do not store the child restraint system unsecured in the passenger compartment.
- If it is necessary to detach the child restraint system, remove it from the vehicle or store it securely in the luggage compartment.

**When using a child restraint system****■ When installing a child restraint system to a front passenger seat**


For the safety of a child, install a child restraint system to a rear seat. When installing a child restraint system to the front passenger seat is unavoidable, adjust the seat as follows and install the child restraint system.

- Adjust the seatback angle to the most upright position.

When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

- Move the front seat fully rearward.

- If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position.

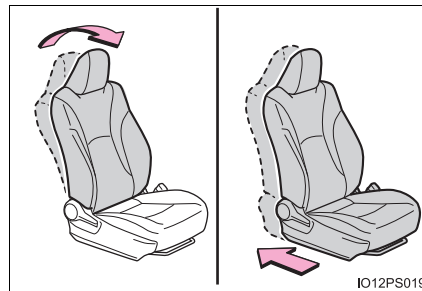


**⚠ WARNING**

**■ When using a child restraint system**


Observe the following precautions.  
Failure to do so may result in death or serious injury.

- Never use a rear-facing child restraint system on the front passenger seat when the airbag manual on-off switch is on. (→P. 51)

The force of the rapid inflation of the front passenger airbag can cause death or serious injury to children in the event of an accident.

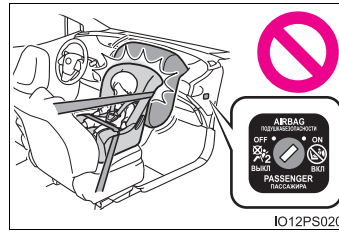

- There is a label(s) on the passenger side sun visor, indicating it is forbidden to attach a rear-facing child restraint system to the front passenger seat. Details of the label(s) are shown in the illustration below.

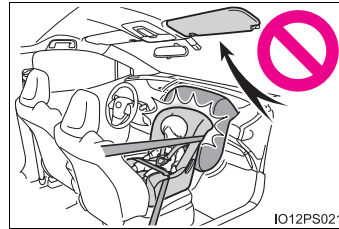


 **WARNING**

■ **When using a child restraint system**

- Only put a forward-facing child restraint system on the front seat when unavoidable. When installing a forward-facing child restraint on the front passenger seat, move the seat as far back as possible. Failing to do so may result in death or serious injury if the airbags deploy (inflate).




- Do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front or rear pillars, or roof side rails from which the SRS side airbags or SRS curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the SRS side airbags and curtain shield airbags inflate, and the impact could cause death or serious injury to the child.

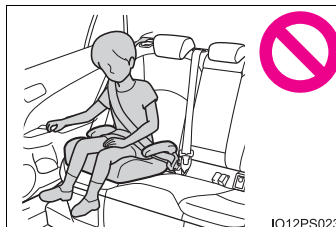

- When a junior seat is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.

- Use a child restraint system suitable to the age and size of the child and install it to the rear seat.

- If the driver's seat interferes with the child restraint system and prevents it from being attached correctly, attach the child restraint system to the right-hand rear seat (left-hand drive vehicles) or the left-hand rear seat (right-hand drive vehicles).

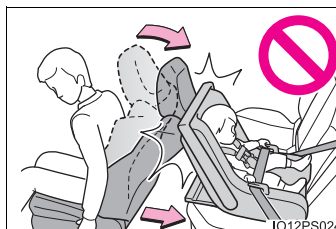

- Adjust the front passenger seat so that it does not interfere with the child restraint system.

### Child restraint system compatibility for each seating position

#### ■ Child restraint system compatibility for each seating position

Compatibility of each seating position with child restraint systems (→P. 61) displays the type of child restraint systems that can be used and possible seating positions for installation using symbols. Also, the recommended child restraint system that is suitable for your child can be selected.

Otherwise, check [Recommended child restraint systems information] for recommended child restraint systems. (→P. 66)

Check the selected child restraint system together with the following [Before confirming the compatibility of each seating position with child restraint systems].

#### ■ Before confirming the compatibility of each seating position with child restraint systems

- 1 Checking the child restraint system standards.

Use a child restraint system that conforms to UN(ECE) R44\*<sup>1</sup> or UN(ECE) R129\*<sup>1, 2</sup>.

The following approval mark is displayed on child restraint systems which are conformed.

Check for an approval mark attached to the child restraint system.


Example of the displayed regulation number

- ① UN(ECE) R44 approval mark\*<sup>3</sup>

The weight range of the child who is applicable for an UN(ECE) R44 approval mark is indicated.

- ② UN(ECE) R129 approval mark\*<sup>3</sup>

The height range of the child who is applicable as well as available weights for an UN(ECE) R129 approval mark is indicated.

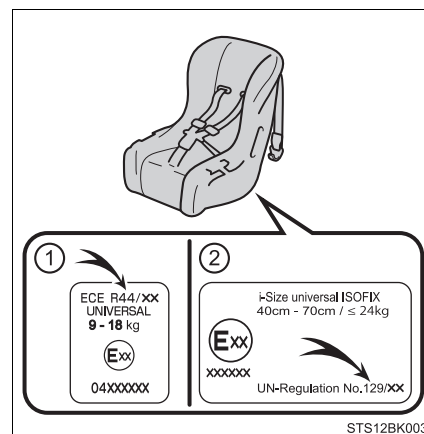

\*1: UN(ECE) R44 and UN(ECE) R129 are U.N. regulations for child restraint systems.

\*2: The child restraint systems mentioned in the table may not be available outside of the EU area.


\*3: The displayed mark may differ depending on the product.

**2** Checking the category of the child restraint system.

Check the approval mark of the child restraint system for which of the following categories the child restraint system is suitable.

Also, if there are any uncertainties, check the user's guide included with the child restraint system or contact the retailer of the child restraint system.


- “universal”
- “semi-universal”
- “restricted”
- “vehicle specific”

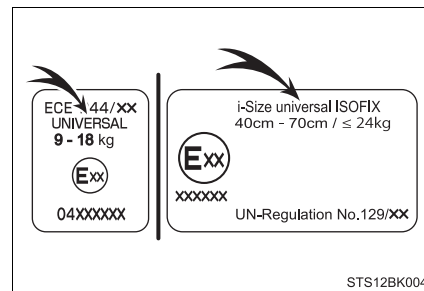


■ **Compatibility of each seating position with child restraint systems**

▶ Left-hand drive vehicles

▶ Right-hand drive vehicles

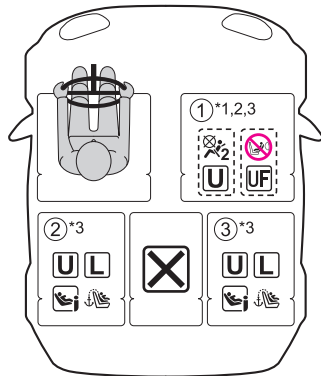

II12PS100a

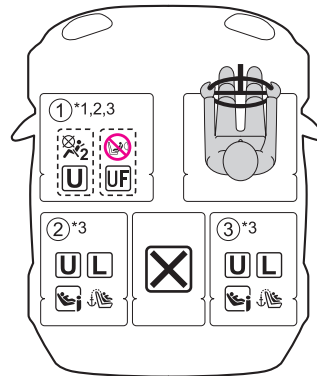

II12PS101a



Deactivation of front passenger airbag.



Activation of front passenger airbag.  
Never use a rearward-facing child restraint system on the front passenger seat when the airbag manual on-off switch is on.



Suitable for “universal” category child restraint system fixed with the seat belt.



Suitable for forward-facing “universal” category child restraint system fixed with the seat belt.



Suitable for recommended child restraint systems given on recommended child restraint systems information (→P. 66).



Suitable for i-Size and ISOFIX child restraint system.



Includes a top tether anchorage point.




Not suitable for child restraint system.

\*1: Move the front seat fully rearward. If the passenger seat height can be adjusted, move it to the upper most position.

\*2: Adjust the seatback angle to the most upright position.

When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

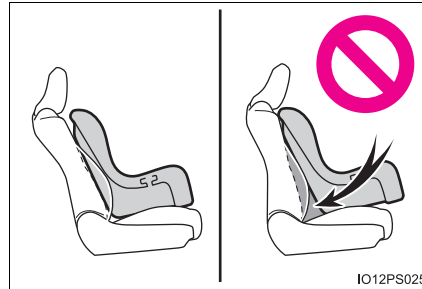

\*3: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint.


Otherwise, put the head restraint in the upper most position.

When securing some types of child restraint systems in rear seat, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position.

Failure to do so may result in death or serious injury.



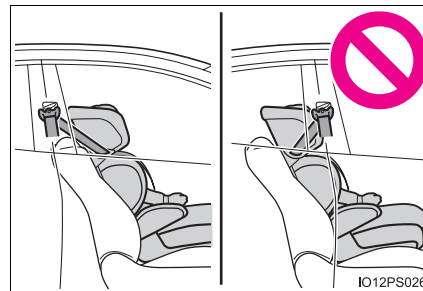

- When installing a child restraint in the rear seats, adjust the front seat so that it does not interfere with the child or child restraint system.
- When installing a child seat with support base, if the child seat interferes with the seatback when latching it into the support base, adjust the seatback rearward until there is no interference.
- If the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.



- When installing a junior seat, if the child in your child restraint system is in a very upright position, adjust the seatback angle to the most comfortable position. And if the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

### ■ Detail information for child restraint systems installation

Seating position				
Seat position number	①		②	③
	Airbag manual on-off switch			
	ON	OFF		
				
Seating position suitable for universal belted (Yes/No)	Yes Forward-facing only	Yes*	Yes*	Yes*
i-Size seating position (Yes/No)	No	No	Yes	Yes
Seating position suitable for lateral fixture (L1/L2/No)	No	No	No	No
Suitable rearward facing fixture (R1/R2X/R2/R3/No)	No	No	R1, R2X, R2, R3	R1, R2X, R2, R3
Suitable forward facing fixture (F2X/F2/F3/No)	No	No	F2X, F2, F3	F2X, F2, F3
Suitable junior seat fixture (B2/B3/No)	No	No	B2, B3	B2, B3

\*: All universal categories (group 0, 0+, I, II and III).

Toyota suggests the users to use ② and ③ seating positions.

ISOFIX child restraint systems are divided into different “fixture”. The child restraint system can be used in the seating positions for “fixture” mentioned in the table above. For kind of “fixture” relation, confirm the following table.

If your child restraint system has no kind of “fixture” (or if you cannot find information in the table below), please refer to the child restraint system “vehicle list” for compatibility information or ask the retailer of your child seat.

Mass group	Child weight	Size class	Fix-ture	Description
0	up to 10 kg (22 lb.)	E	R1	Rearward-facing infant seat
		F	L1	Left lateral-facing infant seat (Carycot)
		G	L2	Right lateral-facing infant seat (Carycot)
0+	up to 13 kg (28 lb.)	C	R3	Full-size, rearward-facing child restraint systems
		D	R2	Reduced-size, rearward-facing child restraint systems
		—	R2X	Reduced-size, rearward-facing child restraint systems
		E	R1	Rearward-facing infant seat
I	9 to 18 kg (20 to 39 lb.)	A	F3	Full-height, forward-facing child restraint systems
		B	F2	Reduced-height, forward-facing child restraint systems
		B1	F2X	Reduced-height, forward-facing child restraint systems
		C	R3	Full-size, rearward-facing child restraint systems
		D	R2	Reduced-size, rearward-facing child restraint systems
II	15 to 25 kg (34 to 55 lb.)	—	B2, B3	Junior seat
III	22 to 36 kg (48 to 79 lb.)			


### ■ Recommended child restraint systems information

Recommended child restraint system	Size	Direction of travel	Fixation	
			fixed with lower anchorages	fixed with a seat belt
MAXI COSI CABRIOFIX	Up to 13 kg (Up to 28 lb.)	Rearward-facing use only	Not applicable	Yes
BRITAX TRIFIX 2 i-SIZE	76 to 105 cm 9 to 18 kg (20 to 39 lb.)	Forward-facing use only	Yes	Not applicable
TOYOTA KIDFIX i-SIZE*	100 to 150 cm 15 to 36 kg (34 to 79 lb.)	Forward-facing use only	Yes	No
TOYOTA MAXI PLUS	15 to 36 kg (34 to 79 lb.)	Forward-facing use only	Yes	No

\*: Be sure to attach the seat belt through the SecureGuard. (→P. 66)

The child restraint systems mentioned in the table may not be available outside the EU countries and United Kingdom.


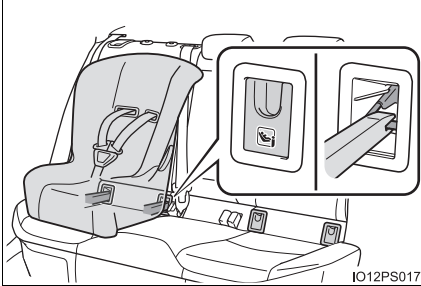
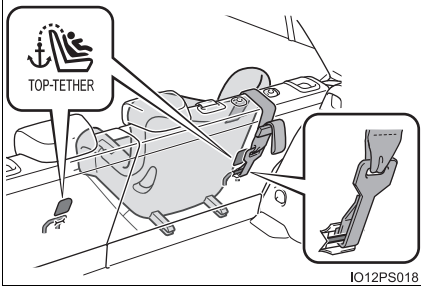
- When using the child restraint system with SecureGuard, be sure to guide the lap belt into SecureGuard **A** as shown in the illustration.

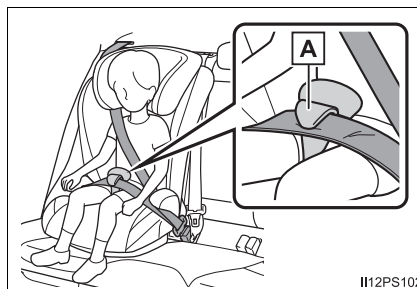

II12PS102

**Child restraint system installation method**

Confirm with the operation manual enclosed with the child restraint system about the installation of the child restraint system.

	Installation method	Page
Seat belt attachment		P. 68
ISOFIX lower anchorage attachment		P. 70
Top tether anchorage attachment		P. 72

### Child restraint system fixed with a seat belt


#### ■ Installing child restraint system using a seat belt

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.


If the child restraint system on hand is not within the “universal” category (or the necessary information is not in the table), refer to the “Vehicle List” provided by the child restraint system maker for various possible installation positions, or check the compatibility after asking the retailer of the child restraint system. (→P. 60, 61)

- 1 If installing the child restraint system to the front passenger seat is unavoidable, refer to P. 56 for front passenger seat adjustment.
- 2 If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position. (→P. 199)

- 3 Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted. Securely fix the seat belt to the child restraint system in accordance to the directions enclosed with the child restraint system.

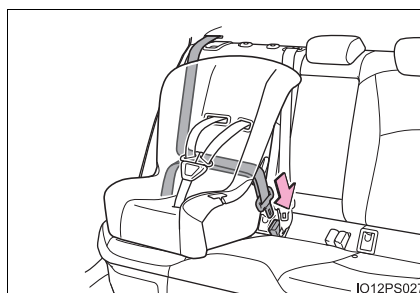

- 4 If your child restraint system is not equipped with a lock-off (a seat belt locking feature), secure the child restraint system using a locking clip.

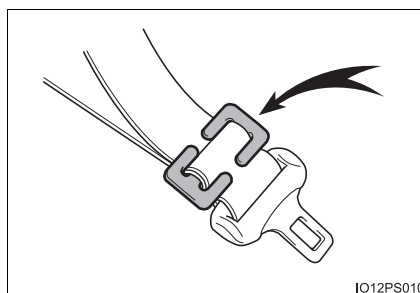

- 5 After installing the child restraint system, rock it back and forth to ensure that it is installed securely. (→P. 69)

### ■ Removing a child restraint system installed with a seat belt

Press the buckle release button and fully retract the seat belt.

When releasing the buckle, the child restraint system may spring up due to the rebound of the seat cushion. Release the buckle while holding down the child restraint system.

Since the seat belt automatically reels itself, slowly return it to the stowing position.

### ■ When installing a child restraint system

You may need a locking clip to install the child restraint system. Follow the instructions provided by the manufacturer of the system. If your child restraint system does not provide a locking clip, you can purchase the following item from any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer: Locking clip for child restraint system (Part No. 73119-22010)

#### WARNING

#### ■ When installing a child restraint system


Observe the following precautions.

Failure to do so may result in death or serious injury.

- Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death. If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.
- Ensure that the belt and plate are securely locked and the seat belt is not twisted.
- Shake the child restraint system left and right, and forward and backward to ensure that it has been securely installed.
- After securing a child restraint system, never adjust the seat.
- When a junior seat is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.
- Follow all installation instructions provided by the child restraint system manufacturer.

**Child restraint system fixed with an ISOFIX lower anchorage****■ ISOFIX lower anchorages (ISOFIX child restraint system)**

Lower anchorages are provided for the rear outboard seats. (Marks displaying the location of the anchorages are attached to the seats.)

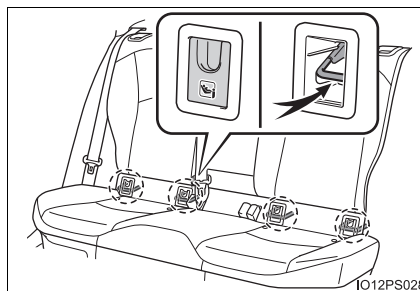**■ Installation with ISOFIX lower anchorage (ISOFIX child restraint system)**

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

If the child restraint system on hand is not within the “universal” category (or the necessary information is not in the table), refer to the “Vehicle List” provided by the child restraint system maker for various possible installation positions, or check the compatibility after asking the retailer of the child restraint system. (→P. 60, 61)

- 1 If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position. (→P. 199)



- 2 Remove the anchorage covers, and install the child restraint system to the seat. The bars are installed behind the anchorage covers.



- 3 After installing the child restraint system, rock it back and forth to ensure that it is installed securely. (→P. 69)

**⚠ WARNING**

**■ When installing a child restraint system**

Observe the following precautions.

Failure to do so may result in death or serious injury.


- After securing a child restraint system, never adjust the seat.
- When using the lower anchorages, be sure that there are no foreign objects around the anchorages and that the seat belt is not caught behind the child restraint system.
- Follow all installation instructions provided by the child restraint system manufacturer.

### Using a top tether anchorage

#### ■ Top tether anchorages

Top tether anchorages are provided for the outboard rear seats.

Use top tether anchorages when fixing the top strap.

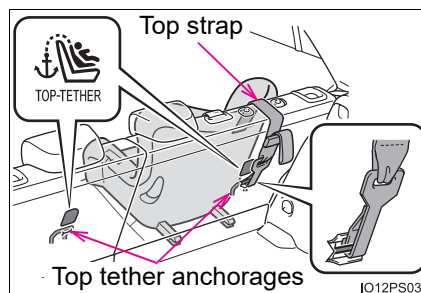


#### ■ Fixing the top strap to the top tether anchorage

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

- 1 Adjust the head restraint to the upmost position.


If the head restraint interferes with the child restraint system or top strap installation and the head restraint can be removed, remove the head restraint. (→P. 200)

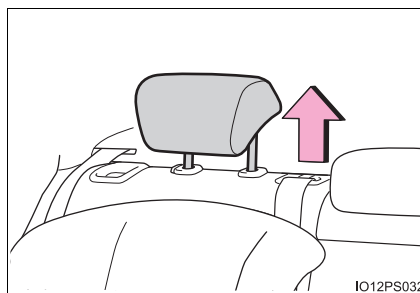

- 2 Latch the hook onto the top tether anchorage and tighten the top strap.

Make sure the top strap is securely latched. (→P. 69)

When installing the child restraint system with the head restraint being raised, be sure to have the top strap pass underneath the head restraint.

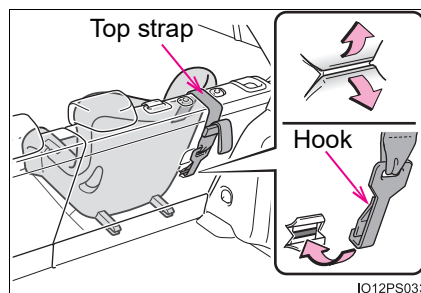

 **WARNING****■ When installing a child restraint system**

Observe the following precautions.

Failure to do so may result in death or serious injury.

- Firmly attach the top strap and make sure that the belt is not twisted.
- Do not attach the top strap to anything other than the top tether anchorage.
- After securing a child restraint system, never adjust the seat.
- Follow all installation instructions provided by the child restraint system manufacturer.
- When installing the child restraint system with the head restraint being raised, after the head restraint has been raised and then the top tether anchorage has been fixed, do not lower the head restraint.

## ERA-GLONASS/EVAK\*1, 2, 3

The Emergency Call system is a device installed on a vehicle to determine its location and movement direction (using GLONASS [Global Navigation Satellite System] and GPS [Global Positioning System] signals), and ensure the generation and transmission of vehicle information (in a nonadjustable form) in case of traffic accidents or other incidents on motor roads in the countries offering emergency notification services. In addition, it ensures two-way voice communication between the vehicle and an ERA-GLONASS/EVAK system operator through cellular networks (GSM).

Automatic Emergency Calls (via Automatic Collision Notification) and manual Emergency Calls (by pressing the “SOS” button) can be made to the ERA-GLONASS/EVAK control center.


This service is mandatory according to the technical regulations of the Customs Union.

### System components

- ① Microphone
- ② “SOS” button\*
- ③ Indicator lights

\*: This button is intended for communication with the ERA-GLONASS/EVAK system operator.

Other SOS buttons available in other systems of a motor vehicle do not relate to the device and are not intended for communication with the ERA-GLONASS/EVAK system operator.

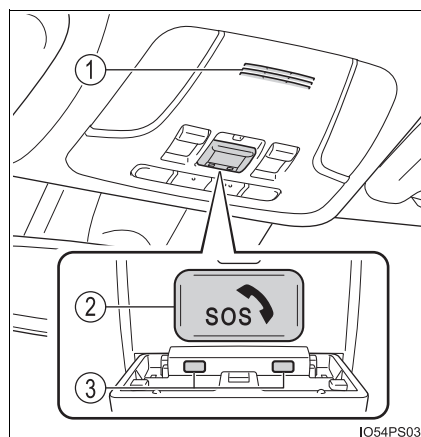

\*1: If equipped

\*2: Operates within regions offering emergency notification services. Ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details.

\*3: The system name differs depending on the country.

## Emergency Notification Services

### ■ Automatic Emergency Calls

If any airbag deploys, the system is designed to automatically call the ERA-GLONASS/EVAK control center.\* The answering operator receives the vehicle's location, the time of the incident and the vehicle VIN, and attempts to speak with the vehicle occupants to assess the situation. If the occupants are unable to communicate, the operator automatically treats the call as an emergency and contacts the nearest emergency services provider (112 system etc.) to describe the situation and request that assistance be sent to the location.

\*: In some cases, the call cannot be made. (→P. 77)

### ■ Manual Emergency Calls

In the event of an emergency, press the "SOS" button to call the ERA-GLONASS/EVAK control center.\* The answering operator will determine your vehicle's location, assess the situation, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the operator that you are not experiencing an emergency.

\*: In some cases, the call cannot be made. (→P. 77)

### Indicator lights

When the power switch is turned to ON mode, the red indicator light will illuminate for 10 seconds and then the green indicator light will illuminate, indicating that the system is enabled. The indicator lights indicate the following:

- If the green indicator light illuminates and stays on, the system is enabled.
- If the green indicator light flashes twice per second, an automatic or manual Emergency Call is being made.
- If no indicator lights illuminate, the system is not enabled.
- If the red indicator light illuminates at any time other than immediately after the power switch is turned to ON mode, the system may be malfunctioning or the backup battery may be depleted. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- If the red indicator light blinks for approximately 30 seconds during an Emergency Call, the call has been disconnected or the cellular network signal is weak.

The backup battery has lifespan of at least 3 years.

### Device test mode

A test mode is provided for to check the performance of the Emergency Call system. To test the device, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

 **WARNING****■ When the Emergency Call may not be made**

- It may not be possible to make Emergency Calls in any of the following situations. In such cases, report to emergency services provider (112 system etc.) by other means such as nearby public phones.
  - Even when the vehicle is in the cellular phone service area, it may be difficult to connect to the ERA-GLONASS/EVAK control center if the reception is poor or the line is busy. In such cases, even though the system attempts to connect to the ERA-GLONASS/EVAK control center, you may not be able to connect to the ERA-GLONASS/EVAK control center to make Emergency Calls and contact emergency services.
  - When the vehicle is out of the cellular phone service area, the Emergency Calls cannot be made.
  - When any related equipment (such as the “SOS” button panel, indicator lights, microphone, speaker, DCM, antenna, or any wires connecting the equipment) is malfunctioning, damaged or broken, the Emergency Call cannot be made.
  - During an Emergency Call, the system makes repeated attempts to connect to the ERA-GLONASS/EVAK control center. However, if it cannot connect to the ERA-GLONASS/EVAK control center due to poor radio wave reception, the system may not be able to connect to the cellular network and the call may finish without connecting. The red indicator light will blink for approximately 30 seconds to indicate this disconnection.
  - This device may not function if a shock is applied to it.
- If the 12-volt battery’s voltage decreases or there is a disconnection, the system may not be able to connect to the ERA-GLONASS/EVAK control center.

**■ When the Emergency Call system is replaced with a new one**

The Emergency Call system should be registered. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

 WARNING**■ For your safety**

- Please drive safely.

The function of this system is to assist you in making the Emergency Call in case of accidents such as traffic accidents or sudden medical emergencies, and it does not protect the driver or passengers in any way. Please drive safely and fasten your seatbelts at all times for your safety.

- In case of an emergency, make lives the top priority.
- If you smell anything burning or other unusual smells, leave the vehicle and evacuate to a safe area immediately.
- Since the system detects shocks, the automatic reporting may not always occur synchronized with the operation of the airbag system. (If the vehicle is struck from behind, etc.)
- For safety, do not make the Emergency Call while driving.

Making calls during driving may cause mishandling of the steering wheel, which may lead to unexpected accidents.

Stop the vehicle and confirm the safety of your surroundings before making the Emergency Call.

- When changing fuses, please use the specified fuses. Using other fuses may cause ignition or smoke in the circuit and lead to a fire.
- Using the system while there is smoke or an unusual smell may cause a fire. Stop using the system immediately and consult any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

 NOTICE**■ To prevent damage**

Do not pour any liquids onto the “SOS” button panel, etc. and do not impact it.

**■ If the “SOS” button panel, speaker or microphone malfunctions during an Emergency Call or manual maintenance check**


It may not be possible to make Emergency Calls, confirm the system status, or communicate with the ERA-GLONASS/EVAK control center operator. If any of the above equipment is damaged, please consult any authorized Toyota retailer, Toyota authorized repairer, or any reliable repairer.



## Hybrid system features

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate it with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

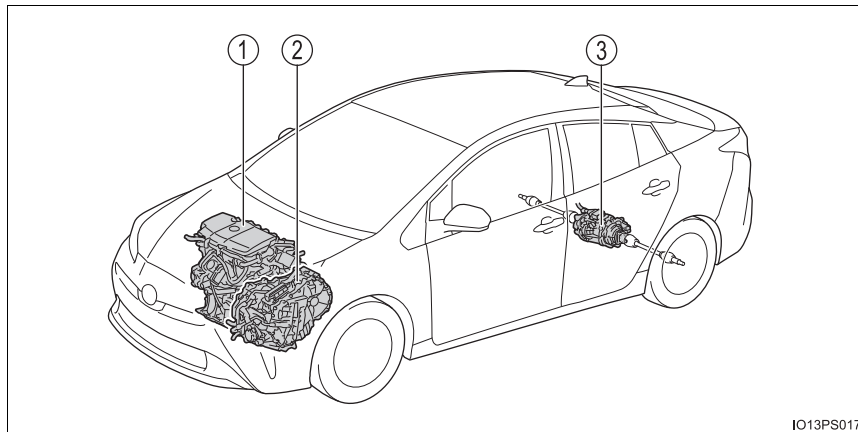

The illustration is an example for explanation and may differ from the actual item.

- ① Gasoline engine
- ② Front electric motor (traction motor)
- ③ Rear electric motor (traction motor)\*

\*: AWD models only

---

**◆ When stopped/during start off**

---

The gasoline engine stops\* when the vehicle is stopped. During start off, the electric motor (traction motor) drives the vehicle. At slow speeds or when traveling down a gentle slope, the engine is stopped\* and the electric motor (traction motor) is used.

When shift position is in N, the hybrid battery (traction battery) is not being charged.

\*: When the hybrid battery (traction battery) requires charging or the engine is warming up, etc., the gasoline engine will not automatically stop.  
(→P. 81)

---

**◆ During normal driving**

---

The gasoline engine is predominantly used. The electric motor (traction motor) charges the hybrid battery (traction battery) as necessary.

---

**◆ When accelerating sharply**

---

When the accelerator pedal is depressed heavily, the power of the hybrid battery (traction battery) is added to that of the gasoline engine via the electric motor (traction motor).

---

**◆ When braking (regenerative braking)**

---

The wheels operate the electric motor (traction motor) as a power generator, and the hybrid battery (traction battery) is charged.

---

**Vehicle proximity notification system**

---


When driving with the gasoline engine stopped, a sound, which changes in accordance with the driving speed, will be played in order to warn people nearby of the vehicle's approach. The sound will stop when the vehicle speed exceeds approximately 25 km/h (16 mph).

### ■ Regenerative braking

- In the following situations, kinetic energy is converted to electric energy and deceleration force can be obtained in conjunction with the recharging of the hybrid battery (traction battery).
  - The accelerator pedal is released while driving with the shift position in D or B.
  - The brake pedal is depressed while driving with the shift position in D or B.
- Vehicles with GPF system: While the GPF system (→P. 440) is operating to regenerate the exhaust gas filter, the hybrid battery (traction battery) may not be recharged.

### ■ Hybrid System Indicator

Hybrid System Indicator represents the hybrid system power output and regenerative charging. (→P. 132)

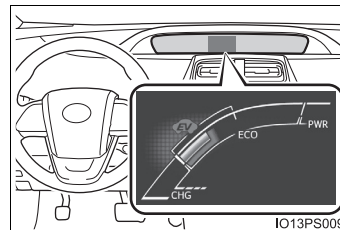

### ■ Conditions in which the gasoline engine may not stop

The gasoline engine starts and stops automatically. However, it may not stop automatically in the following conditions\*:

- During gasoline engine warm-up
- During hybrid battery (traction battery) charging
- When the temperature of the hybrid battery (traction battery) is high or low
- When the heater is switched on

\*: Depending on the circumstances, the gasoline engine may also not stop automatically in situations other than those above.

### ■ Charging the hybrid battery (traction battery)

As the gasoline engine charges the hybrid battery (traction battery), the battery does not need to be charged from an outside source. However, if the vehicle is left parked for a long time the hybrid battery (traction battery) will slowly discharge. For this reason, be sure to drive the vehicle at least once every few months for at least 30 minutes or 16 km (10 miles). If the hybrid battery (traction battery) becomes fully discharged and you are unable to start the hybrid system, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

### ■ Charging the 12-volt battery

→P. 641

**■ After the 12-volt battery has discharged or when the terminal has been removed and installed during exchange, etc.**

The gasoline engine may not stop even if the vehicle is being driven by the hybrid battery (traction battery). If this continues for a few days, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**■ Sounds and vibrations specific to a hybrid vehicle**

There may be no engine sound or vibration even though the vehicle is able to move with the "READY" indicator is illuminated. For safety, apply the parking brake and make sure to shift the shift position to P when parked.

The following sounds or vibrations may occur when the hybrid system is operating and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) under the rear seats when the hybrid system starts or stops.
- Relay operating sounds such as a snap or soft clank will be emitted from the hybrid battery (traction battery), under the rear seats, when the hybrid system is started or stopped.
- Sounds from the hybrid system may be heard when the back door is open.
- Sounds may be heard from the transmission when the gasoline engine starts or stops, when driving at low speeds, or during idling.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed or as the accelerator pedal is released.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vent. (→P. 85)

**■ Vehicle proximity notification system**

In the following cases, the vehicle proximity notification system may be difficult for surrounding people to hear.

- In very noisy areas
- In the wind or the rain

Also, as the vehicle proximity notification system is installed on the front of the vehicle, it may be more difficult to hear from the rear of the vehicle compared to the front.

**■ When "Proximity Notification System Malfunction Visit Your Dealer" is displayed on the multi-information display**

The vehicle proximity notification system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**■ Maintenance, repair, recycling, and disposal**


Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer regarding maintenance, repair, recycling and disposal. Do not dispose of the vehicle yourself.

1

For safety and security

## Hybrid system precautions

Take care when handling the hybrid system, as it is a high voltage system (about 600 V at maximum) as well as contains parts that become extremely hot when the hybrid system is operating. Obey the warning labels attached to the vehicle.

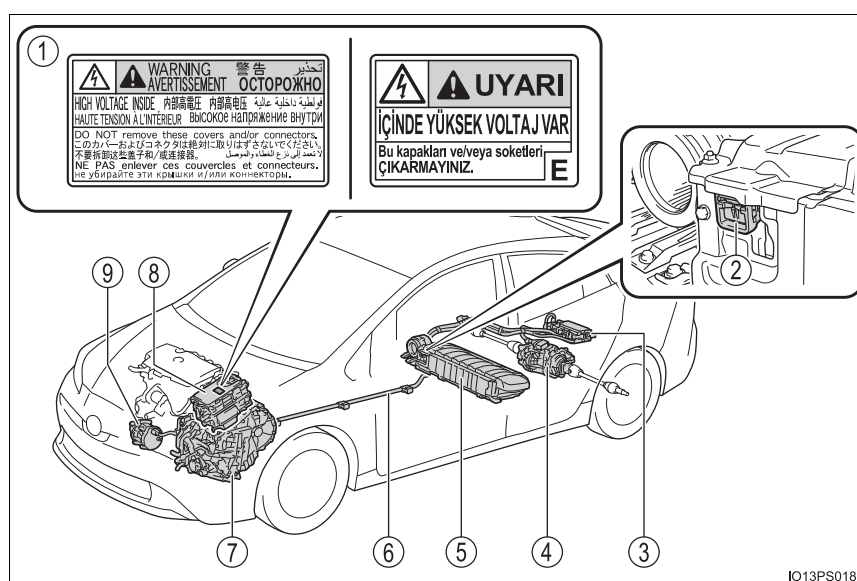


The illustration is an example for explanation and may differ from the actual item.

- |   |   |
|---|---|
| ① Warning label                         | ⑥ High voltage cables (orange)          |
| ② Service plug                          | ⑦ Front electric motor (traction motor) |
| ③ Rear inverter (traction motor)*       | ⑧ Power control unit                    |
| ④ Rear electric motor (traction motor)* | ⑨ Air conditioning compressor           |
| ⑤ Hybrid battery (traction battery)     | *: AWD models only                      |

### Hybrid battery (traction battery) air intake vent

There is an air intake vent under the right side of the rear seat for the purpose of cooling the hybrid battery (traction battery). If the vent is blocked, charging/discharging of the hybrid battery (traction battery) may become limited.

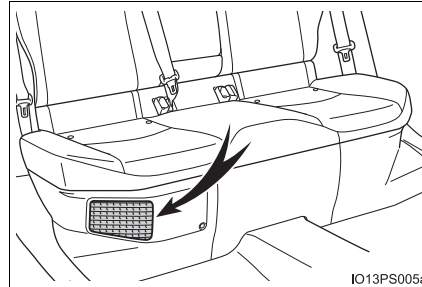


### Emergency shut off system

When a certain level of impact is detected by the impact sensor, the emergency shut off system blocks the high voltage current and stops the fuel pump to minimize the risk of electrocution and fuel leakage. If the emergency shut off system activates, your vehicle will not restart. To restart the hybrid system, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

### Hybrid warning message

A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.

If a warning message is shown on the multi-information display, read the message and follow the instructions.

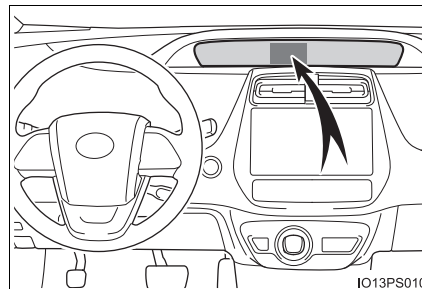

---

**■ If a warning light comes on, a warning message is displayed, or the 12-volt battery is disconnected**

The hybrid system may not start. In this case, try to start the system again. If the “READY” indicator does not come on, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**■ Running out of fuel**

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warning light (→P. 583) go off. If there is only a small amount of fuel, the hybrid system may not be able to start. (The standard amount of fuel is about 7.5 L [2.0 gal., 1.7 Imp.gal.], when the vehicle is on a level surface. This value may vary when the vehicle is on a slope. Add extra fuel when the vehicle is inclined.)

**■ Electromagnetic waves**

- High voltage parts and cables on hybrid vehicles incorporate electromagnetic shielding, and therefore emit approximately the same amount of electromagnetic waves as conventional gasoline powered vehicles or home electronic appliances.
- Your vehicle may cause sound interference in some third party-produced radio parts.

**■ Hybrid battery (traction battery)**

The hybrid battery (traction battery) has a limited service life. The lifespan of the hybrid battery (traction battery) can change in accordance with driving style and driving conditions.

**■ Declaration of conformity**


This model conforms to hydrogen emissions according to regulation ECE100 (Battery electric vehicle safety).



**⚠ WARNING****■ High voltage precautions**

This vehicle has high voltage DC and AC systems as well as a 12-volt system. DC and AC high voltage is very dangerous and can cause severe burns and electric shock that may result in death or serious injury.

- Never touch, disassemble, remove or replace the high voltage parts, cables or their connectors.
- The hybrid system will become hot after starting as the system uses high voltage. Be careful of both the high voltage and the high temperature, and always obey the warning labels attached to the vehicle.
- Never try to open the service plug access hole located under the right side of the rear seat. The service plug is used only when the vehicle is serviced and is subject to high voltage.

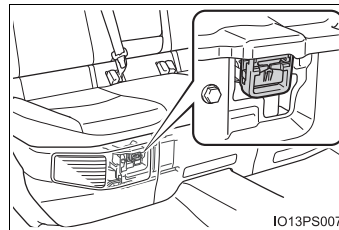

 **WARNING****■ Road accident cautions**

Observe the following precautions to reduce the risk of death or serious injury:

- Pull your vehicle off the road, apply the parking brake, shift the shift position to P, and turn the hybrid system off.
- Do not touch the high voltage parts, cables and connectors.
- If electric wires are exposed inside or outside your vehicle, an electric shock may occur. Never touch exposed electric wires.
- If a fluid leak occurs, do not touch the fluid as it may be strong alkaline electrolyte from the hybrid battery (traction battery). If it comes into contact with your skin or eyes, wash it off immediately with a large amount of water or, if possible, boric acid solution. Seek immediate medical attention.
- If a fire occurs in the hybrid vehicle, leave the vehicle as soon as possible. Never use a fire extinguisher that is not meant for electric fires. Using even a small amount of water may be dangerous.
- If your vehicle needs to be towed, do so with front wheels (2WD models) or four wheels (AWD models) raised. If the wheels connected to the electric motor (traction motor) are on the ground when towing, the motor may continue to generate electricity. This may cause a fire. (→P. 572)
- Carefully inspect the ground under the vehicle. If you find that liquid has leaked onto the ground, the fuel system may have been damaged. Leave the vehicle as soon as possible.

 **WARNING****■ Hybrid battery (traction battery)**

- Never resell, hand over or modify the hybrid battery. To prevent accidents, hybrid batteries that have been removed from a disposed vehicle are collected through any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Do not dispose of the battery yourself.

Unless the battery is properly collected, the following may occur, resulting in death or serious injury:

- The hybrid battery may be illegally disposed of or dumped, and it is hazardous to the environment or someone may touch a high voltage part, resulting in an electric shock.
- The hybrid battery is intended to be used exclusively with your hybrid vehicle. If the hybrid battery is used outside of your vehicle or modified in any way, accidents such as electric shock, heat generation, smoke generation, an explosion and electrolyte leakage may occur.

When reselling or handing over your vehicle, the possibility of an accident is extremely high because the person receiving the vehicle may not be aware of these dangers.

- If your vehicle is disposed of without the hybrid battery having been removed, there is a danger of serious electric shock if high voltage parts, cables and their connectors are touched. In the event that your vehicle must be disposed of, the hybrid battery must be disposed of by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or a qualified service shop. If the hybrid battery is not disposed of properly, it may cause electric shock that can result in death or serious injury.



## NOTICE

**■ Hybrid battery (traction battery) air intake vent**

- Make sure not to block the air intake vent with anything, such as a seat cover, plastic cover, or luggage. If the vent is blocked, the charging/discharging of the hybrid battery (traction battery) may become limited.
- When dust etc. has accumulated in the air intake vent, clean it with a vacuum cleaner to prevent the vent from clogging.
- Do not get water or foreign materials in the air intake vent as this may cause a short circuit and damage the hybrid battery (traction battery).
- Do not carry large amounts of water such as water cooler bottles in the vehicle. If water spills onto the hybrid battery (traction battery), the battery may be damaged. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- There is a filter installed to the air intake vent. When the filter remains noticeably dirty even after cleaning the air intake vent, filter cleaning or replacement is recommended. For information regarding filter cleaning or replacement, refer to P. 545.
- If “Maintenance Required for Traction Battery Cooling Parts See Owner's Manual” is shown on the multi-information display, the air intake vent and filter may be clogged. Refer to P. 545 for information on how to clean the air intake vent.

## Immobilizer system


The vehicle's keys have built-in transponder chips that prevent the hybrid system from starting if a key has not been previously registered in the vehicle's on-board computer.

Never leave the keys inside the vehicle when you leave the vehicle.

This system is designed to help prevent vehicle theft but does not guarantee absolute security against all vehicle thefts.

The indicator light flashes after the power switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the power switch has been turned to ACCESSORY or ON mode to indicate that the system has been canceled.

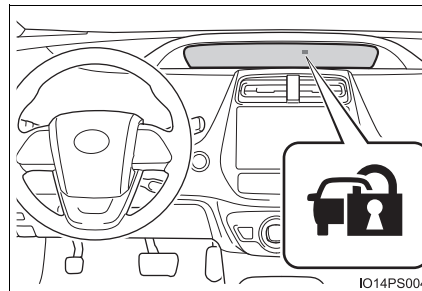

### ■ System maintenance

The vehicle has a maintenance-free type immobilizer system.

### ■ Conditions that may cause the system to malfunction

- If the grip portion of the key is in contact with a metallic object
- If the key is in close proximity to or touching a key registered to the security system (key with a built-in transponder chip) of another vehicle



### NOTICE


#### ■ To ensure the system operates correctly

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

## Double locking system\*

Unauthorized access to the vehicle is prevented by disabling the door unlocking function from both the interior and exterior of the vehicle.

Vehicles employing this system have labels on the window glass of both front doors.

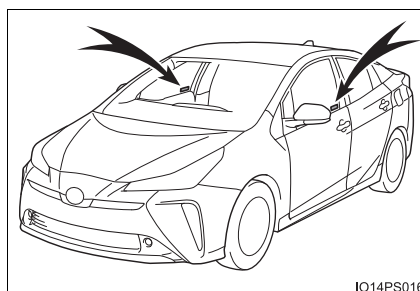


### Setting the double locking system

Turn the power switch off, have all the passengers exit the vehicle and ensure that all the doors are closed.

Using the entry function:


Touch the sensor area on the driver's outside door handle or front passenger's door handle (if equipped with the sensor) twice within 5 seconds.

Using the wireless remote control:

Press  twice within 5 seconds.

### Canceling the double locking system

Using the entry function: Hold the outside door handle on the driver side or front passenger side (if equipped with the sensor).

Using the wireless remote control: Press  .

#### WARNING

#### ■ Double locking system precaution

Never activate the double locking system when there are people in the vehicle, because all the doors cannot be opened from inside the vehicle.

\*: If equipped

## Alarm\*

### The alarm

The alarm uses light and sound to give an alert when an intrusion is detected.


The alarm is triggered in the following situations when the alarm is set:

- A locked door or back door is unlocked or opened in any way other than using the entry function or wireless remote control. (The doors will lock again automatically.)
- The hood is opened.
- If equipped, the intrusion sensor detects something moving inside the vehicle. (An intruder gets in the vehicle.)

### Setting the alarm system

Close the doors and hood, and lock all the doors using the entry function or wireless remote control. The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

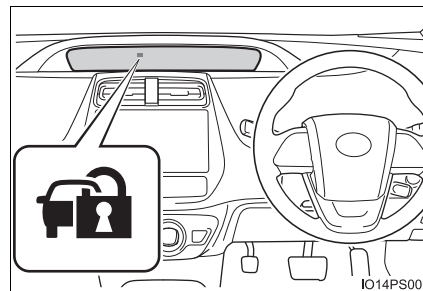

### Deactivating or stopping the alarm

Do one of the following to deactivate or stop the alarm.

- Unlock the doors using the entry function or wireless remote control.
- Start the hybrid system. (The alarm will be deactivated or stopped after a few seconds.)

\*: If equipped

**■ System maintenance**

The vehicle has a maintenance-free type alarm system.

**■ Items to check before locking the vehicle**


To prevent unexpected triggering of the alarm and vehicle theft, make sure of the following.

- Nobody is in the vehicle.
- The side windows and moon roof (if equipped) are closed before the alarm is set.
- No valuables or other personal items are left in the vehicle.


**■ Triggering of the alarm**

The alarm may be triggered in the following situations:  
(Stopping the alarm deactivates the alarm system.)


- The doors are unlocked using the mechanical key.

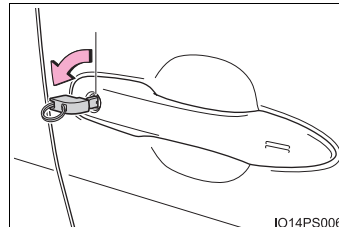

- A person inside the vehicle opens a door or hood, or unlocks the vehicle using an inside lock button.

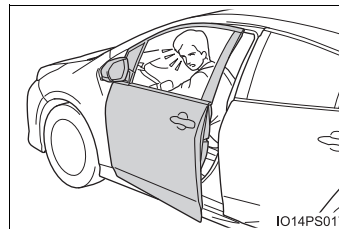

- The 12-volt battery is recharged or replaced when the vehicle is locked. (→P. 639)

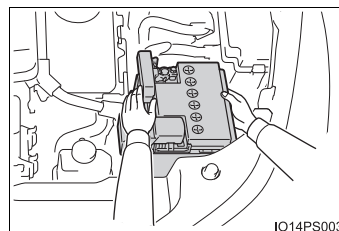



**■ Alarm-operated door lock**

In the following cases, depending on the situation, the door may automatically lock to prevent improper entry into the vehicle:

- When a person remaining in the vehicle unlocks the door and the alarm is activated.
- While the alarm is activated, a person remaining in the vehicle unlocks the door.
- When recharging or replacing the 12-volt battery

 **NOTICE****■ To ensure the system operates correctly**

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

### Intrusion sensor (if equipped)

The intrusion sensor detects intruders or movement in the vehicle.

This system is designed to deter and prevent vehicle theft but does not guarantee absolute security against all intrusions.

#### ■ Setting the intrusion sensor




The intrusion sensor will be set automatically when the alarm is set.  
(→P. 93)

#### ■ Canceling the intrusion sensor

If you are leaving pets or other moving things inside the vehicle, make sure to disable the intrusion sensor before setting the alarm, as they will respond to movement inside the vehicle.


- 1 Turn the power switch off.

A message is displayed on the multi-information display for approximately 4 seconds asking if you wish to cancel the intrusion sensor.

- 2 Press  or  of the meter control switch on the steering wheel, select "Yes" and then press .

If an operation is not performed for approximately 5 seconds, the message will be automatically extinguished and the intrusion sensor will not be canceled.

The intrusion sensor will revert to on each time the power switch is turned to ON mode.

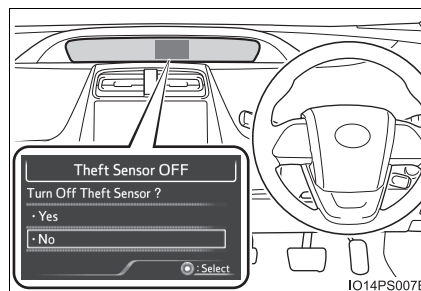

■ **When the message asking if you wish to cancel the intrusion sensor is not displayed**

The message may not be displayed if other message is displayed. In this case, turn the power switch to ON mode, follow the instructions on the display and turn the power switch off again.


■ **Canceling and automatic re-enabling of the intrusion sensor**

- The alarm will still be set even when the intrusion sensor is canceled.
- After the intrusion sensor is canceled, pressing the power switch or unlocking the doors using the entry function or wireless remote control will re-enable the intrusion sensor.
- The intrusion sensor will automatically be re-enabled when the alarm system is deactivated.

■ **Intrusion sensor detection considerations**

The sensor may trigger the alarm in the following situations:


- People or pets are in the vehicle.

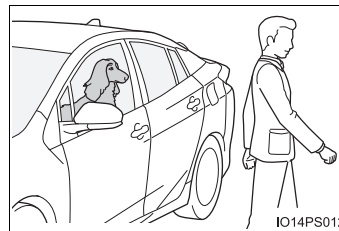


- A side window or moon roof (if equipped) is open.

In this case, the sensor may detect the following:


- Wind or the movement of objects such as leaves and insects inside the vehicle
- Ultrasonic waves emitted from devices such as the intrusion sensors of other vehicles
- The movement of people outside the vehicle

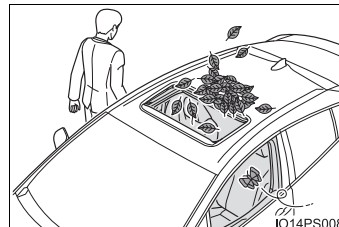


- Unstable items, such as dangling accessories or clothes hanging on the coat hooks, are in the vehicle.

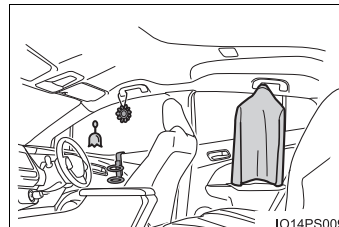

- The vehicle is parked in a place where extreme vibrations or noises occur, such as in a parking garage.

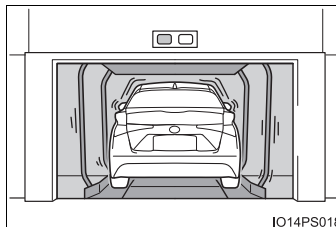

- Ice or snow is removed from the vehicle, causing the vehicle to receive repeated impacts or vibrations.

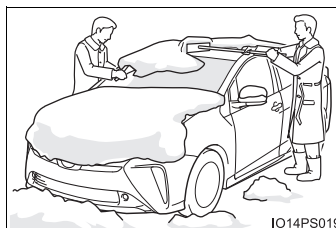

- The vehicle is inside an automatic or high-pressure car wash.
- The vehicle experiences impacts, such as hail, lightning strikes, and other kinds of repeated impacts or vibrations.


 NOTICE

■ To ensure the intrusion sensor functions correctly

- To ensure that the sensors operate properly, do not touch or cover them.



- Do not spray air fresheners or other products directly into the sensor holes.

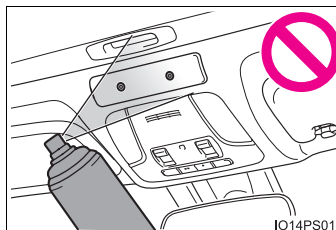


- Installing accessories other than genuine Toyota parts or leaving objects between the driver's seat and front passenger's seat may reduce the detection performance.

<b>2. Instrument cluster</b>	
Combination meter .....	100
Warning lights and indicators .....	110
Main display .....	117
Multi-information display .....	127
Head-up display .....	160
Energy monitor/ consumption screen .....	166

## Combination meter

The large meter uses 2 liquid crystal displays to display information such as the vehicle condition, driving status and fuel consumption.

### Combination meter layout

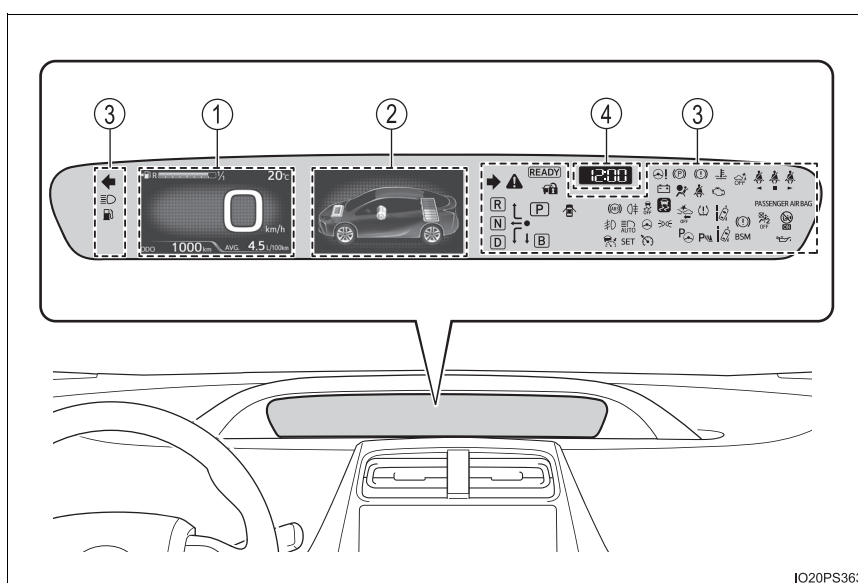








The units used on the display may differ depending on the target region.

- ① Main display (→P. 117)  
The main display shows basic information related to driving, such as the vehicle speed and remaining fuel amount.
- ② Multi-information display (→P. 127)  
The multi-information display shows information which makes the vehicle convenient-to-use, such as the hybrid system operation condition and fuel consumption history. Also, the operation contents of the driving support systems and the combination meter display settings can be changed by switching to the settings screen.
- ③ Warning lights and indicators (→P. 110)  
The warning lights and indicators comes on or flashes to indicate problems with the vehicle or to show the operation status of the vehicle's systems.
- ④ Clock (→P. 106)

### Operations related to the combination meter

The meter control switches equipped on the steering wheel can be used to switch the screen display and change settings related to functions displayed on the screen.

- ① Each time the button is pressed, the mileage display switches among odometer, trip meters, etc., and the fuel consumption information for each distance switches as well.  
(→P. 121)
  - ② Pressing , ,  or  performs such operations as scrolling the screen\*, switching the contents of the display\* and moving the cursor.
  - ③ This button is used to perform such operations as selecting the current item or switching between on and off.
  - ④ When pressed, the display returns to the previous screen.
- \*: On screens where the screen can be scrolled and the display can be switched, marks are displayed to indicate the direction of operation (such as  and .

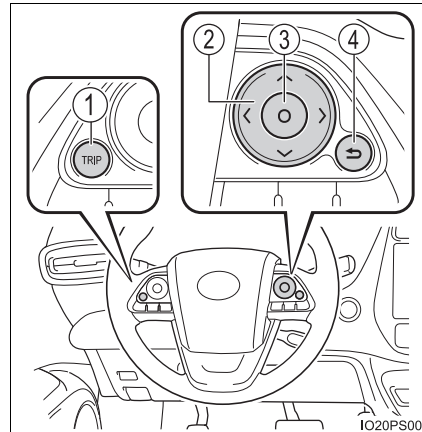

### Instrument cluster light control


▶ Left-hand drive vehicles

When the switches are pressed, the instrument cluster light changes as follows.

The instrument cluster brightness levels that can be selected differ depending on whether the tail lights are on and surrounding brightness levels. (→P. 108)


- ① Darker
- ② Brighter

When the switches are pressed, the adjustment level check screen (pop-up display\*) is displayed on the main display.

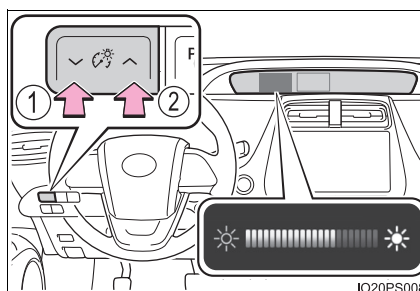






\*: A short time after the operation is completed, the pop-up display turns off. Furthermore, the pop-up display can be turned on and off in the “Meter Customize” settings. (→P. 156)

▶ Right-hand drive vehicles

To adjust the brightness of the instrument cluster light, perform operations on the  screen of the multi-information display. (→P. 153)

The instrument cluster brightness levels that can be selected differ depending on whether the tail lights are on and surrounding brightness levels. (→P. 108)


- 1 Press  or  of the meter control switches on the  screen and select .
- 2 Press  to display the cursor.



- 3 Press **<** or **>** of the meter control switches to adjust the brightness of the instrument cluster light.

- ① Darker  
② Brighter

After adjustment is completed, press **↵** to return to the previous screen.

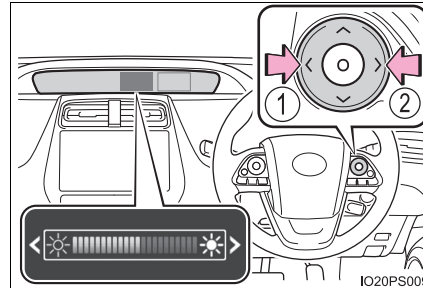

### Information automatically displayed

Some information will be displayed automatically according to power switch operation, vehicle condition, etc.


#### ■ When starting the hybrid system

When the hybrid system starts, an opening animation is displayed on the 2 displays.

After the animation ends, the screens switch to the normal screen.

The opening animation will be stopped in any of the following situations.

- When the shift position is changed to other than P
- When the Simple Intelligent Parking Assist System (if equipped) is turned on

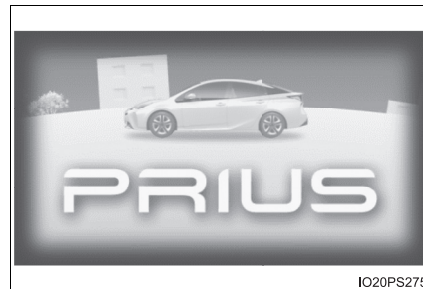


### ■ After refueling (if equipped)

When the power switch is turned to ON mode after refueling, the gasoline price setting screen\* is displayed on the multi-information display.

After refueling, always set the gasoline price so that the “Eco Savings” function (→P. 141) may operate properly.

Settings related to the “Eco Savings” function can be changed in the “Meter Customize” settings. (→P. 156)

\*: If the amount of fuel that the vehicle is refueled with is too small, this screen may not be displayed. (→P. 126)

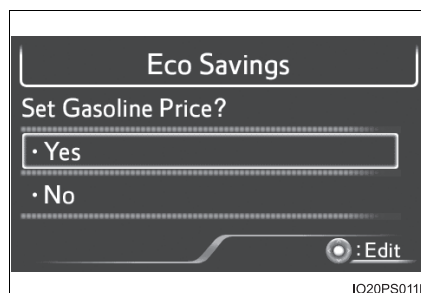

### ■ When the driving assist systems are operating

When using driving assist systems such as the dynamic radar cruise control with full-speed range\* (→P. 329) and LTA (Lane Tracing Assist)\* (→P. 307), information related to each system is automatically displayed on the multi-information display depending on the situation.

For details regarding the displayed information and the contents of the display, refer to the explanation page of each system.

\*: If equipped


### ■ When there is information to be notified about the vehicle

When a shift position is mistakenly selected or a problem occurs in a vehicle system, a warning message (or image) is displayed on the multi-information display.

When a warning message is displayed, follow the instructions displayed on the display. (→P. 589)

### ■ When the power switch is turned off (vehicles with the intrusion sensor)


The intrusion sensor on/off selection screen is displayed on the multi-information display. (→P. 96)

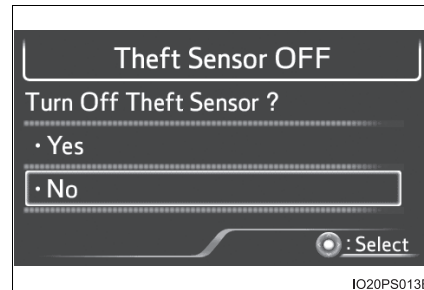


### ■ When stopping the hybrid system

From the time the hybrid system is started until it is turned off, the driving time, distance traveled, average fuel consumption and Eco score (→P. 134, 150) result are displayed on the multi-information display approximately every 30 seconds.



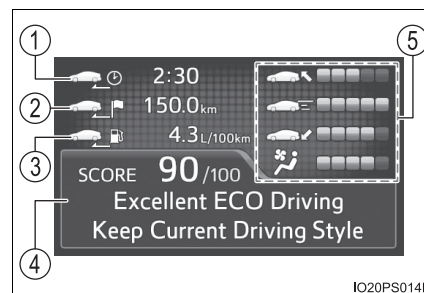








- ① Driving time since hybrid system started
- ② Distance traveled since hybrid system started
- ③ Average fuel consumption after hybrid system started
- ④ Eco score result and advice
- ⑤ Score display for each Eco score item (→P. 134, 150)



### Clock adjustment

To adjust the time, perform operations on the  screen (→P. 147) of the multi-information display.


#### ■ Adjusting the time

- 1 Press  or  of the meter control switches on the steering wheel and select .
- 2 Press  or  of the meter control switches and select .
- 3 Press  to display the cursor.
- 4 Press  or  of the meter control switches to adjust the cursor position, and then press  or  to change the setting.




When the 12-hour display is selected, "12H" is displayed, and when the 24-hour display is selected, "24H" is displayed.

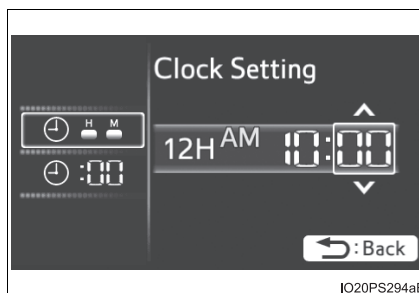


When adjusting minutes, operation automatically starts from 00 seconds.

After changing the settings, press  to return to the previous screen.




### ■ Resetting the minutes display

- 1 Press  or  of the meter control switches on the steering wheel and select .

- 2 Press  or  of the meter control switches and select .



- 3 Press .

The minutes display switches to "00".\*

\*: e.g. 1:00 to 1:29 → 1:00  
1:30 to 1:59 → 2:00

2

Instrument cluster

■ **The meters and display illuminate when**

The power switch is in ON mode.

■ **Adjusting the instrument cluster brightness (→P. 102)**

- The brightness levels that can be selected differ depending on whether the tail lights are on and surrounding brightness levels, as shown in the table below.

	The tail lights are off	The tail lights are on
In a bright place	2 levels*	2 levels*
In a dark place		22 levels

\*: 22 levels of the brightness are displayed on the setting screen. However, the brightness setting will be the brightest when other than 1st level (the darkest) is selected. If other than 1st or 22nd level is selected, when the tail lights are turned on in a dark place, the instrument cluster brightness setting will be the selected level.

- If the taillights are illuminated in a dark environment, the instrument cluster light dims. However, when the brightness of the instrument cluster is set to minimum or maximum (1st or 22nd level of the instrument cluster brightness), even if the taillights are illuminated, the instrument cluster light will not dim.


■ **When disconnecting and reconnecting 12-volt battery terminals**

The settings of the clock will be reset.

■ **Calendar settings**

If calendar recording is interrupted due to replacement of the 12-volt battery or 12-volt battery discharge, etc., when the power switch is turned to ON mode after maintenance, the calendar settings check screen is automatically displayed on the multi-information display.

- If date information is not set, the fuel consumption record cannot be stored correctly. When the calendar settings check screen is displayed, make sure to always set the settings. (→P. 153)
- Until the calendar settings are set, the check screen is displayed every time the power switch is turned to ON mode.
- After the calendar information is set, it can be changed in the “Meter Customize” settings. (→P. 156)

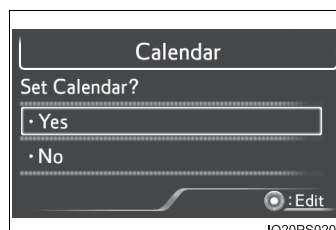

### ■ Liquid crystal display

Small spots or light spots may appear on the display. This phenomenon is characteristic of liquid crystal displays, and there is no problem continuing to use the display.


### ■ Pop-up display

Some functions, such as the driving mode select switch and air conditioning system, are operation-linked and display pop-up screens on the multi-information display. If the pop-up screens of these functions are not desired, they can be turned off in the "Meter Customize" settings. (→P. 156)

#### ⚠ WARNING

##### ■ To prevent an accident

Do not place anything or attach a sticker in front of the instrument cluster. The item may obscure or obstruct the display, or could reflect off the display, possibly causing an accident.

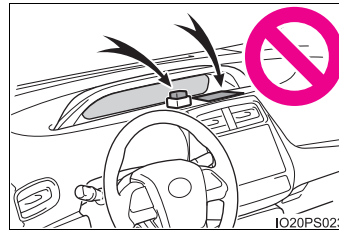

##### ■ Caution for use while driving

For safety, avoid operating the meter control switch while driving as much as possible, and do not look continuously at the multi-information display while driving. Stop the vehicle and operate the meter control switch. Failure to do so may cause a steering wheel operation error, resulting in an unexpected accident.

#### ⚠ NOTICE


##### ■ The information display at low temperatures

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.

## Warning lights and indicators

The warning lights and indicators inform the driver of the status of the vehicle's various systems.



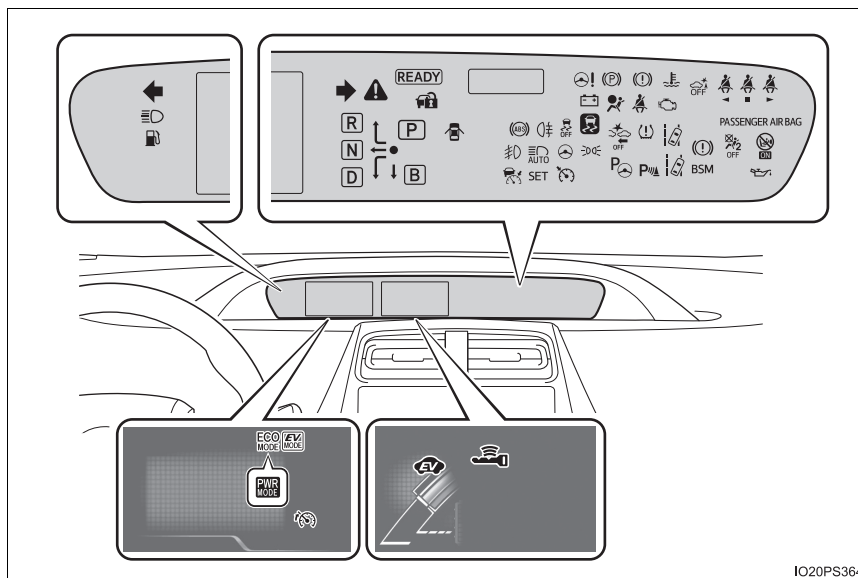











For the purpose of explanation, the following illustration displays all indicators and warning lights illuminated.










**Warning lights**

Warning lights inform the driver of malfunctions in any of the vehicle's systems.

Warning lights			Pages
*1		Brake system warning light (Red)	P. 580
*1		Brake system warning light (Yellow)	P. 580
*1		Charging system warning light	P. 580
*1		Low engine oil pressure warning light	P. 581
*1		Malfunction indicator lamp	P. 581
*1		SRS warning light	P. 581
*1		ABS warning light	P. 581
*1		Electric power steering system warning light (Red/yellow)	P. 581
*1, 2		PCS warning light (if equipped)	P. 582
		LTA indicator (Orange) (if equipped)	P. 582
*1		Slip indicator light	P. 582
*1		High coolant temperature warning light	P. 583
*1, 3		PKSB OFF indicator (if equipped)	P. 583
		Open door warning light	P. 583

Warning lights			Pages
		Low fuel level warning light	P. 583
		Driver's and front passenger's seat belt reminder light	P. 584
		Rear passengers' seat belt reminder light	P. 584
*1		Master warning light	P. 584
*1		Tire pressure warning light (if equipped)	P. 584





\*1: These lights turn on when the power switch is turned to ON mode to indicate that a system check is being performed. They will turn off after the hybrid system is on, or after a few seconds. There may be a malfunction in a system if a light does not come on, or turn off. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.




 








\*2: The light flashes or illuminates to indicate a malfunction.





\*3: The light flashes to indicate a malfunction.

### Indicators

The indicators inform the driver of the operating state of the vehicle's various systems.

Indicators			Pages
		Turn signal indicator	P. 259
		Tail light indicator	P. 261
		Parking brake indicator	P. 260
		Headlight high beam indicator	P. 262

Indicators			Pages
		Front fog light indicator	P. 270
		Rear fog light indicator	P. 270
		Security indicator	P. 91, 93
	<b>READY</b>	"READY" indicator	P. 244
		Shift position indicators	P. 253
*1, 2		Slip indicator light	P. 442
*1, 3		VSC OFF indicator	P. 443
		Cruise control indicator	P. 340, 346
		Dynamic radar cruise control indicator (if equipped)	P. 329
	<b>SET</b>	Cruise control "SET" indicator	P. 329, 346
*1, 3		PCS warning light (if equipped)	P. 300
*4		LTA indicator (if equipped)	P. 316
		Steering control indicator (if equipped)	P. 316
		Automatic High Beam indicator (if equipped)	P. 266
	<b>BSM</b>	"BSM" indicator (if equipped)	P. 356

Indicators			Pages
		Toyota parking assist-sensor indicator (if equipped)	P. 381
*1, 3		PKSB OFF indicator (if equipped)	P. 396
*1		S-IPA indicator (if equipped)	P. 409
*1		"PASSENGER AIR BAG" indicator	P. 51

\*1: These lights turn on when the power switch is turned to ON mode to indicate that a system check is being performed. They will turn off after the hybrid system is on, or after a few seconds. There may be a malfunction in a system if a light does not come on, or turn off. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.






\*2: The light flashes to indicate that the system is operating.

\*3: The light comes on when the system is turned off.

\*4: Depending on the operating condition, the color and illuminating/flashing state of the light change.





### Indicators and symbols displayed on the display

#### ■ Main display and multi-information display

Indicators			Pages
		EV drive mode indicator	P. 250
*		"ECO MODE" indicator	P. 351
*		"PWR MODE" indicator	P. 351
		EV Indicator	P. 133
		Speed limiter indicator (if equipped)	P. 353

\*: The displayed indicator changes according to the current driving mode.

■ **Multi-information display (symbol display\*)**


Symbol display			Pages
		Smart entry & start system	P. 244
		Inappropriate pedal operation	P. 585
		LTA (Lane Tracing Assist) (if equipped)	P. 321
			P. 321


\*: These symbols are displayed along with a message. Also, the symbol displays listed here are only an example, and different symbols may be displayed according to the contents of the multi-information display.

■ **BSM (Blind Spot Monitor) outside rear view mirror indicators (if equipped) (→P. 356)**

- Indicators are also displayed on the outside rear view mirrors.
- In order to confirm operation, the BSM outside rear view mirror indicators illuminate in the following situations:

- When the power switch is in ON mode, the BSM function is enabled


on the  screen of the multi-information display.

- When the BSM function is enabled on the  screen of the multi-information display, the power switch is turned to ON mode.

If the system is functioning correctly, the BSM outside rear view mirror indicators will turn off after a few seconds.

If the BSM outside rear view mirror indicators do not illuminate or do not turn off, there may be a malfunction in the system.


If this occurs, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

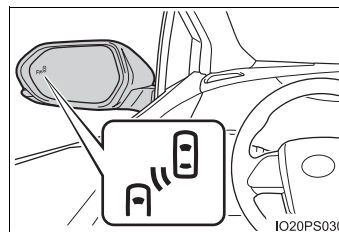

 WARNING

■ **If a safety system warning light does not come on**

Should a safety system light such as the ABS and SRS warning light not come on when you start the hybrid system, this could mean that these systems are not available to help protect you in an accident, which could result in death or serious injury. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately if this occurs.

 NOTICE


■ **To prevent damage to the engine and its components**

The engine may be overheating if the high coolant temperature warning light comes on or flashes. In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. (→P. 645)

## Main display

The main display shows basic information, such as the vehicle speed and remaining fuel amount. Also, the displayed information can be switched according to user preference.

Display contents (vehicles without RSA [Road Sign Assist] and speed limiter)

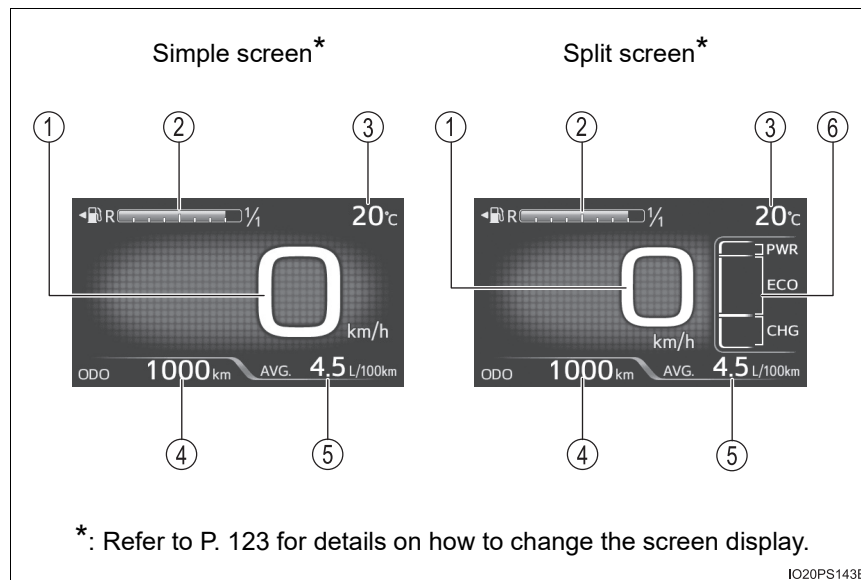

The units used on the display may differ depending on the target region.


2

Instrument cluster

- ① **Speedometer**  
Displays the vehicle speed
- ② **Fuel gauge**  
Displays the quantity of fuel remaining in the tank
- ③ **Outside temperature**  
Displays the outside temperature within the range of -40°C (-40°F) to 50°C (122°F).  
The temperature display flashes for approximately 10 seconds when the outside temperature drops to approximately 3°C (37°F) or less, and then stops flashing.
- ④ **Mileage display (odometer/trip meters/driving range)**  
The possible driving range estimated from the mileage and current remaining fuel amount can be displayed. (→P. 121)
- ⑤ **Average fuel consumption display**  
The average fuel consumption that is linked with the contents of the mileage display can be displayed. (→P. 121)
- ⑥ **Sub-screen**  
When split screen is selected for the main display, information such as the Hybrid System Indicator and current fuel consumption can be displayed. (→P. 123)




**Display contents (vehicles with RSA [Road Sign Assist] and/or speed limiter)**

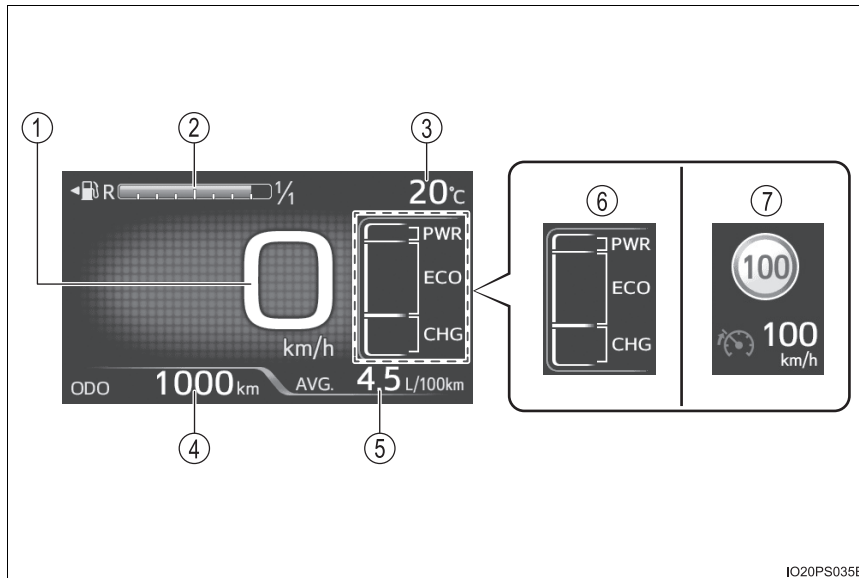


2  
Instrument cluster

The units used on the display may differ depending on the target region.

- ① Speedometer  
Displays the vehicle speed
- ② Fuel gauge  
Displays the quantity of fuel remaining in the tank
- ③ Outside temperature  
Displays the outside temperature within the range of -40°C (-40°F) to 50°C (122°F).  
The temperature display flashes for approximately 10 seconds when the outside temperature drops to approximately 3°C (37°F) or less, and then stops flashing.
- ④ Mileage display (odometer/trip meters/driving range)  
The possible driving range estimated from the mileage and current remaining fuel amount can be displayed. (→P. 121)
- ⑤ Average fuel consumption display  
The average fuel consumption that is linked with the contents of the mileage display can be displayed. (→P. 121)
- ⑥ Sub-screen (when RSA [Road Sign Assist] and speed limiter are off)  
Information such as the Hybrid System Indicator and current fuel consumption can be displayed. (→P. 124)
- ⑦ Sub-screen (when RSA [Road Sign Assist] and/or speed limiter is on)  
Displays information related to RSA (Road Sign Assist)\* or speed limiter. (→P. 323, 353)

\*: When RSA (Road Sign Assist) information is displayed in the  screen of the multi-information display (→P. 152), RSA (Road Sign Assist) information is not displayed on the sub-screen.


### Switching the mileage display and average fuel consumption display

Each time  is pressed, the mileage display and fuel consumption display change in the following order from 1 to 6.

- ① Mileage display
- ② Average fuel consumption display



After 1 to 6 are displayed, the displays return to 1.

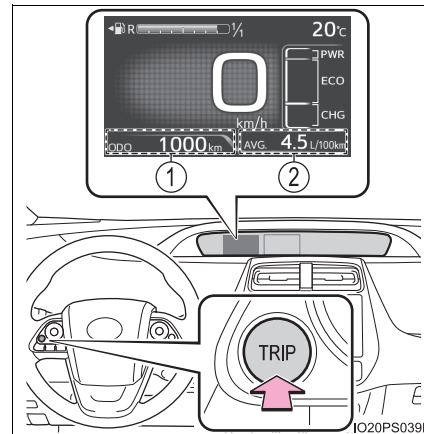
Use the displayed average fuel consumption as a reference.



2

Instrument cluster

	① Mileage display	② Average fuel consumption display
1	<b>ODO (Odometer)</b> Total mileage	<b>Average fuel consumption since last reset</b> Average fuel consumption since last reset*1
2	<b>TRIP A (Trip meter A)</b> Mileage since last reset*1	<b>TRIP A average fuel consumption</b> Average fuel consumption since TRIP A was reset*1
3	<b>TRIP B (Trip meter B)</b> Mileage since last reset*1	<b>TRIP B average fuel consumption</b> Average fuel consumption since TRIP B was reset*1
4	 <b>(Mileage since hybrid system was started)</b> Mileage since hybrid system started*2	<b>Average fuel consumption after hybrid system started</b> Average fuel consumption since hybrid system was started*2
5	 <b>(Distance to empty)</b> Approximate distance vehicle can travel based on current remaining fuel amount	<b>Blank screen</b>
6	<b>Blank screen</b>	<b>Blank screen</b>




\*1: If  is pressed and held while this item is displayed, the information is reset.






\*2: This item is reset each time the hybrid system starts.


### Switching the display mode (vehicles without RSA [Road Sign Assist] and/or speed limiter)



Simple screen or split screen can be selected for the main display.

When split screen is selected, a variety of information can be displayed on a sub-screen in addition to the contents of the simple screen.

- 1 Select the "Meter Customize" settings (  ) screen on the  screen of the multi-information display, and then press  .  
(→P. 153)

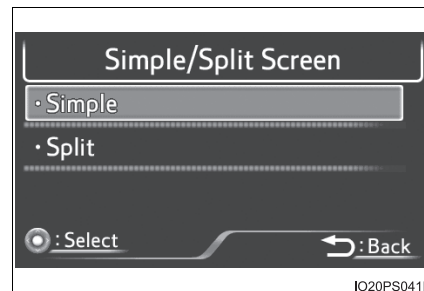- 2 Press  or  of the meter control switches to select "Simple/Split Screen".
- 3 Press  to display the setting screen.
- 4 Press  or  of the meter control switches to select a display mode.



- 5 Press  .  
The contents of the main display switch to the selected display mode.  
Press  to return to the previous screen.

### Switching contents displayed on the sub-screen


- ▶ Vehicles without RSA (Road Sign Assist) and speed limiter


When split screen is selected for the main display, display contents on the sub-screen can be selected.

- ▶ Vehicles with RSA (Road Sign Assist) and/or speed limiter



When RSA and speed limiter are off, display contents on the sub-screen can be selected.

- 1 Press **<** or **>** of the meter control switches and select the sub-screen.


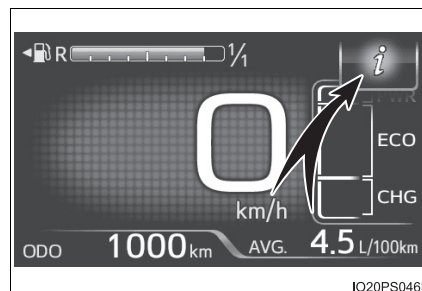

When the sub-screen is selected,  is displayed on the sub-screen.



IO20PS046E

- 2 Press  or  of the meter control switches to select the display item.

One of the following 3 items can be displayed.

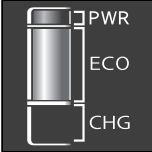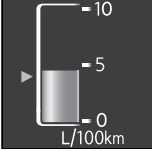Display contents	Detail
	<p><b>Hybrid System Indicator</b> A convenient Hybrid System Indicator is displayed. Refer to P. 132 for details on how to read the Hybrid System Indicator.</p>
	<p><b>Current fuel consumption</b> The current fuel consumption during driving is displayed.</p> <ul style="list-style-type: none"> <li>• The ► mark indicates the value displayed in the average fuel consumption display (→P. 121). Switching the average fuel consumption display also changes the position of the ► mark.</li> <li>• When the average fuel consumption is reset, the position of the ► mark is reset to 0.</li> </ul>
	<p><b>Hybrid battery (traction battery) status</b> The same contents as the hybrid battery (traction battery) status on the energy monitor are displayed. (→P. 131)</p>

■ **Outside temperature display**

- In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.
  - When stopped, or driving at low speeds (less than 20 km/h [12 mph])
  - When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)
- When “-” or “E” is displayed, the system may be malfunctioning.  
Take your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.


■ **Distance to empty**

- This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.
- When only a small amount of fuel is added to the tank, the display may not be updated.  
When refueling, turn the power switch off. If the vehicle is refueled without turning the power switch off, the display may not be updated.

■ **Switching the driving mode (→P. 351)**

When the driving mode is switched, the driving mode indicator changes and an animation\* is displayed on the multi-information display.

Also, the background color of the main display, energy monitor (→P. 130) and Hybrid System Indicator (→P. 132) change as follows.

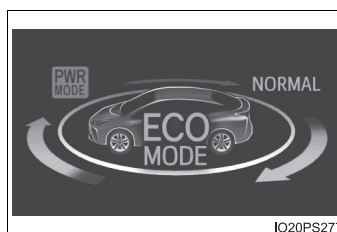

Driving modes	Background color
Normal mode	Green
Power mode	Red
Eco drive mode	Blue

\*: The animation displayed when the driving mode is switched can be turned off in the “Meter Customize” settings. (→P. 156)





## Multi-information display


A variety of information related to the vehicle can be displayed, including the operation status of each system and data related to Eco driving, and the settings of each system can be changed according to user preference.








### Display contents

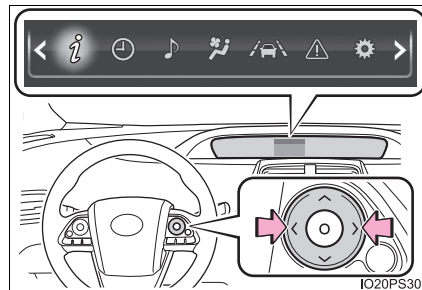Information related to each icon on the upper portion of the multi-information display can be displayed by operating the meter control switches to select the icon.


Icons are displayed when pressing  or  of the meter control switches and turn off shortly after pressing the switch.

Screens linked with vehicle functions may be automatically displayed according to the operation status of the corresponding functions.



Menu icons	Contents	Pages
	<b>Drive information</b> The energy monitor that shows the operation status of the hybrid system, or other information such as fuel consumption is displayed.	P. 129
	<b>Clock setting display</b> The clock settings can be changed.	P. 147
	<b>Audio system-linked display</b> The audio system settings can be changed.	P. 147
	<b>Air conditioning system settings screen</b> The air conditioning system settings can be changed.	P. 148
	<b>Driving assist system information</b> The information related to driving assist systems such as the LTA (Lane Tracing Assist) <sup>*1</sup> and dynamic radar cruise control with full-speed range <sup>*1</sup> is displayed.	P. 152
	<b>Warning message display<sup>*2</sup></b> The warning messages are displayed.	P. 152
	<b>Settings display</b> The settings of the vehicle functions, meter display, etc. can be changed.	P. 153

\*1: If equipped

\*2: When there is a warning message that can be displayed, the color of  changes to amber.

## Basic Operations

- 1 Press **<** or **>** of the meter control switches and select the icon of the desired item.

The selected icon is highlighted and the display switches to the information screen.


When split screen display is selected for the main display or RSA (Road Sign Assist)\* and speed limiter\* is off, the sub-screen of the main display can also be selected. (→P. 124)

\*: If equipped

- 2 Press **▲** or **▼** of the meter control switches to switch the contents of the display.


- 3 Press **○** on screens where it is necessary to select or confirm an item.

On screens with tab displays, pressing **○** selects the tab display, and the screen display can be changed by pressing **<** or **>** of the meter control switches.

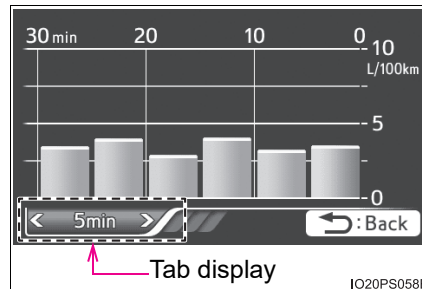

- 4 Press **↶** to return to the previous screen.

## Drive information

When  is selected, the following information can be displayed by pressing **▲** or **▼** of the meter control switches.


- Energy monitor (→P. 130)
- Hybrid System Indicator (→P. 132)
- “Fuel Consumption Record” (→P. 136)
- “Drive Monitor” (→P. 140)
- “Eco Savings” (→P. 141)
- “Eco-Diary” (→P. 144)
- AWD display (for AWD vehicles only) (→P. 146)

### ◆ Energy monitor

The energy monitor can be used to check the vehicle drive status, hybrid system operation status and energy regeneration status.

When energy is flowing, an arrow appears and a bright point of light moves to show the direction of the flow of energy. When energy is not flowing, the bright point of light is not displayed.

- ① Gasoline engine
- ② Electric motor (traction motor)
- ③ Hybrid battery (traction battery)
- ④ Tire
- ⑤ Bright point of light showing the flow of energy

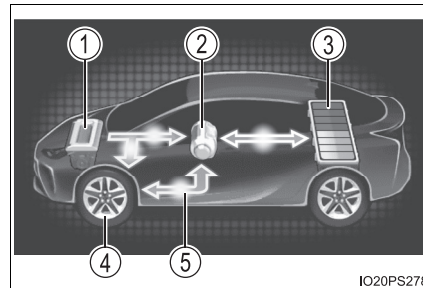

As an example, all arrows are shown in the illustration, but the actual contents of the display will differ.

(Display example)


- When the hybrid battery (traction battery) is being charged, the bright point of light moves towards ③.
- During driving, the bright point of light moves from ① or ② (or both depending on the situation) towards ④.\*
- During driving, the image of the tires rotates.

\*: The display may differ depending on the driving status.

### ■ Hybrid battery (traction battery) status

- The display changes in 8 levels according to the remaining charge amount of the hybrid battery (traction battery).

- ① Low
- ② High

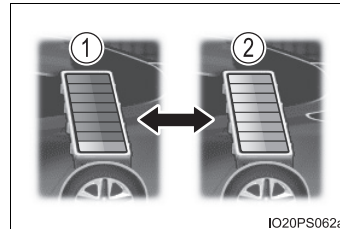


- The hybrid battery (traction battery) status is also displayed on the following screen, but the contents of the display are the same.
    - Sub-screen of the main display (→P. 125)
    - Hybrid System Indicator (→P. 132)
    - Head-up display (if equipped) (→P. 161)
  - The charge amount of the hybrid battery (traction battery) is automatically controlled by the hybrid system. For this reason, even if electricity is recovered via the regenerative braking, or electricity is generated via the gasoline engine, the displayed hybrid battery (traction battery) charge amount may not reach the highest level (level 8). However, this does not indicate a malfunction.
- ### ■ Remaining charge amount warning of hybrid battery (traction battery)
- The buzzer sounds intermittently when the hybrid battery (traction battery) remains without charging while the shift position is in N, or the remaining charge amount drops below a certain level. If the remaining charge amount drops further, the buzzer sounds continuously.
  - When a warning message is shown on the multi-information display and the buzzer sounds, follow the instructions displayed on the screen to perform troubleshooting.

◆ Hybrid System Indicator

The display changes according to accelerator pedal operation and displays the current driving status and energy regeneration status.

The Hybrid System Indicator can be displayed on the sub-screen of the main display (→P. 125) and the head-up display (if equipped) (→P. 161).

■ How to read the display

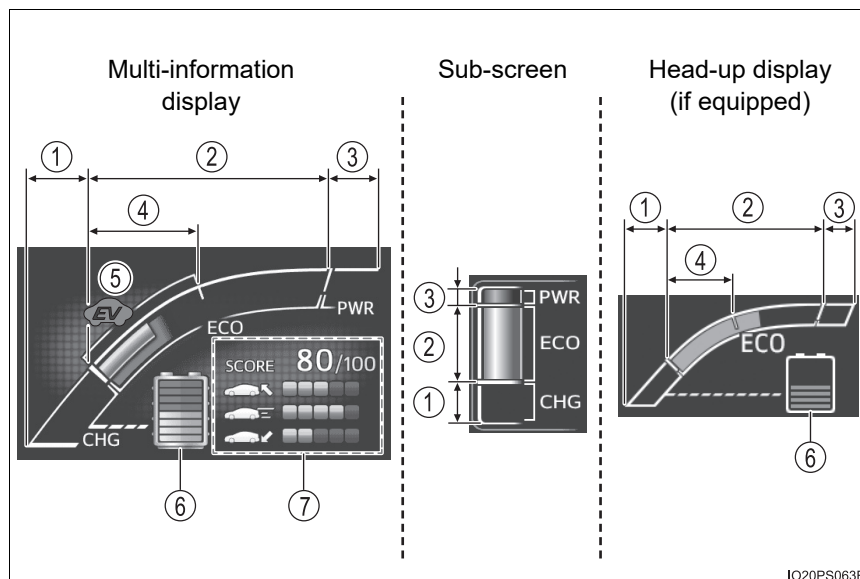

- ① Charge area  
Shows that energy is being recovered via the regenerative charging.
- ② Eco area  
Shows that the vehicle is being driven in an Eco-friendly manner.
- ③ Power area  
Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)
- ④ Hybrid Eco area\*1  
Shows that gasoline engine power is not being used very often.  
The gasoline engine will automatically stop and restart under various conditions.

## ⑤ EV indicator\*2, 3

The EV indicator comes on when the vehicle is driven using only the electric motor (traction motor) or the gasoline engine is stopped.

## ⑥ Hybrid battery (traction battery) status

→P. 131

## ⑦ Eco score

→P. 134

- By keeping the indicator within Eco area, more Eco-friendly driving can be achieved.
- Charge area indicates regeneration\*4 status. Regenerated energy will be used to charge the hybrid battery (traction battery).

\*1: Not displayed on the sub-screen.

\*2: Not displayed on the sub-screen or head-up display.

\*3: The EV indicator function can be turned off in the “Meter Customize” settings. (→P. 156)

\*4: When used in this manual, “regeneration” refers to the conversion of energy created by the movement of the vehicle into electrical energy.


### ■ “ECO Accelerator Guidance”

A blue zone is displayed in the Eco area which can be used as a reference operation range for using the accelerator pedal according to driving conditions such as starting off and cruising.

The “ECO Accelerator Guidance” display changes according to the driving status, such as when starting off or cruising.

It is easier to drive in an Eco-friendly manner by driving according to the display showing the accelerator pedal operations and staying within the “ECO Accelerator Guidance” range. (→P. 222)


The “ECO Accelerator Guidance” function can be turned off in the “Meter Customize” settings. (→P. 156)

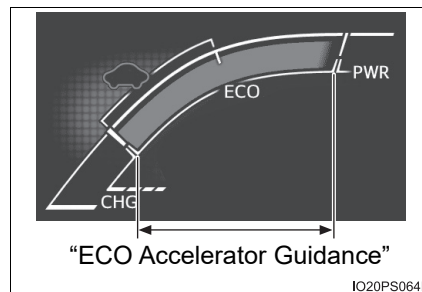

■ **Eco score**

The driving status for the following 3 situations are evaluated in 5 levels: Smooth start-off acceleration (“Eco-Start”), driving without sudden acceleration (“Eco-Cruise”) and smooth stopping (“Eco-Stop”). Each time the vehicle is stopped, a score result is displayed out of a perfect score of 100 points.

- ① Score result
- ② “Eco-Start” status
- ③ “Eco-Cruise” status
- ④ “Eco-Stop” status

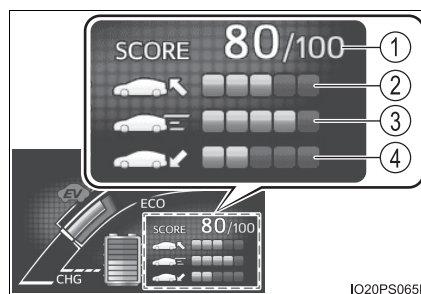

How to read the bar display:

Score	Low*	High
Bar display		

\*: For items not currently evaluated, the display reads 0.

- The Eco score is reset each time the vehicle starts off to start a new evaluation.
- When the shift position is P, only the Eco score display area is enlarged and displayed. When the shift position is shifted from P, the display returns to normal.
- When the hybrid system stops, the current total score result and advice on how to increase the score are displayed. (→P. 105)



**■ When operation of each function stops**

- The Hybrid System Indicator stops operating in the following situations.
  - The “READY” indicator is not illuminated.
  - The shift position is not D or B.
- The Eco score and “ECO Accelerator Guidance” stop operating in the following situations.
  - The Hybrid System Indicator is not operating.
  - Cruise control (if equipped) or dynamic radar cruise control with full-speed range (if equipped) is being used.
  - The speed limiter system (if equipped) is being used and the vehicle speed is approximately the limit speed or higher.

**■ About the Eco score**

- After starting off, Eco score display does not start until the vehicle speed exceeds approximately 30 km/h (19 mph).
- In addition to the vehicle driving status, the Eco score also evaluates the air conditioning system usage condition (→P. 150). The score displayed when the hybrid system stops is the total result of the driving status after the hybrid system starts and the air conditioning usage condition.

◆ “Fuel Consumption Record”

The transitions of the average fuel consumption after the hybrid system starts can be checked in such a unit as every 5 minutes or every 1 km (0.6 mile)<sup>\*1</sup> or 1 mile (1.6 km)<sup>\*2</sup> of driving. Also, it is possible to check the average fuel consumption history for each month by switching to the “Monthly” display.

\*1: When the unit is set to “km/h”


\*2: When the unit is set to “MPH” (if equipped)

■ How to read the screen

The “5 min” display is shown as an example. However, the basic method for how to read the screen is the same for each fuel consumption history screen.

- ① Current average fuel consumption record (yellow display)<sup>\*1</sup>

When the recorded unit is exceeded (every 5 min., every 1 km [0.6 mile]<sup>\*2</sup> or 1 mile [1.6 km]<sup>\*3</sup>, etc.) the currently displayed history moves towards the left side and the oldest record is deleted.

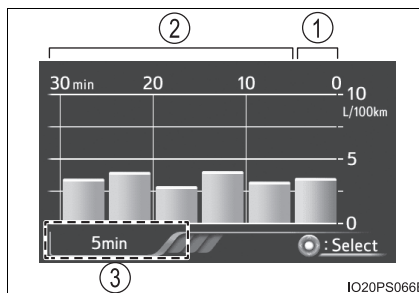

- ② Past average fuel consumption record (green display)
- ③ Tab display

Displays types of “Fuel Consumption Record”.

\*1: When displayed by “Monthly”, the average fuel consumption for the current month is displayed.

\*2: When the unit is set to “km/h”



\*3: When the unit is set to “MPH” (if equipped)

### ■ Types of “Fuel Consumption Record”

▶ When the unit is set to “km/h”

Tab display	Recorded contents	Recorded range
“5 min”	Average fuel consumption of every 5 minutes <sup>*1</sup>	The past 30 minutes
“1 km”	Average fuel consumption of every 1 km (0.6 mile) driven <sup>*1</sup>	The last 15 km (9.3 miles) driven
“5 km”	Average fuel consumption of every 5 km (3.1 miles) driven <sup>*1</sup>	The last 30 km (18.6 miles) driven
“Monthly”	Average fuel consumption of this month <sup>*2, 3</sup>	Record of last 4 months and the same month of the previous year

\*1: This record is reset each time the hybrid system stops.



\*2: The maximum value of the graph can be switched in 3 levels (10 L/100 km, 6 L/100 km and 3 L/100 km) by operating the  or  of the meter control switches while the “Monthly” tab display is selected.

\*3: The “Monthly” record can be reset on the “Meter Customize” settings screen. (→P. 156)

► When the unit is set to “MPH” (if equipped)


Tab display	Recorded contents	Recorded range
“5 min”	Average fuel consumption of every 5 minutes*1	The past 30 minutes
“1 miles”	Average fuel consumption of every 1 mile (1.6 km) driven*1	The last 15 miles (24.1 km) driven
“5 miles”	Average fuel consumption of every 5 miles (8 km) driven*1	The last 30 miles (48.3 km) driven
“Monthly”	Average fuel consumption of this month*2, 3	Record of last 4 months and the same month of the previous year

\*1: This record is reset each time the hybrid system stops.



\*2: The maximum value of the graph can be switched in 3 levels (150 MPG, 100 MPG and 50 MPG) by operating the  or  of the meter control switches while the “Monthly” tab display is selected.

\*3: The “Monthly” record can be reset on the “Meter Customize” settings screen. (→P. 156)

### ■ Switching the fuel consumption history screen


- 1 While the "Fuel Consumption Record" screen is displayed, press .

The tab display is selected and it is possible to switch the contents of the display.


- 2 Press  or  of the meter control switches to switch the contents of the display.

Each time  is pressed, the display switches in the following order:

- ▶ When the unit is set to "km/h"

"5 min", "1 km", "5 km" and "Monthly"\*. When  is pressed, it switches in the reverse order.

- ▶ When the unit is set to "MPH" (if equipped)

"5 min", "1 miles", "5 miles" and "Monthly"\*. When  is pressed, it switches in the reverse order.

\*: After "Monthly", the display returns to "5 min".

### ■ Calendar settings

→P. 158


◆ “Drive Monitor”

Displays information such as the driving time and average vehicle speed, which are linked with the current mileage display. (→P. 121)


- ① Current contents of the display



Displayed information shows which driving record the currently displayed contents are based on.

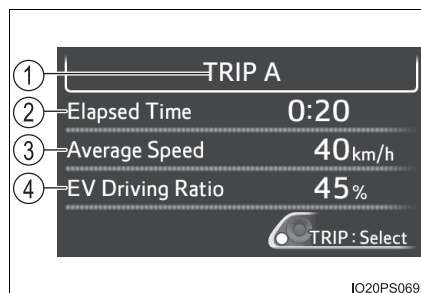- ② “Elapsed Time”
- ③ “Average Speed”
- ④ “EV Driving Ratio”



For the displayed distance of the mileage display, the percent traveled using only electric motor power is displayed.

Each time  is pressed, the mileage display (→P. 121) switches and the contents of the “Drive monitor” change as follows.

Mileage display	①	Contents of the “Drive monitor”
ODO	After Reset	Information since last reset*1
TRIP A	TRIP A	Information based on driving record of TRIP A*2
TRIP B	TRIP B	Information based on driving record of TRIP B*2
	After Start	Information since hybrid system was started*3
		
Blank screen		

\*1: When the average fuel consumption is reset (→P. 122), the “Drive monitor” display is also reset.

\*2: When the trip meter is reset (→P. 122), the “Drive monitor” display is also reset.

\*3: This item is reset each time the hybrid system starts.

---

**◆ “Eco Savings” (if equipped)**

---

“Gasoline Price”<sup>\*1</sup> and “COMP. Consumption” information is registered in the “Meter Customize” settings (→P. 156), making it possible to display 2 types of information related to gasoline fuel consumption.

▶ “SAVINGS”

If information about the vehicle used to compare fuel consumption (“COMP. Consumption”) is entered, when the fuel consumption of this vehicle according to the mileage of the trip meter<sup>\*2</sup> is greater than that of the comparison vehicle, an estimation<sup>\*3</sup> of the amount of the fuel cost savings is displayed.

▶ “FUEL COST”


If information about the vehicle used to compare fuel consumption (“COMP. Consumption”) is not entered, an estimation<sup>\*3</sup> of the amount of fuel cost savings is displayed according to the mileage of the trip meter<sup>\*2</sup>.

\*1: “Gasoline Price” is information necessary to display the “SAVINGS” and “FUEL COST” records.

\*2: The display can be switched from the mileage history to the history by month. (→P. 143)

\*3: The displayed amount is only an estimate, and may differ from the actual amount.

■ How to read the display

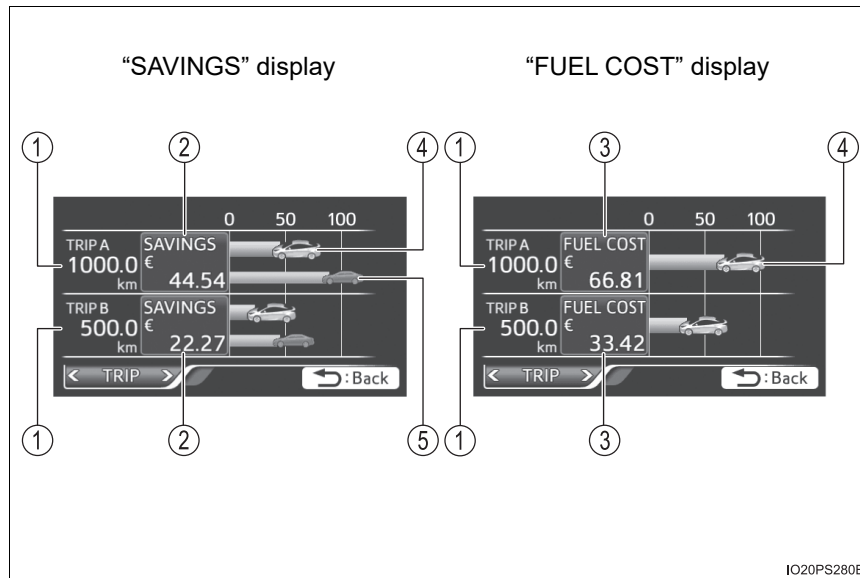




The units used on the display may differ depending on the target region.

- ① Trip meter distance traveled\*
- ② Estimate of fuel consumption saved for displayed distance traveled\*
- ③ Estimate of fuel expenses necessary to drive currently displayed distance\*
- ④ Estimate of fuel expenses to drive currently displayed distance (your vehicle)\*
- ⑤ Estimate of fuel expenses to drive currently displayed distance (comparison vehicle)\*


\*: When the trip meter is reset (→P. 122), the "Eco Savings" record is also reset.




### ■ Checking monthly record

The display can be switched to “TRIP” or “Monthly” by pressing  with the tab display selected, and then pressing  or  of the meter control switches.

Using the “Monthly” display, the monthly records for “SAVINGS” and “FUEL COST” can be checked.

The records for the past 5 months can be displayed by operating  of the meter control switches with the “Monthly” tab display selected.

To reset the “Monthly” contents, perform “History Reset” in the “Meter Customize” settings (→P. 156).

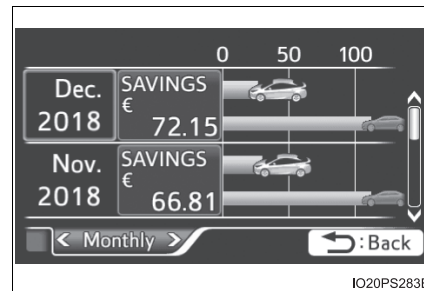


2

Instrument cluster

### ◆ “Eco-Diary”

The distance traveled and average fuel consumption history can be displayed in a table according to day (“Daily”) or month (“Monthly”) units.

#### ■ How to read the display

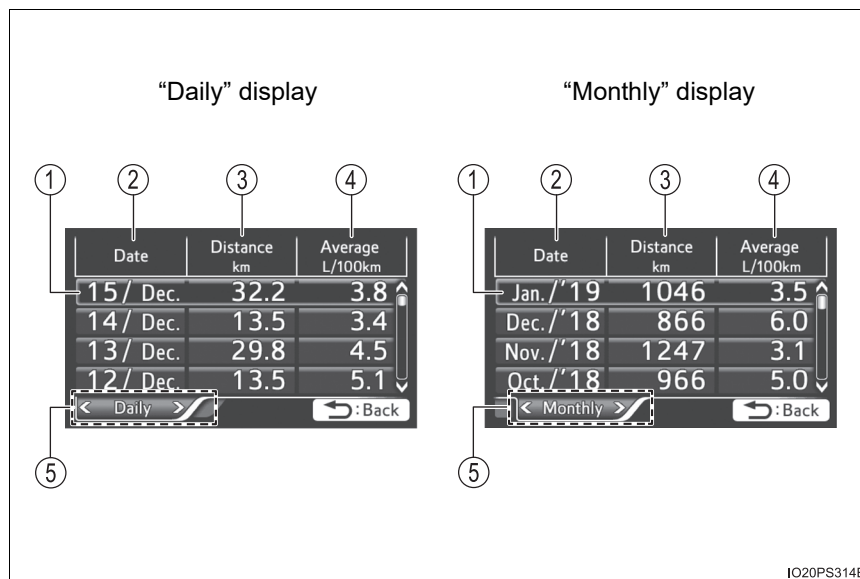



- ① Record of the day/month
- ② Date/month of stored information
- ③ Total distance traveled for the day/month
- ④ Average fuel consumption of the day/month
- ⑤ Tab display

The display can be switched between “Daily” and “Monthly” by pressing

○ to enter the select condition, and then operating ◀ or ▶ of the meter control switches.

**■ Checking history**

When each screen is selected, past records from the following ranges can be displayed by pressing  or  of the meter control switches.

Displayed screen	Displayed information	Stored information
“Daily”	4 reports	Up to 32 reports (8 screens)
“Monthly”		Up to 12 reports (3 screens)

- If the above number of records is exceeded, the oldest information is deleted.
- To reset the history, perform “History Reset” in the “Meter Customize” settings (→P. 156). (“Daily” and “Monthly” information can be reset independently.)

**■ Calendar settings**


→P. 158

◆ **AWD display (for AWD vehicles only)**

Displays the drive status of each wheel in 6 steps from 0 to 5.

■ **How to read the display**

- ① Front-left wheel drive status
- ② Front-right wheel drive status
- ③ Rear-left wheel drive status
- ④ Rear-right wheel drive status

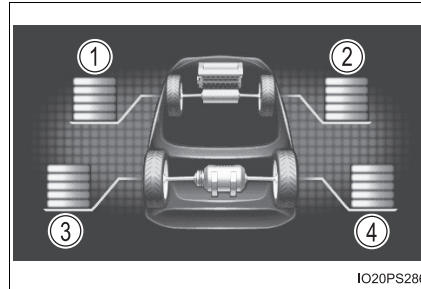

How to read the drive status display:



Drive status	Not being driven	Maximum drive power
Indicators		


■ **About drive status display**

- Indicates the drive status of each system by the number of bars based on the driving conditions and AWD system.
- When the drive power to each wheel is large, the number of bars increases, and when the drive power is small the number of bars decreases.
- When the number of bars to the rear wheels is small, the system determines that stable driving is being performed and the AWD function is suppressed to increase fuel economy.

### Clock setting display

The clock settings can be changed.

Item	Setting result
	Adjusts the clock. (→P. 106)
	Sets the minutes to "00". (→P. 107)

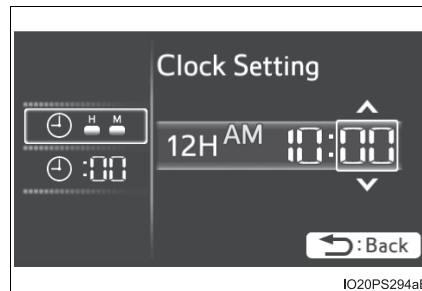





2


Instrument cluster


### Audio system-linked display


The information about the currently selected audio source is displayed.

The illustration is only an example and may differ from the actual screen.



To switch the audio source, press  to display the audio source selection screen, press  or  of the meter control switches and select the desired audio source, and then press .

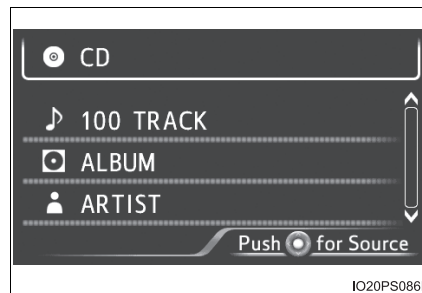To stop audio source selection, press  on the audio source selection screen.




 **Air conditioning system settings screen**

The condition of the air conditioning system settings can be checked on the screen and the air conditioning system settings can be changed using the meter control switches.



On the air conditioning settings screen, press  or  of the meter control switches to switch the contents of the display.

For details regarding the air conditioning system function, refer to P. 458.

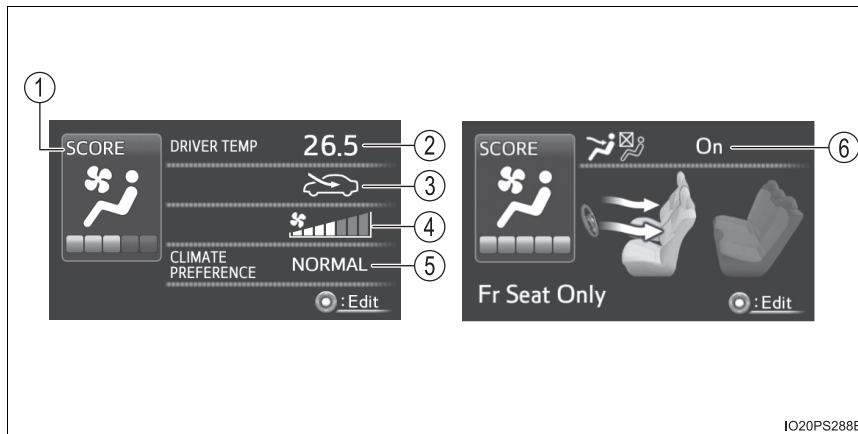■ **Screen display and setting items that can be changed**








IO20FS288E

Item		Settings		
①	Eco score (A/C score)	→P. 150		
②	Temperature setting	Changes according to operation of the meter control switches*1		
③	Outside air and recirculated air modes	 (Outside air mode)	 (Recirculated air mode)	
④	Fan speed	1 to 7		
⑤	"CLIMATE PREFERENCE"	"NORMAL"	"ECO"	"FAST"
⑥	Front seat concentrated air-flow mode (S-FLOW)	"On (Driver Priority)"*2	"On (Fr Seat Only)"*2	"Off (All seat)"

\*1: "LO" is displayed if the temperature is adjusted to the lowest setting, and "HI" is displayed if the temperature is adjusted to the highest setting.

\*2: The selectable modes differ depending on whether a passenger is present. (→P. 461)

#### ■ Adjusting the settings

- 1 Press  to display the cursor.
- 2 Press  or  of the meter control switches to select the desired item to set.
- 3 Press  or  of the meter control switches to select the setting item or setting value.

The air conditioning system cannot be stopped by performing operations on the air conditioning settings screen. Please use the air conditioning switch to stop the air conditioning system.


### ■ Eco score (A/C score)

The current air conditioning system usage status is evaluated in 5 levels to determine whether it is Eco-friendly.

The evaluation changes according to the air conditioning system usage status. When the power switch is turned off, the current total driving score\*<sup>1</sup> and advice\*<sup>2</sup> related to using the air conditioning system are displayed. (→P. 105)

- ① Low score\*<sup>3</sup>
- ② High score

Avoiding excessive use of the air conditioning system and using the air conditioning system at the appropriate setting according to the ambient temperature and number of passengers and with the front seat concentrated airflow mode (S-FLOW) (🌀) and "CLIMATE PREFERENCE" will result in a high evaluation.

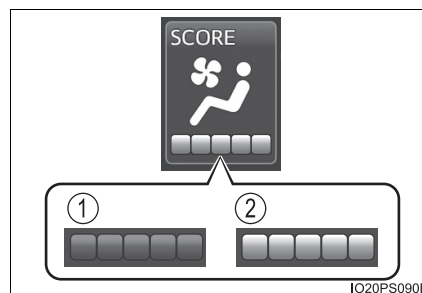


- \*1: The Eco score (A/C score) is not evaluated for approximately 1 minute after the power switch is turned to ON mode.
- \*2: This advice may not be displayed depending on the situation.
- \*3: For items not evaluated with an Eco score (A/C score), the display reads 0.



### ■ Operating switches of the air conditioning system operation panel

- When the air conditioning system switches are operated to change the air conditioning settings while a screen other than the air conditioning system settings screen is displayed on the multi-information display, a pop-up display for the air conditioning settings contents is displayed. However, air conditioning system settings cannot be changed on the pop-up display.

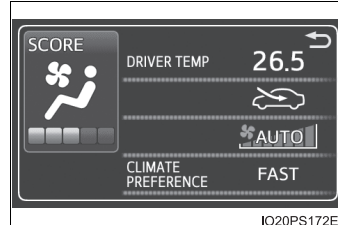

- The pop-up display function that displays when the air conditioning settings are changed using the air conditioning system switches can be turned off in the “Meter Customize” settings. (→P. 156)

### ■ Eco score (A/C score)


- The setting status of the following air conditioning system functions are reflected in the score.
  - Temperature setting
  - Fan speed setting
  - Outside air and recirculated air modes
  - “A/C” button
  - Front seat concentrated airflow mode (S-FLOW)
  - “CLIMATE PREFERENCE”
- The Eco score (A/C score) is evaluated according to the ambient temperature and cabin temperature. Accordingly, even if the same settings are always used for the air conditioning system, the evaluation will change according to such factors as the season and weather.
- When the air conditioning system is not being used or the airflow mode is set to or , the Eco score (A/C score) is not evaluated. (While the air conditioning system is not evaluated, its usage status is not reflected in the total Eco score result.)
- The Eco score (A/C score) is a function that helps select an air conditioning system setting which reduces fuel consumption, not a function that satisfies both comfortability and low fuel consumption.



### Driving assist system information

The operation status of driving support system such as the LTA (Lane Tracing Assist) (if equipped) and dynamic radar cruise control with full-speed range (if equipped) and warning information are displayed.

For details regarding the driving support functions, refer to the page for the corresponding function.

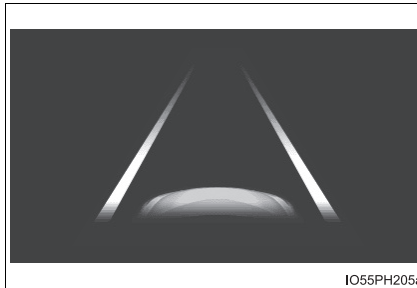



IO55PH205a




### Warning message display

The warning messages that have been displayed since the power switch was turned to ON mode can be checked.

When multiple warning messages have been displayed, the display can be switched by pressing  or  of the meter control switches.

Warning messages that have been currently cleared and some warning messages are not displayed. Also, when there are no warning messages that can be checked, the display indicates that there are no messages.

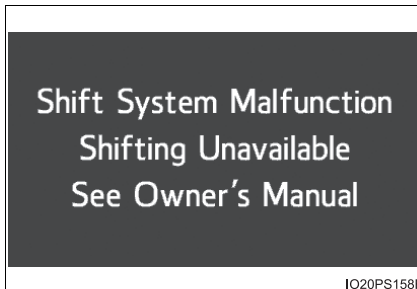

IO20PS158E



## Settings display

The operation contents of the driving support systems and settings related to the combination meter display can be changed.

Driving support systems such as the PCS (Pre-Collision System) (if equipped) and Blind Spot Monitor (if equipped) is turned on and off by simply pressing . Make sure not to cancel the systems accidentally.

### ■ Setting procedure

- 1 Press or of the meter control switches on the steering wheel and select .
- 2 Press or of the meter control switches and select the item to change, and then press .

If the function is turned on and off or the sensitivity, etc. is changed on the setting screen, the setting is changed each time the is pressed.

For functions that allow operation contents, display contents, etc., of a function to be selected, the setting screen is displayed.




- 3 When the setting screen is displayed, select the setting or desired value (time, etc.) with the meter control switches.\*1, 2

For selectable operation contents and setting values, select the desired setting or value, and then press .

To stop the selection, press .



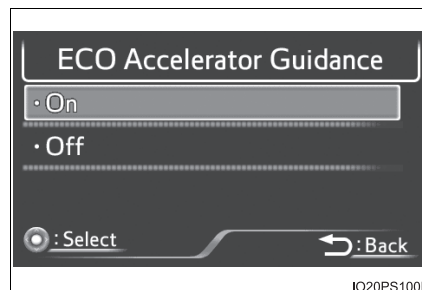








 
 
When the setting check screen is displayed, select proceed or cancel and press .







\*1: Depending on the items, a subsequent setting screen may be displayed after selecting an item.

\*2: For items which set the adjustment level or time, after the item is set, the setting screen remains displayed until is pressed.


■ Settings table

Item	Settings	Setting result
 *1	"On"	Turns the LTA (Lane Tracing Assist) lane centering function on and off. (→P. 307)
	"Off"	
 *1	"On"	Turns the LTA (Lane Tracing Assist) steering assist function on and off. (→P. 307)
	"Off"	
 *1	"High"	Switches the LTA (Lane Tracing Assist) alert sensitivity. (→P. 307)
	"Standard"	
 *1	"On"	Turns the PCS (Pre-Collision System) on and off. (→P. 300)
	"Off"	
 *1	Early	Switches the PCS (Pre-Collision System) warning timing. (→P. 300)
	Middle	
	Late	
 *1	"On"	Turns the Toyota parking assist-sensor on and off. (→P. 381)
	"Off"	
 *1	"On"	Turns the Parking Support Brake function on and off. (→P. 396)
	"Off"	
 *1	"On"	Turns the Blind Spot Monitor on and off. (→P. 357)
	"Off"	
 *1	"On"	Turns the LTA (Lane Tracing Assist) vehicle sway warning on and off. (→P. 307)
	"Off"	
 *1	"High"	Switches the LTA (Lane Tracing Assist) vehicle sway warning sensitivity. (→P. 307)
	"Standard"	
	"Low"	
 *1	Height	Changes the display position and brightness of the head-up display. (→P. 162)
	Brightness	
 *1	"On"	Turns the RSA (Road Sign Assist) on and off. (→P. 323)
	"Off"	
 *1	"On"	Turns the Dynamic Radar Cruise Control with Road Sign Assist on and off. (→P. 341)
	"Off"	

Item	Settings	Setting result
 *1	"km/h"	Switches the speed unit used by the screen display.
	"MPH"	
 *2	Meter brightness	Changes the brightness of instrument cluster light. (→P. 102)
	"Meter Customize" settings: →P. 156	
	"Vehicle Settings" settings: →P. 670	

\*1: If equipped


\*2: Right-hand drive vehicles only

■ “Meter Customize” settings (  )

Item	Settings	Setting result	
“Simple/Split Screen” <sup>*1</sup>	“Simple”	Switches the display mode of the main display. (→P. 123)	
	“Split”		
“Screen OFF” <sup>*2</sup>	“Yes”	Turns the multi-information display off.	
	“No”		
“HV System Indicator” (→P. 132)	“ECO Accelerator Guidance”	“On”	Turns the “ECO Accelerator Guidance” on and off.
		“Off”	
	“EV Indicator Light On/Off”	“On”	Turns the EV indicator on and off.
		“Off”	
“Pop-up Display On/Off”	“Instrument Panel Light” <sup>*3</sup>	“On”	Turns the pop-up display of the selected item on the multi-information display on and off.
		“Off”	
	“Gasoline Price” <sup>*1</sup>	“On”	
		“Off”	
	“Climate settings”	“On”	
		“Off”	
	“Cruise Control Operation Display”	“On”	
		“Off”	
	“HUD Settings” <sup>*1</sup>	“On”	
		“Off”	
	“Driving Mode Select”	“On”	
		“Off”	

Item	Settings	Setting result	
"Language"*4	"English" (English)	Switches the language displayed on the screen.	
	"Français" (French)		
	"Español" (Spanish)		
	"Deutsch" (German)		
	"Italiano" (Italian)		
	"русский" (Russian)		
	"Türkçe" (Turkish)		
"Calendar"	Day/Month/Year	Changes the date used to record fuel consumption data.	
"Eco Savings"*1 (→P. 141)	"Gasoline Price"	Registers data used to calculate and record "Eco Savings".	
	"COMP. Consumption"		
"History Reset"	"Monthly Fuel Consumption"	"Yes"	Deletes data of "Fuel Consumption Record (Monthly)". (→P. 136)
		"No"	
	"Eco Savings (Monthly)"*1	"Yes"	Deletes data of "Eco Savings (Monthly)". (→P. 141)
		"No"	
	"Eco-Diary (Daily)"	"Yes"	Deletes data of "Eco-Diary (Daily)". (→P. 144)
		"No"	
	"Eco-Diary (Monthly)"	"Yes"	Deletes data of "Eco-Diary (Monthly)". (→P. 144)
		"No"	
"Initialization"	"Yes"	Returns the combination meter settings to their initial settings.	
	"No"		

\*1: If equipped

\*2: When the screen is turned off, pressing  displays the setting screen again.

\*3: Left-hand drive vehicles only

\*4: The possible displayed languages differ according to the target region.

■ **Setting items**

- “Meter Customize” and “Vehicle Settings” setting items are not selectable during driving and cannot be operated.  
Also, the settings screen is temporarily canceled in the following situations.
  - A warning message is displayed.
  - The vehicle starts off.
- Settings for functions not equipped to the vehicle are not displayed.
- When a function is turned off, the related settings for that function are not selectable.

■ **Calendar settings**

- Calendar settings contents are linked to the recorded information of “Fuel Consumption Record (Monthly)” (→P. 136) and “Eco-Diary” (→P. 144).  
When the calendar date is changed, each record is processed as follows:

Contents of date change	“Fuel Consumption Record (Monthly)” record	“Eco-Diary” record
Date changed to future date	Not cleared*	Not cleared*
Date changed to before last month	Cleared	All cleared
Date changed to earlier date within current month	Not cleared	Only “Daily” data cleared


\*: Month/date information not recorded is set to “0” or “0.0”.

- When the recorded contents of “Fuel Consumption Record (Monthly)” are changed due to changing the calendar settings, the “Monthly” information of “Eco Savings” (→P. 141) is also changed. (if equipped)



 WARNING**■ Cautions while setting up the display**

As the hybrid system needs to be operating during setting up the display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.


 NOTICE**■ While setting up the display**

To prevent 12-volt battery discharge, ensure that the hybrid system is operating while setting up the display features.

## Head-up display\*

The head-up display can display the current vehicle speed and Hybrid System Indicator in front of the driver. Also, it can display various types of information to assist the driver.

### Operation switches and display contents

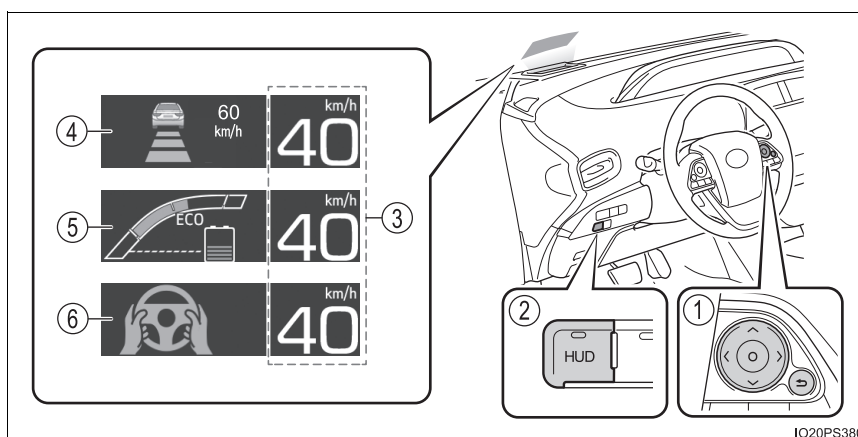

The units used on the display may differ depending on the target region.

① Meter control switches

These switches are used when adjusting the display position and brightness of the head-up display. (→P. 162)

② “HUD” (Head-up display) switch (→P. 161)

③ Vehicle speed display

Right-hand drive vehicles:

The speed unit appears under the vehicle speed display.

④ Cruise control display

Dynamic radar cruise control with full-speed range (if equipped):

Displays the set speed and approach warning display. (→P. 329)

Cruise control (if equipped):

Displays the set speed only. (→P. 346)

\*: If equipped

⑤ Hybrid System Indicator (→P. 132)

⑥ Insert display (→P. 163)

This display inserts information from each driving support system according to driving conditions.

### “HUD” (Head-up display) switch


The “HUD” switch can be used to turn the head-up display on and off, or switch the display contents.

#### ■ When the head-up display is off

Pressing the “HUD” switch turns the head-up display on and starts the display.

The indicator light on the “HUD” switch comes on.

The display position and brightness adjustment screen is automatically displayed on the multi-information display. (→P. 162)

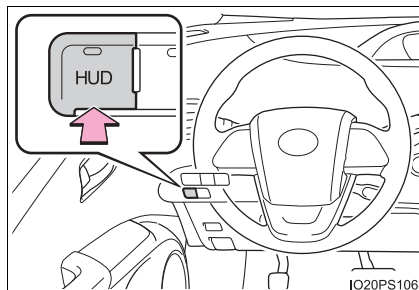

#### ■ When the head-up display is on

Display items can be switched by pressing the “HUD” switch.

① Vehicle speed display and cruise control display\*


② Vehicle speed display and Hybrid System Indicator\*

Refer to P. 132 for details of the Hybrid System Indicator.

③ No display (head-up display is off)

The indicator light on the “HUD” switch turns off.

\*: When the insert display of each driving support system is displayed, the display is temporarily turned off.

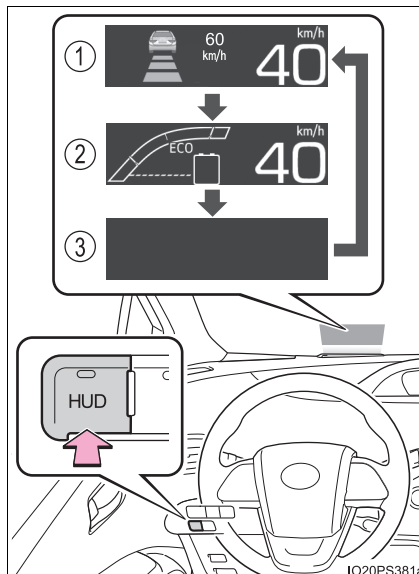



### Display position and brightness adjustment

In order to improve the visibility of the head-up display, the display position and brightness can be adjusted.

- 1 Displaying the adjustment screen on the multi-information display.

When the head-up display is on:



Select **HUD** on the  screen of the multi-information display, and then press . (→P. 153)



When the head-up display is off:


When the “HUD” switch is pressed, the adjustment screen for the head-up display automatically displays.\*1


If an adjustment operation is not performed for approximately 6 seconds\*2, the multi-information display automatically returns to the previous screen.

- 2 Adjusting the display position and brightness by operating the meter control switches.

When  or  is pressed, the position of the head-up display changes.

When  or  is pressed, the brightness of the head-up display changes.

When the  is pressed, the multi-information display returns to the previous screen.

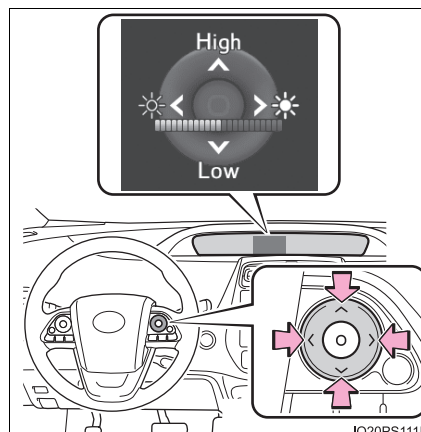

\*1: This function can be turned off. (→P. 156)

\*2: The adjustment screen may suddenly be canceled if it is interrupted by a warning message shown on the display.

## Insert display

### ■ Insert displays of the driving support systems

Insert displays are linked with the operation of the following systems and used to show some of the information shown on the multi-information display on the head-up display.

System	Displayed information
PCS (Pre-Collision System)* (→P. 296)	Pre-collision warning
LTA (Lane Tracing Assist)* (→P. 307)	Lane departure alert function display
	Hands off steering wheel warning
	Vehicle sway warning function display
Dynamic radar cruise control with full-speed range* (→P. 329)	Approach warning display
RSA (Road Sign Assist)* (→P. 323)	Road signs, supplemental mark, etc.
Parking Support Brake function* (→P. 394)	Operation display (symbol display)

\*: If equipped


### ■ Master warning light insert display

When the master warning light (→P. 584) is illuminated or flashing, an insert display is shown on the head-up display to inform the driver.

When the master warning light is illuminated or flashing, check the message displayed on the multi-information display and perform the corresponding troubleshooting procedure. (→P. 589)

Right-hand drive vehicles:

The master warning light display appears under the vehicle speed display.

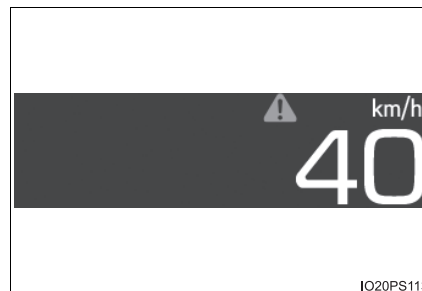

**■ Enabling/disabling of the head-up display**

When the head-up display is turned off with the “HUD” switch, it is not displayed until the “HUD” switch is used to turn the head-up display on again. (Operation of the head-up display is not linked with the power switch.)

**■ Display brightness**

- The brightness of the head-up display is automatically adjusted according to the operation status of the headlights (on/off) and the brightness of the surroundings.
- When the brightness of the head-up display is adjusted to a certain level or higher, the display automatically dims when the vehicle is stopped. Once the vehicle starts off and the vehicle speed reaches approximately 5 km/h (3.1 mph) or more, the display automatically returns to its previous brightness.

**■ Vehicle speed display**

In extremely cold environments, the display of the speedometer and the vehicle speed of the head-up display may slightly differ.

**■ Head-up display**


The head-up display may seem dark and hard to see when viewed through sunglasses, especially polarized sunglasses.

**■ When the 12-volt battery is disconnected**


The customize settings of the head-up display will be reset.

**⚠ WARNING****■ Before using the head-up display**

- Check that the position and brightness of the head-up display image does not interfere with safe driving. Incorrect adjustment of the image’s position or brightness may obstruct the driver’s view and lead to an accident, resulting in death or serious injury.
- Do not continuously look at the head-up display while driving as you may fail to see pedestrians, objects on the road, etc. ahead of the vehicle.

 NOTICE**■ To prevent damage to components**

- Do not place any drinks near the head-up display projector. If the projector gets wet, electrical malfunctions may result.
- Do not place anything on or put stickers onto the head-up display projector. Doing so could interrupt head-up display indications.
- Do not touch the inside of the head-up display projector or thrust sharp edges or the like into the projector. Doing so could cause mechanical malfunctions.

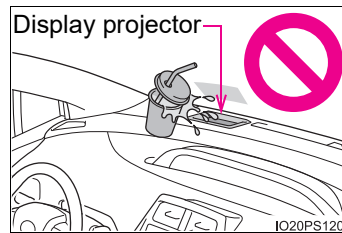

## Energy monitor/consumption screen


The state of the hybrid system can be viewed on the navigation or multimedia system screen.

The energy monitor and fuel consumption screen can also be displayed on the multi-information display and home screen of the navigation or multimedia system screen.

For information regarding the multi-information display, refer to P. 127.

### System components

- ① Navigation or multimedia system screen
- ② "MENU" button

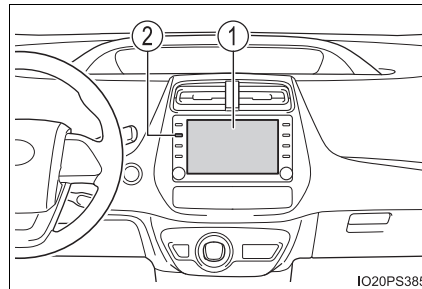

### Energy monitor

The energy monitor can be used to check the vehicle drive status, hybrid system operation status and energy regeneration status.

#### ■ Display procedure

- 1 Press the "MENU" button.
- 2 Select "Info" on the "Menu" screen.

If a screen other than "Energy Monitor" is displayed, select "Energy".



### ■ Reading the display

The arrows will appear in accordance with the energy flow. When there is no energy flow, arrows will not be displayed.

The color of the arrows will change as follows.


Green: When the hybrid battery (traction battery) is regenerated or charged.

Yellow: When the hybrid battery (traction battery) is in use.

Red: When the gasoline engine is in use.

#### ► Navigation or multimedia system screen


- ① Gasoline engine
- ② Front electric motor (traction motor)
- ③ Rear electric motor (traction motor) (AWD models)
- ④ Hybrid battery (traction battery)
- ⑤ Front tires
- ⑥ Rear tires

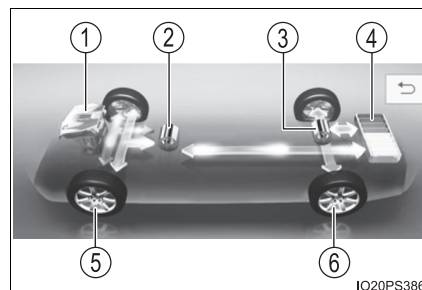

The image shows all the arrows as an example. The actual display will vary depending on conditions.

#### ► Navigation or multimedia system screen (Home screen)

- ① Gasoline engine
- ② Hybrid battery (traction battery)
- ③ Tires

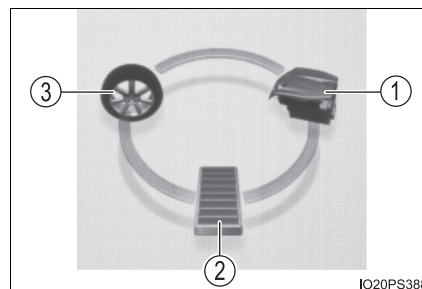


The image shows all the arrows as an example. The actual display will vary depending on conditions.

■ **Hybrid battery (traction battery) status**

The display changes in 8 levels according to the remaining charge amount of the hybrid battery (traction battery).

- ① Low
- ② High

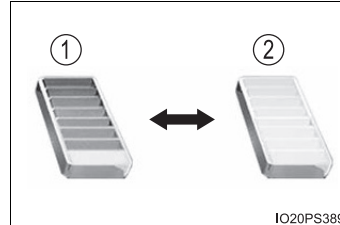

■ **Remaining charge amount warning of hybrid battery (traction battery)**

- The buzzer sounds intermittently when the hybrid battery (traction battery) remains without charging while the shift position is in N, or the remaining charge amount drops below a certain level. If the remaining charge amount drops further, the buzzer sounds continuously.
- When a warning message is shown on the multi-information display and the buzzer sounds, follow the instructions displayed on the screen to perform troubleshooting.

## Consumption screen


### ■ Display procedure

- 1 Press the “MENU” button.
- 2 Select “Info” on the “Menu” screen.

### ■ Trip information

If a screen other than “Trip information” is displayed, select “Trip information”.

- 1 Fuel consumption in the past 15 minutes
- 2 Regenerated energy in the past 15 minutes  
One **E** symbol indicates 30 Wh.  
Up to 5 symbols are shown.
- 3 Current fuel consumption
- 4 Resetting the consumption data
- 5 Average vehicle speed since the hybrid system was started
- 6 Elapsed time since the hybrid system was started
- 7 Cruising range

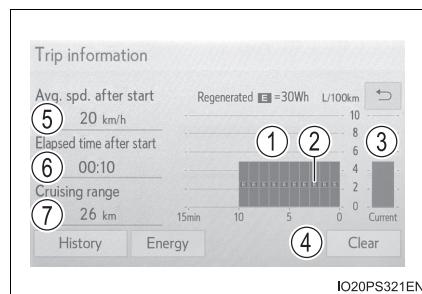

2

Instrument cluster

Average fuel consumption for the past 15 minutes is divided by color into past averages and averages attained since the power switch was last turned to ON mode.


Use the displayed average fuel consumption as a reference.

The image is an example only, and may vary slightly from actual conditions.

■ **History**

If a screen other than “History” is displayed, select “History”.

- ① Best recorded fuel consumption
- ② Latest fuel consumption
- ③ Previous fuel consumption record
  - Vehicles without navigation function:  
Displays the daily average fuel consumption. (Instead of the date, “Trip 1” through “Trip 5” will be displayed.)
  - Vehicles with navigation function:  
Displays the daily average fuel consumption.
- ④ Updating the latest fuel consumption data
- ⑤ Resetting the history data

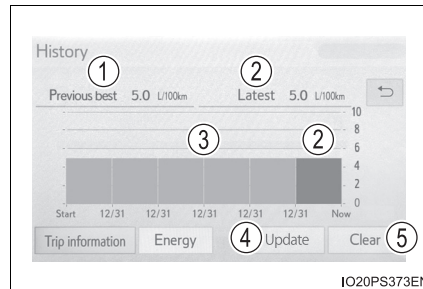

The average fuel consumption history is divided by color into past averages and the average fuel consumption since the last updated. Use the displayed average fuel consumption as a reference. The image is an example only, and may vary slightly from actual conditions.

■ **Updating the history data**

Update the latest fuel consumption by selecting “Update” to measure the current fuel consumption again.

■ **Resetting the data**

The fuel consumption data can be deleted by selecting “Clear”.

■ **Cruising range**

Displays the estimated maximum distance that can be driven with the quantity of fuel remaining.

This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.

■ **Home screen**

The average fuel consumption and distance to empty can be displayed on the home screen of the navigation or multimedia system screen.

For details of the home screen, refer to the “Navigation and multimedia system Owner’s manual”.

**Operation of  
each component****3**


- 3-1. Key information**
  - Keys..... 172
- 3-2. Opening, closing and locking the doors**
  - Side doors..... 177
  - Back door..... 182
  - Smart entry & start system ..... 187
- 3-3. Adjusting the seats**
  - Front seats..... 194
  - Rear seats ..... 196
  - Head restraints ..... 199
- 3-4. Adjusting the steering wheel and mirrors**
  - Steering wheel..... 203
  - Inside rear view mirror ..... 205
  - Outside rear view mirrors ..... 207
- 3-5. Opening and closing the windows and moon roof**
  - Power windows..... 210
  - Moon roof..... 215

## Keys

### The keys


The following keys are provided with the vehicle.

- ① Electronic keys
  - Operating the smart entry & start system (→P. 187)
  - Operating the wireless remote control function
- ② Mechanical keys
- ③ Key number plate

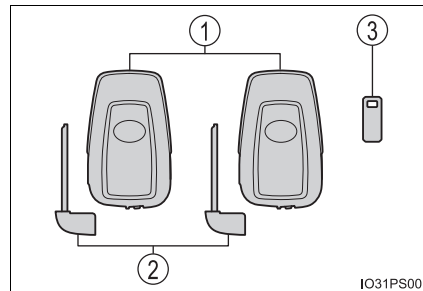

### Wireless remote control

- ① Locks all the doors (→P. 177)
- ② Closes the side windows and moon roof (if equipped)\* (→P. 177)
- ③ Unlocks all the doors (→P. 177)
- ④ Opens the side windows and moon roof (if equipped)\* (→P. 177)

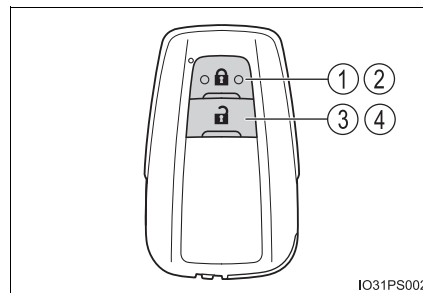


\*: These settings must be customized at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

### Using the mechanical key

To take out the mechanical key, slide the release lever and take the key out.

The mechanical key can only be inserted in one direction, as the key only has grooves on one side. If the key cannot be inserted in a lock cylinder, turn it over and re-attempt to insert it.

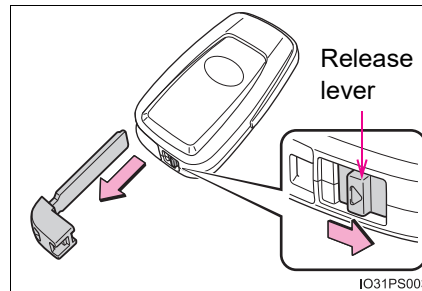

After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key. (→P. 636)

#### ■ If you lose your mechanical keys

New genuine mechanical keys can be made by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer using another mechanical key and the key number stamped on your key number plate. Keep the plate in a safe place such as your wallet, not in the vehicle.

#### ■ When riding in an aircraft

When bringing an electronic key onto an aircraft, make sure you do not press any buttons on the electronic key while inside the aircraft cabin. If you are carrying an electronic key in your bag etc., ensure that the buttons are not likely to be pressed accidentally. Pressing a button may cause the electronic key to emit radio waves that could interfere with the operation of the aircraft.

■ **Electronic key battery depletion**

- The standard battery life is 1 to 2 years.
- If the battery becomes low, an alarm will sound in the cabin and a message will be displayed on the multi-information display when the hybrid system stops.
- As the electronic key always receives radio waves, the battery will become depleted even if the electronic key is not used. The following symptoms indicate that the electronic key battery may be depleted. Replace the battery when necessary. (→P. 554)
  - The smart entry & start system or the wireless remote control does not operate.
  - The detection area becomes smaller.
  - The LED indicator on the key surface does not turn on.You can replace the battery by yourself (→P. 554). However, as there is a danger that the electronic key may be damaged, it is recommended that replacement is carried out by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- To avoid serious deterioration, do not leave the electronic key within 1 m (3 ft.) of the following electrical appliances that produce a magnetic field:
  - TVs
  - Personal computers
  - Cellular phones, cordless phones and battery chargers
  - Table lamps
  - Induction cookers



**■ If a message regarding the state of the electronic key or power switch mode, etc. is shown**

To prevent trapping the electronic key inside the vehicle, leaving the vehicle without turning off the power switch or other passengers from unintentionally taking the key out of the vehicle, etc., a message that prompts the user to confirm the state of the electronic key or power switch mode may be shown on the multi-information display. In those cases, follow the instructions on the display immediately.

**■ If “Key Battery Low Replace Key Battery” is displayed on the multi-information display**

The electronic key has a low battery. Replace the electronic key battery.  
(→P. 554)

**■ Replacing the battery**

→P. 554

**■ Confirmation of the registered key number**

The number of keys already registered to the vehicle can be confirmed. Ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**■ If “A New Key has been Registered Contact Your Dealer for Details” is displayed on the multi-information display**

This message will be displayed each time the driver’s door is opened when the doors are unlocked from the outside for approximately 10 days after a new electronic key has been registered.

If this message is displayed but you have not had a new electronic key registered, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer to check if an unknown electronic key (other than those in your possession) has been registered.

**■ If a wrong key is used**

The key cylinder rotates freely to isolate inside mechanism.



## NOTICE

**■ To prevent key damage**

- Do not drop the keys, subject them to strong shocks or bend them.
- Do not expose the keys to high temperatures for long periods of time.
- Do not get the keys wet or wash them in an ultrasonic washer etc.
- Do not attach metallic or magnetic materials to the keys or place the keys close to such materials.
- Do not disassemble the keys.
- Do not attach a sticker or anything else to the surface of the electronic key.
- Do not place the keys near objects that produce magnetic fields, such as TVs, audio systems and induction cookers.
- Do not place the keys near medical electrical equipment such as low-frequency therapy equipment or microwave therapy equipment, and do not receive medical attention with the keys on your person.

**■ Carrying the electronic key on your person**

Carry the electronic key 10 cm (3.9 in.) or more away from electric appliances that are turned on. Radio waves emitted from electric appliances within 10 cm (3.9 in.) of the electronic key may interfere with the key, causing the key to not function properly.

**■ In case of a smart entry & start system malfunction or other key-related problems**

Take your vehicle with all the electronic keys provided with your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**■ When an electronic key is lost**

If the electronic key remains lost, the risk of vehicle theft increases significantly. Visit any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately with all remaining electronic keys that were provided with your vehicle.

## Side doors

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switches.

### Unlocking and locking the doors from the outside


#### ◆ Smart entry & start system

Carry the electronic key to enable this function.

- ① Grip the driver's door handle or front passenger's door handle with the sensor (if equipped) to unlock all the doors.

Make sure to touch the sensor on the back of the handle.

The doors cannot be unlocked for 3 seconds after the doors are locked.

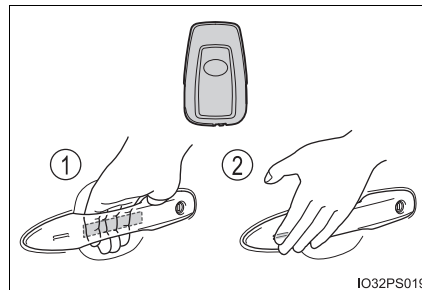

- ② Touch the lock sensor (the indentation on the surface of the front door handle) to lock the doors.

Check that the door is securely locked.

#### ◆ Wireless remote control


- ① Locks all the doors

Check that the door is securely locked.

Press and hold to close the side windows and moon roof (if equipped).\*

- ② Unlocks all the doors

Press and hold to open the side windows and moon roof (if equipped).\*

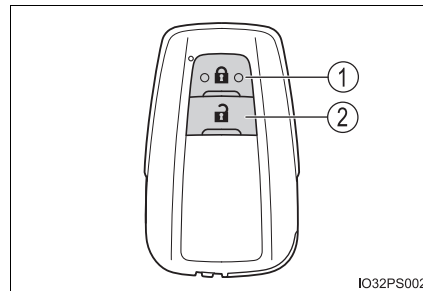

\*: These settings must be customized at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Operation signals**

The emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: Once; Unlocked: Twice)


■ **Security feature**

If a door is not opened within approximately 30 seconds after the vehicle is unlocked, the security feature automatically locks the vehicle again.

■ **When the door cannot be locked by the lock sensor on the surface of the door handle**

When the door cannot be locked even if the lock sensor on the surface of the door handle is touched by a finger, touch the lock sensor with the palm.

When gloves are being worn, remove the gloves.

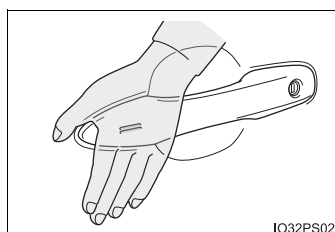

■ **Door lock buzzer**

If an attempt to lock the doors is made when a door is not fully closed, a buzzer sounds continuously for 5 seconds. Fully close the door to stop the buzzer, and lock the vehicle once more.

■ **Setting the alarm (if equipped)**

Locking the doors will set the alarm system. (→P. 93)


■ **If the smart entry & start system or the wireless remote control does not operate properly**

- Use the mechanical key to lock and unlock the doors. (→P. 636)
- Replace the key battery with a new one if it is depleted. (→P. 554)

### Locking and unlocking the doors from the inside

#### ◆ Door lock switches


- ① Locks all the doors
- ② Unlocks all the doors

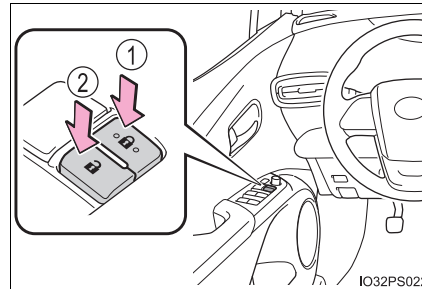

#### ◆ Inside lock buttons

- ① Locks the door
- ② Unlocks the door

The driver's door and front passenger's door (for some models only) can be opened by pulling the inside handle even if the lock buttons are in the lock position.

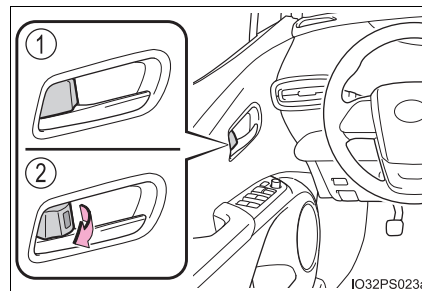

### Locking the front doors from the outside without a key

- 1 Move the inside lock button to the lock position.
- 2 Close the door while pulling the door handle.

The door cannot be locked if the power switch is in ACCESSORY or ON mode, or the electronic key is left inside the vehicle.

The key may not be detected correctly and the door may be locked.

### Rear door child-protector lock

The door cannot be opened from inside the vehicle when the lock is set.

- ① Unlock
- ② Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.



### ■ Using the mechanical key

The doors can also be locked and unlocked with the mechanical key. (→P. 636)

### ■ Open door warning buzzer

If the vehicle speed reaches 5 km/h (3 mph), the master warning light flashes and a buzzer sounds to indicate that the door(s) is not fully closed. The open door(s) is displayed on the multi-information display.

### ■ Conditions affecting the operation of the smart entry & start system or wireless remote control

→P. 190

### ■ Rear seat reminder function

- In order to remind you not to forget luggage, etc. in the rear seat, when the power switch is turned off after any of the following conditions are met, a buzzer will sound and a message will be displayed on the multi-information display for approximately 6 seconds.

- The hybrid system is started within 10 minutes after opening and closing a rear door.
- A rear door has been opened and closed after the hybrid system was started.

However, if a rear door is opened and then closed within approximately 2 seconds, the rear seat reminder function may not operate.

- The rear seat reminder function determines that luggage, etc. has been placed in a rear seat based on opening and closing of a rear door. Therefore, depending on the situation, the rear seat reminder function may not operate and you may still forget luggage, etc. in the rear seat, or it may operate unnecessarily.

- The rear seat reminder function can be enabled/disabled. (→P. 670)

**■ Customization**

Settings (e.g. operation signal) can be changed.  
(Customizable features: →P. 670)

**⚠ WARNING****■ To prevent an accident**

Observe the following precautions while driving the vehicle. Failure to do so may result in a door opening and an occupant could be thrown out of the vehicle, resulting in death or serious injury.

- Ensure that all doors are properly closed.
- Do not pull the inside handle of the doors while driving.  
Be especially careful for the driver's door and front passenger's door (for some models only), as the door may be opened even if the inside lock buttons are in locked position.
- Set the rear door child-protector locks when children are seated in the rear seats.

**■ When opening or closing a door**

Check the surroundings of the vehicle such as whether the vehicle is on an incline, whether there is enough space for a door to open and whether a strong wind is blowing. When opening or closing the door, hold the door handle tightly to prepare for any unpredictable movement.

**■ When using the wireless remote control and operating the power windows or moon roof (if equipped)**

Operate the power window or moon roof after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the side window or moon roof. Also, do not allow children to operate the wireless remote control. It is possible for children and other passengers to get caught in the power window or moon roof.


## Back door

The back door can be unlocked/locked and opened/closed by the following procedures.

### ◆ Smart entry & start system (if equipped)

Carry the electronic key to enable this function.

- ① Locks all the doors  
Check that the door is securely locked.
- ② Unlocks all the doors  
The doors cannot be unlocked for 3 seconds after the doors are locked.

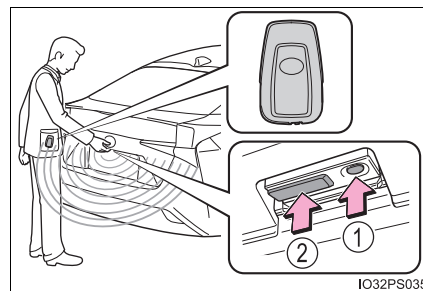

### ◆ Wireless remote control


→P. 177

### ◆ Door lock switches

→P. 179

### Opening the back door from outside the vehicle

Raise the back door while pushing up the back door opener switch.

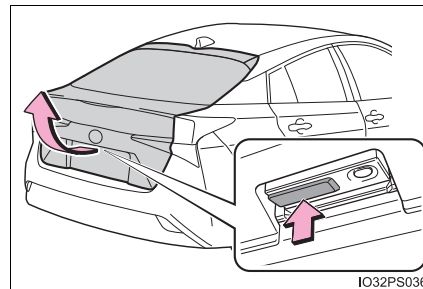




### When closing the back door

Lower the back door using the back door handle, and make sure to push the back door down from the outside to close it.

Be careful not to pull the back door sideways when closing the back door with the handle.

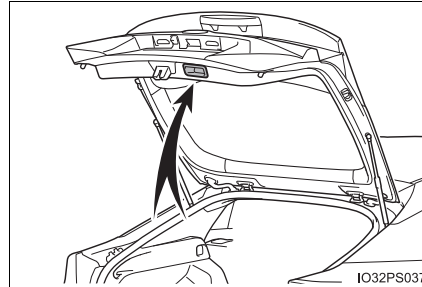


### Luggage compartment light

The luggage compartment light turns on when the back door is opened with the luggage compartment light switch on.

- ① Off
- ② On

When the power switch is turned off, the light will go off automatically after 20 minutes.

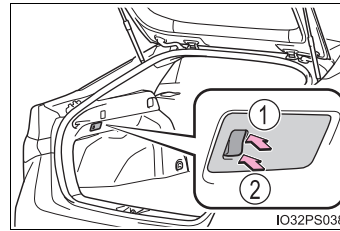


### If the back door opener is inoperative


The back door can be unlocked from the inside.

- 1 Remove the cover.

To prevent damage, cover the tip of the screwdriver with a rag.

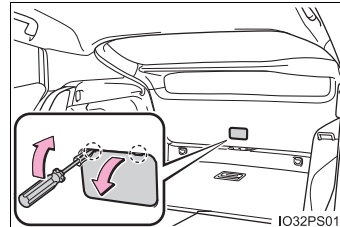

- 2 Move the lever.

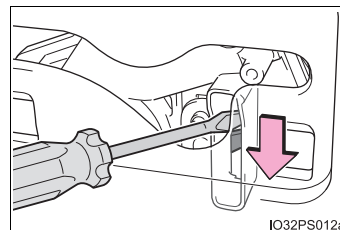

**WARNING**

Observe the following precautions.

Failure to do so may result in death or serious injury.

**■ Before driving**

- Make sure that the back door is fully closed. If the back door is not fully closed, it may open unexpectedly while driving and hit near-by objects or luggage in the luggage compartment may be thrown out, causing an accident.
- Do not allow children to play in the luggage compartment.  
If a child is accidentally locked in the luggage compartment, they could have heat exhaustion or other injuries.
- Do not allow a child to open or close the back door.  
Doing so may cause the back door to open unexpectedly, or cause the child's hands, head, or neck to be caught by the closing back door.

**■ Important points while driving**

- Keep the back door closed while driving.  
If the back door is left open, it may hit near-by objects or luggage in the luggage compartment may be thrown out, causing an accident.
- Never let anyone sit in the luggage compartment. In the event of sudden braking, sudden swerving or a collision, they are susceptible to death or serious injury.

**⚠ WARNING**


■ **Operating the back door**

Observe the following precautions.


Failure to do so may cause parts of the body to be caught, resulting in death or serious injury.

- Remove any heavy loads, such as snow and ice, from the back door before opening it. Failure to do so may cause the back door to suddenly shut again after it is opened.
- When opening or closing the back door, thoroughly check to make sure the surrounding area is safe.
- If anyone is in the vicinity, make sure they are safe and let them know that the back door is about to open or close.
- Use caution when opening or closing the back door in windy weather as it may move abruptly in strong wind.

- The back door may suddenly shut if it is not opened fully. It is more difficult to open or close the back door on an incline than on a level surface, so beware of the back door unexpectedly opening or closing by itself. Make sure that the back door is fully open and secure before using the luggage compartment.

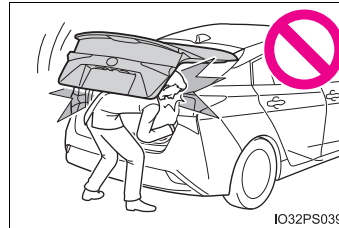

- When closing the back door, take extra care to prevent your fingers etc. from being caught.
- When closing the back door, make sure to press it lightly on its outer surface. If the back door handle is used to fully close the back door, it may result in hands or arms being caught.

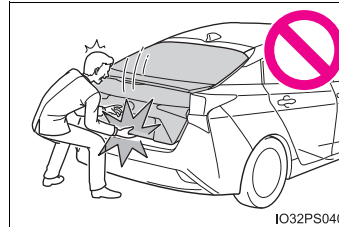

- Do not pull on the back door damper stay to close the back door, and do not hang on the back door damper stay. Doing so may cause hands to be caught or the back door damper stay to break, causing an accident.
- If a bicycle carrier or similar heavy object is attached to the back door, it may suddenly shut again after being opened, causing someone's hands, head or neck to be caught and injured. When installing an accessory part to the back door, using a genuine Toyota part is recommended.

 NOTICE


■ **Back door damper stays**

The back door is equipped with damper stays that hold the back door in place.

Observe the following precautions.

Failure to do so may cause damage to the back door damper stay, resulting in malfunction.

- Do not attach any foreign objects, such as stickers, plastic sheets, or adhesives to the damper stay rod.
- Do not touch the damper stay rod with gloves or other fabric items.
- Do not attach any accessories other than genuine Toyota parts to the back door.
- Do not place your hand on the damper stay or apply lateral forces to it.

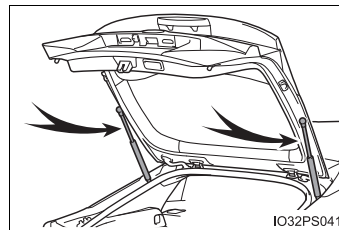

## Smart entry & start system

The following operations can be performed simply by carrying the electronic key on your person, for example in your pocket. The driver should always carry the electronic key.


- Unlocks and locks the doors (→P. 177)
- Unlocks and locks the back door (if equipped) (→P. 182)
- Starts the hybrid system (→P. 244)

### ■ Antenna location

- ① Antenna outside the cabin (driver's side)\*<sup>1</sup>
- ② Antenna outside the cabin (front passenger's side)\*<sup>1, 2</sup>
- ③ Antennas inside the cabin
- ④ Antenna outside the luggage compartment\*<sup>2</sup>


\*1: The illustration is for left-hand drive vehicles. The antenna locations are reversed for right-hand drive vehicles.

\*2: If equipped

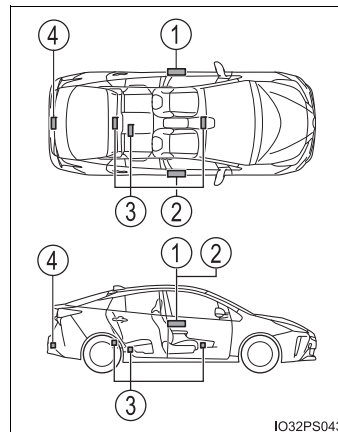

■ **Effective range (areas within which the electronic key is detected)**

- When locking or unlocking the doors  
 The system can be operated when the electronic key is within about 0.7 m (2.3 ft.) of driver's door handle, front passenger's door handle\* and back door opener switch\*. (Only the doors detecting the key can be operated.)

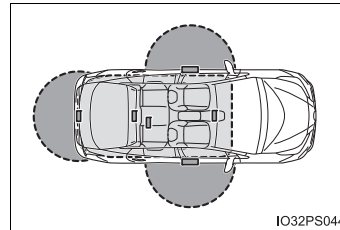

IO32PS044

\*: If equipped

- When starting the hybrid system or changing power switch modes  
 The system can be operated when the electronic key is inside the vehicle.

■ **Alarms and warning messages**

An alarm sounds and warning message displays shown on the multi-information display are used to protect against unexpected accidents or theft of the vehicle resulting from erroneous operation. When a warning message is displayed, take appropriate measures based on the displayed message.

When only an alarm sounds, circumstances and correction procedures are as follows.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 5 seconds	An attempt was made to lock the vehicle while a door was open.	Close all of the doors and lock the doors again.
Interior alarm pings repeatedly	The power switch was turned to ACCESSORY mode while the driver's door was open (The driver's door was opened when the power switch was in ACCESSORY mode).	Turn the power switch off and close the driver's door.

■ **When “Smart Entry & Start System Malfunction See Owner’s Manual” is displayed on the multi-information display**

The system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.



■ **Battery-saving function**

The battery-saving function will be activated in order to prevent the electronic key battery and the 12-volt battery from being discharged while the vehicle is not in operation for a long time.


- In the following situations, the smart entry & start system may take some time to unlock the doors.
  - The electronic key has been left in an area of approximately 2 m (6 ft.) of the outside of the vehicle for 10 minutes or longer.
  - The smart entry & start system has not been used for 5 days or longer.
- If the smart entry & start system has not been used for 14 days or longer, the doors cannot be unlocked at any doors except the driver’s door. In this case, take hold of the driver’s door handle, or use the wireless remote control or the mechanical key, to unlock the doors.

■ **Electronic Key Battery-Saving Function**

When battery-saving mode is set, battery depletion is minimized by stopping the electronic key from receiving radio waves.

Press  twice while pressing and holding . Confirm that the electronic key indicator flashes 4 times.

While the battery-saving mode is set, the smart entry & start system cannot be used. To cancel the function, press any of the electronic key buttons.

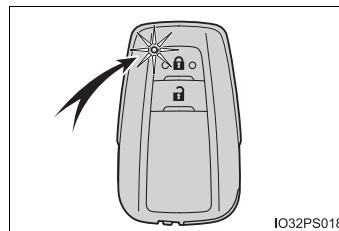

**■ Conditions affecting operation**

The smart entry & start system, wireless remote control and immobilizer system use weak radio waves. In the following situations, the communication between the electronic key and the vehicle may be affected, preventing the smart entry & start system, wireless remote control and immobilizer system from operating properly. (Ways of coping: →P. 636)

- When the electronic key battery is depleted
- Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When the electronic key is in contact with, or is covered by the following metallic objects
  - Cards to which aluminum foil is attached
  - Cigarette boxes that have aluminum foil inside
  - Metallic wallets or bags
  - Coins
  - Hand warmers made of metal
  - Media such as CDs and DVDs
- When other wireless key (that emit radio waves) is being used nearby
- When carrying the electronic key together with the following devices that emit radio waves
  - Portable radio, cellular phone, cordless phone or other wireless communication devices
  - Another vehicle's electronic key or a wireless key that emits radio waves
  - Personal computers or personal digital assistants (PDAs)
  - Digital audio players
  - Portable game systems
- If window tint with a metallic content or metallic objects are attached to the rear window
- When the electronic key is placed near a battery charger or electronic devices



**■ Note for the entry function**

- Even when the electronic key is within the effective range (detection areas), the system may not operate properly in the following cases:
  - The electronic key is too close to the window or outside door handle, near the ground, or in a high place when the doors are locked or unlocked.
  - The electronic key is on the instrument panel, floor, or in the door pockets or glove box when the hybrid system is started or power switch modes are changed.
- Do not leave the electronic key on top of the instrument panel or near the door pockets when exiting the vehicle. Depending on the radio wave reception conditions, it may be detected by the antenna outside the cabin and the door will become lockable from the outside, possibly trapping the electronic key inside the vehicle.
- As long as the electronic key is within the effective range, the doors may be unlocked or locked by anyone.
- Even if the electronic key is not inside the vehicle, it may be possible to start the hybrid system if the electronic key is near the window.
- The doors may unlock if a large amount of water splashes on the door handle, such as in the rain or in a car wash when the electronic key is within the effective range. (The door will automatically be locked after approximately 30 seconds if the doors are not opened and closed.)
- If the wireless remote control is used to lock the doors when the electronic key is near the vehicle, there is a possibility that the door may not be unlocked by the entry function. (Use the wireless remote control to unlock the doors.)
- Touching the door lock sensor while wearing gloves may delay or prevent lock operation. Remove the gloves and touch the lock sensor again.
- On some models: When the lock operation is performed using the lock sensor, recognition signals will be shown up to two consecutive times. After this, no recognition signals will be given.
- If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In this case, follow the following correction procedures to wash the vehicle.
  - Place the electronic key in a location 2 m (6 ft.) or more away from the vehicle. (Take care to ensure that the key is not stolen.)
  - Set electronic key to battery-saving mode to disable the smart entry & start system. (→P. 189)

- If the electronic key is inside the vehicle and a door handle becomes wet during a car wash, a message may be shown on the multi-information display and a buzzer will sound outside the vehicle. To turn off the alarm, lock all the doors.
- The lock sensor may not work properly if it comes into contact with ice, snow, mud, etc. Clean the lock sensor and attempt to operate it again.
- A sudden approach to the effective range of door handle may prevent the doors from being unlocked. In this case, return the door handle to the original position and check that the doors unlock before pulling the door handle again.
- If there is another electronic key in the detection area, it may take slightly longer to unlock the doors after the door handle is gripped.

■ **When the vehicle is not driven for extended periods**

- To prevent theft of the vehicle, do not leave the electronic key within 2 m (6 ft.) of the vehicle.
- The smart entry & start system can be deactivated in advance. (→P. 670)

■ **To operate the system properly**

Make sure to carry the electronic key when operating the system. Do not get the electronic key too close to the vehicle when operating the system from the outside of the vehicle.

Depending on the position and holding condition of the electronic key, the key may not be detected correctly and the system may not operate properly. (The alarm may go off accidentally, or the door lock prevention may not operate.)

■ **If the smart entry & start system does not operate properly**

- Locking and unlocking the doors: Use the mechanical key. (→P. 636)
- Starting the hybrid system: →P. 637

■ **Customization**

Settings (e.g. smart entry & start system) can be changed.  
(Customizable features: →P. 670)

■ **If the smart entry & start system has been deactivated in a customized setting**

- Unlocking and locking the doors:  
Use the wireless remote control or mechanical key. (→P. 177, 636)
- Starting the hybrid system and changing power switch modes: →P. 637
- Stopping the hybrid system: →P. 245

 WARNING**■ Caution regarding interference with electronic devices**

- People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should keep away from the smart entry & start system antennas. (→P. 187)

The radio waves may affect the operation of such devices. If necessary, the entry function can be disabled. Ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details, such as the frequency of radio waves and timing of the emitted radio waves. Then, consult your doctor to see if you should disable the entry function.

- Users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves.


Radio waves could have unexpected effects on the operation of such medical devices.

Ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details on disabling the entry function.

## Front seats

### Adjustment procedure

- ① Seat position adjustment lever
- ② Seatback angle adjustment lever
- ③ Vertical height adjustment lever (for driver's side)
- ④ Lumbar support adjustment switch (for driver's side)

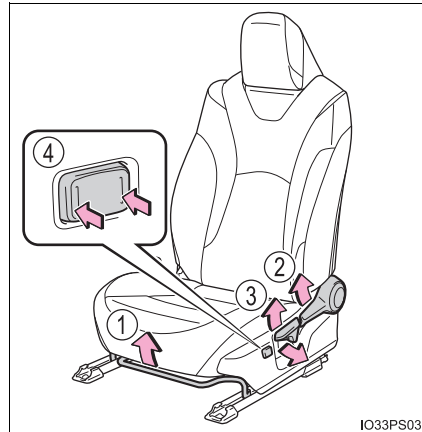

### ■ When adjusting the seat

Take care when adjusting the seat so that the head restraint does not touch the ceiling.

 **WARNING****■ When adjusting the seat position**

- Take care when adjusting the seat position to ensure that other passengers are not injured by the moving seat.
- Do not put your hands under the seat or near the moving parts to avoid injury.  
Fingers or hands may become jammed in the seat mechanism.

**■ Seat adjustment**

- To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.  
If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.  
Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.
- After adjusting the seat, make sure that the seat is locked in position.

## Rear seats


The seatbacks can be folded down.

### Before folding down the seatbacks

- 1 Park the vehicle in a safe place.  
Apply the parking brake firmly (→P. 260) and shift the shift position to P. (→P. 254)
- 2 Adjust the position of the front seat and the angle of the seatback. (→P. 194)  
Depending on the position of the front seat, if the seatback is folded backward, it may interfere with the operation of the rear seat.
- 3 Lower the head restraint of the rear seat. (→P. 199)
- 4 Stow the armrest of the rear seat if it is pulled out. (→P. 493)  
This step is not necessary when operating the left side seat only.


### Folding down the seatbacks

Pull the seatback lock release lever and fold the seatback down.

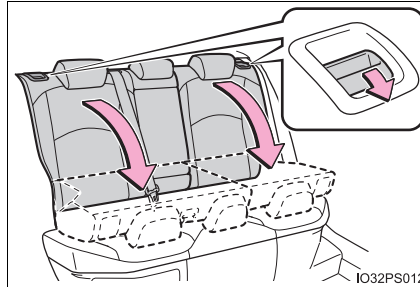

### Returning the rear seatbacks

To avoid trapping the seat belt between the seat and the inside of the vehicle, pass the seat belt inside the seat belt guide and then return the seatback securely to the locked position.

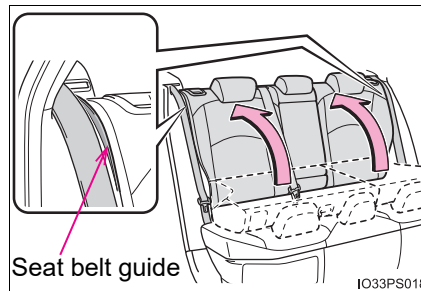

### ⚠ WARNING

#### ■ When folding the seatbacks down


Observe the following precautions. Failure to do so may result in death or serious injury.

- Do not fold the seatbacks down while driving.
- Stop the vehicle on level ground, apply the parking brake firmly and shift the shift position to P.
- Do not allow anyone to sit on a folded seatback or in the luggage compartment while driving.
- Do not allow children to enter the luggage compartment.
- Do not operate the rear seat if it is occupied.
- Be careful not to get feet or hands caught in the moving parts or joints of the seats during operation.
- Do not allow children to operate the seat.

**⚠ WARNING****■ After returning the seatback to the upright position**

Observe the following precautions. Failure to do so may result in death or serious injury.

- Make sure that the seatback is securely locked in position by lightly pushing it back and forth.  
If the seatback is not securely locked, the red marking will be visible on the seatback lock release lever. Make sure that the red marking is not visible.

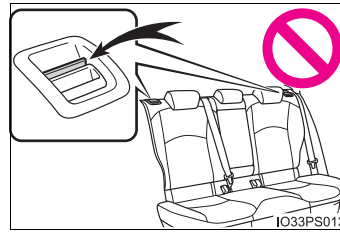

- Check that the seat belts are not twisted or caught in the seatback.




## Head restraints

Head restraints are provided for all seats.

### Front seats


- ① Up  
Pull the head restraints up.
- ② Down  
Push the head restraint down while pressing the lock release button.

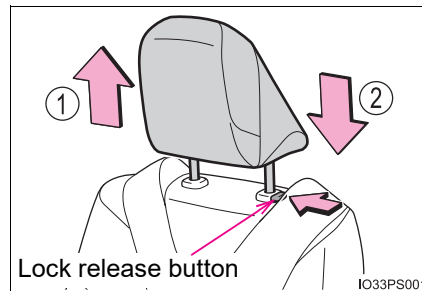

### Rear seats


#### ■ Rear outboard seats

- ① Up  
Pull the head restraints up.
- ② Down  
Push the head restraint down while pressing the lock release button.

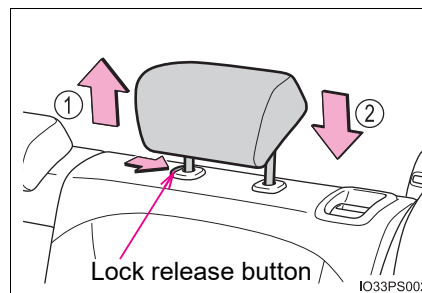

#### ■ Rear center seat


- ① Up  
Pull the head restraints up.
- ② Down  
Push the head restraint down while pressing the lock release button.

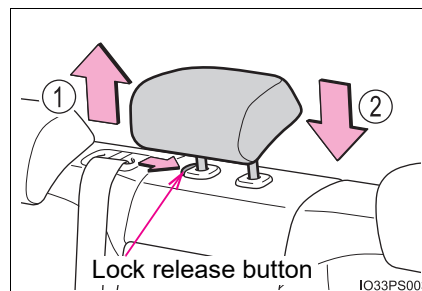

■ **Removing the head restraints**


▶ Front and rear center seats

Pull the head restraint up while pressing the lock release button.

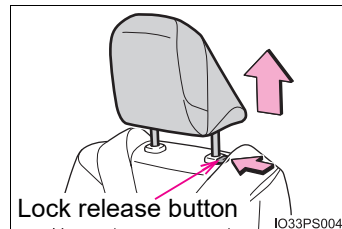


▶ Rear outboard seats

- 1 Pull the seatback lock release lever and fold down the seatback until it reaches the position where the head restraints can be removed.

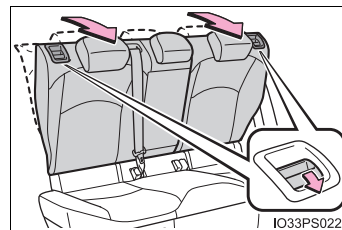

- 2 Pull the head restraint up while pressing the lock release button.

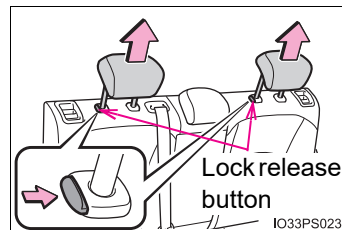


### ■ Installing the head restraints

#### ▶ Front and rear center seats


Align the head restraint with the installation holes and push it down to the lock position.

Press and hold the lock release button when lowering the head restraint.

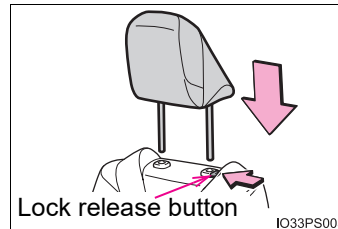


#### ▶ Rear outboard seats

- 1 Pull the seatback lock release lever and fold down the seatback until it reaches the position where the head restraints can be installed.

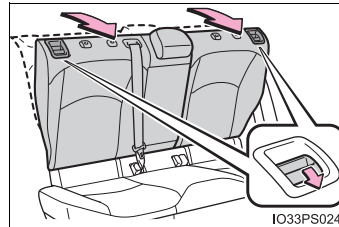


- 2 Align the head restraint with the installation holes and push it down to the lock position.  
Press and hold the lock release button when lowering the head restraint.

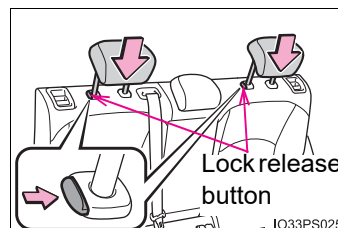

### ■ Adjusting the height of the head restraints (front seats)

Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears.

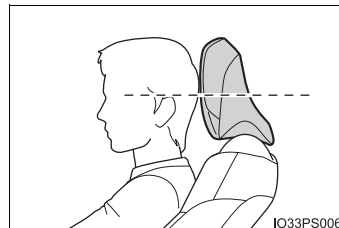

### ■ Adjusting the rear seat head restraint

Always raise the head restraint one level from the stowed position when using.

**WARNING****■ Head restraint precautions**


Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.

- Use the head restraints designed for each respective seat.
- Adjust the head restraints to the correct position at all times.
- After adjusting the head restraints, push down on them and make sure they are locked in position.
- Do not drive with the head restraints removed.

## Steering wheel


### Adjustment procedure

- 1 Hold the steering wheel and push the lever down.

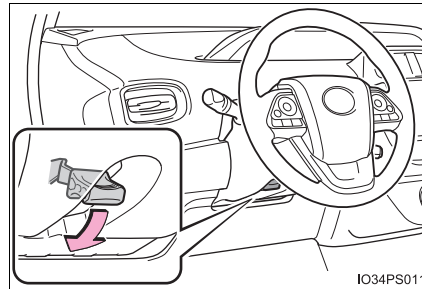


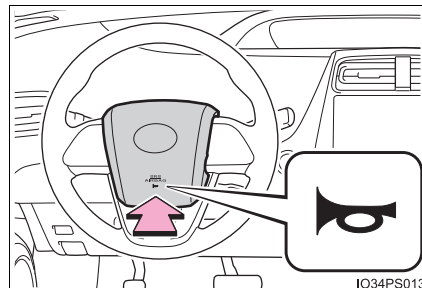
- 2 Adjust to the ideal position by moving the steering wheel horizontally and vertically.

After adjustment, pull the lever up to secure the steering wheel.

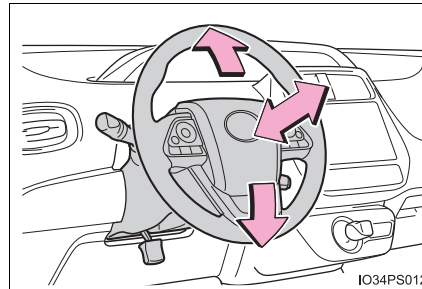

### Horn

To sound the horn, press on or close to the  mark.



**WARNING****■ Caution while driving**

Do not adjust the steering wheel while driving.

Doing so may cause the driver to mishandle the vehicle and cause an accident, resulting in death or serious injury.

**■ After adjusting the steering wheel**

Make sure that the steering wheel is securely locked.

Otherwise, the steering wheel may move suddenly, possibly causing an accident, and resulting in death or serious injury. Also, the horn may not sound if the steering wheel is not securely locked.


## Inside rear view mirror

The rear view mirror's position can be adjusted to enable sufficient confirmation of the rear view.

### Adjusting the height of rear view mirror

The height of the rear view mirror can be adjusted to suit your driving posture.

Adjust the height of the rear view mirror by moving it up and down.

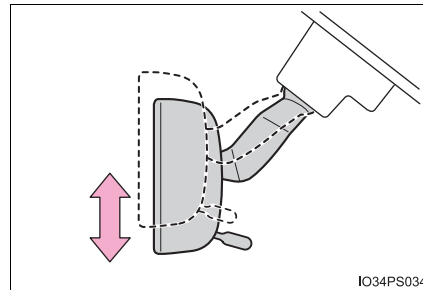


### Anti-glare function

#### ► Manual anti-glare inside rear view mirror

Reflected light from the headlights of vehicles behind can be reduced by operating the lever.

- ① Normal position
- ② Anti-glare position

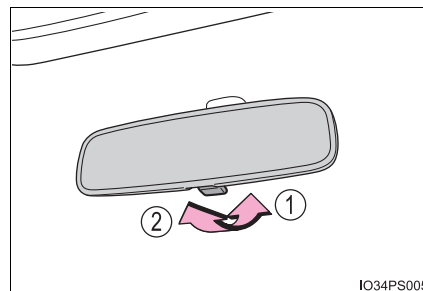

▶ Auto anti-glare inside rear view mirror

Responding to the level of brightness of the headlights of vehicles behind, the reflected light is automatically reduced.


Changing automatic anti-glare function mode

On/off

When the automatic anti-glare function is in ON mode, the indicator illuminates.


The function will set to ON mode each time the power switch is turned to ON mode.

Pressing the button turns the function to OFF mode. (The indicator also turns off.)

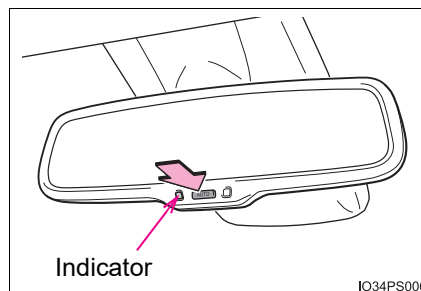

■ To prevent sensor error (vehicles with auto anti-glare inside rear view mirror)

To ensure that the sensors operate properly, do not touch or cover them.

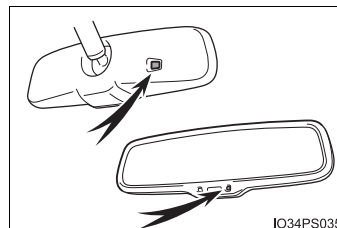

**⚠ WARNING**

Do not adjust the position of the mirror while driving. Doing so may lead to mishandling of the vehicle and cause an accident, resulting in death or serious injury.




## Outside rear view mirrors

### Adjustment procedure


- 1 To select a mirror to adjust, turn the switch.

- ① Left
- ② Right

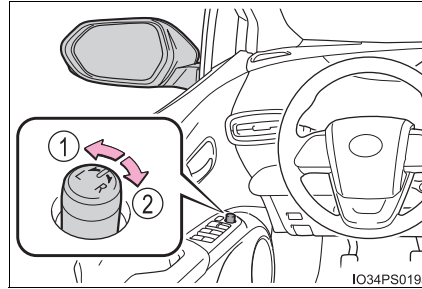

- 2 To adjust the mirror, operate the switch.

- ① Up
- ② Right
- ③ Down
- ④ Left

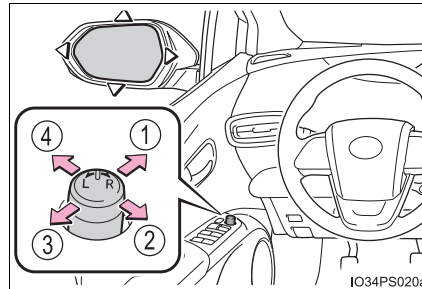


### Folding and extending the mirrors

- ① Folds the mirrors
- ② Extends the mirrors

Putting the outside rear view mirror folding switch in the neutral position sets the mirrors to automatic mode.

Automatic mode allows the folding or extending of the mirrors to be linked to locking/unlocking of the doors.

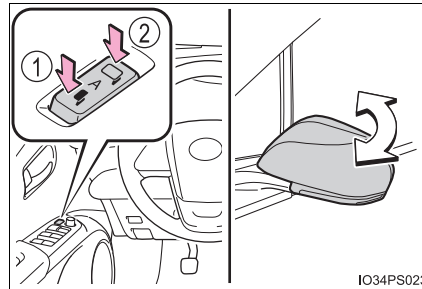

■ **Mirror angle can be adjusted when**

The power switch is in ACCESSORY or ON mode.

■ **When the mirrors are fogged up**

The outside rear view mirrors can be cleared using the mirror defoggers. Turn on the rear window defogger to turn on the outside rear view mirror defoggers. (→P. 463)

■ **Using automatic mode in cold weather**

When automatic mode is used in cold weather, the door mirror could freeze up and automatic stowing and return may not be possible. In this event, remove any ice and snow from the door mirror, then either operate the mirror using manual mode or move the mirror by hand.

■ **Customization**

The automatic mirror folding and extending operation can be changed. (Customizable features: →P. 670)

 **WARNING****■ Important points while driving**

Observe the following precautions while driving.

Failing to do so may result in loss of control of the vehicle and cause an accident, resulting in death or serious injury.

- Do not adjust the mirrors while driving.
- Do not drive with the mirrors folded.
- Both the driver and passenger side mirrors must be extended and properly adjusted before driving.

**■ When a mirror is moving**

To avoid personal injury and mirror malfunction, be careful not to get your hand caught by the moving mirror.

**■ When the mirror defoggers are operating**

Do not touch the rear view mirror surfaces, as they can become very hot and burn you.

## Power windows


### Opening and closing procedures

The power windows can be opened and closed using the switches.

Operating the switch moves the side windows as follows:

- ① Closing
- ② One-touch closing\*
- ③ Opening
- ④ One-touch opening\*

\*: To stop the side window partway, operate the switch in the opposite direction.

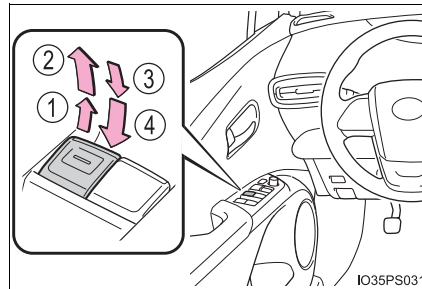


### Window lock switch

Press the switch to lock the passenger windows.

The indicator will come on.

Use this switch to prevent children from accidentally opening or closing a passenger window.

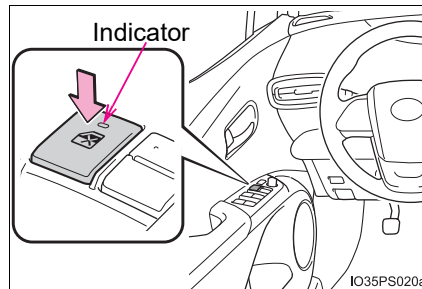

#### ■ The power windows can be operated when

The power switch is in ON mode.

#### ■ Operating the power windows after turning the hybrid system off

The power windows can be operated for approximately 45 seconds even after the power switch is turned to ACCESSORY mode or turned off. They cannot, however, be operated once either front door is opened.

**■ Jam protection function**

If an object becomes jammed between the side window and the window frame while the side window is closing, side window movement is stopped and the side window is opened slightly.

**■ Catch protection function**

If an object becomes caught between the door and side window while the side window is opening, side window movement is stopped.

**■ When the window cannot be opened or closed**

When the jam protection function or catch protection function operates unusually and the side window cannot be opened and closed, perform the following operations with the power window switch of that door.

- Stop the vehicle. With the power switch in ON mode, within 4 seconds of the jam protection function or catch protection function activating, continuously operate the power window switch in the one-touch closing direction or one-touch opening direction so that the side window can be opened and closed.
- If the side window cannot be opened and closed even when performing the above operations, perform the following procedure for function initialization.
  - 1 Turn the power switch to ON mode.
  - 2 Pull and hold the power window switch in the one-touch closing direction and completely close the side window.
  - 3 Release the power window switch for a moment, resume pulling the switch in the one-touch closing direction, and hold it there for approximately 6 seconds or more.
  - 4 Press and hold the power window switch in the one-touch opening direction. After the side window is completely opened, continue holding the switch for an additional 1 second or more.
  - 5 Release the power window switch for a moment, resume pressing the switch in the one-touch opening direction, and hold it there for approximately 4 seconds or more.
  - 6 Pull and hold the power window switch in the one-touch closing direction again. After the side window is completely closed, continue holding the switch for a further 1 second or more.

If you release the switch while the side window is moving, start again from the beginning.

If the side window reverses and cannot be fully closed or opened, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Door lock linked window operation**

- The power windows can be opened and closed using the mechanical key.\* (→P. 636)
- The power windows can be opened and closed using the wireless remote control.\* (→P. 177)

\*: These settings must be customized at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **When the 12-volt battery is disconnected**

The window lock switch is disabled. If necessary, press the window lock switch after reconnecting the 12-volt battery.

■ **Power window open reminder function**

The buzzer sounds and a message is shown on the multi-information display in the instrument cluster when the power switch is turned off and the driver's door is opened with the power windows open.

■ **Customization**

Settings (e.g. linked door lock operation) can be changed.  
(Customizable features: →P. 670)


**⚠ WARNING**

Observe the following precautions.  
Failing to do so may result in death or serious injury.

**■ Closing the windows**

- The driver is responsible for all the power window operations, including the operation for the passengers. In order to prevent accidental operation, especially by a child, do not let a child operate the power windows. It is possible for children and other passengers to have body parts caught in the power window. Also, when riding with a child, it is recommended to use the window lock switch. (→P. 210)

- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a side window is being operated.

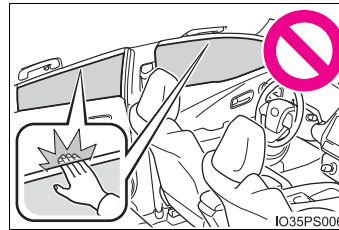

- When using the wireless remote control or mechanical key and operating the power windows, operate the power window after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the side window. Also do not let a child operate side window by the wireless remote control or mechanical key. It is possible for children and other passengers to get caught in the power window.
- When exiting the vehicle, turn the power switch off, carry the key and exit the vehicle along with the child. There may be accidental operation, due to mischief, etc., that may possibly lead to an accident.

**WARNING****■ Jam protection function**

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets jammed just before the side window is fully closed. Be careful not to get any part of your body jammed in the side window.

**■ Catch protection function**

- Never use any part of your body or clothing to intentionally activate the catch protection function.
- The catch protection function may not work if something gets caught just before the side window is fully opened. Be careful not to get any part of your body or clothing caught in the side window.




## Moon roof\*

Use the overhead switches to open and close the moon roof and tilt it up and down.


### Opening and closing

- ① Opens the moon roof\*  
The moon roof stops slightly before the fully open position to reduce wind noise.  
Press the switch again to fully open the moon roof.
- ② Closes the moon roof\*  
\*: Lightly press either end of the moon roof switch to stop the moon roof partway.

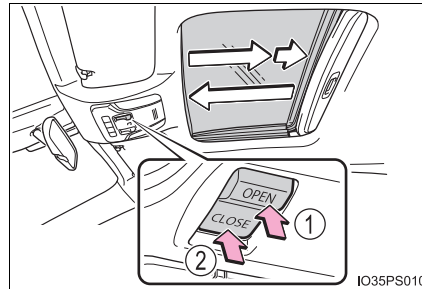

### Tilting up and down

- ① Tilts the moon roof up\*
- ② Tilts the moon roof down\*  
\*: Lightly press either end of the moon roof switch to stop the moon roof partway.

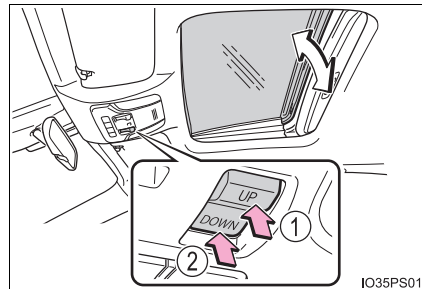

3

Operation of each component

\*: If equipped

■ **The moon roof can be operated when**

The power switch is in ON mode.

■ **Operating the moon roof after turning the hybrid system off**

The moon roof can be operated for approximately 45 seconds even after the power switch is turned to ACCESSORY mode or turned off. It cannot, however, be operated once either front door is opened.

■ **Jam protection function**

If an object is detected between the moon roof and the frame while the moon roof is closing or tilting down, travel is stopped and the moon roof opens slightly.

■ **Sunshade**

The sunshade can be opened and closed manually. However, the sunshade will open automatically to slightly before the fully open position when the moon roof is opened.

■ **Door lock linked moon roof operation**

● The moon roof can be opened and closed using the mechanical key.\*  
(→P. 636)

● The moon roof can be opened and closed using the wireless remote control.\* (→P. 177)

\*: These settings must be customized at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**■ When the moon roof does not close normally**

Perform the following procedure:

- 1 Stop the vehicle.
- 2 Press and hold the "CLOSE" or "UP" switch.\*  
The moon roof will tilt up, stop a little time and tilt down. Then it will open fully and close again, and then stop.
- 3 Check to make sure that the moon roof has completely stopped and then release the switch.

\*: If the switch is released at the incorrect time, the procedure will have to be performed again from the beginning.

If the moon roof does not fully close even after performing the above procedure correctly, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**■ Moon roof open reminder function**

The buzzer sounds and a message is shown on the multi-information display in the instrument cluster when the power switch is turned off and the driver's door is opened with the moon roof open.

**■ Customization**

Settings (e.g. linked door lock operation) can be changed.  
(Customizable features: →P. 670)

**⚠ WARNING**

Observe the following precautions.  
Failing to do so may cause death or serious injury.

**■ Opening the moon roof**


- Do not allow any passengers to put their hands or head outside the vehicle while it is moving.
- Do not sit on top of the moon roof.

**■ Closing the moon roof**

- The driver is responsible for moon roof opening and closing operations. In order to prevent accidental operation, especially by a child, do not let a child operate the moon roof. It is possible for children and other passengers to have body parts caught in the moon roof.

- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when the moon roof is being operated.

- When using the wireless remote control or mechanical key and operating the moon roof, operate the moon roof after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the moon roof. Also, do not let a child operate moon roof by the wireless remote control or mechanical key. It is possible for children and other passengers to get caught in the moon roof.

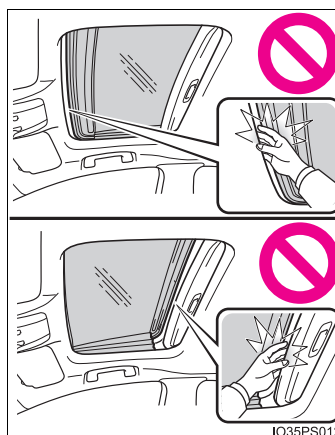

- When exiting the vehicle, turn the power switch off, carry the key and exit the vehicle along with the child. There may be accidental operation, due to mischief, etc., that may possibly lead to an accident.

**■ Jam protection function**

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the moon roof fully closes.

<b>4-1. Before driving</b>		<b>4-5. Using the driving support systems</b>	
Driving the vehicle .....	220	Toyota Safety Sense .....	282
Cargo and luggage .....	231	PCS (Pre-Collision System) .....	296
Trailer towing (2WD models).....	233	LTA (Lane Tracing Assist).....	307
Trailer towing (AWD models).....	243	RSA (Road Sign Assist).....	323
<b>4-2. Driving procedures</b>		Dynamic radar cruise control with full-speed range .....	329
Power (ignition) switch.....	244	Cruise control.....	346
EV drive mode .....	250	Driving mode select switch.....	351
Hybrid transmission .....	253	Speed limiter .....	353
Turn signal lever .....	259	BSM (Blind Spot Monitor).....	356
Parking brake .....	260	• The Blind Spot Monitor function.....	372
<b>4-3. Operating the lights and wipers</b>		• The Rear Crossing Traffic Alert function .....	375
Headlight switch .....	261	Toyota parking assist-sensor .....	381
AHB (Automatic High Beam).....	266	Parking Support Brake function .....	394
Fog light switch .....	270	S-IPA (Simple Intelligent Parking Assist System) .....	405
Windshield wipers and washer .....	271	GPF (Gasoline Particulate Filter) system .....	440
Rear window wiper and washer .....	275	Driving assist systems .....	441
<b>4-4. Refueling</b>		<b>4-6. Driving tips</b>	
Opening the fuel tank cap.....	277	Hybrid vehicle driving tips .....	449
		Winter driving tips .....	452

## Driving the vehicle

The following procedures should be observed to ensure safe driving:

### Starting the hybrid system

→P. 244

### Driving

- 1 With the brake pedal depressed, shift the shift position to D.  
(→P. 253)  
Check that the shift position indicator shows D.
- 2 Release the parking brake. (→P. 260)
- 3 Gradually release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.

### Stopping

- 1 With the shift position in D, depress the brake pedal.
- 2 If necessary, set the parking brake.  
If the vehicle is to be stopped for an extended period of time, shift the shift position to P. (→P. 254)

### Parking the vehicle

- 1 Stop the vehicle completely.
- 2 Set the parking brake. (→P. 260)
- 3 Shift the shift position to P. (→P. 254)  
Check that the shift position indicator shows P.
- 4 Press the power switch to stop the hybrid system.
- 5 Slowly release the brake pedal.
- 6 Lock the door, making sure that you have the electronic key on your person.  
If parking on a hill, block the wheels as needed.

### Starting off on a steep uphill

- 1 Firmly set the parking brake with the brake pedal depressed, and then shift the shift position to D.
- 2 Release the brake pedal and gently depress the accelerator pedal.
- 3 Release the parking brake.

### Sudden start restraint control (Drive-Start Control [DSC])

When the following unusual operation is performed with the accelerator pedal depressed, the hybrid system output may be restrained.

- When the shift position is shifted to R\*.
- When the shift position is shifted from P or R to forward drive shift position such as D\*.

When the system operates, a message appears on the multi-information display. Read the message and follow the instruction.

\*: Depending on the situation, the shift position may not be changed.

#### ■ When starting off on an uphill

The hill-start assist control will activate. (→P. 442)

#### ■ For fuel-efficient driving

Keep in mind that hybrid vehicles are similar to conventional vehicles, and it is necessary to refrain from activities such as sudden acceleration. (→P. 449)

#### ■ Driving in the rain

- Drive carefully when it is raining, because visibility will be reduced, the windows may become fogged-up, and the road will be slippery.
- Drive carefully when it starts to rain, because the road surface will be especially slippery.
- Refrain from high speeds when driving on an expressway in the rain, because there may be a layer of water between the tires and the road surface, preventing the steering and brakes from operating properly.

#### ■ Restraining the hybrid system output (Brake Override System)

- When the accelerator and brake pedals are depressed at the same time, the hybrid system output may be restrained.
- A warning message is displayed on the multi-information display while the system is operating. (→P. 596)

**■ “ECO Accelerator Guidance” (→P. 133)**

It is easier to drive in an Eco-friendly manner by driving while referring to the “ECO Accelerator Guidance” display. Also, by using the “ECO Accelerator Guidance”, it is easier to increase the Eco score evaluation.

**● When starting off:**

While staying within the “ECO Accelerator Guidance” range, gradually depress the accelerator pedal and accelerate to the desired speed. If excessive acceleration is avoided, the “Eco-Start” score will increase.

**● When driving:**

After accelerating to the desired speed, release the accelerator pedal and drive at a stable speed within the “ECO Accelerator Guidance” range. By keeping the vehicle within the “ECO Accelerator Guidance” range, the “Eco-Cruise” score will increase.

**● When stopping:**

When stopping the vehicle, early releasing the accelerator pedal will cause the “Eco-Stop” score to increase.

**■ Drive-Start Control (DSC)**

When the TRC is turned off (→P. 443), sudden start restraint control also does not operate. If your vehicle have trouble escaping from the mud or fresh snow due to sudden start restraint control operation, deactivate TRC (→P. 443) so that the vehicle may become able to escape from the mud or fresh snow.

**■ Breaking in your new Toyota**

To extend the life of the vehicle, observing the following precautions is recommended:

**● For the first 300 km (200 miles):**

Avoid sudden stops.

**● For the first 800 km (500 miles):**

Do not tow a trailer.

**● For the first 1600 km (1000 miles):**

- Do not drive at extremely high speeds.
- Avoid sudden acceleration.
- Do not drive at a constant speed for extended periods.

**■ Operating your vehicle in a foreign country**

Comply with the relevant vehicle registration laws and confirm the availability of the correct fuel. (→P. 657)



 **WARNING**

Observe the following precautions.

Failure to do so may result in death or serious injury.

■ **When starting the vehicle**

Always keep your foot on the brake pedal while stopped with the “READY” indicator is illuminated. This prevents the vehicle from creeping.

■ **When driving the vehicle**

- Do not drive if you are unfamiliar with the location of the brake and accelerator pedals to avoid depressing the wrong pedal.
  - Accidentally depressing the accelerator pedal instead of the brake pedal will result in sudden acceleration that may lead to an accident.
  - When backing up, you may twist your body around, leading to a difficulty in operating the pedals. Make sure to operate the pedals properly.
  - Make sure to keep a correct driving posture even when moving the vehicle only slightly. This allows you to depress the brake and accelerator pedals properly.
  - Depress the brake pedal using your right foot. Depressing the brake pedal using your left foot may delay response in an emergency, resulting in an accident.
- The driver should pay extra attention to pedestrians when the vehicle is powered only by the electric motor (traction motor). As there is no engine noise, the pedestrians may misjudge the vehicle’s movement. Even though the vehicle is equipped with the vehicle proximity notification system, drive with care as pedestrians in the vicinity may still not notice the vehicle if the surrounding area is noisy.
- Do not drive the vehicle over or stop the vehicle near flammable materials such as leaves, paper or rags.

The exhaust system and exhaust gases can be extremely hot. These hot parts may cause a fire if there is any flammable material nearby.
- During normal driving, do not turn off the hybrid system. Turning the hybrid system off while driving will not cause loss of steering or braking control, however, power assist to the steering will be lost. This will make it more difficult to steer smoothly, so you should pull over and stop the vehicle as soon as it is safe to do so. In the event of an emergency, such as if it becomes impossible to stop the vehicle in the normal way: →P. 569

 **WARNING**

Observe the following precautions.

Failure to do so may result in death or serious injury.

■ **When driving the vehicle**

- Use engine braking (shift position B instead of shift position D) to maintain a safe speed when driving down a steep hill.  
Using the brakes continuously may cause the brakes to overheat and lose effectiveness. (→P. 254)
- Do not adjust the positions of the steering wheel, the seat, or the inside or outside rear view mirrors while driving.  
Doing so may result in a loss of vehicle control.
- Always check that all passengers' arms, head or other parts of their body are not outside the vehicle.
- AWD models: Do not drive the vehicle off-road.  
This is not an AWD vehicle designed for off-road driving. Proceed with all due caution if it becomes unavoidable to drive off-road.
- Do not drive across river crossings or through other bodies of water.  
This may cause electric/electronic components to short circuit, damage the hybrid system or cause other serious damage to the vehicle.

■ **When driving on slippery road surfaces**

- Sudden braking, acceleration and steering may cause tire slippage and reduce your ability to control the vehicle.
- Sudden acceleration, engine braking due to shifting, or changes in engine speed could cause the vehicle to skid, resulting in an accident.
- After driving through a puddle, depress the brake pedal to make sure that the brakes are functioning properly. Wet brake pads may prevent the brakes from functioning properly. If the brakes on only one side are wet and not functioning properly, steering control may be affected.

 **WARNING**

Observe the following precautions.  
Failure to do so may result in death or serious injury.

**■ When shifting the shift position**

- Do not let the vehicle roll backward while a forward driving position is selected, or roll forward while the shift position is in R.  
Doing so may result in an accident or damage to the vehicle.
- Do not shift the shift position to P while the vehicle is moving.  
Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift position to R while the vehicle is moving forward.  
Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift position to a driving position while the vehicle is moving backward.  
Doing so can damage the transmission and may result in a loss of vehicle control.
- Changing the shift position to N while the vehicle is moving will disengage the hybrid system. Engine braking is not available with the hybrid system disengaged.
- Be careful not to change the shift position with the accelerator pedal depressed.  
Changing the shift position to any position other than P or N may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury.  
Also, when the shift position is in N, the shift position may not be able to be changed to the intended shift position.  
After changing the shift position, make sure to confirm the current shift position displayed on the shift position indicator inside the meter.

**WARNING**

Observe the following precautions.

Failure to do so may result in death or serious injury.

■ **If you hear a squealing or scraping noise (brake pad wear indicators)**

Have the brake pads checked and replaced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

Rotor damage may result if the pads are not replaced when needed.

It is dangerous to drive the vehicle when the wear limits of the brake pads and/or those of the brake discs are exceeded.

■ **When the vehicle is stopped**

- Do not depress the accelerator pedal unnecessarily.

If the shift position is in any position other than P or N, the vehicle may accelerate suddenly and unexpectedly, causing an accident.

- In order to prevent accidents due to the vehicle rolling away, always keep depressing the brake pedal while stopped with the "READY" indicator is illuminated, and apply the parking brake as necessary.

- If the vehicle is stopped on an incline, in order to prevent accidents caused by the vehicle rolling forward or backward, always depress the brake pedal and securely apply the parking brake as needed.

- Avoid revving or racing the engine.

Running the engine at high speed while the vehicle is stopped may cause the exhaust system to overheat, which could result in a fire if combustible material is nearby.

 **WARNING**

Observe the following precautions.  
Failure to do so may result in death or serious injury.

**■ When the vehicle is parked**

- Do not leave glasses, cigarette lighters, spray cans, or soft drink cans in the vehicle when it is in the sun.  
Doing so may result in the following:
  - Gas may leak from a cigarette lighter or spray can, and may lead to a fire.
  - The temperature inside the vehicle may cause the plastic lenses and plastic material of glasses to deform or crack.
  - Soft drink cans may fracture, causing the contents to spray over the interior of the vehicle, and may also cause a short circuit in the vehicle's electrical components.
- Do not leave cigarette lighters in the vehicle. If a cigarette lighter is in a place such as the glove box or on the floor, it may be lit accidentally when luggage is loaded or the seat is adjusted, causing a fire.
- Do not attach adhesive discs to the windshield or windows. Do not place containers such as air fresheners on the instrument panel or dashboard. Adhesive discs or containers may act as lenses, causing a fire in the vehicle.
- Do not leave a door or window open if the curved glass is coated with a metallized film such as a silver-colored one. Reflected sunlight may cause the glass to act as a lens, causing a fire.
- Always apply the parking brake, shift the shift position to P, stop the hybrid system and lock the vehicle.  
Do not leave the vehicle unattended while the "READY" indicator is illuminated.  
If the vehicle is parked with the shift position in P but the parking brake is not set, the vehicle may start to move, possibly leading to an accident.
- Do not touch the exhaust pipe while the "READY" indicator is illuminated or immediately after turning the hybrid system off.  
Doing so may cause burns.

**WARNING**

Observe the following precautions.

Failure to do so may result in death or serious injury.

**■ When taking a nap in the vehicle**

Always turn the hybrid system off. Otherwise, if you accidentally move the shift lever or depress the accelerator pedal, this could cause an accident or fire due to hybrid system overheating. Additionally, if the vehicle is parked in a poorly ventilated area, exhaust gases may collect and enter the vehicle, leading to death or a serious health hazard.

**■ When braking**

- When the brakes are wet, drive more cautiously.

Braking distance increases when the brakes are wet, and this may cause one side of the vehicle to brake differently than the other side. Also, the parking brake may not securely hold the vehicle.

- If the electronically controlled assist function does not operate, do not follow other vehicles closely and avoid downhill or sharp turns that require braking.

In this case, braking is still possible, but the brake pedal should be depressed more firmly than usual. Also, the braking distance will increase. Have your brakes fixed immediately.

- The brake system consists of 2 or more individual hydraulic systems; if one of the systems fails, the other(s) will still operate. In this case, the brake pedal should be depressed more firmly than usual and the braking distance will increase. Have your brakes fixed immediately.

**■ If the vehicle becomes stuck (AWD models)**

Do not spin the wheels excessively when any of the tires is up in the air, or the vehicle is stuck in sand, mud, etc. This may damage the driveline components or propel the vehicle forward or backward, causing an accident.



## NOTICE

**■ When driving the vehicle**

- Do not depress the accelerator and brake pedals at the same time during driving, as this may restrain the hybrid system output.
- Do not use the accelerator pedal or depress the accelerator and brake pedals at the same time to hold the vehicle on a hill.

**■ When parking the vehicle**

Always set the parking brake, and shift the shift position to P. Failure to do so may cause the vehicle to move or the vehicle may accelerate suddenly if the accelerator pedal is accidentally depressed.

**■ Avoiding damage to vehicle parts**

- Do not turn the steering wheel fully in either direction and hold it there for an extended period of time.  
Doing so may damage the power steering motor.
- When driving over bumps in the road, drive as slowly as possible to avoid damaging the wheels, underside of the vehicle, etc.

**■ If you get a flat tire while driving**

A flat or damaged tire may cause the following situations. Hold the steering wheel firmly and gradually depress the brake pedal to slow down the vehicle.

- It may be difficult to control your vehicle.
- The vehicle will make abnormal sounds or vibrations.
- The vehicle will lean abnormally.

Information on what to do in case of a flat tire: →P. 598, 618



## NOTICE

**■ When encountering flooded roads**

Do not drive on a road that has flooded after heavy rain etc. Doing so may cause the following serious damage to the vehicle:

- Engine stalling
- Short in electrical components
- Engine damage caused by water immersion

In the event that you drive on a flooded road and the vehicle is flooded, be sure to have any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer check the following:

- Brake function
- Changes in quantity and quality of oil and fluid used for the engine, hybrid transmission, etc.
- Lubricant condition for the bearings and suspension joints (where possible), and the function of all joints, bearings, etc.

If the shift control system is damaged by flooding, it may not be possible to shift the shift position to P, or from P to other positions. When the shift position cannot be changed from P to any other position, the front wheels will lock, and you will be unable to tow the vehicle with the front wheels on the ground. In this case, transport the vehicle with both front wheels or all four wheels lifted. (→P. 572)



## Cargo and luggage

Take notice of the following information about storage precautions, cargo capacity and load.

### WARNING

#### ■ Things that must not be carried in the luggage compartment

The following things may cause a fire if loaded in the luggage compartment:

- Receptacles containing gasoline
- Aerosol cans

#### ■ Storage precautions

Observe the following precautions.

Failure to do so may prevent the pedals from being depressed properly, may block the driver's vision, or may result in items hitting the driver or passengers, possibly causing an accident.

- Stow cargo and luggage in the luggage compartment whenever possible.
- Do not stack cargo and luggage in the luggage compartment higher than the seatbacks.
- When you fold down the rear seats, long items should not be placed directly behind the front seats.
- Never allow anyone to ride in the luggage compartment. It is not designed for passengers. They should ride in their seats with their seat belts properly fastened.
- Do not place cargo or luggage in or on the following locations.
  - At the feet of the driver
  - On the front passenger or rear seats (when stacking items)
  - On the luggage cover
  - On the instrument panel
  - On the dashboard
- Secure all items in the occupant compartment.

 **WARNING****■ Load and distribution**

- Do not overload your vehicle.
- Do not apply loads unevenly.

Improper loading may cause deterioration of steering or braking control which may cause death or serious injury.

## Trailer towing (2WD models)

- ▶ For Russia, Bosnia and Herzegovina, Madeira, New Caledonia, Saint Martin, Guadeloupe, Martinique and Israel

**Toyota does not recommend towing a trailer with your vehicle. Toyota also does not recommend the installation of a tow hitch or the use of a tow hitch carrier for a wheelchair, scooter, bicycle, etc. Your vehicle is not designed for trailer towing or for the use of tow hitch mounted carriers.**



- ▶ Except for Russia, Bosnia and Herzegovina, Madeira, New Caledonia, Saint Martin, Guadeloupe, Martinique and Israel

**Your vehicle is designed primarily as a passenger carrying vehicle. Towing a trailer will have an adverse effect on handling, performance, braking, durability, and fuel consumption. Your safety and satisfaction depend on the proper use of correct equipment and cautious driving habits. For your safety and the safety of others, do not overload the vehicle or trailer.**

**To tow a trailer safely, use extreme care and drive the vehicle in accordance with the trailer's characteristics and operating conditions.**

**Toyota warranties do not apply to damage or malfunction caused by towing a trailer for commercial purposes.**

**Ask your local authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for further details before towing, as there are additional legal requirements in some countries.**

### ◆ Weight limits

Check the allowable towing capacity, GVM (Gross Vehicle Mass), MPAC (Maximum Permissible Axle Capacity), and permissible drawbar load before towing. (→P. 654)

### ◆ Towing hitch/bracket

Toyota recommends the use of the Toyota hitch/bracket for your vehicle. Other products of a suitable nature and comparable quality may also be used.

For vehicles where the towing device blocks any of the lights or license plate, the following shall be observed:

- Do not use towing devices that cannot be easily removed or repositioned.
- Towing devices must be removed or repositioned when not in use.

### Connecting trailer lights

Please consult at any authorized dealer or repairer, or another duly qualified and equipped professional when installing trailer lights, as incorrect installation may cause damage to the vehicle's lights. Please take care to comply with your state's laws when installing trailer lights.

### Important points regarding trailer loads

#### ■ Total trailer weight and permissible drawbar load


##### ① Total trailer weight

Weight of the trailer itself plus the trailer load should be within the maximum towing capacity. Exceeding this weight is dangerous. (→P. 654)

When towing a trailer, use a friction coupler or friction stabilizer (sway control device).

##### ② Permissible drawbar load


Allocate the trailer load so that the drawbar load is greater than 25 kg (55.1 lb.) or 4% of the towing capacity. Do not let the drawbar load exceed the indicated weight. (→P. 654)

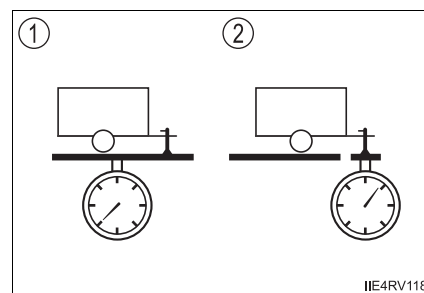

■ Information tag (manufacturer's label)

① Gross vehicle mass

The combined weight of the driver, passengers, luggage, towing hitch, total curb mass and drawbar load should not exceed the gross vehicle mass by more than 100 kg (220.5 lb.). Exceeding this weight is dangerous.

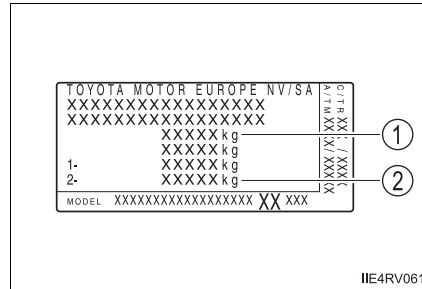

② Maximum permissible rear axle capacity

The weight borne by the rear axle should not exceed the maximum permissible axle capacity by 15% or more. Exceeding this weight is dangerous.

The values for towing capacity were derived from testing conducted at sea level. Take note that engine output and towing capacity will be reduced at high altitudes.


**⚠ WARNING**

■ **When the gross vehicle mass or maximum permissible axle capacity is exceeded**

Failing to observe this precaution may lead to an accident causing death or serious injury.

- Add an additional 20.0 kPa (0.2 kgf/cm<sup>2</sup> or bar, 3 psi) to the recommended tire inflation pressure value. (→P. 665)
- Do not exceed the established speed limit for towing a trailer in built-up areas or 100 km/h (62 mph), whichever is lower.

**Installation positions for the towing hitch/bracket and hitch ball**

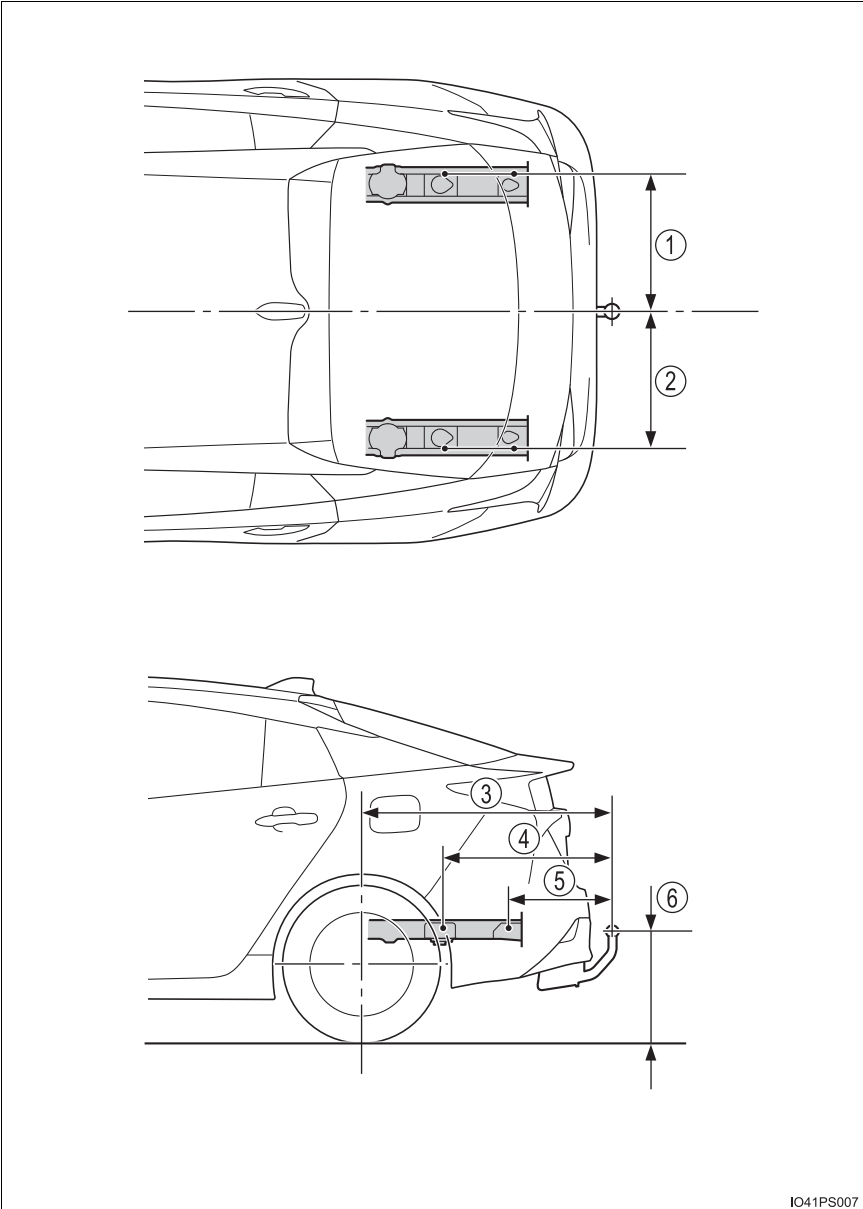

IO41PS007

- 
- ① 517 mm (20.4 in.)
  - ② 517 mm (20.4 in.)
  - ③ 981 mm (38.6 in.)
  - ④ 650 mm (25.6 in.)
  - ⑤ 389 mm (15.3 in.)
  - ⑥ 381 mm (15.0 in.)\*<sup>1</sup>  
404 mm (15.9 in.)\*<sup>2</sup>

\*1: Vehicles without raised vehicle height

\*2: Vehicles with raised vehicle height

■ **Tire information**

- Increase the tire inflation pressure to 20.0 kPa (0.2 kgf/cm<sup>2</sup> or bar, 3 psi) greater than the recommended value when towing. (→P. 665)
- Increase the air pressure of the trailer tires in accordance with the total trailer weight and according to the values recommended by the manufacturer of your trailer.

■ **Break-in schedule**

Toyota recommends that vehicles fitted with new power train components should not be used for towing trailers for the first 800 km (500 miles).

■ **Safety checks before towing**

- Check that the maximum load limit for the towing hitch/bracket and hitch ball is not exceeded. Bear in mind that the coupling weight of the trailer will add to the load exerted on the vehicle. Also make sure that the total load exerted on the vehicle is within the range of the weight limits. (→P. 234)
- Ensure that the trailer load is secure.
- Supplementary outside rear view mirrors should be added to the vehicle if the traffic behind cannot be clearly seen with standard mirrors. Adjust the extending arms of these mirrors on both sides of the vehicle so that they always provide maximum visibility of the road behind.

■ **Maintenance**

- Maintenance must be performed more frequently when using the vehicle for towing due to the greater weight burden placed on the vehicle compared to normal driving.
- Retighten all bolts securing the hitching ball and bracket after towing for approximately 1000 km (600 miles).



**NOTICE****■ When the rear bumper strengthening material is aluminum**

Ensure the steel bracket part does not come directly in contact with that area.

When steel and aluminum come into contact, there is a reaction similar to corrosion, which will weaken the section concerned and may result in damage. Apply a rust inhibitor to parts that will come in contact when attaching a steel bracket.

**Guidance**

Your vehicle will handle differently when towing a trailer. In order to avoid accident, death or serious injury, keep the following in mind when towing:

**■ Checking connections between trailer and lights**

Stop the vehicle and check the operation of the connection between the trailer and lights after driving for a brief period as well as before starting off.

**■ Practicing driving with a coupled trailer**

- Get the feel for turning, stopping and reversing with the trailer coupled by practicing in an area with no or light traffic.
- When reversing with a coupled trailer, hold the section of the steering wheel nearest to you and rotate clockwise to turn the trailer left or counterclockwise to turn it right. Always rotate a little at a time to prevent steering error. Have someone guide you when reversing to lessen the risk of an accident.

**■ Increasing vehicle-to-vehicle distance**

At a speed of 10 km/h (6 mph), the distance to the vehicle running ahead of you should be equivalent to or greater than the combined length of your vehicle and trailer. Avoid sudden braking that may cause skidding. Otherwise, the vehicle may spin out of control. This is especially true when driving on wet or slippery road surfaces.

**■ Sudden acceleration/steering input/cornering**

Executing sharp turns when towing may result in the trailer colliding with your vehicle. Decelerate well in advance when approaching turns and take them slowly and carefully to avoid sudden braking.

**■ Important points regarding turning**

The wheels of the trailer will travel closer to the inside of the curve than the wheels of the vehicle. To make allowance for this, take the turns wider than you would normally do.

**■ Important points regarding stability**

Vehicle movement resulting from uneven road surfaces and strong crosswinds will affect handling. The vehicle may also be rocked by passing buses or large trucks. Frequently check behind when moving alongside such vehicles. As soon as such vehicle movement occurs, immediately start to decelerate smoothly by slowly applying the brakes. Always steer the vehicle straight ahead while braking.

**■ Passing other vehicles**

Consider the total combined length of your vehicle and trailer and ensure that the vehicle-to-vehicle distance is sufficient before executing lane changes.

---

**■ Transmission information**

To maintain engine braking efficiency and charging system performance when using engine braking, do not use the transmission in D. Shift the shift position to B.

**■ If the engine overheats**

Towing a loaded trailer up a long, steep incline in temperatures exceeding 30°C (85°F) may result in the engine overheating. If the engine coolant temperature gauge indicates that the engine is overheating, turn the air conditioning off immediately, leave the road and stop the vehicle in a safe place. (→P. 645)

**■ When parking the vehicle**

Always place wheel chocks under the wheels of both the vehicle and trailer. Firmly set the parking brake and shift the shift position to P.

 **WARNING**

Follow all the instructions described in this section.  
Failure to do so could cause an accident resulting in death or serious injury.

**■ Trailer towing precautions**

When towing, make sure that none of the weight limits are exceeded.  
(→P. 234)

**■ To avoid accident or injury**

- Vehicles with a compact spare tire:  
Do not tow a trailer when the compact spare tire is installed on your vehicle.
- Vehicles with the emergency tire puncture repair kit:  
Do not tow a trailer when the tire installed is repaired with the emergency tire puncture repair kit.
- Do not use cruise control or dynamic radar cruise control with full-speed range when trailer towing. (if equipped)

**■ Vehicle speed in towing**

Observe the legal maximum speeds for trailer towing.

**■ Before descending hills or long declines**

Reduce speed and downshift. However, never downshift suddenly while descending steep or long downhill grades.

**■ Operation of the brake pedal**


Do not hold the brake pedal depressed often or for long periods of time.  
Doing so may result in the brake overheating or reduce braking effects.

 **NOTICE****■ Do not directly splice trailer lights**

Directly splicing trailer lights may damage your vehicle's electrical system and cause a malfunction.

## Trailer towing (AWD models)

Toyota does not recommend towing a trailer with your vehicle. Toyota also does not recommend the installation of a tow hitch or the use of a tow hitch carrier for a wheelchair, scooter, bicycle, etc. Your vehicle is not designed for trailer towing or for the use of tow hitch mounted carriers.

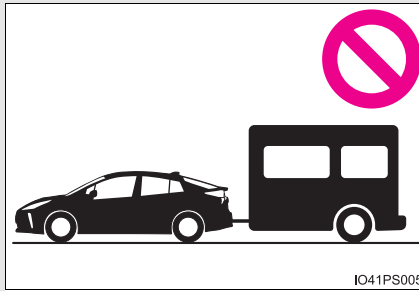


## Power (ignition) switch


Performing the following operations when carrying the electronic key on your person starts the hybrid system or changes power switch modes.

### Starting the hybrid system

- 1 Check that the parking brake is set.
- 2 Firmly depress the brake pedal.

 and a message will be displayed on the multi-information display.


When the shift position is N, the hybrid system cannot start. Shift the shift position to P when starting the hybrid system. (→P. 254)

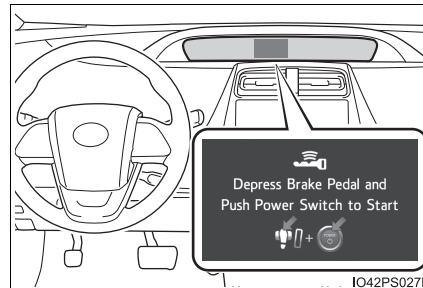

- 3 Press the power switch shortly and firmly.

When operating the power switch, one short, firm press is enough. It is not necessary to press and hold the switch.

If the "READY" indicator turns on, the hybrid system will operate normally.

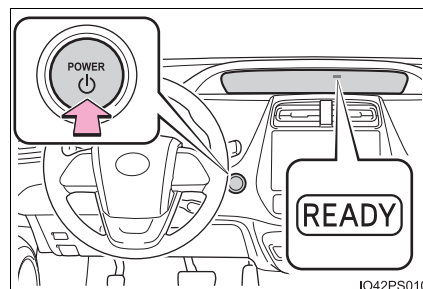

Continue depressing the brake pedal until the "READY" indicator is illuminated.

The hybrid system can be started from any power switch mode.

- 4 Check that the "READY" indicator is illuminated.

If the "READY" indicator changes from a flashing light to a solid light and the buzzer sounds, the hybrid system is starting normally.


The vehicle will not move when the "READY" indicator is off.

The vehicle can move when the "READY" indicator is on even if the engine is stopped. (The gasoline engine starts or stops automatically in accordance with the state of the vehicle.)

**Stopping the hybrid system**

- 1 Stop the vehicle completely.
- 2 Set the parking brake. (→P. 260)
- 3 Shift the shift position to P.  
(→P. 254)

Check that the shift position indicator shows P. (→P. 253)

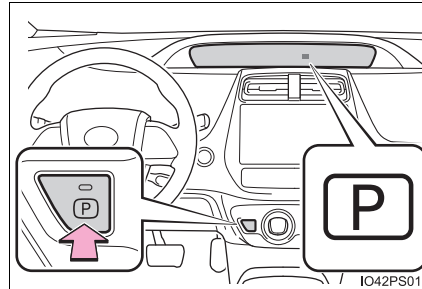

- 4 Press the power switch.  
The hybrid system will stop.
- 5 Slowly release the brake pedal and check that the display on the instrument cluster is off.  
The meter display sequentially turns off after the hybrid system stops.  
(→P. 248)

### Changing power switch modes

Modes can be changed by pressing the power switch with the brake pedal released. (The mode changes each time the switch is pressed.)

① Off

The emergency flashers can be used.

② ACCESSORY mode


Some electrical components such as the audio system can be used.

“Accessory” is displayed on the main display.

③ ON mode

All electrical components can be used.

“Ignition ON” is displayed on the main display.

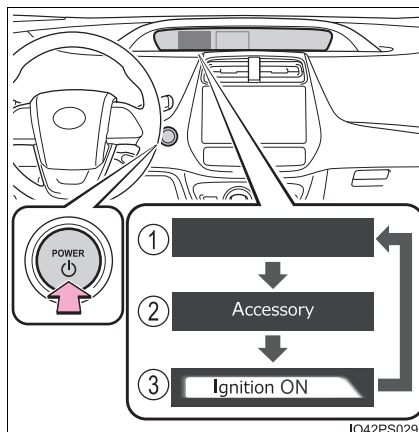

#### ■ Auto power off function

If the vehicle is left in ACCESSORY mode for more than 20 minutes or ON mode (the hybrid system is not operating) for more than an hour with the shift position in P, the power switch will automatically turn off. However, this function cannot entirely prevent the 12-volt battery discharge. Do not leave the vehicle with the power switch in ACCESSORY or ON mode for long periods of time when the hybrid system is not operating.

#### ■ Sounds and vibrations specific to a hybrid vehicle

→P. 82

#### ■ Electronic key battery depletion

→P. 174



**■ When the ambient temperature is low, such as during winter driving conditions**

When starting the hybrid system, the flashing time of the “READY” indicator may be long. Leave the vehicle as it is until the “READY” indicator is steady on, as steady means the vehicle is able to move.

**■ Conditions affecting operation**

→P. 190

**■ Note for the entry function**

→P. 191

**■ If the hybrid system does not start**

- The immobilizer system may not have been deactivated. (→P. 91)  
Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- If a message related to start-up is shown on the multi-information display, read the message and follow the instructions.

**■ If the “READY” indicator does not come on**

In the event that the “READY” indicator does not come on even after performing the proper procedures for starting the vehicle, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

**■ If the hybrid system is malfunctioning**

→P. 85

**■ If the electronic key battery is depleted**

→P. 554

**■ Operation of the power switch**

- If the switch is not pressed shortly and firmly, the power switch mode may not change or the hybrid system may not start.
- If attempting to restart the hybrid system immediately after turning the power switch off, the hybrid system may not start in some cases. After turning the power switch off, please wait a few seconds before restarting the hybrid system.

**■ Automatic P position selection function**

→P. 256

**■ When the shift control system malfunctions**

When attempting to turn the power switch off while there is a malfunction in the shift control system, the power switch mode may change to ACCESSORY mode. In this case, ACCESSORY mode may be turned off by applying the parking brake and pressing the power switch again. If there is a malfunction in the system, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

**■ Meter display**

When the power switch is turned off, each display will turn off as follows.

- The shift position indicator will turn off after approximately 2 seconds.
- The multi-information display, clock, etc. will turn off after approximately 30 seconds. (Each display will also turn off immediately if a door is locked before 30 seconds has elapsed.)

**■ If the smart entry & start system has been deactivated in a customized setting**

→P. 637

**⚠ WARNING****■ When starting the hybrid system**

Always start the hybrid system while sitting in the driver's seat. Do not depress the accelerator pedal while starting the hybrid system under any circumstances.

Doing so may cause an accident resulting in death or serious injury.

**■ Stopping the hybrid system in an emergency**

- If you want to stop the hybrid system in an emergency while driving the vehicle, press and hold the power switch for more than 2 seconds, or press it briefly 3 times or more in succession. (→P. 569)

However, do not touch the power switch while driving except in an emergency. Turning the hybrid system off while driving will not cause loss of steering or braking control, however, power assist to the steering will be lost. This will make it more difficult to steer smoothly, so you should pull over and stop the vehicle as soon as it is safe to do so.

- If the power switch is operated while the vehicle is running, a warning message will be shown on the multi-information display and a buzzer sounds.
- When restarting the hybrid system after an emergency shutdown while driving, press the power switch. When restarting the hybrid system after stopping the vehicle, change the shift position to P and then press the power switch.



## NOTICE

**■ To prevent 12-volt battery discharge**

- Do not leave the power switch in ACCESSORY or ON mode for long periods of time without the hybrid system on.
- If “Accessory”, “Ignition ON” or mileage display (→P. 121) is displayed on the main display while the hybrid system is not operating, the power switch is not off. Exit the vehicle after turning the power switch off.

**■ When starting the hybrid system**

If the hybrid system becomes difficult to start, have your vehicle checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

**■ Symptoms indicating a malfunction with the power switch**

If the power switch seems to be operating somewhat differently than usual, such as the switch sticking slightly, there may be a malfunction. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

## EV drive mode


In EV drive mode, electric power is supplied by the hybrid battery (traction battery), and only the electric motor (traction motor) is used to drive the vehicle.

This mode allows you to drive in residential areas late at night, or in indoor parking lots etc. without concern for noises and exhaust gas emissions.

### Turns EV drive mode on/off

When EV drive mode is turned on, the EV drive mode indicator will come on.

Pressing the switch when in EV drive mode will return the vehicle to normal driving (using the gasoline engine and electric motor [traction motor]).

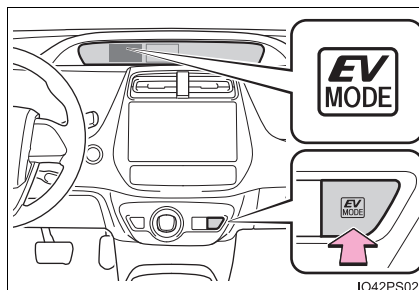

### ■ Situations in which EV drive mode cannot be turned on

It may not be possible to turn EV drive mode on in the following situations. If it cannot be turned on, a buzzer will sound and a message will be shown on the multi-information display.

- The temperature of the hybrid system is high.  
The vehicle has been left in the sun, driven on a hill, driven at high speeds, etc.
- The temperature of the hybrid system is low.  
The vehicle has been left in temperatures lower than about 0°C (32°F) for a long period of time etc.
- The gasoline engine is warming up.
- The hybrid battery (traction battery) is low.  
The remaining battery level indicated in the energy monitor display is low.  
(→P. 131, 168)
- Vehicle speed is high.
- The accelerator pedal is depressed firmly or the vehicle is on a hill etc.
- The windshield defogger is in use.

**■ Switching to EV drive mode when the gasoline engine is cold**

If the hybrid system is started while the gasoline engine is cold, the gasoline engine will start automatically after a short period of time in order to warm up. In this case, you will become unable to switch to EV drive mode.

After the hybrid system has started and the "READY" indicator has illuminated, press the EV drive mode switch before the gasoline engine starts to switch to EV drive mode.

**■ Automatic cancelation of EV drive mode**

When driving in EV drive mode, the gasoline engine may automatically restart in the following situations. When EV drive mode is canceled, a buzzer will sound and the EV drive mode indicator will flash and go off.

- The hybrid battery (traction battery) becomes low.  
The remaining battery level indicated in the energy monitor display is low.  
(→P. 131, 168)
- Vehicle speed is high.
- The accelerator pedal is depressed firmly or the vehicle is on a hill etc.

When it is possible to inform the driver of automatic cancelation in advance, a prior notice screen will appear on the multi-information display.

**■ Possible driving distance when driving in EV drive mode**

EV drive mode's possible driving distance ranges from a few hundred meters to approximately 1 km (0.6 mile). However, depending on vehicle conditions, there are situations when EV drive mode cannot be used. (The distance that is possible depends on the hybrid battery [traction battery] level and driving conditions.)

**■ Changing a driving mode when in EV drive mode**

EV drive mode can be used in conjunction with Eco drive mode and power mode.

However, EV drive mode may be automatically canceled when used in conjunction with power mode.

**■ Fuel economy**

The hybrid system is designed to achieve the best possible fuel economy during normal driving (using the gasoline engine and electric motor [traction motor]). Driving in EV drive mode more than necessary may lower fuel economy.


 WARNING

■ **Caution while driving**

When driving in EV drive mode, pay special attention to the area around the vehicle. Because there is no engine noise, pedestrians, people riding bicycles or other people and vehicles in the area may not be aware of the vehicle starting off or approaching them, so take extra care while driving.

## Hybrid transmission

### Shifting the shift lever

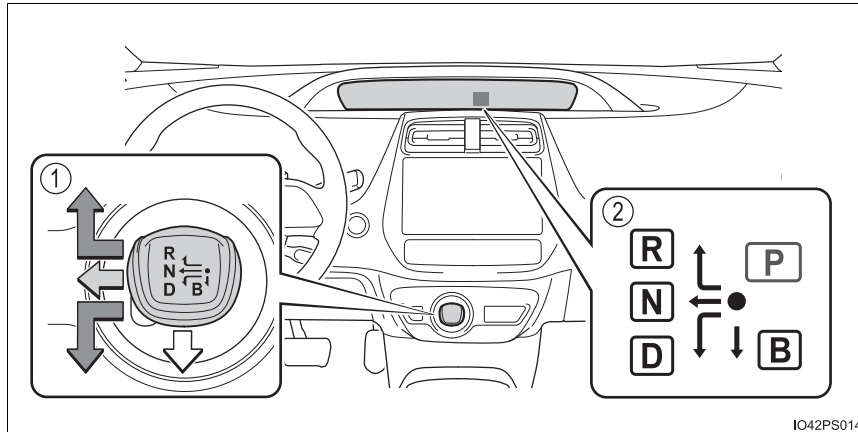

#### ① Shift lever

Operate the shift lever gently and ensure correct shifting operation.

Release the shift lever after each shifting operation to allow it to return to the ● position.



When shifting to the D or R, move the shift lever along the shift gate.



To shift to the N, slide the shift lever to the left (left-hand drive vehicle) or right (right-hand drive vehicle) and hold it. The shift position will change to N.



To shift to the B, pull the shift lever down. Shifting to B is only possible when shift position D is selected.

When shifting from P to N, D or R, from D to R, or from R to D, ensure that the brake pedal is being depressed and the vehicle is stationary.

#### ② Shift position indicator

The current shift position is highlighted.

When any shift position other than D or B is selected, the arrow toward B and B position indicator disappear from the shift position indicator.

When selecting the shift position, make sure that the shift position has been changed to the desired position by checking the shift position indicator provided on the instrument cluster.

**Shift position purpose**

Shift position	Objective or function
P	Parking the vehicle/starting the hybrid system
R	Reversing
N	Neutral (Condition in which the power is not transmitted)
D	Normal driving*
B	Applying engine braking or strong braking when the accelerator pedal has been released on steep downward slopes etc.

\*: For good fuel economy and noise reduction, the D position should usually be used.

**Selecting a driving mode**


→P. 351

**P position switch****■ When shifting the shift position to P**

Fully stop the vehicle and set the parking brake, and then press the P position switch.

When the shift position is changed to P, the switch indicator comes on.

Check that the P position is highlighted on the shift position indicator.

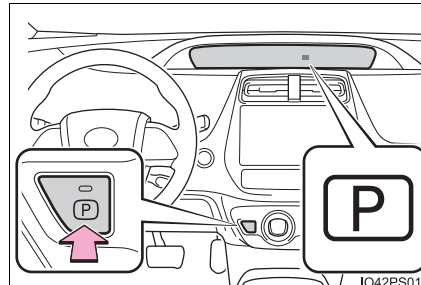**■ Shifting the shift position from P to other positions**

- While depressing the brake pedal firmly, operate the shift lever. If the shift lever is operated without depressing the brake pedal, the buzzer will sound and the shifting operation will be disabled.
- When selecting the shift position, make sure that the shift position has been changed to the desired position by checking the shift position indicator provided on the instrument cluster.
- The shift position cannot be changed from P to B directly.



### ■ For the shift positions

- When the power switch is off, the shift position cannot be changed.
- When the power switch is in ON mode (the hybrid system is not operating), the shift position can only be changed to N. The shift position will be changed to N even if the shift lever is shifted to D or R and held in that position.
- When the “READY” indicator is on, the shift position can be changed from P to D, N or R.
- When the “READY” indicator is flashing, the shift position cannot be changed from P to another position even if the shift lever is operated. Wait until the “READY” indicator changes from a flashing to a solid light, and then operate the shift lever again.
- The shift position can only be changed to B directly from D.

In addition, if an attempt is made to change the shift position by moving the shift lever or by pressing the P position switch in any of the following situations, the buzzer will sound and the shifting operation will be disabled or the shift position will automatically change to N. When this happens, select an appropriate shift position.

- Situations where the shifting operation will be disabled:
    - When an attempt is made to change the shift position from P to another position by moving the shift lever without depressing the brake pedal.
    - When the shift lever is moved to attempt to change the shift position from P or N with the accelerator pedal depressed and the vehicle stopped.
    - When an attempt is made to change the shift position from P or N to B by moving the shift lever.
  - Situations where the shift position will automatically change to N:
    - When the P position switch is pressed while the vehicle is running.\*1
    - When an attempt is made to select the R position by moving the shift lever when the vehicle is moving forward.\*2
    - When an attempt is made to select the D position by moving the shift lever when the vehicle is moving in reverse.\*3
    - When an attempt is made to change the shift position from R to B by moving the shift lever.
- \*1: Shift position may be changed to P when driving at extremely low speeds.
- \*2: Shift position may be changed to R when driving at low speeds.
- \*3: Shift position may be changed to D when driving at low speeds.
- If N is selected while driving at a certain speed, even if the shift lever is not held in the N position, the shift position changes to N. In this situation, the buzzer sounds and a confirmation message is displayed on the multi-information display to inform the driver that the shift position has changed to N.

**■ Restraining sudden start (Drive-Start Control)**

→P. 222

**■ Automatic P position selection function**

In the following situations, the shift position is automatically changed to P.

- When pressing the power switch with the vehicle stopped while the power switch is in ON mode and the shift position is in a position other than P (after the shift position has changed to P, the power switch will turn off)\*
- If the driver's door is opened and all of the following conditions are met, while the shift position is in a position other than P
  - The power switch is in ON mode.
  - The driver is not wearing the seat belt.
  - The brake pedal is not depressed.

To start off the vehicle after the shift position is changed to P, operate the shift lever again.

\*: When the power switch is pressed while driving at extremely slow speeds, such as immediately before stopping the vehicle, the shift position may automatically change to P. Make sure that the vehicle is completely stopped before pressing the power switch.

The shift position may also automatically switch to P if one of the following conditions is detected while the vehicle is stopped by dynamic radar cruise control with full-speed range (if equipped).

- Driver's seat belt is not fastened
- Driver's door is opened
- Approximately 3 minutes elapse after the vehicle stopped

**■ If the shift position cannot be shifted from P**

There is a possibility that the 12-volt battery is discharged. Check the 12-volt battery in this situation. (→P. 639)

**■ About engine braking**

When shift position B is selected, releasing the accelerator pedal will apply engine braking.

- When the vehicle is driven at high speeds, compared to ordinary gasoline-fueled vehicles, the engine braking deceleration is felt less than that of other vehicles.
- The vehicle can be accelerated even when shift position B is selected.

If the vehicle is driven continuously in the B position, fuel efficiency will become low. Usually, select the D position.

**■ After recharging/reconnecting the 12-volt battery**

→P. 523

**■ When a message related to shift operations is displayed on the multi-information display**

When the shift position does not switch due to a mistaken operation, system conditions, etc., or when the attempted shift operation is invalid, a message indicating the correct operation or the reason why switching cannot be performed is shown on the multi-information display. In these cases, follow the instructions and retry the operation.

**■ Customization**

Settings (e.g. reverse warning buzzer) can be changed.  
(Customizable features: →P. 670)

**WARNING****■ When driving on slippery road surfaces**

Do not accelerate or shift the shift position suddenly.  
Sudden changes in engine braking may cause the vehicle to spin or skid, resulting in an accident.

**■ Shift lever and P position switch**

- Do not remove the shift lever knob or use anything but a genuine Toyota shift lever knob. Also, do not hang anything on the shift lever.  
Doing so could prevent the shift lever from returning to position, causing unexpected accidents to occur when the vehicle is in motion.
- Do not press the P position switch while the vehicle is moving.  
If the P position switch is pressed when driving at very low speeds (for example, just before the vehicle stops), the vehicle may stop suddenly when the shift position switches to P, which could lead to an accident.
- In order to prevent the shift position from accidentally being changed, do not touch the P position switch or shift lever when not using them.



## NOTICE

**■ Hybrid battery (traction battery) charge**

If the shift position is in N, the hybrid battery (traction battery) will not be charged. To help prevent the battery from discharging, avoid leaving the N position selected for an extended period of time.

**■ Situations where shift control system malfunctions are possible**

If any of the following situations occurs, shift control system malfunctions are possible.

Immediately stop the vehicle in a safe place on level ground, apply the parking brake, and then contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- When the warning message indicating the shift control system appears on the multi-information display.
- The display indicates that no shift position is selected for more than a few seconds.

**■ Notes regarding shift lever and P position switch operation**

Avoid repeatedly operating the shift lever and P position switch in quick succession.

The system protection function may activate and it will not be temporarily possible to shift the shift position other than P. If this happens, please wait for approximately 20 seconds before attempting to change the shift position again.


**■ When exiting the vehicle (driver's seat only)**

Check that the shift position indicator shows P and that the parking brake is set before opening the door and exiting the vehicle.

## Turn signal lever

### Operating instructions

- ① Right turn
- ② Lane change to the right (move the lever partway and release it)  
The right hand signals will flash 3 times.
- ③ Lane change to the left (move the lever partway and release it)  
The left hand signals will flash 3 times.
- ④ Left turn

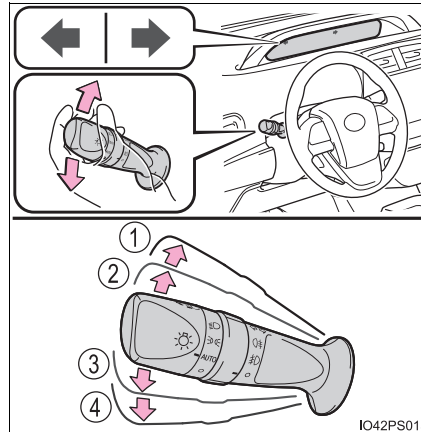

#### ■ Turn signals can be operated when

The power switch is in ON mode.

#### ■ If the indicator flashes faster than usual

Check that each turn signal light flashes correctly.

#### ■ If the turn signals stop flashing before a lane change has been performed

Operate the lever again.

#### ■ Customization


The number of times the turn signals flash during a lane change can be changed. (Customizable features: →P. 670)

## Parking brake

### Operating instructions

To set the parking brake, fully depress the parking brake pedal with your left foot while depressing the brake pedal with your right foot.

(Depressing the pedal again releases the parking brake.)

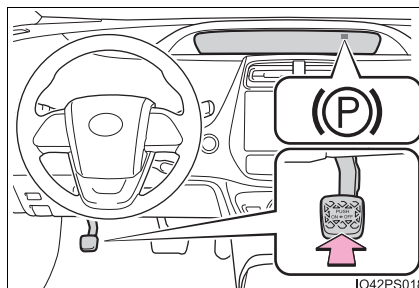

#### ■ Parking the vehicle

→P. 220

#### ■ Parking brake engaged warning buzzer

A buzzer will sound if the vehicle is driven with the parking brake engaged. "Release Parking Brake" is displayed on the multi-information display (with the vehicle reached a speed of 5 km/h [3 mph]).

#### ■ Usage in winter time

→P. 453

#### ⚠ NOTICE

#### ■ Before driving


Fully release the parking brake.

Driving the vehicle with the parking brake set will lead to brake components overheating, which may affect braking performance and increase brake wear.





## Headlight switch


The headlights can be operated manually or automatically.

### Operating instructions



Operating the  switch turns on the lights as follows:


► Type A

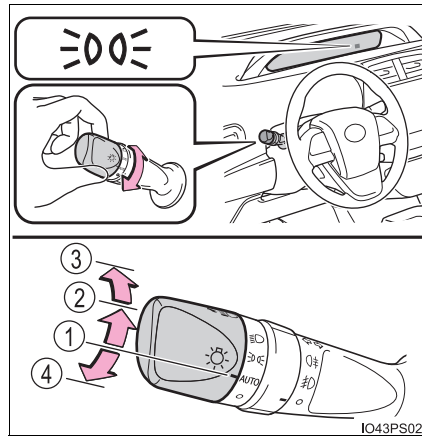- ①  The headlights, front position, daytime running lights (→P. 263) and so on turn on and off automatically (when the power switch is in ON mode).
- ②  The front position, tail, license plate and instrument panel lights turn on.
- ③  The headlights and all lights listed above (except daytime running lights) turn on.
- ④  The daytime running lights turn on. (→P. 263)




► Type B

- ① AUTO The headlights, front position, daytime running lights (→P. 263) and so on turn on and off automatically (when the power switch is in ON mode).
- ②  The front position, tail, license plate and instrument panel lights turn on.
- ③  The headlights and all lights listed above (except daytime running lights) turn on.

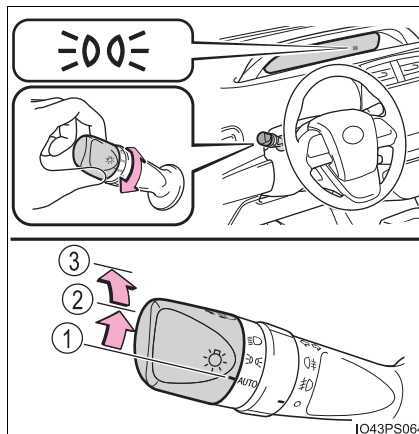

**Turning on the high beam headlights**

- ① With the headlights on, push the lever away from you to turn on the high beams.  
Pull the lever toward you to the center position to turn the high beams off.
- ② Pull the lever toward you and release it to flash the high beams once.

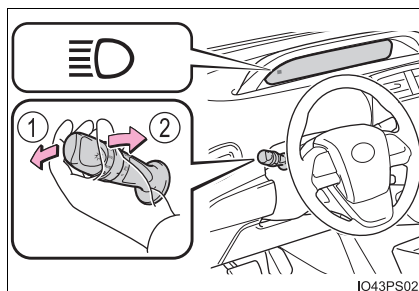


You can flash the high beams with the headlights on or off.




### Extended Headlight Lighting system

This system allows the headlights and front position lights to be turned on for 30 seconds when the power switch is off.


Pull the lever toward you and release it with the light switch in the AUTO or  position after turning the power switch off.

Pull the lever toward you and release it again to turn off the lights.

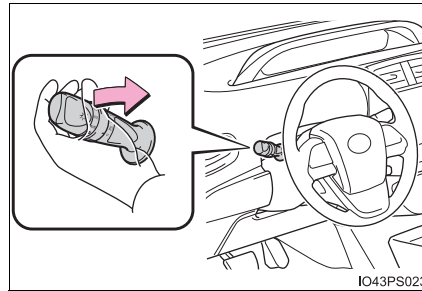

### Daytime running light system

To make your vehicle more visible to other drivers during daytime driving, the daytime running lights turn on automatically whenever the hybrid system is started and the parking brake is released with the headlight switch in the


AUTO or  position. Daytime running lights are not designed for use at night.

### Headlight control sensor




The sensor may not function properly if an object is placed on the sensor, or anything that blocks the sensor is affixed to the windshield.





Doing so interferes with the sensor detecting the level of ambient light and may cause the automatic headlight system to malfunction.

   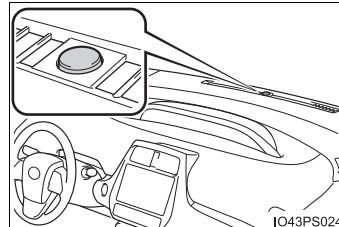Air conditioning operation may also be interrupted.



■ **Automatic light off system**

  - When the light switch is in the  or  position: The headlights turn off automatically if the power switch is turned to ACCESSORY mode or turned off.
- When the light switch is in the  position: The headlights and all lights turn off automatically if the power switch is turned to ACCESSORY mode or turned off.

To turn the lights on again, turn the power switch to ON mode, or turn the light switch to the  or  position once and then back to the  or  position.


■ **Automatic headlight leveling system**

The level of the headlights is automatically adjusted according to the number of passengers and the loading condition of the vehicle to ensure that the headlights do not interfere with other road users.

■ **Light reminder buzzer**

A buzzer sounds when the power switch is turned off and the driver's door is opened while the lights are turned on.

■ **12-volt battery-saving function**

In order to prevent the vehicle 12-volt battery from discharging, if the light switch is in the  position when the power switch turned off the 12-volt battery saving function will operate and automatically turn off all the lights after approximately 20 minutes.

When any of the following are performed, the 12-volt battery-saving function is canceled once and then reactivated. All the lights will turn off automatically 20 minutes after the 12-volt battery-saving function has been reactivated:

- When the headlight switch is operated
- When a door is opened or closed

■ **If “Headlight System Malfunction Visit Your Dealer” is displayed on the multi-information display**

The system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Customization**

Settings (e.g. light sensor sensitivity) can be changed.  
(Customizable features: →P. 670)



## NOTICE

**■ To prevent 12-volt battery discharge**

Do not leave the lights on longer than necessary when the hybrid system is off.

## AHB (Automatic High Beam)\*

The Automatic High Beam uses an in-vehicle front camera to assess the brightness of streetlights, the lights of vehicles ahead etc., and automatically turns the high beam on or off as necessary.

### WARNING


#### ■ Limitations of the Automatic High Beam


Do not rely on the Automatic High Beam. Always drive safely, taking care to observe your surroundings and turning the high beam on or off manually if necessary.

#### ■ To prevent incorrect operation of the Automatic High Beam system

Do not overload the vehicle.


### Activating the Automatic High Beam system

- 1 Push the lever away from you with the headlight switch in the AUTO or  position.

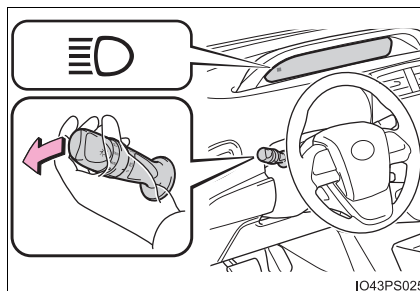

- 2 Press the Automatic High Beam switch.

The Automatic High Beam indicator will come on when the headlights are turned on automatically to indicate that the system is active.

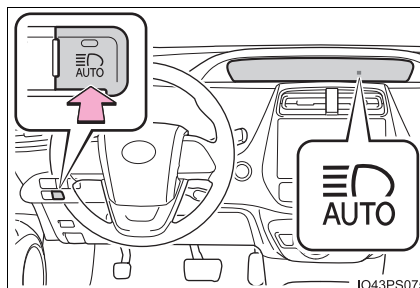


\*: If equipped

**Turning the high beam on/off manually****■ Switching to low beam**

Pull the lever to the original position.

The Automatic High Beam indicator will turn off.


Push the lever away from you to activate the Automatic High Beam system again.

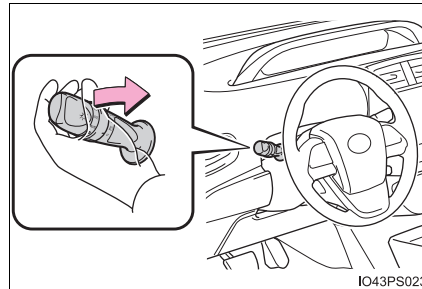**■ Switching to high beam**

Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

Press the switch to activate the Automatic High Beam system again.

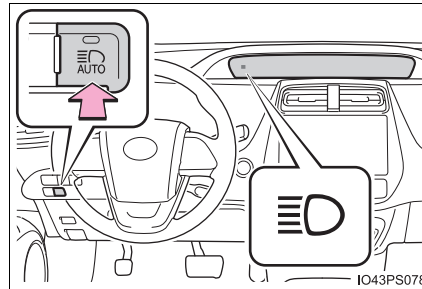

**■ High beam automatic turning on or off conditions**

- When all of the following conditions are fulfilled, the high beam will be automatically turned on (after approximately 1 second):
    - The vehicle speed is approximately 30 - 40 km/h (19 - 25 mph)\* or more.
    - The area ahead of the vehicle is dark.
    - There are no vehicles ahead with headlights or tail lights turned on.
    - There are few streetlights on the road ahead.
  - If any of the following conditions are fulfilled, the high beam will be automatically turned off:
    - The vehicle speed is below approximately 25 - 30 km/h (16 - 19 mph)\*.
    - The area ahead of the vehicle is not dark.
    - Vehicles ahead have headlights or tail lights turned on.
    - There are many streetlights on the road ahead.
- \*: The vehicle speed at which the high beams are automatically turned on/off may vary depending on the country for which the vehicle is approved.

**■ Front camera detection information**

- The high beam may not be automatically turned off in the following situations:
  - When oncoming vehicles suddenly appear from a curve
  - When the vehicle is cut in front of by another vehicle
  - When vehicles ahead are hidden from sight due to repeated curves, road dividers or roadside trees
  - When vehicles ahead appear from the faraway lane on wide road
  - When vehicles ahead vehicles have no lights
- The high beam may be turned off if a vehicle ahead that is using fog lights without using the headlights is detected.
- House lights, street lights, traffic signals, and illuminated billboards or signs may cause the high beam to switch to the low beams, or the low beams to remain on.
- The following factors may affect the amount of time taken to turn the high beam on or off:
  - The brightness of headlights, fog lights, and tail lights of vehicles ahead
  - The movement and direction of vehicles ahead
  - When a vehicle ahead only has operational lights on one side
  - When a vehicle ahead is a two-wheeled vehicle
  - The condition of the road (gradient, curve, condition of the road surface etc.)
  - The number of passengers and amount of luggage
- The high beam may be turned on or off when the driver does not expect it.
- Bicycles or similar objects may not be detected.

- In the situations shown below, the system may not be able to accurately detect surrounding brightness levels. This may cause the low beams to remain on or the high beams to cause problems for pedestrians, vehicles ahead or other parties. In these cases, manually switch between the high and low beams.
  - In bad weather (rain, snow, fog, sandstorms etc.)
  - The windshield is obscured by fog, mist, ice, dirt etc.
  - The windshield is cracked or damaged.
  - The front camera is deformed or dirty.
  - The front camera temperature is extremely high.
  - Surrounding brightness levels are equal to those of headlights, tail lights or fog lights.
  - Vehicles ahead have headlights that are either switched off, dirty, are changing color, or are not aimed properly.
  - When driving through an area of intermittently changing brightness and darkness.
  - When frequently and repeatedly driving ascending/descending roads, or roads with rough, bumpy or uneven surfaces (such as stone-paved roads, gravel tracks etc.).
  - When frequently and repeatedly taking curves or driving on a winding road.
  - There is a highly reflective object ahead of the vehicle, such as a sign or a mirror.
  - The back of a vehicle ahead is highly reflective, such as a container on a truck.
  - The vehicle's headlights are damaged or dirty.
  - The vehicle is listing or tilting, due to a flat tire, a trailer being towed etc.
  - The high beam and low beam are repeatedly being switched between in an abnormal manner.
  - The driver believes that the high beam may be causing problems or distress to other drivers or pedestrians nearby.
- **If “Headlight System Malfunction Visit Your Dealer” is displayed on the multi-information display**

The system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

## Fog light switch


The fog lights offer improved visibility in difficult driving conditions, such as in rain and fog.

### Operating instructions

- ① ○ Turns the front and rear fog lights off
- ② ƒD Turns the front fog lights on
- ③ 0ƒ Turns both front and rear fog lights on

Releasing the switch ring returns it to ƒD .

Operating the switch ring again turns only the rear fog light off.

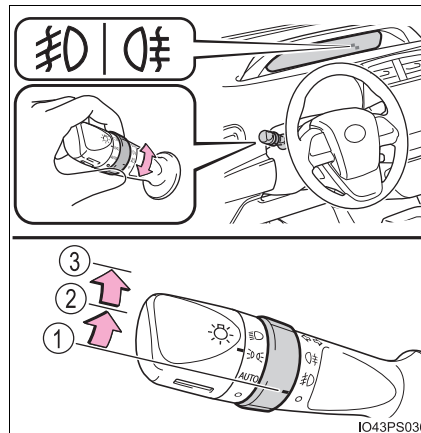

### ■ Fog lights can be used when

Front fog lights: The front position lights are turned on.

Rear fog light: The front fog lights are turned on.

### ⚠ NOTICE

#### ■ To prevent 12-volt battery discharge

Do not leave the lights on longer than necessary when the hybrid system is off.








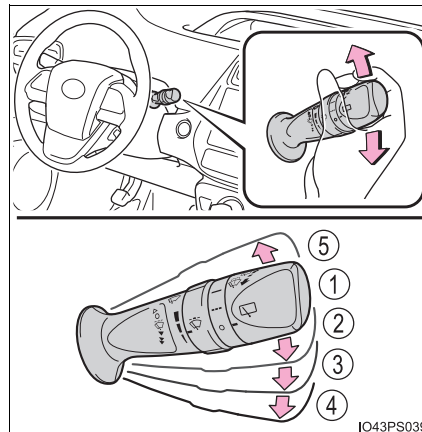
## Windshield wipers and washer

### Operating the wiper lever

Operating the  lever operates the wipers or washer as follows.


► Intermittent windshield wipers with interval adjuster


- ①  Off
- ②  Intermittent operation
- ③  Low speed operation
- ④  High speed operation
- ⑤  Temporary operation



Wiper intervals can be adjusted when intermittent operation is selected.


- ⑥ Increases the intermittent windshield wiper frequency
- ⑦ Decreases the intermittent windshield wiper frequency

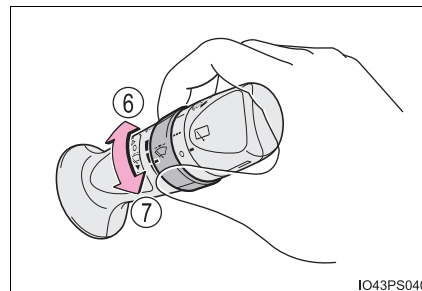

- ⑧  Washer/wiper dual operation


Pulling the lever operates the wipers and washer.

The wipers will automatically operate a couple of times after the washer squirts.

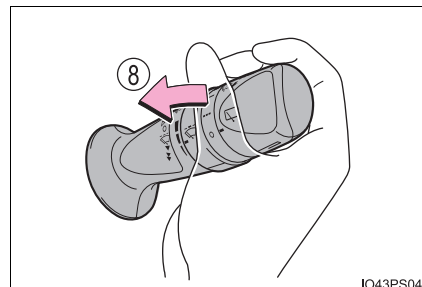

► Rain-sensing windshield wipers


- ① ○ Off
- ② AUTO Rain-sensing operation
- ③ ▼ Low speed operation
- ④ ▼ High speed operation
- ⑤ ▲ Temporary operation

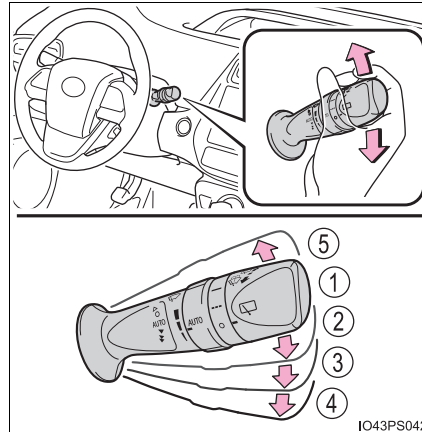


When **AUTO** is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.


The sensor sensitivity can be adjusted when **AUTO** is selected.

- ⑥ Increases the sensitivity
- ⑦ Decreases the sensitivity

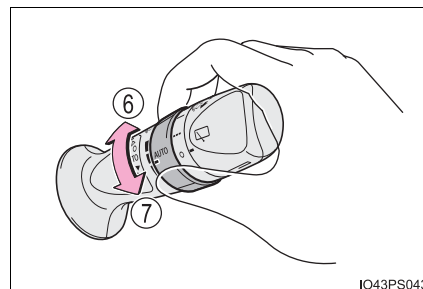

- ⑧  Washer/wiper dual operation

Pulling the lever operates the wipers and washer. The wipers will automatically operate a couple of times after the washer squirts.

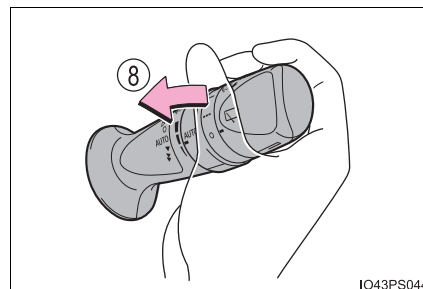

■ **The windshield wipers and washer can be operated when**

The power switch is in ON mode.


■ **Dripping prevention wiper sweep (vehicles with rain-sensing windshield wipers)**

After washing and wiping operation several times, the wipers operate one more time after a short delay to prevent dripping. However, this function will not operate while driving.

■ **Raindrop sensor (vehicles with rain-sensing windshield wipers)**

- The raindrop sensor judges the amount of raindrops.

An optical sensor is adopted. It may not operate properly when sunlight from the rising or setting of the sun intermittently strikes the windshield, or if bugs etc. are present on the windshield.

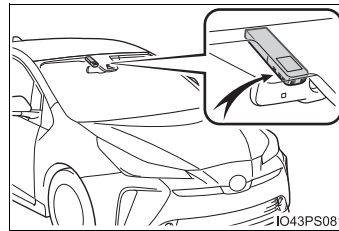

- If the wiper switch is turned to the **AUTO** position while the power switch is in ON mode, the wipers will operate once to show that AUTO mode is activated.
- If the wiper sensitivity is adjusted to higher, the wiper may operate once to indicate the change of sensitivity.
- If the temperature of the raindrop sensor is 85°C (185°F) or higher, or -15°C (5°F) or lower, automatic operation may not occur. In this case, operate the wipers in any mode other than AUTO mode.

■ **If no windshield washer fluid sprays**

Check that the washer nozzles are not blocked if there is washer fluid in the washer fluid tank.

■ **Customization**

Settings of AUTO mode operation can be changed. (Customizable features: →P. 670)

 WARNING**■ Caution regarding the use of windshield wipers in AUTO mode (vehicles with rain-sensing windshield wipers)**

The windshield wipers may operate unexpectedly if the sensor is touched or the windshield is subject to vibration in AUTO mode. Take care that your fingers etc. do not become caught in the windshield wipers.

**■ Caution regarding the use of washer fluid**

When it is cold, do not use the washer fluid until the windshield becomes warm. The fluid may freeze on the windshield and cause low visibility. This may lead to an accident, resulting in death or serious injury.

 NOTICE**■ When the windshield is dry**

Do not use the wipers, as they may damage the windshield.

**■ When the washer fluid tank is empty**

Do not operate the switch continually as the washer fluid pump may overheat.

**■ When a nozzle becomes blocked**

In this case, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Do not try to clear it with a pin or other object. The nozzle will be damaged.




**■ To prevent 12-volt battery discharge**


Do not leave the wipers on longer than necessary when the hybrid system is off.


## Rear window wiper and washer


### Operating the wiper lever

Operating the  switch operates the rear wiper as follows:

- ①  Off
- ②  Intermittent operation
- ③  Normal operation

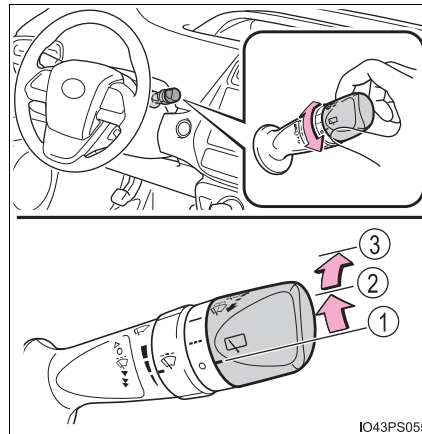

- ④  Washer/wiper dual operation  
Pushing the lever operates the wiper and washer.

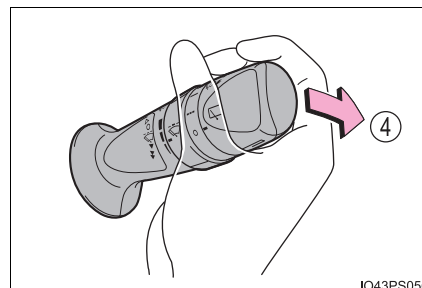

**■ The rear window wiper and washer can be operated when**

The power switch is in ON mode.

**■ If no washer fluid sprays**

Check that the washer nozzle is not blocked if there is washer fluid in the washer fluid tank.

**NOTICE****■ When the rear window is dry**

Do not use the wiper, as it may damage the rear window.

**■ When the washer fluid tank is empty**

Do not operate the switch continually as the washer fluid pump may over-heat.

**■ When a nozzle becomes blocked**

In this case, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Do not try to clear it with a pin or other object. The nozzle will be damaged.

**■ To prevent 12-volt battery discharge**

Do not leave the wiper on longer than necessary when the hybrid system is off.

## Opening the fuel tank cap

Perform the following steps to open the fuel tank cap:

### Before refueling the vehicle

- Turn the power switch off and ensure that all the doors and windows are closed.
- Confirm the type of fuel.

### ■ Fuel types

→P. 668

### ■ Fuel tank opening for unleaded gasoline

To help prevent incorrect fueling, your vehicle has a fuel tank opening that only accommodates the special nozzle on unleaded fuel pumps.

### ■ Gasoline price setting screen (if equipped)

After refueling more than approximately 5 L (1.3 gal., 1.1 Imp.gal.) and turning the power switch to ON mode, the gasoline price setting screen will be automatically displayed on the multi-information display. (→P. 104)

**WARNING****■ When refueling the vehicle**

Observe the following precautions while refueling the vehicle. Failure to do so may result in death or serious injury.


- After exiting the vehicle and before opening the fuel door, touch an unpainted metal surface to discharge any static electricity. It is important to discharge static electricity before refueling because sparks resulting from static electricity can cause fuel vapors to ignite while refueling.
- Always hold the grips on the fuel tank cap and turn it slowly to remove it. A whooshing sound may be heard when the fuel tank cap is loosened. Wait until the sound cannot be heard before fully removing the cap. In hot weather, pressurized fuel may spray out of the filler neck and cause injury.
- Do not allow anyone that has not discharged static electricity from their body to come close to an open fuel tank.
- Do not inhale vaporized fuel.  
Fuel contains substances that are harmful if inhaled.
- Do not smoke while refueling the vehicle.  
Doing so may cause the fuel to ignite and cause a fire.
- Do not return to the vehicle or touch any person or object that is statically charged.  
This may cause static electricity to build up, resulting in a possible ignition hazard.

**■ When refueling**

Observe the following precautions to prevent fuel overflowing from the fuel tank:

- Securely insert the fuel nozzle into the fuel filler neck.
- Stop filling the tank after the fuel nozzle automatically clicks off.
- Do not top off the fuel tank.




 NOTICE**■ Refueling**


Do not spill fuel during refueling. Doing so may damage the vehicle, such as causing the emission control system to operate abnormally or damaging fuel system components or the vehicle's painted surface.

**Opening the fuel tank cap**

- 1 Press the opener to open the fuel filler door.

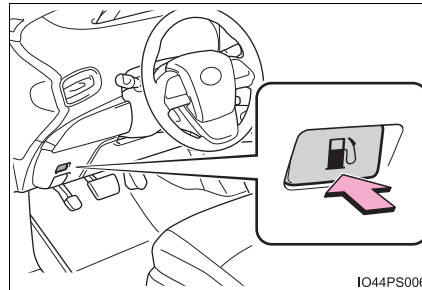


- 2 Turn the fuel tank cap slowly to open and hang it on the back of the fuel filler door.

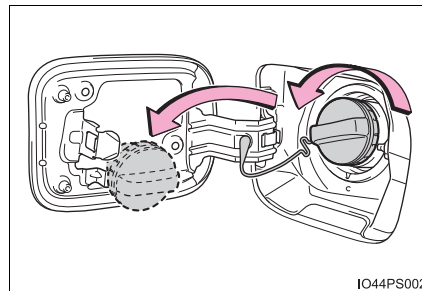


■ When the fuel filler door cannot be opened by pressing the inside switch

- 1 Open the back door and remove the cover underneath the luggage compartment light.

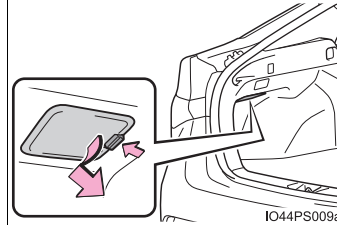


- 2 Pull the lever backward and check that the fuel lid opens.

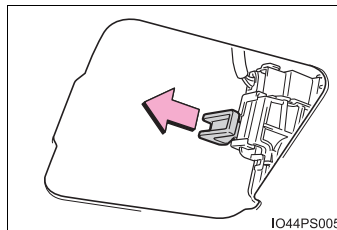

**Closing the fuel tank cap**

After refueling, turn the fuel tank cap until you hear a click. Once the cap is released, it will turn slightly in the opposite direction.

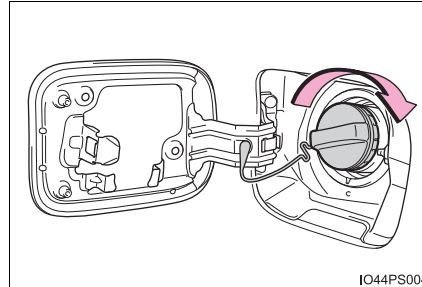**⚠ WARNING****■ When replacing the fuel tank cap**

Do not use anything but a genuine Toyota fuel tank cap designed for your vehicle. Doing so may cause a fire or other incident which may result in death or serious injury.

## Toyota Safety Sense\*

The Toyota Safety Sense consists of the following drive assist systems and contributes to a safe and comfortable driving experience:

### Driving assist system

◆ **PCS (Pre-Collision System)\***

→P. 296

◆ **LTA (Lane Tracing Assist)\***

→P. 307

◆ **AHB (Automatic High Beam)\***

→P. 266

◆ **RSA (Road Sign Assist)\***

→P. 323

◆ **Dynamic radar cruise control with full-speed range\***

→P. 329

 **WARNING**

■ **Toyota Safety Sense**

The Toyota Safety Sense is designed to operate under the assumption that the driver will drive safely, and is designed to help reduce the impact to the occupants and the vehicle in the case of a collision or assist the driver in normal driving conditions.


As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle's surroundings and driving safely.

\*: If equipped

### Sensors

Two types of sensors, located behind the front grille and windshield, detect information necessary to operate the drive assist systems.

- ① Radar sensor
- ② Front camera

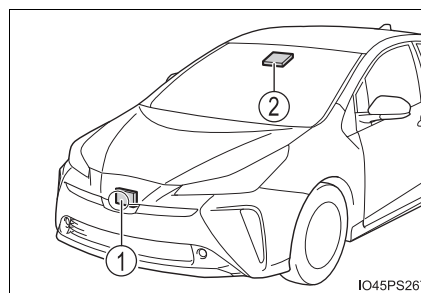

**⚠ WARNING**

**■ To avoid malfunction of the radar sensor**

Observe the following precautions.


Otherwise, the radar sensor may not operate properly, possibly leading to an accident resulting in death or serious injury.

- Keep the radar sensor and the radar sensor cover clean at all times.

- ① Radar sensor
- ② Radar sensor cover

If the front of the radar sensor or the front or back of the radar sensor cover is dirty or covered with water droplets, snow, etc., clean it.

Clean the radar sensor and radar sensor cover with a soft cloth to avoid damaging them.

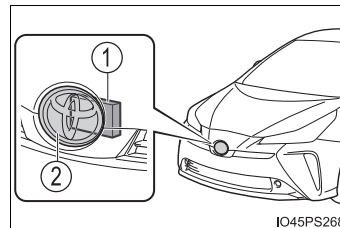

- Do not attach accessories, stickers (including transparent stickers) or other items to the radar sensor, radar sensor cover or surrounding area.
- Do not subject the radar sensor or its surrounding area to a strong impact. If the radar sensor, front grille, or front bumper has been subjected to a strong impact, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not disassemble the radar sensor.
- Do not modify or paint the radar sensor or radar sensor cover.
- In the following cases, the radar sensor must be recalibrated. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details.
  - When the radar sensor or front grille are removed and installed, or replaced
  - When the front bumper is replaced

**⚠ WARNING**

■ **To avoid malfunction of the front camera**

Observe the following precautions.


Otherwise, the front camera may not operate properly, possibly leading to an accident resulting in death or serious injury.

- Keep the windshield clean at all times.
  - If the windshield is dirty or covered with an oily film, water droplets, snow, etc., clean the windshield.
  - If a glass coating agent is applied to the windshield, it will still be necessary to use the windshield wipers to remove water droplets, etc. from the area of the windshield in front of the front camera.
  - If the inner side of the windshield where the front camera is installed is dirty, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- Do not attach objects, such as stickers, transparent stickers, etc., to the outer side of the windshield in front of the front camera (shaded area in the illustration).

A: From the top of the windshield to approximately 1 cm (0.4 in.) below the bottom of the front camera

B: Approximately 20 cm (7.9 in.) (Approximately 10 cm [4.0 in.] to the right and left from the center of the front camera)

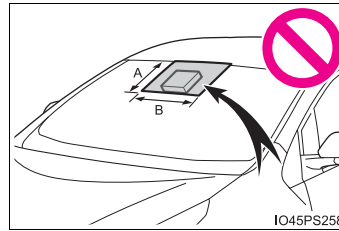

- If the part of the windshield in front of the front camera is fogged up or covered with condensation, or ice, use the windshield defogger to remove the fog, condensation, or ice. (→P. 462)
- If water droplets cannot be properly removed from the area of the windshield in front of the front camera by the windshield wipers, replace the wiper insert or wiper blade.
- Do not attach window tint to the windshield.
- Replace the windshield if it is damaged or cracked.  
After replacing the windshield, the front camera must be recalibrated. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details.
- Do not allow liquids to contact the front camera.
- Do not allow bright lights to shine into the front camera.

**WARNING**

- Do not dirty or damage the front camera.  
When cleaning the inside of the windshield, do not allow glass cleaner to contact the lens of the front camera. Also, do not touch the lens.  
If the lens is dirty or damaged, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not subject the front camera to a strong impact.
- Do not change the installation position or direction of the front camera or remove it.
- Do not disassemble the front camera.
- Do not modify any components of the vehicle around the front camera (inside rear view mirror, etc.) or ceiling.
- Do not attach any accessories to the hood, front grille or front bumper that may obstruct the front camera. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details.
- If a surfboard or other long object is to be mounted on the roof, make sure that it will not obstruct the front camera.
- Do not modify the headlights or other lights.



### ■ Certifications

Transmitter:	Model: DNMWR009 Operation frequency: 76.5 GHz Maximum output power: 416.87 mW or less
Manufacturer:	DENSO CORPORATION
Address:	1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661 Japan
<p>Hereby, DENSO CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <a href="https://www.denso.com/global/en/contact-us/doc/">https://www.denso.com/global/en/contact-us/doc/</a></p>	
01	
<p>DENSO CORPORATION vakuuttaa, että radiolaitetyyppi on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: <a href="https://www.denso.com/global/en/contact-us/doc/">https://www.denso.com/global/en/contact-us/doc/</a></p>	
02	
<p>Hierbij verklaar ik, DENSO CORPORATION, dat het type radioapparatuur conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: <a href="https://www.denso.com/global/en/contact-us/doc/">https://www.denso.com/global/en/contact-us/doc/</a></p>	
03	
<p>Le soussigné, DENSO CORPORATION, déclare que l'équipement radioélectrique du type est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <a href="https://www.denso.com/global/en/contact-us/doc/">https://www.denso.com/global/en/contact-us/doc/</a></p>	
04	

Härmed försäkrar DENSO CORPORATION att denna typ av radioutrustning överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:  
<https://www.denso.com/global/en/contact-us/doc/>

05

Hermed erklærer DENSO CORPORATION, at radioudstyrstypen er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:  
<https://www.denso.com/global/en/contact-us/doc/>

06

Hiermit erklärt DENSO CORPORATION, dass der Funkanlagentyp der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:  
<https://www.denso.com/global/en/contact-us/doc/>

07

Με την παρούσα ο/η DENSO CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:  
<https://www.denso.com/global/en/contact-us/doc/>

08

Il fabbricante, DENSO CORPORATION, dichiara che il tipo di apparecchiatura radio è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:  
<https://www.denso.com/global/en/contact-us/doc/>

09

<p>Por la presente, DENSO CORPORATION declara que el tipo de equipo radioeléctrico es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: <a href="https://www.denso.com/global/en/contact-us/doc/">https://www.denso.com/global/en/contact-us/doc/</a></p>	10
<p>O(a) abaixo assinado(a) DENSO CORPORATION declara que o presente tipo de equipamento de rádio está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: <a href="https://www.denso.com/global/en/contact-us/doc/">https://www.denso.com/global/en/contact-us/doc/</a></p>	11
<p>B'dan, DENSO CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: <a href="https://www.denso.com/global/en/contact-us/doc/">https://www.denso.com/global/en/contact-us/doc/</a></p>	12
<p>Käesolevaga deklareerib DENSO CORPORATION, et käesolev raadioseadme tüüp vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: <a href="https://www.denso.com/global/en/contact-us/doc/">https://www.denso.com/global/en/contact-us/doc/</a></p>	13
<p>DENSO CORPORATION igazolja, hogy a típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: <a href="https://www.denso.com/global/en/contact-us/doc/">https://www.denso.com/global/en/contact-us/doc/</a></p>	14

DENSO CORPORATION týmto vyhlasuje, že rádiové zariadenie typu je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

<https://www.denso.com/global/en/contact-us/doc/>

15

Týmto DENSO CORPORATION prohlašuje, že typ rádiového zařízení je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

<https://www.denso.com/global/en/contact-us/doc/>

16

DENSO CORPORATION potvrdzuje, da je tip radijske opreme skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

<https://www.denso.com/global/en/contact-us/doc/>

17

Aš, DENSO CORPORATION, patvirtinu, kad radijo įrenginių tipas atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

<https://www.denso.com/global/en/contact-us/doc/>

18

Ar šo DENSO CORPORATION deklarė, ka radioiekārta atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

<https://www.denso.com/global/en/contact-us/doc/>

19

DENSO CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE.  
Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:  
<https://www.denso.com/global/en/contact-us/doc/>

20

Hér með lýsir DENSO CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisýfirlýsing er einnig aðgengileg á eftirfarandi vefslóð:  
<https://www.denso.com/global/en/contact-us/doc/>

21

DENSO CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU.  
Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettsadresse:  
<https://www.denso.com/global/en/contact-us/doc/>


22

С настоящото DENSO CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:  
<https://www.denso.com/global/en/contact-us/doc/>

23

Prin prezenta, DENSO CORPORATION declară că tipul de echipamente radio este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:  
<https://www.denso.com/global/en/contact-us/doc/>

24

<p>DENSO CORPORATION ovime izjavljuje da je radijska oprema tipa u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: <a href="https://www.denso.com/global/en/contact-us/doc/">https://www.denso.com/global/en/contact-us/doc/</a></p>	25
<p>Овиме, DENSO CORPORATION изјављује да је радио опрема тип усаглашена са Директивом 2014/53/EU. Цео текст ЕУ декларације о усаглашености доступан је на следећој интернет адреси: <a href="https://www.denso.com/global/en/contact-us/doc/">https://www.denso.com/global/en/contact-us/doc/</a></p>	26
<p>Amb aquest document, DENSO CORPORATION declara que el tipus d'equipament radioelèctric es conforme a la Directiva 2014/53/UE. El text complet de la declaració UE de conformitat està disponible en la següent adreça d'Internet: <a href="https://www.denso.com/global/en/contact-us/doc/">https://www.denso.com/global/en/contact-us/doc/</a></p>	27
<p>İşbu belge; DENSO CORPORATION telsiz ekipmanı tipinin 2014/53/AB sayılı Direktife uygun olduğunu beyan eder. AB uygunluk beyanının tam metni aşağıdaki internet adresinde mevcuttur: <a href="https://www.denso.com/global/en/contact-us/doc/">https://www.denso.com/global/en/contact-us/doc/</a></p>	28
<p>Nepermjet kesaj, DENSO CORPORATION, deklaroj qe ky DNMWR009 eshte ne pajtim me kerkesat thelbesore dhe dispozitat e tjera perkatese te Direktives 1999/5/EC.</p>	29
 The latest "DECLARATION of CONFORMITY" (DoC) is available at the following address: <a href="https://www.denso.com/global/en/contact-us/doc/">https://www.denso.com/global/en/contact-us/doc/</a>	

► For vehicles sold in Israel

טיוטה מוטור אירופה מוֹסָא, שדרות דו בורגט 60-1140 בריסל,

בלגיה [www.toyota-europe.com](http://www.toyota-europe.com)

מוצר: מכ"מ התראה
סימן רשום: DENSO
ארץ ייצור: ראה מוצר
דגם: DNMWR009
שנת ייצור: ראה מוצר

■ **If a warning message is displayed on the multi-information display**

A system may be temporarily unavailable or there may be a malfunction in the system.

- In the following situations, perform the actions specified in the table. When the normal operating conditions are detected, the message will disappear and the system will become operational.

If the message does not disappear, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Situation	Actions
When the area around a camera is covered with dirt, moisture (fogged up, covered with condensation, ice, etc.), or other foreign matter	Using the wiper and A/C function, remove the dirt and other attached matter. (→P. 462)
When the temperature around the front camera is outside of the operational range, such as when the vehicle is in the sun or in an extremely cold environment	If the front camera is hot, such as after the vehicle had been parked in the sun, use the air conditioning system to decrease the temperature around the front camera. If a sunshade was used when the vehicle was parked, depending on its type, the sunlight reflected from the surface of the sunshade may cause the temperature of the front camera to become excessively high.
	If the front camera is cold, such after the vehicle is parked in an extremely cold environment, use the air conditioning system to increase the temperature around the front camera.
The area in front of the front camera is obstructed, such as when the hood is open or a sticker is attached to the part of the windshield in front of the front camera.	Close the hood, remove the sticker, etc. to clear the obstruction.
When “Pre-Collision System Unavailable” is displayed.	Check whether there is attached materials on the radar sensor and radar sensor cover, and if there is, remove it.



- In the following situations, if the situation has changed (or the vehicle has been driven for some time) and the normal operating conditions are detected, the message will disappear and the system will become operational.

If the message does not disappear, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- When the temperature around the radar sensor is outside of the operational range, such as when the vehicle is in the sun or in an extremely cold environment
- When the front camera cannot detect objects in front of the vehicle, such as when driving in the dark, snow, or fog, or when bright lights are shining into the front camera
- Depending on the conditions in the vicinity of the vehicle, the radar may judge the surrounding environment can not be properly recognized. In that case, "Pre-Collision System Unavailable" is displayed.

## **PCS (Pre-Collision System)\***

The pre-collision system uses a radar sensor and front camera to detect objects (→P. 296) in front of the vehicle. When the system determines that the possibility of a frontal collision with an object is high, a warning operates to urge the driver to take evasive action and the potential brake pressure is increased to help the driver avoid the collision. If the system determines that the possibility of a frontal collision with an object is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

The pre-collision system can be disabled/enabled and the warning timing can be changed. (→P. 300)

### **Detectable objects**

The system can detect the following:


- Vehicles
- Bicyclists
- Pedestrians

\*: If equipped

## System functions

### ■ Pre-collision warning

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and a warning message will be displayed on the multi-information display to urge the driver to take evasive action.

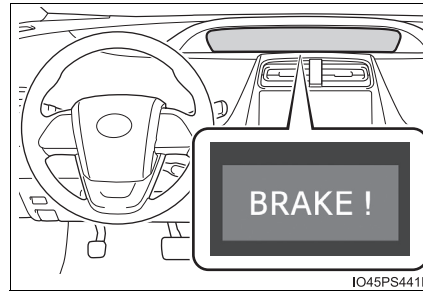

### ■ Pre-collision brake assist

When the system determines that the possibility of a frontal collision is high, the system applies greater braking force in relation to how strongly the brake pedal is depressed.

### ■ Pre-collision braking

If the system determines that the possibility of a frontal collision is extremely high, the brakes are automatically applied to help avoid the collision or reduce the impact of the collision.

**WARNING****■ Limitations of the pre-collision system**

- The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.  
Do not use the pre-collision system instead of normal braking operations under any circumstances. This system will not prevent collisions or lessen collision damage or injury in every situation. Do not overly rely on this system. Failure to do so may lead to an accident, resulting in death or serious injury.
- Although this system is designed to help avoid a collision or help reduce the impact of the collision, its effectiveness may change according to various conditions, therefore the system may not always be able to achieve the same level of performance.  
Read the following conditions carefully. Do not overly rely on this system and always drive carefully.
  - Conditions under which the system may operate even if there is no possibility of a collision: →P. 302
  - Conditions under which the system may not operate properly: →P. 304
- Do not attempt to test the operation of the pre-collision system yourself.  
Depending on the objects used for testing (dummies, cardboard objects imitating detectable objects, etc.), the system may not operate properly, possibly leading to an accident.

**■ Pre-collision braking**

- When the pre-collision braking function is operating, a large amount of braking force will be applied.
- If the vehicle is stopped by the operation of the pre-collision braking function, the pre-collision braking function operation will be canceled after approximately 2 seconds. Depress the brake pedal as necessary.
- The pre-collision braking function may not operate if certain operations are performed by the driver. If the accelerator pedal is being depressed strongly or the steering wheel is being turned, the system may determine that the driver is taking evasive action and possibly prevent the pre-collision braking function from operating.
- In some situations, while the pre-collision braking function is operating, operation of the function may be canceled if the accelerator pedal is depressed strongly or the steering wheel is turned and the system determines that the driver is taking evasive action.
- If the brake pedal is being depressed, the system may determine that the driver is taking evasive action and possibly delay the operation timing of the pre-collision braking function.


 **WARNING****■ When to disable the pre-collision system**

In the following situations, disable the system, as it may not operate properly, possibly leading to an accident resulting in death or serious injury:

- When the vehicle is being towed
- When your vehicle is towing another vehicle
- When transporting the vehicle via truck, boat, train or similar means of transportation
- When the vehicle is raised on a lift with the hybrid system on and the tires are allowed to rotate freely
- When inspecting the vehicle using a drum tester such as a chassis dynamometer or speedometer tester, or when using an on vehicle wheel balancer
- When a strong impact is applied to the front bumper or front grille, due to an accident or other reasons
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- When the vehicle is driven in a sporty manner or off-road
- When the tires are not properly inflated
- When the tires are very worn
- When tires of a size other than specified are installed
- When tire chains are installed
- When a compact spare tire or an emergency tire puncture repair kit is used
- If equipment (snow plow, etc.) that may obstruct the radar sensor or front camera is temporarily installed to the vehicle


### Changing settings of the pre-collision system

#### ■ Enabling/disabling the pre-collision system


The pre-collision system can be enabled/disabled on  (→P. 153) of the multi-information display.

The system is automatically enabled each time the power switch is turned to ON mode.

If the system is disabled, the PCS warning light will turn on and a message will be displayed on the multi-information display.

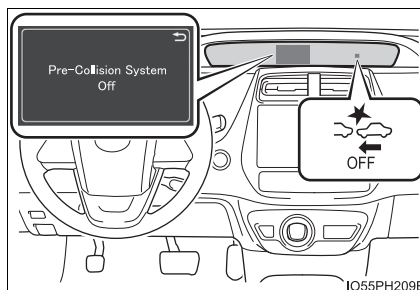


#### ■ Changing the pre-collision warning timing

The pre-collision warning timing can be changed on  (→P. 153) of the multi-information display.

The warning timing setting is retained when the power switch is turned off.

However, if the pre-collision system is disabled and re-enabled, the operation timing will return to the default setting (middle).

- ① Early
- ② Middle  
This is the default setting.
- ③ Late

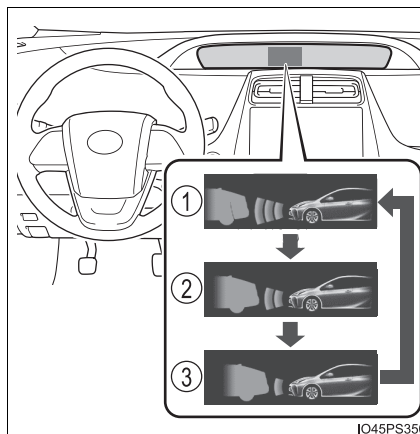

### ■ Operational conditions

The pre-collision system is enabled and the system determines that the possibility of a frontal collision with a detected object is high.

Each function is operational at the following speed

#### ● Pre-collision warning

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Vehicles	Approx. 10 to 180 km/h (7 to 110 mph)	Approx. 10 to 180 km/h (7 to 110 mph)
Bicyclists and pedestrians	Approx. 10 to 80 km/h (7 to 50 mph)	Approx. 10 to 80 km/h (7 to 50 mph)

#### ● Pre-collision brake assist

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Vehicles	Approx. 30 to 180 km/h (20 to 110 mph)	Approx. 30 to 180 km/h (20 to 110 mph)
Bicyclists and pedestrians	Approx. 30 to 80 km/h (20 to 50 mph)	Approx. 30 to 80 km/h (20 to 50 mph)

#### ● Pre-collision braking

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Vehicles	Approx. 10 to 180 km/h (7 to 110 mph)	Approx. 10 to 180 km/h (7 to 110 mph)
Bicyclists and pedestrians	Approx. 10 to 80 km/h (7 to 50 mph)	Approx. 10 to 80 km/h (7 to 50 mph)


The system may not operate in the following situations:

- If a 12-volt battery terminal has been disconnected and reconnected and then the vehicle has not been driven for a certain amount of time
- If the shift position is in R
- When the VSC OFF indicator is illuminated (only the pre-collision warning function will be operational)

■ **Object detection function**

The system detects objects based on their size, profile, motion, etc. However, an object may not be detected depending on the surrounding brightness and the motion, posture, and angle of the detected object, preventing the system from operating properly. (→P. 304)

The illustration shows an image of detectable objects.

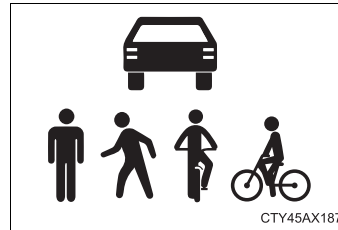


■ **Cancellation of the pre-collision braking**

If either of the following occur while the pre-collision braking function is operating, it will be canceled:

- The accelerator pedal is depressed strongly.
- The steering wheel is turned sharply or abruptly.

■ **Conditions under which the system may operate even if there is no possibility of a collision**


- In some situations such as the following, the system may determine that there is a possibility of a frontal collision and operate.
  - When passing a detectable object, etc.
  - When changing lanes while overtaking a detectable object, etc.
  - When approaching a detectable object in an adjacent lane or on the roadside, such as when changing the course of travel or driving on a winding road

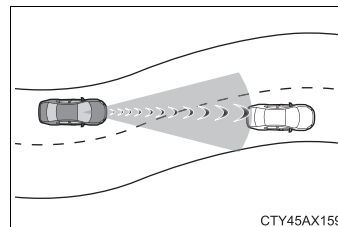


- When rapidly closing on a detectable object, etc.
- When approaching objects on the roadside, such as detectable objects, guardrails, utility poles, trees, or walls




- When there is a detectable object or other object by the roadside at the entrance of a curve

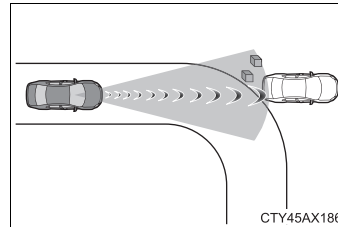


- When there are patterns or paint in front of your vehicle that may be mistaken for a detectable object
- When the front of your vehicle is hit by water, snow, dust, etc.
- When overtaking a detectable object that is changing lanes or making a right/left turn

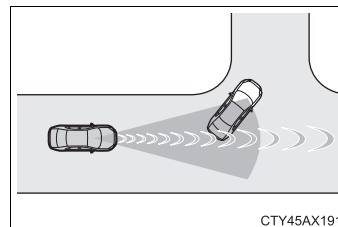

- When passing a detectable object in an oncoming lane that is stopped to make a right/left turn

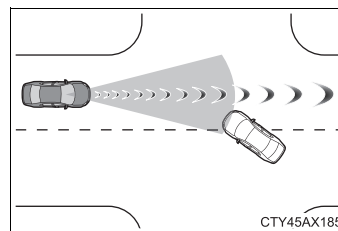


- When a detectable object approaches very close and then stops before entering the path of your vehicle
- If the front of your vehicle is raised or lowered, such as when on an uneven or undulating road surface
- When driving on a road surrounded by a structure, such as in a tunnel or on an iron bridge
- When there is a metal object (manhole cover, steel plate, etc.), steps, or a protrusion in front of your vehicle
- When passing under an object (road sign, billboard, etc.)

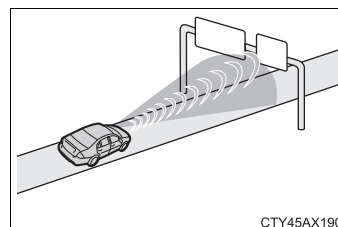

- When approaching an electric toll gate barrier, parking area barrier, or other barrier that opens and closes

- When using an automatic car wash
- When driving through or under objects that may contact your vehicle, such as thick grass, tree branches, or a banner

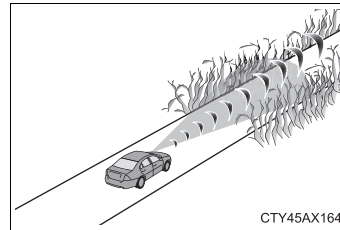


- When driving through steam or smoke
- When driving near an object that reflects radio waves, such as a large truck or guardrail
- When driving near a TV tower, broadcasting station, electric power plant, or other location where strong radio waves or electrical noise may be present

■ **Situations in which the system may not operate properly**


● In some situations such as the following, an object may not be detected by the radar sensor and front camera, preventing the system from operating properly:

- When a detectable object is approaching your vehicle
- When your vehicle or a detectable object is wobbling
- If a detectable object makes an abrupt maneuver (such as sudden swerving, acceleration or deceleration)
- When your vehicle approaches a detectable object rapidly
- When a detectable object is not directly in front of your vehicle

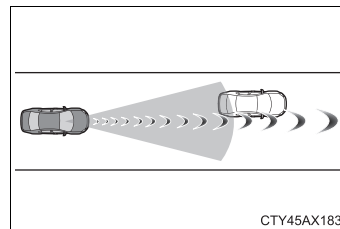


- When a detectable object is near a wall, fence, guardrail, manhole cover, vehicle, steel plate on the road, etc.
- When a detectable object is under a structure
- When part of a detectable object is hidden by an object, such as large baggage, an umbrella, or guardrail
- When multiple detectable objects are close together
- If the sun or other light is shining directly on a detectable object
- When a detectable object is a shade of white and looks extremely bright
- When a detectable object appears to be nearly the same color or brightness as its surroundings
- If a detectable object cuts or suddenly emerges in front of your vehicle
- When the front of your vehicle is hit by water, snow, dust, etc.

- When a very bright light ahead, such as the sun or the headlights of oncoming traffic, shines directly into the front camera
- When approaching the side or front of a vehicle ahead
- If a vehicle ahead is a motorcycle
- If a vehicle ahead is narrow, such as a personal mobility vehicle
- If a preceding vehicle has a small rear end, such as an unloaded truck
- If a preceding vehicle has a low rear end, such as a low bed trailer

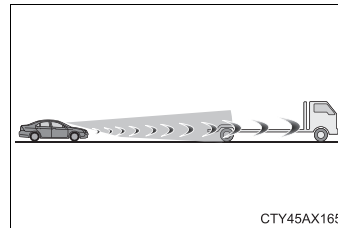


- If a vehicle ahead has extremely high ground clearance

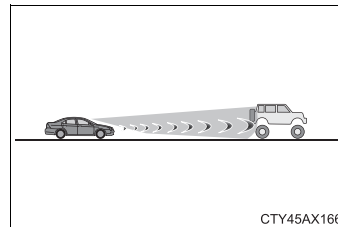

- If a vehicle ahead is carrying a load which protrudes past its rear bumper
- If a vehicle ahead is irregularly shaped, such as a tractor or side car
- If a vehicle ahead is a child sized bicycle, a bicycle that is carrying a large load, a bicycle ridden by more than one person, or a uniquely shaped bicycle (bicycle with a child seat, tandem bicycle, etc.)
- If a pedestrian/or the riding height of a bicyclist ahead is shorter than approximately 1 m (3.2 ft.) or taller than approximately 2 m (6.5 ft.)
- If a pedestrian/bicyclist is wearing oversized clothing (a rain coat, long skirt, etc.), making their silhouette obscure
- If a pedestrian is bending forward or squatting or bicyclist is bending forward
- If a pedestrian/bicyclist is moving fast
- If a pedestrian is pushing a stroller, wheelchair, bicycle or other vehicle
- When driving in inclement weather such as heavy rain, fog, snow or a sandstorm
- When driving through steam or smoke
- When the surrounding area is dim, such as at dawn or dusk, or while at night or in a tunnel, making a detectable object appear to be nearly the same color as its surroundings
- When driving in a place where the surrounding brightness changes suddenly, such as at the entrance or exit of a tunnel
- After the hybrid system has started the vehicle has not been driven for a certain amount of time
- While making a left/right turn and for a few seconds after making a left/right turn

- While driving on a curve and for a few seconds after driving on a curve
- If your vehicle is skidding
- If the front of the vehicle is raised or lowered

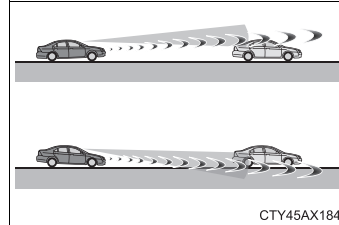

- If the wheels are misaligned
  - If a wiper blade is blocking the front camera
  - The vehicle is being driven at extremely high speeds
  - When driving on a hill
  - If the radar sensor or front camera is misaligned
- In some situations such as the following, sufficient braking force may not be obtained, preventing the system from performing properly:
- If the braking functions cannot operate to their full extent, such as when the brake parts are extremely cold, extremely hot, or wet
  - If the vehicle is not properly maintained (brakes or tires are excessively worn, improper tire inflation pressure, etc.)
  - When the vehicle is being driven on a gravel road or other slippery surface
- **If VSC is disabled**
- If VSC is disabled (→P. 443), the pre-collision brake assist and pre-collision braking functions are also disabled.
  - The PCS warning light will turn on and “VSC Turned Off Pre-Collision Brake System Unavailable” will be displayed on the multi-information display.


## LTA (Lane Tracing Assist)\*

### Summary of functions

While driving on a road with clear white (yellow) lane lines, the LTA system warns the driver if the vehicle may deviate from the current lane or course\*, and also can slightly operate the steering wheel to help avoid deviation from the lane or course\*. Also, while the dynamic radar cruise control with full-speed range is operating, this system will operate the steering wheel to maintain the vehicle's lane position.

The LTA system recognizes white (yellow) lane lines or a course\* using the front camera. Additionally, it detects preceding vehicles using the front camera and radar.

\*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

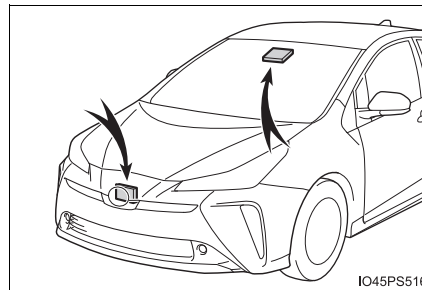

\*: If equipped

**WARNING****■ Before using LTA system**

- Do not rely solely upon the LTA system. The LTA system does not automatically drive the vehicle or reduce the amount of attention that must be paid to the area in front of the vehicle. The driver must always assume full responsibility for driving safely by paying careful attention to the surrounding conditions and operating the steering wheel to correct the path of the vehicle. Also, the driver must take adequate breaks when fatigued, such as from driving for a long period of time.
- Failure to perform appropriate driving operations and pay careful attention may lead to an accident, resulting in death or serious injury.
- When not using the LTA system, use the LTA switch to turn the system off.

**■ Situations unsuitable for LTA system**

In the following situations, use the LTA switch to turn the system off. Failure to do so may lead to an accident, resulting in death or serious injury.

- Vehicle is driven on a road surface which is slippery due to rainy weather, fallen snow, freezing, etc.
- Vehicle is driven on a snow-covered road.
- White (yellow) lines are difficult to see due to rain, snow, fog, dust, etc.
- Vehicle is driven in a temporary lane or restricted lane due to construction work.
- Vehicle is driven in a construction zone.
- A spare tire, tire chains, etc. are equipped.
- When the tires have been excessively worn, or when the tire inflation pressure is low.
- During emergency towing.

**■ Preventing LTA system malfunctions and operations performed by mistake**


- Do not modify the headlights or place stickers, etc. on the surface of the lights.
- Do not modify the suspension etc. If the suspension etc. needs to be replaced, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not install or place anything on the hood or grille. Also, do not install a grille guard (bull bars, kangaroo bar, etc.).
- If your windshield needs repairs, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**⚠ WARNING**


■ **Conditions in which functions may not operate properly**

In the following situations, the functions may not operate properly and the vehicle may depart from its lane. Drive safely by always paying careful attention to your surroundings and operate the steering wheel to correct the path of the vehicle without relying solely on the functions.

- When the follow-up cruising display is displayed (→P. 317) and the preceding vehicle changes lanes. (Your vehicle may follow the preceding vehicle and also change lanes.)

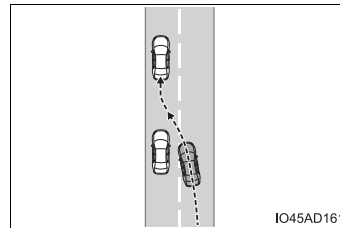


- When the follow-up cruising display is displayed (→P. 317) and the preceding vehicle is swaying. (Your vehicle may sway accordingly and depart from the lane.)
- When the follow-up cruising display is displayed (→P. 317) and the preceding vehicle departs from its lane. (Your vehicle may follow the preceding vehicle and depart from the lane.)
- When the follow-up cruising display is displayed (→P. 317) and the preceding vehicle is being driven extremely close to the left/right lane line. (Your vehicle may follow the preceding vehicle and depart from the lane.)
- Vehicle is being driven around a sharp curve.
- Objects or patterns that could be mistaken for white (yellow) lines are present on the side of the road (guardrails, reflective poles, etc.).

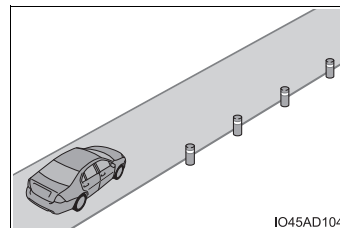


**⚠ WARNING**

- Vehicle is driven where the road diverges, merges, etc.

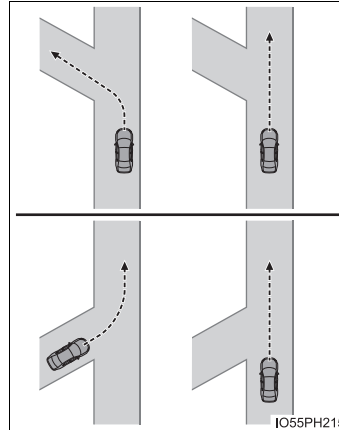

- Repair marks of asphalt, white (yellow) lines, etc. are present due to road repair.

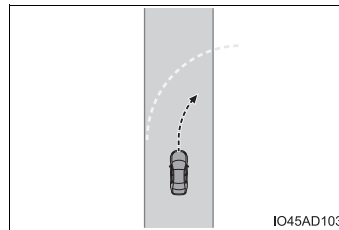

- There are shadows on the road that run parallel with, or cover, the white (yellow) lines.
- The vehicle is driven in an area without white (yellow) lines, such as in front of a tollgate or checkpoint, or at an intersection, etc.
- The white (yellow) lines are cracked, “Raised pavement marker” or stones are present.
- The white (yellow) lines cannot be seen or are difficult to see due to sand, etc.
- The vehicle is driven on a road surface that is wet due to rain, puddles, etc.
- The traffic lines are yellow (which may be more difficult to recognize than lines that are white).
- The white (yellow) lines cross over a curb, etc.
- The vehicle is driven on a bright surface, such as concrete.
- If the edge of the road is not clear or straight.
- The vehicle is driven on a surface that is bright due to reflected light, etc.



 WARNING


- The vehicle is driven in an area where the brightness changes suddenly, such as at the entrances and exits of tunnels, etc.
- Light from the headlights of an oncoming vehicle, the sun, etc. enters the camera.
- The vehicle is driven on a slope.
- The vehicle is driven on a road which tilts left or right, or a winding road.
- The vehicle is driven on an unpaved or rough road.
- The traffic lane is excessively narrow or wide.
- The vehicle is extremely tilted due to carrying heavy luggage or having improper tire pressure.
- The distance to the preceding vehicle is extremely short.
- The vehicle is moving up and down a large amount due to road conditions during driving (poor roads or road seams).
- When driving in a tunnel or at night with the headlights off or when a headlight is dim due to its lens being dirty or it being misaligned.
- The vehicle is struck by a crosswind.
- The vehicle is affected by wind from a vehicle driven in a nearby lane.
- The vehicle has just changed lanes or crossed an intersection.
- Tires which differ by structure, manufacturer, brand or tread pattern are used.
- When tires of a size other than specified are installed.
- Snow tires, etc. are equipped.
- The vehicle is being driven at extremely high speeds.

### Functions included in LTA system

#### ■ Lane departure alert function

When the system determines that the vehicle might depart from its lane or course\*, a warning is displayed on the multi-information display, and a warning buzzer will sound to alert the driver.

When the warning buzzer sounds, check the area around your vehicle and carefully operate the steering wheel to move the vehicle back to the center of the lane.

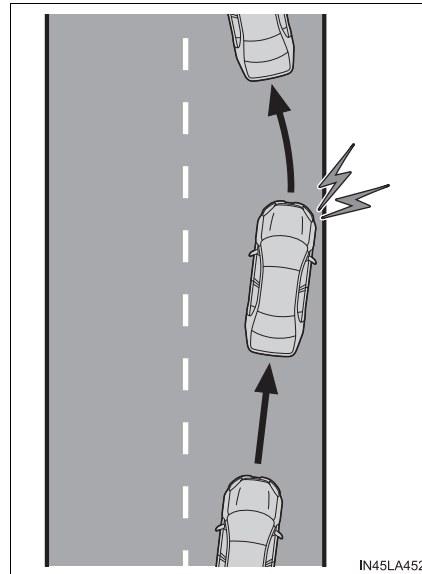


\*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

### ■ Steering assist function

When the system determines that the vehicle might depart from its lane or course\*, the system provides assistance as necessary by operating the steering wheel in small amounts for a short period of time to keep the vehicle in its lane.


If the system detects that the steering wheel has not been operated for a fixed amount of time or the steering wheel is not being firmly gripped, a warning is displayed on the multi-information display and the function is temporarily canceled.

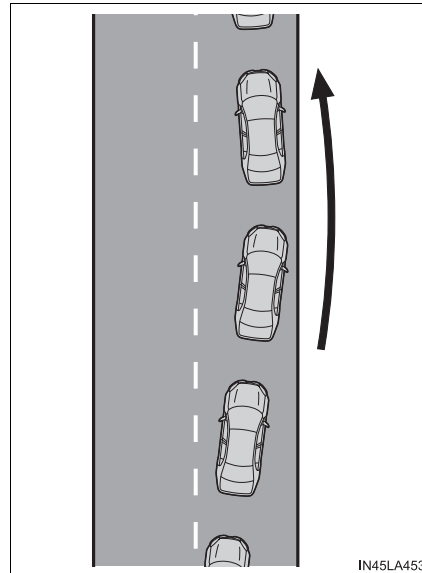

\*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

### ■ Vehicle sway warning function

When the vehicle is swaying within a lane, the warning buzzer will sound and a message will be displayed on the multi-information display to alert the driver.

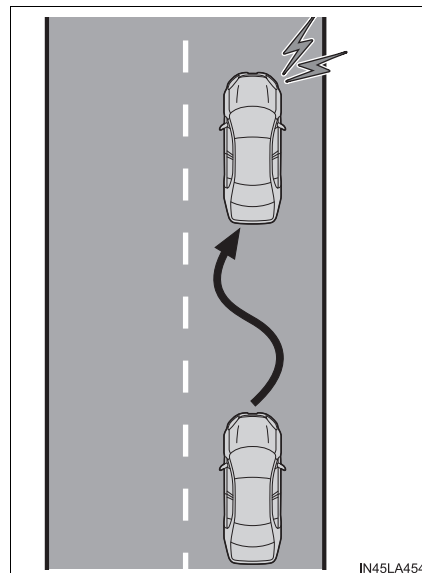


■ Lane centering function

This function is linked with dynamic radar cruise control with full-speed range and provides the required assistance by operating the steering wheel to keep the vehicle in its current lane.

When dynamic radar cruise control with full-speed range is not operating, the lane centering function does not operate.

In situations where the white (yellow) lane lines are difficult to see or are not visible, such as when in a traffic jam, this function will operate to help follow a preceding vehicle by monitoring the position of the preceding vehicle.

If the system detects that the steering wheel has not been operated for a fixed amount of time or the steering wheel is not being firmly gripped, a warning is displayed on the multi-information display and the function is temporarily canceled.

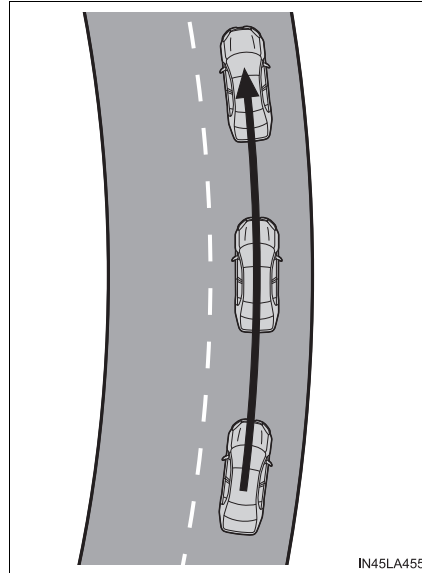


**Turning LTA system on**

Press the LTA switch to turn the LTA system on.

The LTA indicator illuminates and a message is displayed on the multi-information display.

Press the LTA switch again to turn the LTA system off.

When the LTA system is turned on or off, operation of the LTA system continues in the same condition the next time the hybrid system is started.

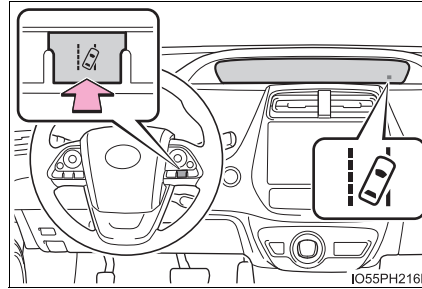


**Indications on combination meter**

① LTA indicator

The illumination condition of the indicator informs the driver of the system operation status.

Illuminated in green: LTA system is operating.

Flashing in orange: Lane departure alert function is operating.

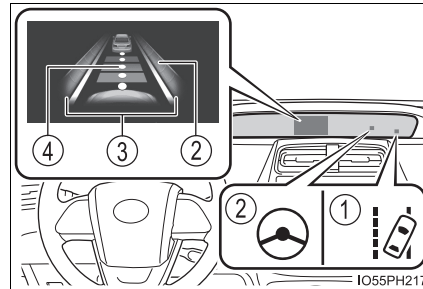


② Steering control indicator and operation display of steering wheel operation support

When that steering wheel assistance of the steering assist function or lane centering function is operating, the indicator illuminates and the operation display on the multi-information display is turned on.

③ Lane departure alert function display

Displayed when the multi-information display is switched to the driving assist system information screen.

► Inside of displayed lines is white

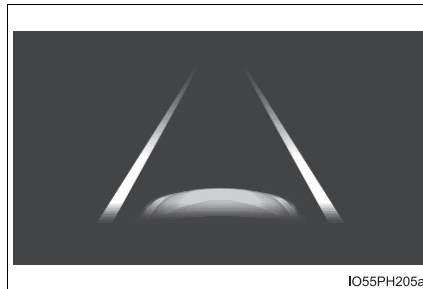


IO55PH205a

Indicates that the system is recognizing white (yellow) lines or a course\*. When the vehicle departs from its lane, the white line displayed on the side the vehicle departs from flashes orange.

\*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

► Inside of displayed lines is black

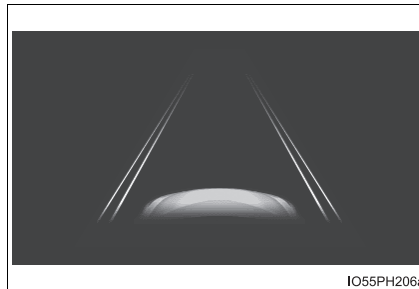

IO55PH206a

Indicates that the system is not able to recognize white (yellow) lines or a course\* or is temporarily canceled.

#### ④ Follow-up cruising display

Displayed when the multi-information display is switched to the driving assist system information screen.

Indicates that steering assist of the lane centering function is operating by monitoring the position of a preceding vehicle.

When the follow-up cruising display is displayed, if the preceding vehicle moves, your vehicle may move in the same way. Always pay careful attention to your surroundings and operate the steering wheel as necessary to correct the path of the vehicle and ensure safety.

### ■ Operation conditions of each function

#### ● Lane departure alert function

This function operates when all of the following conditions are met.



- LTA is turned on.
- Vehicle speed is approximately 50 km/h (32 mph) or more.\*1
- System recognizes white (yellow) lane lines or a course\*2. (When a white [yellow] line or course\*2 is recognized on only one side, the system will operate only for the recognized side.)
- Width of traffic lane is approximately 3 m (9.8 ft.) or more.
- Turn signal lever is not operated.
- Vehicle is not being driven around a sharp curve.
- No system malfunctions are detected. (→P. 322)

\*1: The function operates even if the vehicle speed is less than approximately 50 km/h (32 mph) when the lane centering function is operating.

\*2: Boundary between asphalt and the side of the road, such as grass, soil, or a curb



#### ● Steering assist function

This function operates when all of the following conditions are met in addition to the operation conditions for the lane departure alert function.

- Setting for  ("LTA Steering Assist Mode") in  of the multi-information display is set to "On". (→P. 127)
- Vehicle is not accelerated or decelerated by a fixed amount or more.
- Steering wheel is not operated with a steering force level suitable for changing lanes.
- ABS, VSC, TRC and PCS are not operating.
- TRC or VSC is not turned off.
- Hands off steering wheel warning is not displayed. (→P. 321)

#### ● Vehicle sway warning function




This function operates when all of the following conditions are met.

- Setting for  ("Lane Sway Warning Status") in  of the multi-information display is set to "On". (→P. 127)
- Vehicle speed is approximately 50 km/h (32 mph) or more.
- Width of traffic lane is approximately 3 m (9.8 ft.) or more.
- No system malfunctions are detected. (→P. 322)



- Lane centering function

This function operates when all of the following conditions are met.

- LTA is turned on.
- Setting for  (“LTA Steering Assist Mode”) and  (“LTA Center Trace On/Off”) in  of the multi-information display are set to “On”. (→P. 127)
- This function recognizes white (yellow) lane lines or the position of a preceding vehicle (except when the preceding vehicle is small, such as a motorcycle).
- The dynamic radar cruise control with full-speed range is operating in vehicle-to-vehicle distance control mode.
- Width of traffic lane is approximately 3 to 4 m (10 to 13 ft.).
- Turn signal lever is not operated.
- Vehicle is not being driven around a sharp curve.
- No system malfunctions are detected. (→P. 322)
- Vehicle does not accelerate or decelerate by a fixed amount or more.
- Steering wheel is not operated with a steering force level suitable for changing lanes.
- ABS, VSC, TRC and PCS are not operating.
- TRC or VSC is not turned off.
- Hands off steering wheel warning is not displayed. (→P. 321)
- The vehicle is being driven in the center of a lane.
- Steering assist function is not operating.

■ **Temporary cancelation of functions**

- When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. (→P. 318)
- If the operation conditions (→P. 319) are no longer met while the lane centering function is operating, the buzzer may sound to indicate that the function has been temporarily canceled.

■ **Steering assist function/lane centering function**

- Depending on the vehicle speed, lane departure situation, road conditions, etc., the driver may not feel the function is operating or the function may not operate at all.
- The steering control of the function is overridden by the driver's steering wheel operation.
- Do not attempt to test the operation of the steering assist function.

■ **Lane departure alert function**

- The warning buzzer may be difficult to hear due to external noise, audio playback, etc.
- If the edge of the course\* is not clear or straight, the lane departure alert function may not operate.
- Do not attempt to test the operation of the lane departure alert function.

\*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

### ■ Hands off steering wheel warning

In the following situations, a warning message urging the driver to hold the steering wheel and the symbol shown in the illustration are displayed on the multi-information display to warn the driver. The warning stops when the system determines that the driver holds the steering wheel. Always keep your hands on the steering wheel when using this system, regardless of warnings.



- When the system determines that the driver is driving without holding the steering wheel while the system is operating

If the driver continues to keep their hands off of the steering wheel, the buzzer sounds, the driver is warned and the function is temporarily canceled. This warning also operates in the same way when the driver continuously operates the steering wheel only a small amount.

- When the system determines that the vehicle may deviate from the lane while driving around a curve while the lane centering function is operating

Depending on the vehicle condition and road conditions, the warning may not operate. Also, if the system determines that the vehicle is driving around a curve, warnings will occur earlier than during straight-lane driving.

- When the system determines that the driver is driving without holding the steering wheel while the steering wheel assist of the steering assist function is operating.

If the driver continues to keep their hands off of the steering wheel and the steering wheel assist is operating, the buzzer sounds and the driver is warned. Each time the buzzer sounds, the continuing time of the buzzer becomes longer.

### ■ Vehicle sway warning function

When the system determines that the vehicle is swaying while the vehicle sway warning function is operating, a buzzer sounds and a warning message urging the driver to rest and the symbol shown in the illustration are simultaneously displayed on the multi-information display.



Depending on the vehicle and road conditions, the warning may not operate.

■ **Warning message**

If the following warning message is displayed on the multi-information display and the LTA indicator illuminates in orange, follow the appropriate troubleshooting procedure. Also, if a different warning message is displayed, follow the instructions displayed on the screen.

● “LTA Malfunction Visit Your Dealer”

The system may not be operating properly. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

● “LTA Unavailable”

The system is temporarily canceled due to a malfunction in a sensor other than the front camera. Turn the LTA system off, wait for a little while, and then turn the LTA system back on.

● “LTA Unavailable at Current Speed”

The function cannot be used as the vehicle speed exceeds the LTA operation range. Drive slower.


■ **Customization**

Function settings can be changed.  
(Customizable features: →P. 153)

## RSA (Road Sign Assist)\*

### Summary of function

The RSA system recognizes specific road signs using the front camera and/or navigation system (when speed limit information is available) to provide information to the driver via the display.

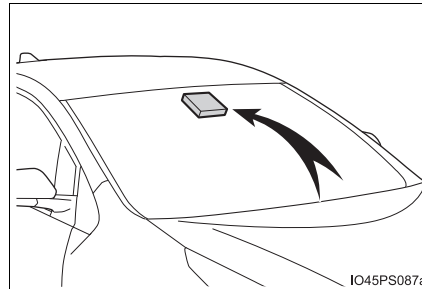

If the system judges that the vehicle is being driven over the speed limit, performing prohibited actions, etc., according to the recognized road signs, it notifies the driver through a visual notification and notification buzzer.

### WARNING

#### ■ Before using the RSA


Do not rely solely upon the RSA system. RSA is a system which supports the driver by providing information, but it is not a replacement for a driver's own vision and awareness. Drive safely by always paying careful attention to the traffic rules.

\*: If equipped


**Indication on the main display or multi-information display**

When the front camera recognizes a sign and/or information of a sign is available from the navigation system, the sign will be displayed on the main display or multi-information display.

- When the driving assist system information is selected in multi-information display, a maximum of 2 signs can be displayed on the multi-information display. (→P. 127)

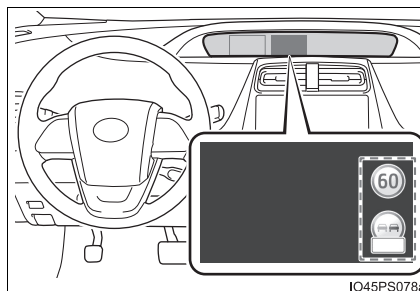

- When a tab other than the driving assist system information is selected, the following types of road signs will be displayed on the main display. (→P. 117)

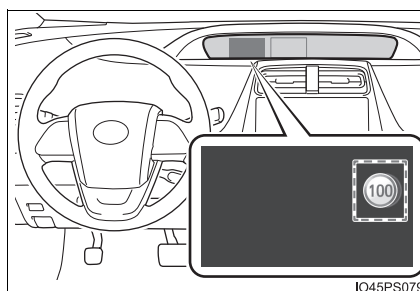

- Speed limit begins/ends sign
- Speed limit related information sign (Motorway, Expressway, Urban area, Residential area)
- End of prohibition sign
- No-entry sign\* (when notification is necessary)
- Speed limit with supplemental sign (Ramp way only)

\*: For vehicles with navigation system

If signs other than speed limit signs are recognized, they will be displayed in an overlapping stack under the current speed limit sign.


### Supported types of road signs

The following types of road signs, including electronic signs and blinking signs, are displayed.


A non-official (not meeting the Vienna Convention) or a recently introduced traffic sign may not be displayed.

- Speed limit road signs\*




\*: No speed limit information  is displayed when speed limit sign or speed limit related sign information is not available.


- Speed limit related information\*<sup>1, 2</sup>

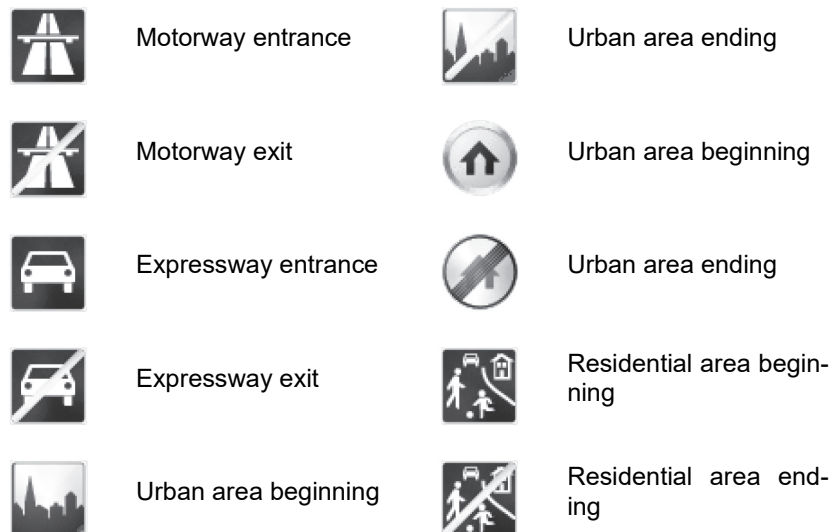

\*<sup>1</sup>: Displayed when a sign is recognized but speed limit information for the road is not available from the navigation system

\*<sup>2</sup>: No speed limit information  is displayed when speed limit sign or speed limit related sign information is not available.

 - No-overtaking road signs



● Other road signs



No-entry\*



Stop



End of prohibition

\*: For vehicles with navigation system

● Speed limit with supplemental mark\*<sup>1</sup>



Wet



Exit ramp on right\*<sup>3</sup>



Rain



Exit ramp on left\*<sup>3</sup>



Ice



Time



Supplemental mark exists\*<sup>2</sup>

\*<sup>1</sup>: Displayed simultaneously with speed limit.

\*<sup>2</sup>: Contents not recognized.

\*<sup>3</sup>: If the turn signal indicator is not operated when changing lanes, the mark does not display.



### Notification function

In the following situations, the RSA system will notify the driver.

- When the vehicle speed exceeds the speed notification threshold of the speed limit sign displayed, the sign display will be emphasized and a buzzer will sound.
- When the RSA system recognizes a no-entry sign and detects that the vehicle has entered a no-entry area based on the map information of the navigation system, the no-entry sign flashes and a buzzer will sound. (For vehicles with navigation system)
- If it is detected that your vehicle is overtaking when a no overtaking sign is displayed on the multi-information display, the displayed sign will flash and a buzzer will sound.

Depending on the situation, traffic environment (traffic direction, speed unit) may be detected incorrectly and a notification function may not operate properly.

### Setting procedure

→P. 153

### Automatic turn-off of RSA sign display

One or more signs automatically turn off in the following situations.

- No sign has been recognized for a certain distance.
- The road changes due to a left or right turn, etc.

### Conditions in which the function may not operate or detect correctly

In the following situations, RSA does not operate normally and may not recognize signs, display the incorrect sign, etc. However, this does not indicate a malfunction.

- The front camera is misaligned due to a strong impact being applied to the sensor, etc.
- Dirt, snow, stickers, etc. are on the windshield near the front camera.
- In inclement weather such as heavy rain, fog, snow or sand storms
- Light from an oncoming vehicle, the sun, etc. enters the front camera.
- The sign is dirty, faded, tilted or bent.
- The contrast of electronic sign is low.
- All or part of the sign is hidden by the leaves of a tree, a pole, etc.
- The sign is only visible to the front camera for a short amount of time.
- The driving scene (turning, lane change, etc.) is judged incorrectly.
- If a sign not appropriate for the currently traveled lane, but the sign exists directly after a freeway branches, or in an adjacent lane just before merging.

- Stickers are attached to the rear of the preceding vehicle.
- A sign resembling a system compatible sign is recognized.
- Side road speed signs may be detected and displayed (if positioned in sight of the front camera) while the vehicle is traveling on the main road.
- Roundabout exit road speed signs may be detected and displayed (if positioned in sight of the front camera) while traveling on a roundabout.
- The front of the vehicle is raised or lowered due to the carried load
- The surrounding brightness is not sufficient or changes suddenly.
- When a sign intended for trucks, etc. is recognized.
- The vehicle is driven in a country with a different direction of traffic.
- The navigation system map data is outdated.
- The navigation system is not operating.
- The speed information displayed on the meter and on the navigation system may be different due to the navigation system using map data.

■ **Speed limit sign display**

If the power switch was last turned off while a speed limit sign was displayed on the main display or multi-information display, the same sign displays again when the power switch is turned to ON mode.

■ **If “RSA Malfunction Visit Your Dealer” is shown**

The system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Customization**

Some functions can be customized. (Customizable features: →P. 670)

## Dynamic radar cruise control with full-speed range\*

### Summary of functions


In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates, decelerates and stops to match the speed changes of the preceding vehicle even if the accelerator pedal is not depressed. In constant speed control mode, the vehicle runs at a fixed speed.

Use the dynamic radar cruise control with full-speed range on free-ways and highways.

- Vehicle-to-vehicle distance control mode (→P. 333)
- Constant speed control mode (→P. 340)

### System Components

- ① Vehicle-to-vehicle distance switch
- ② Indicators
- ③ Multi-information display
- ④ Set speed
- ⑤ Cruise control switch

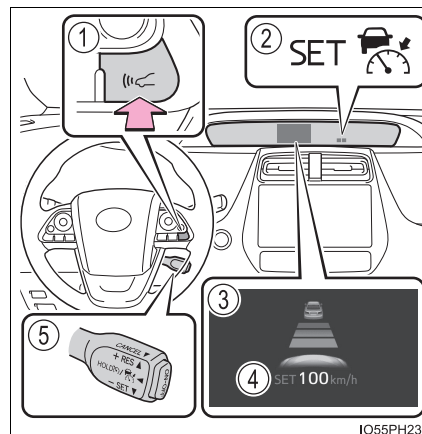

4

Driving

\*: If equipped

**WARNING****■ Before using dynamic radar cruise control with full-speed range**

- Driving safely is the sole responsibility of the driver. Do not rely solely on the system, and drive safely by always paying careful attention to your surroundings.
- The dynamic radar cruise control with full-speed range provides driving assistance to reduce the driver's burden. However, there are limitations to the assistance provided.  
Read the following conditions carefully. Do not overly rely on this system and always drive carefully.
  - When the sensor may not be correctly detecting the vehicle ahead:  
→P. 344
  - Conditions under which the vehicle-to-vehicle distance control mode may not function correctly: →P. 345
- Set the speed appropriately depending on the speed limit, traffic flow, road conditions, weather conditions, etc. The driver is responsible for checking the set speed.
- Even when the system is functioning normally, the condition of the preceding vehicle as detected by the system may differ from the condition observed by the driver. Therefore, the driver must always remain alert, assess the danger of each situation and drive safely. Relying solely on this system or assuming the system ensures safety while driving can lead to an accident, resulting in death or serious injury.
- Switch the dynamic radar cruise control with full-speed range setting to off using the "ON-OFF" button when not in use.

 WARNING**■ Cautions regarding the driving assist systems**

Observe the following precautions, as there are limitations to the assistance provided by the system.

Failure to do so may cause an accident resulting in death or serious injury.

**● Assisting the driver to measure following distance**

The dynamic radar cruise control with full-speed range is only intended to help the driver in determining the following distance between the driver's own vehicle and a designated vehicle traveling ahead. It is not a mechanism that allows careless or inattentive driving, and it is not a system that can assist the driver in low-visibility conditions. It is still necessary for driver to pay close attention to the vehicle's surroundings.

**● Assisting the driver to judge proper following distance**

The dynamic radar cruise control with full-speed range determines whether the following distance between the driver's own vehicle and a designated vehicle traveling ahead is within a set range. It is not capable of making any other type of judgement. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of danger in any given situation.

**● Assisting the driver to operate the vehicle**

The dynamic radar cruise control with full-speed range does not include functions which will prevent or avoid collisions with vehicles ahead of your vehicle. Therefore, if there is ever any possibility of danger, the driver must take immediate and direct control of the vehicle and act appropriately in order to ensure the safety of all involved.

 WARNING**■ Situations unsuitable for dynamic radar cruise control with full-speed range**

Do not use dynamic radar cruise control with full-speed range in any of the following situations.


Doing so may result in inappropriate speed control and could cause an accident resulting in death or serious injury.

- Roads where there are pedestrians, cyclists, etc.
- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep downhills, or where there are sudden changes between sharp up and down gradients  
Vehicle speed may exceed the set speed when driving down a steep hill.
- At entrances to freeways and highways
- When weather conditions are bad enough that they may prevent the sensors from detecting correctly (fog, snow, sandstorm, heavy rain, etc.)
- When there is rain, snow, etc. on the front surface of the radar or front camera
- In traffic conditions that require frequent repeated acceleration and deceleration
- When your vehicle is towing a trailer\* or during emergency towing  
\*: Vehicles that can tow a trailer: →P. 233
- When an approach warning buzzer is heard often

**Driving in vehicle-to-vehicle distance control mode**

This mode employs a radar to detect the presence of vehicles up to approximately 100 m (328 ft.) ahead, determines the current vehicle-to-vehicle following distance, and operates to maintain a suitable following distance from the vehicle ahead. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance switch.

When driving on downhill slopes, the vehicle-to-vehicle distance may become shorter.

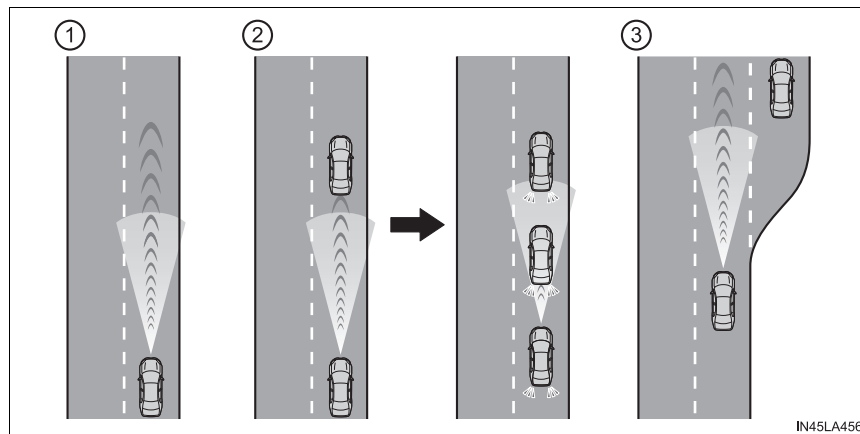

① Example of constant speed cruising

When there are no vehicles ahead

The vehicle travels at the speed set by the driver.

② Example of deceleration cruising and follow-up cruising

When a preceding vehicle driving slower than the set speed appears

When a vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system applies the brakes (the stop lights will come on at this time). The system will respond to changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver. Approach warning warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.

When the vehicle ahead of you stops, your vehicle will also stop (vehicle is stopped by system control). After the vehicle ahead starts off, pushing the cruise control lever up or depressing the accelerator pedal (start-off operation) will resume follow-up cruising. If the start-off operation is not performed, system control continues to keep your vehicle stopped.

When the turn signal lever is operated and your vehicle moves to an overtaking lane while driving at 80 km/h (50 mph) or more, the vehicle will accelerate to help to overtake a passing vehicle.

The system's identification of what is an overtaking lane may be determined solely based on the location of the steering wheel in the vehicle (left side driver position versus right side driver position.) If the vehicle is driven to a region where the overtaking lane is on a different side from where the vehicle is normally driven, the vehicle may accelerate when the turn signal lever is operated in the opposite direction to the overtaking lane (e.g., if the driver normally operates the vehicle in a region where the overtaking lane is to the right but then drives to a region where the overtaking lane is to the left, the vehicle may accelerate when the right turn signal is activated).

③ Example of acceleration

When there are no longer any preceding vehicles driving slower than the set speed

The system accelerates until the set speed is reached. The system then returns to constant speed cruising.



### Setting the vehicle speed (vehicle-to-vehicle distance control mode)

- 1 Press the “ON-OFF” button to activate the cruise control.

Dynamic radar cruise control indicator will come on and a message will be displayed on the multi-information display.



Press the button again to deactivate the cruise control.

If the “ON-OFF” button is pressed and held for 1.5 seconds or more, the system turns on in constant speed control mode. (→P. 340)

- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 30 km/h [20 mph]) and push the lever down to set the speed.

Cruise control “SET” indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

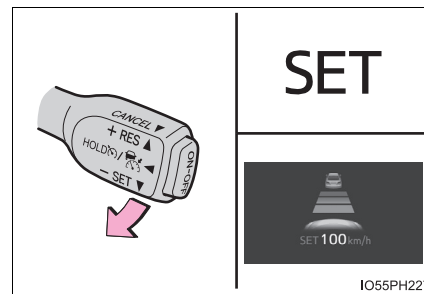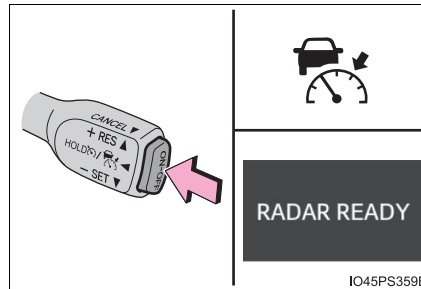

### Adjusting the set speed

#### ● Adjusting the set speed by the lever


To change the set speed, operate the lever until the desired set speed is displayed.

##### ① Increases the speed

(Except when the vehicle has been stopped by system control in vehicle-to-vehicle distance control mode)

##### ② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

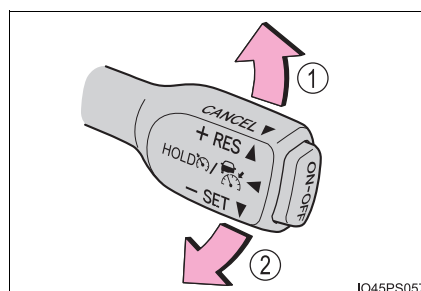

Large adjustment: Hold the lever up or down to change the speed, and release when the desired speed is reached.

In the vehicle-to-vehicle distance control mode, the set speed will be increased or decreased as follows:

Fine adjustment: By 1 km/h (0.6 mph)<sup>\*1</sup> or 1 mph (1.6 km/h)<sup>\*2</sup> each time the lever is operated

Large adjustment: Increases or decreases in 5 km/h (3.1 mph)<sup>\*1</sup> or 5 mph (8 km/h)<sup>\*2</sup> increments for as long as the lever is held

In the constant speed control mode (→P. 340), the set speed will be increased or decreased as follows:

Fine adjustment: By 1 km/h (0.6 mph)<sup>\*1</sup> or 1 mph (1.6 km/h)<sup>\*2</sup> each time the lever is operated

Large adjustment: The speed will continue to change while the lever is held.

\*1: When the set speed is shown in "km/h"

\*2: When the set speed is shown in "MPH"


#### ● Increasing the set speed by the accelerator pedal

- ① Accelerate with accelerator pedal operation to the desired vehicle speed.
- ② Push the lever down.

### Changing the vehicle-to-vehicle distance (vehicle-to-vehicle distance control mode)

Pressing the switch changes the vehicle-to-vehicle distance as follows:

- ① Long
- ② Medium
- ③ Short

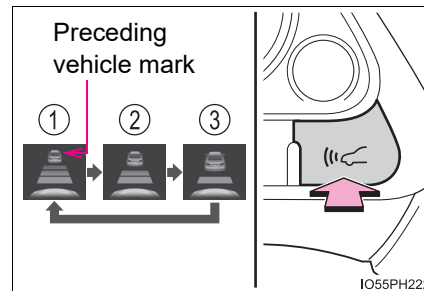

### Vehicle-to-vehicle distance settings (vehicle-to-vehicle distance control mode)


Select a distance from the table below. Note that the distances shown correspond to a vehicle speed of 80 km/h (50 mph). Vehicle-to-vehicle distance increases/decreases in accordance with vehicle speed. When the vehicle is stopped by system control, the vehicle stops at a certain vehicle-to-vehicle distance depending on the situation.

Distance options	Vehicle-to-vehicle distance
Long	Approximately 50 m (160 ft.)
Medium	Approximately 40 m (130 ft.)
Short	Approximately 30 m (100 ft.)

**Resuming follow-up cruising when the vehicle has been stopped by system control (vehicle-to-vehicle distance control mode)**

After the vehicle ahead of you starts off, push the lever up.

Your vehicle will also resume follow-up cruising if the accelerator pedal is depressed after the vehicle ahead of you starts off.

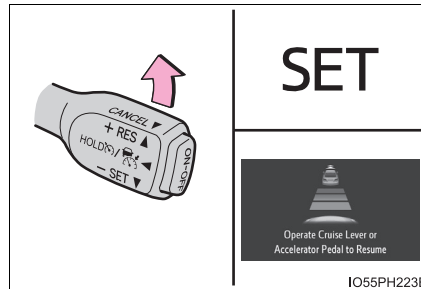


**Canceling and resuming the speed control**

- ① Pulling the lever toward you cancels the speed control.

The speed control is also canceled when the brake pedal is depressed.


(When the vehicle has been stopped by system control, depressing the brake pedal does not cancel the setting.)

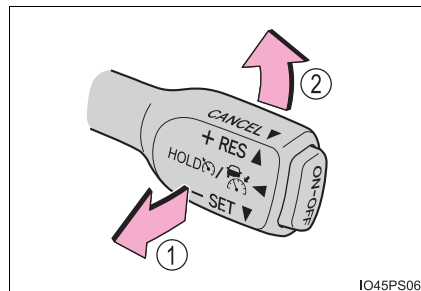

- ② Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.

**Approach warning (vehicle-to-vehicle distance control mode)**

When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Depress the brake pedal to ensure an appropriate vehicle-to-vehicle distance.

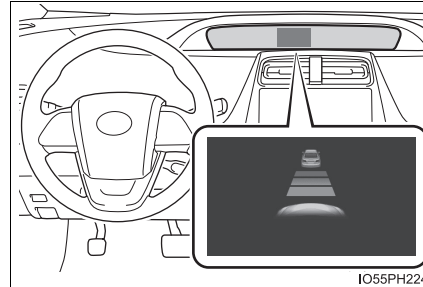**■ Warnings may not occur when**

In the following instances, warnings may not occur even when the vehicle-to-vehicle distance is small.

- When the speed of the preceding vehicle matches or exceeds your vehicle speed
- When the preceding vehicle is traveling at an extremely slow speed
- Immediately after the cruise control speed was set
- When depressing the accelerator pedal


### Selecting constant speed control mode

When constant speed control mode is selected, your vehicle will maintain a set speed without controlling the vehicle-to-vehicle distance. Select this mode only when vehicle-to-vehicle distance control mode does not function correctly due to a dirty radar, etc.

- 1 With the cruise control off, press and hold the “ON-OFF” button for 1.5 seconds or more.

Immediately after the “ON-OFF” button is pressed, the dynamic radar cruise control indicator will come on. Afterwards, it switches to the cruise control indicator.

Switching to constant speed control mode is only possible when operating the lever with the cruise control off.

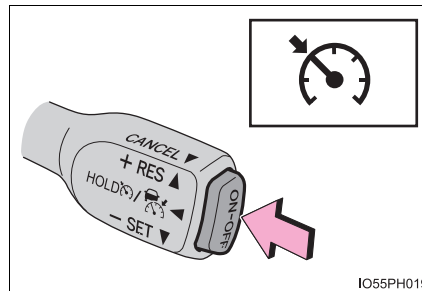


- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 30 km/h [20 mph]) and push the lever down to set the speed.

Cruise control “SET” indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

Adjusting the speed setting: →P. 336

Canceling and resuming the speed setting: →P. 338

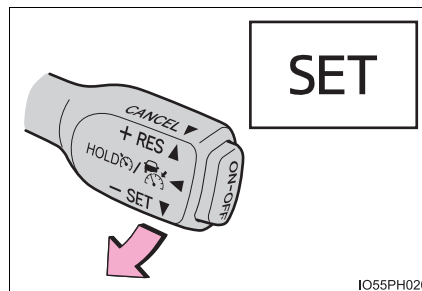


### Dynamic Radar Cruise Control with Road Sign Assist (vehicles with RSA [Road Sign Assist])

When this function is enabled and the system is operating in vehicle-to-vehicle distance control mode (→P. 333), when a speed limit sign is detected, the recognized speed limit will be displayed with an up/down arrow. The set speed can be increased/reduced to the recognized speed limit by pushing the lever up or down.

- When the current set speed is lower than the recognized speed limit


Push the lever up.

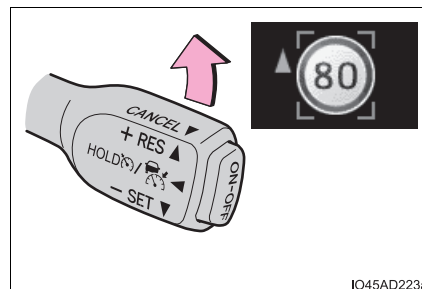

IO45AD223a


- When the current set speed is higher than the recognized speed limit

Push the lever down.

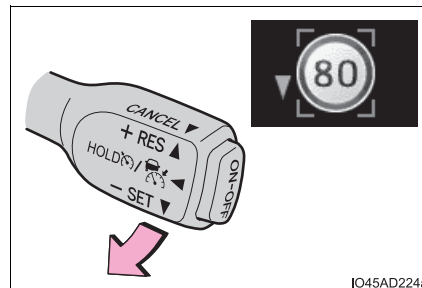

IO45AD224a

### Enabling/Disabling the Dynamic Radar Cruise Control with Road Sign Assist (vehicles with RSA [Road Sign Assist])

Dynamic Radar Cruise Control with Road Sign Assist can be enabled/disabled in  on the multi-information display. (→P. 127)

When the Dynamic Radar Cruise Control with Road Sign Assist is operating, while driving down a hill, the vehicle speed may exceed the set speed.

In this case, the displayed set vehicle speed will be highlighted and a buzzer will sound to alert the driver.

**■ Dynamic radar cruise control with full-speed range can be set when**

- The shift position is in D.
- The desired set speed can be set when the vehicle speed is approximately 30 km/h (20 mph) or more.  
(However, when the vehicle speed is set while driving at below approximately 30 km/h [20 mph], the set speed will be set to approximately 30 km/h [20 mph].)

**■ Accelerating after setting the vehicle speed**

The vehicle can accelerate by operating the accelerator pedal. After accelerating, the set speed resumes. However, during vehicle-to-vehicle distance control mode, the vehicle speed may decrease below the set speed in order to maintain the distance to the preceding vehicle.

**■ When the vehicle stops while follow-up cruising**

- Pushing the lever up while the vehicle ahead stops will resume follow-up cruising if the vehicle ahead starts off within approximately 3 seconds after the lever is pushed up.
- If the vehicle ahead starts off within 3 seconds after your vehicle stops, follow-up cruising will be resumed.

**■ Automatic cancelation of vehicle-to-vehicle distance control mode**

Vehicle-to-vehicle distance control mode is automatically canceled in the following situations.

- VSC is activated.
- TRC is activated for a period of time.
- When the VSC or TRC system is turned off.
- The sensor cannot detect correctly because it is covered in some way.
- When the brake control or output restriction control of a driving support system operates. (For example: Pre-Collision System, Drive-Start Control)
- The parking brake is operated.
- The vehicle is stopped by system control on a steep incline.
- The following are detected when the vehicle has been stopped by system control:
  - The driver is not wearing a seat belt.
  - The driver's door is opened.
  - The vehicle has been stopped for about 3 minutes.

The shift position may automatically change to P. (→P. 256)

If vehicle-to-vehicle distance control mode is automatically canceled for any reasons other than the above, there may be a malfunction in the system. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.



**■ Automatic cancelation of constant speed control mode**

Constant speed control mode is automatically canceled in the following situations:

- Actual vehicle speed is more than approximately 16 km/h (10 mph) below the set vehicle speed.
- Actual vehicle speed falls below approximately 30 km/h (20 mph).
- VSC is activated.
- TRC is activated for a period of time.
- When the VSC or TRC system is turned off.
- When the brake control or output restriction control of a driving support system operates. (For example: Pre-Collision System, Drive-Start Control)

If constant speed control mode is automatically canceled for any reasons other than the above, there may be a malfunction in the system. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**■ The Dynamic Radar Cruise Control with Road Sign Assist may not operate properly when (vehicles with RSA [Road Sign Assist])**

As the Dynamic Radar Cruise Control with Road Sign Assist may not operate properly in conditions in which RSA may not operate or detect correctly (→P. 327), when using this function, make sure to check the speed limit sign displayed.

In the following situations, the set speed may not be changed to the recognized speed limit by pushing the lever up or down.

- If speed limit information is not available
- When the recognized speed limit is the same as the set speed
- When the recognized speed limit is outside of the speed range that the dynamic radar cruise control system can operate

**■ Brake operation**

A brake operation sound may be heard and the brake pedal response may change, but these are not malfunctions.

**■ Warning messages and buzzers for dynamic radar cruise control with full-speed range**


Warning messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution while driving. If a warning message is shown on the multi-information display, read the message and follow the instructions. (→P. 294, 589)

■ **When the sensor may not be correctly detecting the vehicle ahead**


In the case of the following and depending on the conditions, operate the brake pedal when deceleration of the system is insufficient or operate the accelerator pedal when acceleration is required.

As the sensor may not be able to correctly detect these types of vehicles, the approach warning (→P. 339) may not be activated.


- Vehicles that cut in suddenly
- Vehicles traveling at low speeds
- Vehicles that are not moving in the same lane
- Vehicles with small rear ends (trailers with no load on board, etc.)

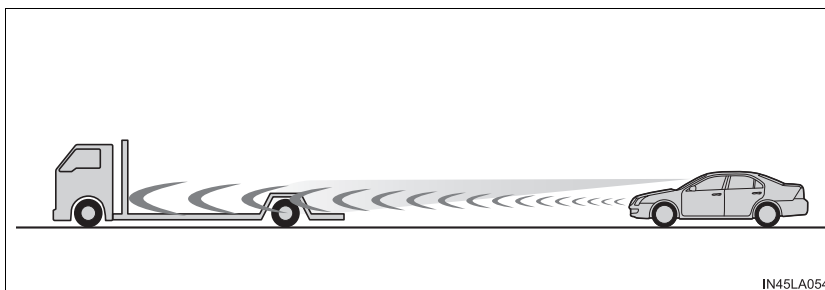

- Motorcycles traveling in the same lane
- When water or snow thrown up by the surrounding vehicles hinders the detecting of the sensor
- When your vehicle is pointing upwards (caused by a heavy load in the luggage compartment, etc.)

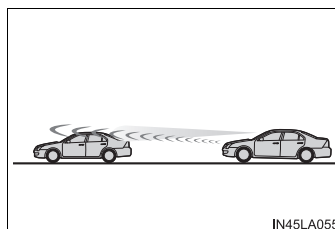

- Preceding vehicle has an extremely high ground clearance

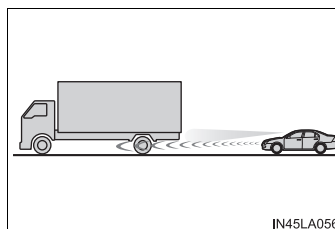


**■ Conditions under which the vehicle-to-vehicle distance control mode may not function correctly**


In the case of the following conditions, operate the brake pedal (or accelerator pedal, depending on the situation) as necessary.

As the sensor may not be able to correctly detect vehicles ahead, the system may not operate properly.

- When the road curves or when the lanes are narrow

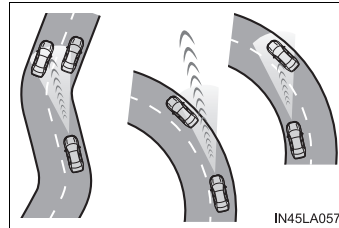

- When steering wheel operation or your position in the lane is unstable

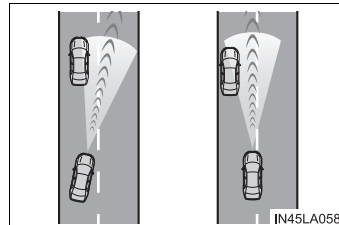

- When the vehicle ahead of you decelerates suddenly
- When driving on a road surrounded by a structure, such as in a tunnel or on a bridge
- While the vehicle speed is decreasing to the set speed after the vehicle accelerates by depressing the accelerator pedal


## Cruise control\*

### Summary of functions

Use the cruise control to maintain a set speed without depressing the accelerator pedal.

Use the cruise control on freeways and highways.


- ① Indicators
- ② Cruise control switch
- ③ Set speed

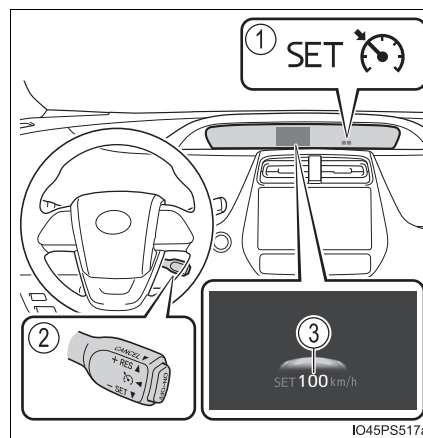


\*: If equipped

**Setting the vehicle speed**

- 1 Press the “ON-OFF” button to activate the cruise control.  
Cruise control indicator will come on.  
Press the button again to deactivate the cruise control.

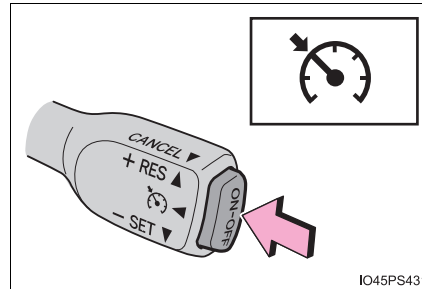

- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (above approximately 30 km/h [20 mph]) and push the lever down to set the speed.  
Cruise control “SET” indicator will come on.  
The vehicle speed at the moment the lever is released becomes the set speed.

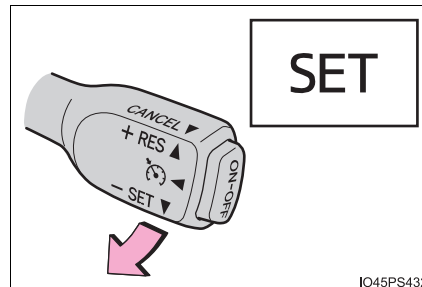


### Adjusting the set speed

To change the set speed, operate the lever until the desired set speed is obtained.

- ① Increases the speed
- ② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever in the desired direction.

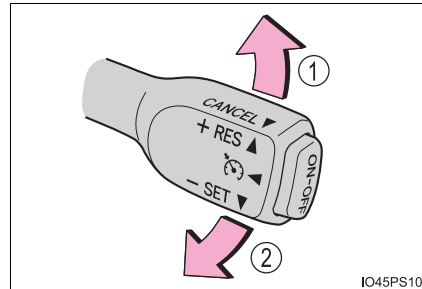

The set speed will be increased or decreased as follows:

Fine adjustment: By approximately 1 km/h (0.6 mph) or 1 mph (1.6 km/h) each time the lever is operated

Large adjustment: The set speed can be increased or decreased continually until the lever is released.


### Canceling and resuming the constant speed control

- ① Pulling the lever toward you cancels the constant speed control.

The speed setting is also canceled when the brake pedal is depressed.

- ② Pushing the lever up resumes the constant speed control.

However, resuming is available when the vehicle speed is more than approximately 30 km/h (20 mph).

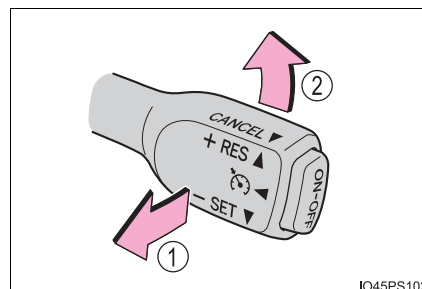

**■ Cruise control can be set when**

- The shift position is in D.
- Vehicle speed is above approximately 30 km/h (20 mph).

**■ Accelerating after setting the vehicle speed**

- The vehicle can be accelerated by operating accelerator pedal. After acceleration, the set speed resumes.
- Even without canceling the cruise control, the set speed can be increased by first accelerating the vehicle to the desired speed and then pushing the lever down to set the new speed.

**■ Automatic cancelation of cruise control**

Cruise control is automatically canceled in any of the following situations.

- Actual vehicle speed falls more than approximately 16 km/h (10 mph) below the set speed.  
At this time, the memorized set speed is not retained.
- Actual vehicle speed is below approximately 30 km/h (20 mph).
- VSC is activated.
- TRC is activated for a period of time.
- When the VSC or TRC system is turned off.

**■ If “Cruise Control Malfunction Visit Your Dealer” is displayed on the multi-information display**

Press the “ON-OFF” button once to deactivate the system, and then press the button again to reactivate the system.

If the cruise control speed cannot be set or if the cruise control cancels immediately after being activated, there may be a malfunction in the cruise control system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**WARNING****■ To avoid operating the cruise control by mistake**

Switch the cruise control off using the “ON-OFF” button when not in use.

**■ Situations unsuitable for cruise control**

Do not use cruise control in any of the following situations.

Doing so may result in loss of control and could cause an accident resulting in death or serious injury.

- Roads where there are pedestrians, cyclists, etc.
- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep downhill  
Vehicle speed may exceed the set speed when driving down a steep hill.

- When your vehicle is towing a trailer\* or during emergency towing

\*: Vehicles that can tow a trailer: →P. 233




## Driving mode select switch

In response to driving conditions, one of 3 driving modes can be selected.

### Driving modes

Repeatedly press the switch until the system changes to the intended driving mode.

Each time the switch is pressed, the driving mode changes in the following order and the "ECO MODE" and "PWR MODE" indicators turn on or off accordingly.

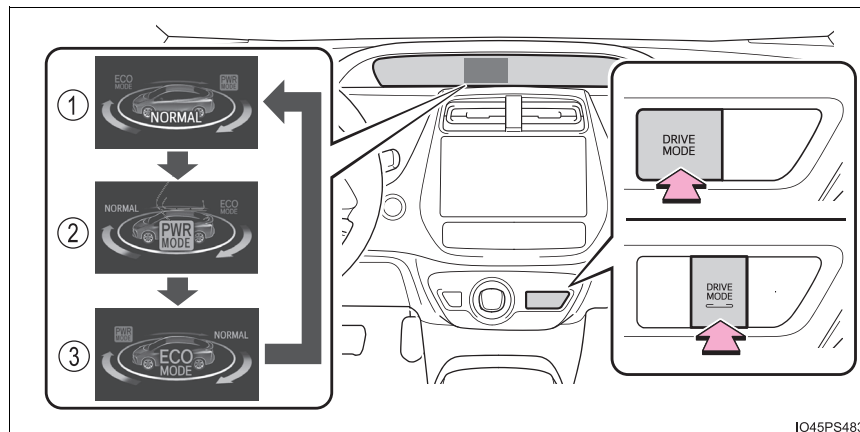

① Normal mode

Suitable for normal driving.

When normal mode is selected, the “ECO MODE” and “PWR MODE” indicators turn off.

② Power mode

Suitable for when crisp handling and enhanced accelerator response are desired, such as when driving on mountainous roads.

When power mode is selected, the “PWR MODE” indicator will illuminate on the main display.

③ Eco drive mode

Suitable for driving that improves fuel economy by generating torque in response to accelerator pedal operations more smoothly than in normal mode.

When Eco drive mode is selected, the “ECO MODE” indicator will illuminate on the main display.

While the air conditioning is being used, the system automatically switches to air conditioning eco mode (→P. 462), allowing for driving that leads to even better fuel economy.

---

■ **When canceling Eco drive mode/power mode**

- Press the switch again. Also, power mode will be canceled automatically when the power switch is turned off.
- However, Normal mode and Eco drive mode will not be canceled automatically until the switch is pressed, even if the power switch is turned off.

■ **Switching the driving mode when in EV drive mode**

→P. 251

## Speed limiter\*


A desired maximum speed can be set using the cruise control switch.

The speed limiter prevents vehicle speed from exceeding the set speed.

### Setting the vehicle speed


Press the switch to activate the speed limiter.

Press the switch once more to deactivate the speed limiter.

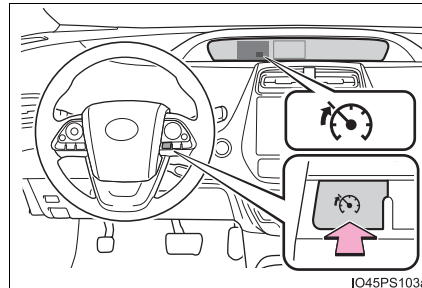

Accelerate or decelerate to the desired speed and push the lever down to set the desired maximum speed.


If the lever is pushed down while the vehicle is stopped or being driven of 30 km/h (19 mph) or less, the set speed will be 30 km/h (19 mph).

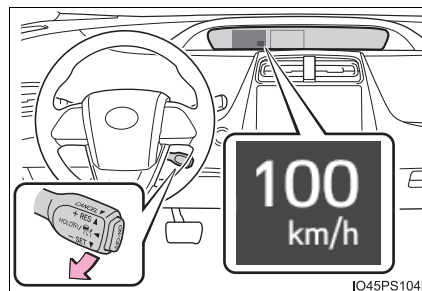

\*: If equipped

### Adjusting the speed setting


- ① Increase speed
  - ② Decrease speed
- Hold the lever until the desired speed setting is obtained.  
Fine adjustment of the set speed can be made by lightly pushing the lever up or down and releasing it.

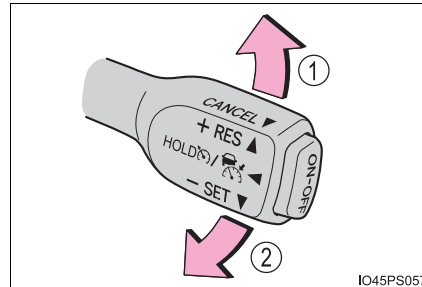

IO45PS057

### Canceling and resuming the speed limiter

- ① Cancel
  - ② Resume
- Pull the lever towards you to cancel the speed limiter.  
To resume use of the speed limiter, push the lever up.

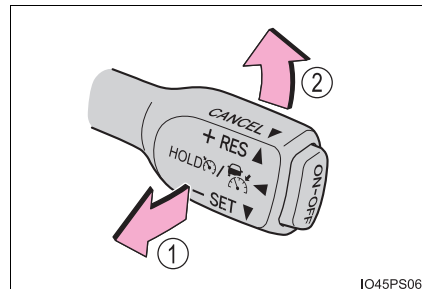


IO45PS060

### Exceeding the set speed

In the following situations, the vehicle speed exceeds the set speed, and main display will be highlighted:

- When fully depressing the accelerator pedal
- When driving down a hill (a buzzer also sounds)

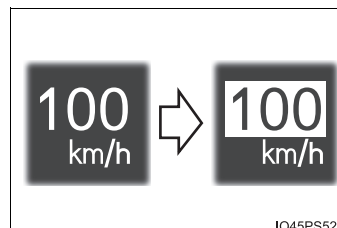

IO45PS524

#### ■ Automatic speed limiter cancellation

The set speed is automatically canceled in any of the situations:

- Cruise control is activated.
- When the VSC system and/or TRC system is turned off.

#### ■ If the “Speed Limiter Malfunction Visit Your Dealer” is displayed on the multi-information display

Stop in a safe location, turn the power switch off and back on again, and then set the speed limiter. If the speed limiter cannot be set, the system may be malfunctioning. Even though the vehicle can be driven normally, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### WARNING

##### ■ To avoid operating the speed limiter by mistake

Keep the speed limiter switch off when not in use.

##### ■ Situations unsuitable for speed limiter

Do not use the speed limiter in either of the following situations. Doing so may result in control of the vehicle being lost and could cause a serious or fatal accident.

- On slippery roads, such as those covered with rain, ice or snow
- On steep hills
- When towing a trailer or emergency towing

#### NOTICE

When a warning is issued using the meter display and buzzer after exceeding the set speed limit on a steep decline, depress the brake pedal to decelerate.


## BSM (Blind Spot Monitor)\*

### Summary of the Blind Spot Monitor

The Blind Spot Monitor is a system that has 2 functions;

- The Blind Spot Monitor function  
Assists the driver in making the decision when changing lanes
- The Rear Crossing Traffic Alert function  
Assists the driver when backing up

These functions use same sensors.

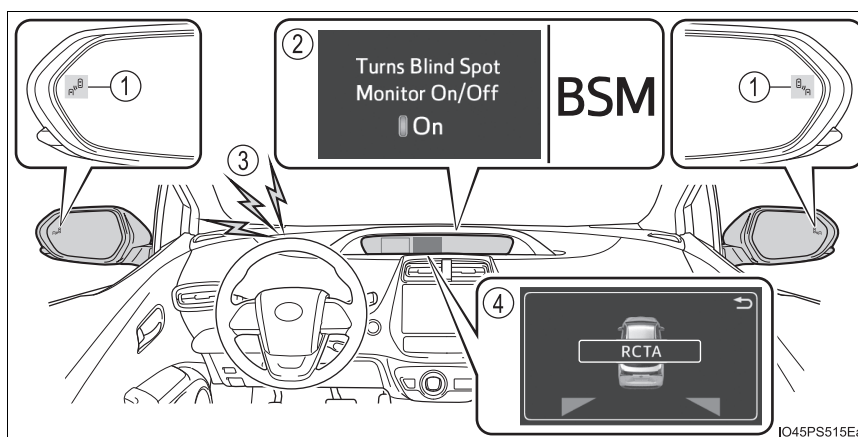

① Outside rear view mirror indicators

**Blind Spot Monitor function:**

When a vehicle is detected in the blind spot, the outside rear view mirror indicator comes on while the turn signal lever is not operated. If the turn signal lever is operated toward the detected side, the outside rear view mirror indicator flashes.

**Rear Crossing Traffic Alert function:**

When a vehicle approaching from the right or left rear of the vehicle is detected, the outside rear view mirror indicators flash.

\*: If equipped

② The Blind Spot Monitor on/off screen and indicator

The Blind Spot Monitor function and Rear Crossing Traffic Alert function can be switched on and off using the multi-information display. (→P. 153)  
When switched on, the BSM indicator illuminates on the meter and the buzzer sounds.


③ Rear Crossing Traffic Alert buzzer (Rear Crossing Traffic Alert function only)


When a vehicle approaching from the right or left rear of the vehicle is detected, a buzzer sounds from the driver's side instrument panel.

④ RCTA detection screen (RCTA function only)

If a vehicle approaching from the right or left at the rear of the vehicle is detected, the RCTA detection screen will be shown on the multi-information display.

### Changing settings of the Blind Spot Monitor function and Rear Crossing Traffic Alert function

The Blind Spot Monitor function and Rear Crossing Traffic Alert function can be enabled/disabled on the  screen (→P. 153) of the multi-information display.

Once the systems are disabled, the systems will not be enabled until they are enabled by the  screen of multi-information display again. (The systems are not automatically enabled even when the hybrid system is restarted.)

■ **The BSM outside rear view mirror indicators visibility**

When under strong sunlight, the outside rear view mirror indicator may be difficult to see.

■ **The Rear Crossing Traffic Alert buzzer hearing**

The Rear Crossing Traffic Alert buzzer may be difficult to hear over loud noises such as high audio volume.

■ **When “Blind Spot Monitor Unavailable” is shown on the multi-information display**

The sensor voltage has become abnormal, water, snow mud, etc., may be built up in the vicinity of the sensor area of bumper (→P. 371). Removing the water, snow, mud, etc., from the vicinity of the sensor area bumper should return it to normal. Also, the sensor may not function normally when used in extremely hot or cold weather.

■ **When “Blind Spot Monitor System Malfunction Visit Your Dealer” is shown on the multi-information display**

There may be a sensor malfunction or misaligned. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Customization**

The brightness of the outside rear view mirror indicators can be changed. (Customizable features: →P. 670)



■ **Certifications for the Blind Spot Monitor**

**Manufacturer Postal Address**

ADC Automotive Distance Control Systems GmbH  
Peter-Dornier-Strasse 10, 88131 Lindau, Germany

**ОПРОСТЕНА ЕС ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ**

С настоящото ADC Automotive Distance Control Systems GmbH декларира, че този тип радиосъоръжение SRR3-A е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: <http://continental.automotive-approvals.com/>

радиочестотната лента или ленти, в която или които работи радиосъоръжението: 24.05–24.25 GHz

максималната радиочестотна мощност, излъчвана в радиочестотната лента или ленти, в която или които работи радиосъоръжението: 100mW (20 dBm) Peak EIRP

**DECLARACIÓN UE DE CONFORMIDAD SIMPLIFICADA**

Por la presente, ADC Automotive Distance Control Systems GmbH declara que el tipo de equipo radioeléctrico SRR3-A es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: <http://continental.automotive-approvals.com/>

Banda o bandas de frecuencia en las que opera el equipo radioeléctrico: 24.05–24.25 GHz

Potencia máxima de radiofrecuencia transmitida en la banda o bandas de frecuencia en las que opera el equipo radioeléctrico: 100mW (20 dBm) Peak EIRP

**ZJEDNODUŠENÉ EU PROHLÁŠENÍ O SHODĚ**

Tímto ADC Automotive Distance Control Systems GmbH prohlašuje, že typ rádio-vého zařízení SRR3-A je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

<http://continental.automotive-approvals.com/>

Kmitočtové pásmo (kmitočtová pásma), v němž (v nichž) rádiové zařízení pracuje: 24.05–24.25 GHz

Maximální radiofrekvenční výkon vysílaný v kmitočtovém pásmu (v kmitočtových pásmech), v němž (v nichž) je rádiové zařízení provozováno: 100mW (20 dBm) Peak EIRP

**FORENKLET EU-OVERENSSTEMMELSESESKLÆRING**

Hermed erklærer ADC Automotive Distance Control Systems GmbH, at ra-dioudstyrstypen SRR3-A er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

<http://continental.automotive-approvals.com/>

Frekvensbånd, som radioudstyret fungerer på: 24.05–24.25 GHz

Maksimal radiofrekvenseffekt, der udsendes i de frekvensbånd, som radioudstyret fungerer på: 100mW (20 dBm) Peak EIRP

**VEREINFACHTE EU-KONFORMITÄTSERKLÄRUNG**

Hiermit erklärt ADC Automotive Distance Control Systems GmbH, dass der Funkanlagentyp SRR3-A der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

<http://continental.automotive-approvals.com/>

Das Frequenzband oder die Frequenzbänder, in dem bzw. denen die Funkanlage betrieben wird: 24.05–24.25 GHz

Die in dem Frequenzband oder den Frequenzbändern, in dem bzw. denen die Funkanlage betrieben wird, abgestrahlte maximale Sendeleistung: 100mW (20 dBm) Peak EIRP

**LIHTSUSTATUD ELI VASTAVUSDEKLARATSIOON**

Käesolevaga deklareerib ADC Automotive Distance Control Systems GmbH, et käesolev raadioseadme tüüp SRR3-A vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

<http://continental.automotive-approvals.com/>

Sagedusriba(d), millel raadioseade töötab: 24.05–24.25 GHz

Raadioseadme töösagedus(t)el edastatav maksimaalne saatevõimsus: 100mW (20 dBm) Peak EIRP

**ΑΠΛΟΥΣΤΕΥΜΕΝΗ ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ ΕΕ**

Με την παρούσα ο/η ADC Automotive Distance Control Systems GmbH, δηλώνει ότι ο ραδιοεξοπλισμός SRR3-A πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

<http://continental.automotive-approvals.com/>

Οι ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεξοπλισμός: 24.05–24.25 GHz

η μέγιστη ραδιοηλεκτρική ισχύς στις ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεξοπλισμός: 100mW (20 dBm) Peak EIRP

**SIMPLIFIED EU DECLARATION OF CONFORMITY**

Hereby, ADC Automotive Distance Control Systems GmbH declares that the radio equipment type SRR3-A is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://continental.automotive-approvals.com/>

Frequency band(s) in which the radio equipment operates: 24.05–24.25 GHz

Maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates: 100mW (20 dBm) Peak EIRP

**DECLARATION UE DE CONFORMITE SIMPLIFIEE**

Le soussigné, ADC Automotive Distance Control Systems GmbH, déclare que l'équipement radioélectrique du type SRR3-A est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

<http://continental.automotive-approvals.com/>

Bandes de fréquences utilisées par l'équipement radioélectrique: 24.05–24.25 GHz

Puissance de radiofréquence maximale transmise sur les bandes de fréquences utilisées par l'équipement radioélectrique: 100mW (20 dBm) Peak EIRP

**POJEDNOSTAVLJENA EU IZJAVA O SUKLADNOSTI**

ADC Automotive Distance Control Systems GmbH ovime izjavljuje da je radijska oprema tipa SRR3-A u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi::

<http://continental.automotive-approvals.com/>

Frekvencijski pojas (frekvencijski pojasi) u kojem (kojima) radijska oprema radi: 24.05–24.25 GHz

Najveća radiofrekvencijska snaga koja se prenosi u frekvencijskom pojasu (frekvencijskim pojasi) u kojem (kojima) radijska oprema radi: 100mW (20 dBm) Peak EIRP

**DICHIARAZIONE DI CONFORMITÀ UE SEMPLIFICATA**

Il fabbricante, ADC Automotive Distance Control Systems GmbH, dichiara che il tipo di apparecchiatura radio SRR3-A è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

<http://continental.automotive-approvals.com/>

Bande di frequenza di funzionamento dell'apparecchiatura radio: 24.05–24.25 GHz

Massima potenza a radiofrequenza trasmessa nelle bande di frequenza in cui opera l'apparecchiatura radio: 100mW (20 dBm) Peak EIRP

**VIENKĀRŠOTA ES ATBILSTĪBAS DEKLARĀCIJA**

Ar šo ADC Automotive Distance Control Systems GmbH deklarē, ka radioiekārta SRR3-A atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

<http://continental.automotive-approvals.com/>

Frekvenču joslu(-as), kurā(-ās) radioiekārtas darbojas: 24.05–24.25 GHz

Frekvenču joslā(-ās), kurā(-ās) darbojas radioiekārtas, maksimālo pārraidītā signāla jaudu.: 100mW (20 dBm) Peak EIRP

**SUPAPRASTINTA ES ATITIKTIES DEKLARACIJA**

Aš, ADC Automotive Distance Control Systems GmbH, patvirtinu, kad radijo įrenginių tipas SRR3-A atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:  
<http://continental.automotive-approvals.com/>

Dažnių juosta (-os), kurioje (-iose) veikia radijo įrenginiai: 24.05–24.25 GHz

Didžiausia radijo dažnių galia, perduodama toje (tose) dažnių juostoje (-ose), kurioje (-iose) veikia radijo įrenginiai: 100mW (20 dBm) Peak EIRP

**EGYSZERŪSÍTETT EU-MEGFELELŐSÉGI NYILATKOZAT**

ADC Automotive Distance Control Systems GmbH igazolja, hogy a SRR3-A típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen::  
<http://continental.automotive-approvals.com/>

Az(ok) a frekvenciasáv(ok), amely(ek)en a rádióberendezés működik:  
24.05–24.25 GHz

Az abban a frekvenciasávban vagy azokban a frekvenciasávokban továbbított maximális jelerősség, amely(ek)ben a rádióberendezés üzemel:  
100mW (20 dBm) Peak EIRP

**DIKJARAZZJONI SSIMPLIFIKATA TA' KONFORMITÀ TAL-UE**

B'dan, ADC Automotive Distance Control Systems GmbH, niddikjara li dan it-tip ta' tagħmir tar-radju SRR3-A huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:  
<http://continental.automotive-approvals.com/>

Il-medda/meded tal-frekwenza li jaħdem fihom it-tagħmir tar-radju: 24.05–24.25 GHz

Il-potenza massima tal-frekwenza tar-radju trażmessa fil-medda/meded tal-frekwenza li jaħdem fihom it-tagħmir tar- radju: 100mW (20 dBm) Peak EIRP

**VEREENVOUDIGDE EU-CONFORMITEITSVERKLARING**

Hierbij verklaar ik, ADC Automotive Distance Control Systems GmbH, dat het type radioapparatuur SRR3-A conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:  
<http://continental.automotive-approvals.com/>

Frequentieband(en) waarin de radioapparatuur functioneert: 24.05–24.25 GHz

Maximaal radiofrequent vermogen uitgezonden in de frequentieband(en) waarin de radioapparatuur functioneert: 100mW (20 dBm) Peak EIRP

**UPROSZCZONA DEKLARACJA ZGODNOŚCI UE**

ADC Automotive Distance Control Systems GmbH niniejszym oświadcza, że typ urządzenia radiowego SRR3-A jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

<http://continental.automotive-approvals.com/>

Zakresu(-ów) częstotliwości, w którym (których) pracuje urządzenie radiowe: 24.05–24.25 GHz

Maksymalnej mocy częstotliwości radiowej emitowanej w zakresie(-ach) częstotliwości, w którym (których) pracuje urządzenie radiowe: 100mW (20 dBm) Peak EIRP

**DECLARAÇÃO UE DE CONFORMIDADE SIMPLIFICADA**

O(a) abaixo assinado(a) ADC Automotive Distance Control Systems GmbH declara que o presente tipo de equipamento de rádio SRR3-A está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

<http://continental.automotive-approvals.com/>

A(s) banda(s) de frequências em que o equipamento de rádio funciona: 24.05–24.25 GHz

A potência máxima de radiofrequências transmitida na(s) banda(s) de frequências em que o equipamento de rádio funciona: 100mW (20 dBm) Peak EIRP



**DECLARAȚIA UE DE CONFORMITATE SIMPLIFICATĂ**

Prin prezenta, ADC Automotive Distance Control Systems GmbH declară că tipul de echipamente radio SRR3-A este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă în-ternet:  
<http://continental.automotive-approvals.com/>

Banda (benzile) de frecvențe în care funcționează echipamentul radio: 24.05–24.25 GHz

Puterea maximă de radiofrecvență transmisă în banda (benzile) de frecvențe în care funcționează echipamentul radio: 100mW (20 dBm)  
Peak EIRP

**ZJEDNODUŠENÉ EÚ VYHLÁSENIE O ZHODE**

ADC Automotive Distance Control Systems GmbH týmto vyhlasuje, že rádiové zariadenie typu SRR3-A je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:  
<http://continental.automotive-approvals.com/>

Frekvenčné pásmo resp. pásma, v ktorých rádiové zariadenie pracuje: 24.05–24.25 GHz

Maximálny vysokofrekvenčný výkon prenášaný vo frekvenčnom pásme, resp. pásmach, v ktorých rádiové zariadenie pracuje: 100mW (20 dBm)  
Peak EIRP

**POENOSTAVLJENA IZJAVA EU O SKLADNOSTI**

ADC Automotive Distance Control Systems GmbH potrjuje, da je tip radijske opreme SRR3-A skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

<http://continental.automotive-approvals.com/>

Frekvenčni pas ali pasovi, na katerih deluje radijska oprema: 24.05–24.25 GHz

Največja energija za radijsko frekvenco, preneseno po frekvenčnem pasu ali pasovih, na katerih radijska oprema deluje: 100mW (20 dBm) Peak EIRP

**YKSINKERTAISTETTU EU-VAATIMUSTENMUKAISUUSVAKUUTUS**

ADC Automotive Distance Control Systems GmbH vakuuttaa, että radiolaitetyyppi SRR3-A on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

<http://continental.automotive-approvals.com/>

Radiotaajuudet, joilla radiolaitte toimii: 24.05–24.25 GHz

Suurin mahdollinen lähetysteho radiotaajuuksilla, joilla radiolaitte toimii: 100mW (20 dBm) Peak EIRP

**FÖRENKLAD EU-FÖRSÄKRAN OM ÖVERENSSTÄMMELSE**

Härmed försäkrar ADC Automotive Distance Control Systems GmbH att denna typ av radioutrustning SRR3-A överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:  
<http://continental.automotive-approvals.com/>

Det eller de frekvensband där radioutrustningen arbetar: 24.05–24.25 GHz

Den maximala radiofrekvensseffekt som överförs inom det eller de frekvensband där radioutrustningen arbetar: 100mW (20 dBm) Peak EIRP

**EINFÖLDUÐ ESB SAMRÆMISYFIRLÝSING**

Hér með lýsir ADC Automotive Distance Control Systems GmbH því yfir, að fjarskiptabúnaðurinn að gerð SRR3-A er í samræmi við tilskipun 2014/53/ ESB. Textinn í fullri lengd um Samræmisyfirlýsingu ESB er að gengilegur á eftirfarandi veffangi:  
<http://continental.automotive-approvals.com/>

Bandbreidd(ir), sem fjarskiptabúnaðurinn starfar í: 24.05–24.25 GHz

Hámarks fjarskiptatíðni sendistyrkleika í bandbreiddinni/bandbreiddunum sem fjarskiptabúnaðurinn starfar í: 100mW (20 dBm) Peak EIRP

**BASİTLEŞTİRİLMİŞ AB UYGUNLUK BEYANI**


İşbu belge ile, ADC Automotive Distance Control Systems GmbH şirketi SRR3-A tipi radyo ekipmanının 2014/53/AB sayılı direktife uygun olduğunu beyan eder. AB uygunluk beyanının tam metni aşağıdaki İnternet adresinde mevcuttur:

<http://continental.automotive-approvals.com/>

Radyo cihazının çalıştığı frekans bandı/bantları: 24.05–24.25 GHz


Radyo ekipmanının çalıştığı frekans bandında/bantlarında iletilen maksimum radyo frekansı gücü: 100mW (20 dBm) Peak EIRP

► For vehicles sold in Serbia

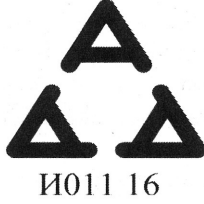

**⚠ WARNING****■ To ensure the system can operate properly**

One Blind Spot Monitor sensor is installed inside the left and right side of the vehicle rear bumper respectively. Observe the following to ensure the Blind Spot Monitor can function correctly.

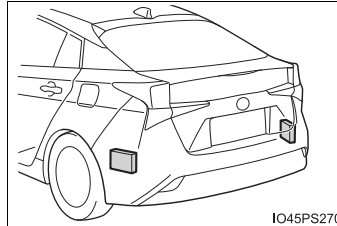

- Keep the sensor and its surrounding area on the bumper clean at all times.
- Do not subject a sensor or its surrounding area on the rear bumper to a strong impact.  
If a sensor is moved even slightly off position, the system may malfunction and vehicles may not be detected correctly.  
In the following situations, have your vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
  - A sensor or its surrounding area is subject to a strong impact.
  - If the surrounding area of a sensor is scratched or dented, or part of them has become disconnected.
- Do not disassemble the sensor.
- Do not attach accessories or stickers to the sensor or surrounding area on the bumper.
- Do not modify the sensor or surrounding area on the bumper.
- Do not paint the rear bumper any color other than an official Toyota color.

### The Blind Spot Monitor function


The Blind Spot Monitor function uses radar sensors to detect vehicles that are traveling in an adjacent lane in the area that is not reflected in the outside rear view mirror (the blind spot), and advises the driver of the vehicle's existence via the outside rear view mirror indicator.

### The Blind Spot Monitor function detection areas

The areas that vehicles can be detected in are outlined below.

The range of the detection area extends to:

- ① Approximately 3.5 m (11.5 ft.) from the side of the vehicle  
The first 0.5 m (1.6 ft.) from the side of the vehicle is not in the detection area
- ② Approximately 3 m (9.8 ft.) from the rear bumper
- ③ Approximately 1 m (3.3 ft.) forward of the rear bumper

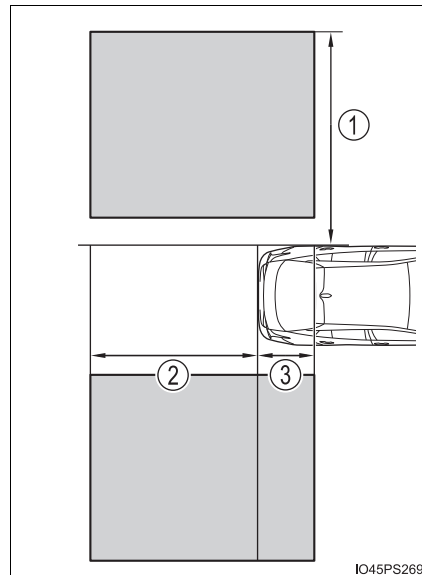

 **WARNING**
**■ Cautions regarding the use of the system**

The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.

The Blind Spot Monitor function is a supplementary function which alerts the driver that a vehicle is present in the blind spot. Do not overly rely on the Blind Spot Monitor function. The function cannot judge if it is safe to change lanes, therefore over reliance could cause an accident resulting in death or serious injury.

According to conditions, the system may not function correctly. Therefore the driver's own visual confirmation of safety is necessary.

**■ The Blind Spot Monitor function is operational when**

- The BSM system is set to on (→P. 153)
- Vehicle speed is greater than approximately 16 km/h (10 mph)

**■ The Blind Spot Monitor function will detect a vehicle when**

- A vehicle in an adjacent lane overtakes your vehicle.
- You overtake a vehicle in adjacent lane slowly.
- Another vehicle enters the detection area when it changes lanes.

**■ Conditions under which the system will not detect a vehicle**

The Blind Spot Monitor function is not designed to detect the following types of vehicles and/or objects:

- Small motorcycles, bicycles, pedestrians etc.\*
- Vehicles traveling in the opposite direction
- Guardrails, walls, signs, parked vehicles and similar stationary objects\*
- Following vehicles that are in the same lane\*
- Vehicles driving 2 lanes across from your vehicle\*
- Vehicles which are being overtaken rapidly by your vehicle\*

\*: Depending on conditions, detection of a vehicle and/or object may occur.


**■ Conditions under which the system may not function correctly**

- The Blind Spot Monitor function may not detect vehicles correctly in the following situations:
  - When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
  - When mud, snow, ice, a sticker, etc. is covering the sensor or surrounding area on the rear bumper
  - When driving on a road surface that is wet with standing water during bad weather, such as heavy rain, snow, or fog
  - When multiple vehicles are approaching with only a small gap between each vehicle
  - When the distance between your vehicle and a following vehicle is short
  - When there is a significant difference in speed between your vehicle and the vehicle that enters the detection area
  - When the difference in speed between your vehicle and another vehicle is changing
  - When a vehicle enters a detection area traveling at about the same speed as your vehicle
  - As your vehicle starts from a stop, a vehicle remains in the detection area
  - When driving up and down consecutive steep inclines, such as hills, dips in the road, etc.
  - When driving on roads with sharp bends, consecutive curves, or uneven surfaces
  - When vehicle lanes are wide, or when driving on the edge of a lane, and the vehicle in an adjacent lane is far away from your vehicle
  - When a bicycle carrier or other accessory is installed to the rear of the vehicle
  - When there is a significant difference in height between your vehicle and the vehicle that enters the detection area
  - Immediately after the Blind Spot Monitor function is turned on
- Instances of the Blind Spot Monitor function unnecessarily detecting a vehicle and/or object may increase in the following situations:
  - When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
  - When the distance between your vehicle and a guardrail, wall, etc. that enters the detection area is short
  - When driving up and down consecutive steep inclines, such as hills, dips in the road, etc.
  - When vehicle lanes are narrow, or when driving on the edge of a lane, and a vehicle traveling in a lane other than the adjacent lanes enters the detection area
  - When driving on roads with sharp bends, consecutive curves, or uneven surfaces
  - When the tires are slipping or spinning
  - When the distance between your vehicle and a following vehicle is short
  - When a bicycle carrier or other accessory is installed to the rear of the vehicle



### The Rear Crossing Traffic Alert function

The Rear Crossing Traffic Alert functions when your vehicle is in reverse. It can detect other vehicles approaching from the right or left rear of the vehicle. It uses radar sensors to alert the driver of the other vehicle's existence through flashing the outside rear view mirror indicators and sounding a buzzer.

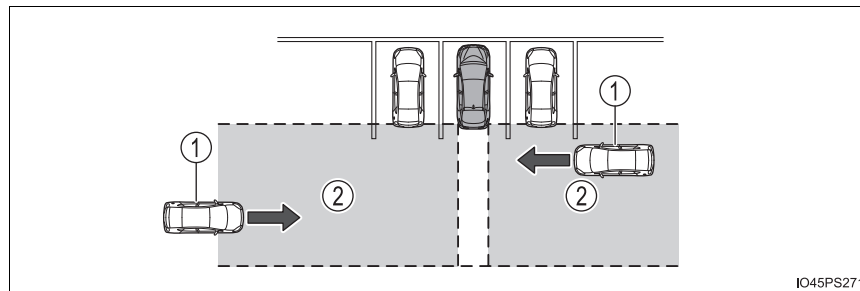

① Approaching vehicles

② Detection areas

#### **⚠ WARNING**

##### ■ Cautions regarding the use of the system

There is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle's surroundings and driving safely. (→P. 373)



##### ■ To ensure the system can operate properly

→P. 371

**RCTA icon display**


When a vehicle approaching from the right or left at the rear of the vehicle is detected, the following will be displayed on the navigation system screen.

- ▶ When the Toyota parking assist monitor is displayed
- ▶ When the panoramic view monitor (if equipped) is displayed

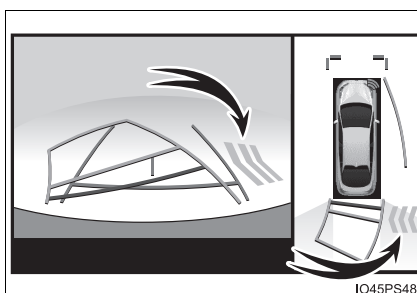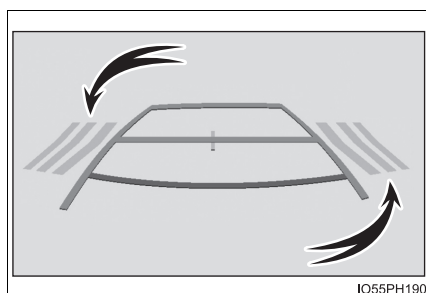

**The Rear Crossing Traffic Alert function detection areas**

The areas that vehicles can be detected in are outlined below.

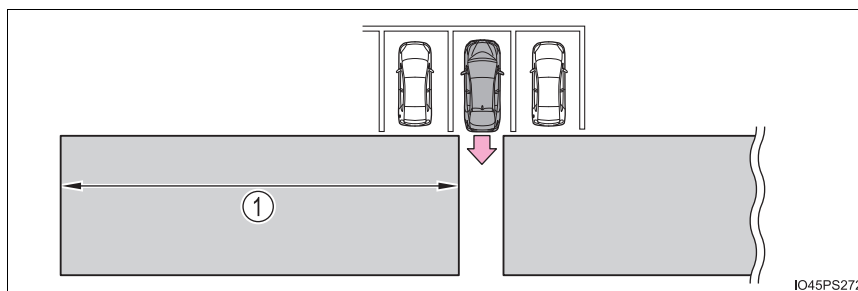

To give the driver a more consistent time to react, the buzzer can alert for faster vehicles from farther away.

Example:

Approaching vehicle	Speed	① Approximate alert distance
Fast	28 km/h (18 mph)	20 m (65 ft.)
Slow	8 km/h (5 mph)	5.5 m (18 ft.)


■ **The Rear Crossing Traffic Alert function is operational when**

- The BSM system is set to on. (→P. 153)
- The shift position is in R.
- Vehicle speed is less than approximately 8 km/h (5 mph).
- Approaching vehicle speed is between approximately 8 km/h (5 mph) and 28 km/h (18 mph).

■ **Conditions under which the system will not detect a vehicle**

The Rear Crossing Traffic Alert function is not designed to detect the following types of vehicles and/or objects:

- Vehicles approaching from directly behind
- Vehicles backing up in a parking space next to your vehicle
- Vehicles that the sensors cannot detect due to obstructions

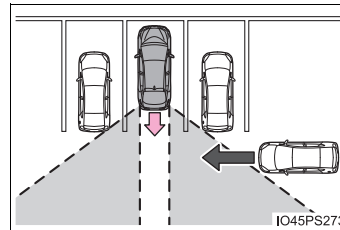


- Guardrails, walls, signs, parked vehicles and similar stationary objects\*
- Small motorcycles, bicycles, pedestrians, etc.\*
- Vehicles moving away from your vehicle
- Vehicles approaching from the parking spaces next to your vehicle\*
- The distance between the sensor and approaching vehicle gets too close

\*: Depending on the conditions, detection of a vehicle and/or object may occur.


■ **Situations in which the system may not operate properly**

The Rear Crossing Traffic Alert function may not detect vehicles correctly in the following situations:

- When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
- When mud, snow, ice, a sticker, etc. is covering the sensor or surrounding area on the position above the rear bumper
- When driving on a road surface that is wet with standing water during bad weather, such as heavy rain, snow, or fog
- When multiple vehicles are approaching with only a small gap between each vehicle
- When a vehicle is approaching at high speed
- When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow
- When backing up on a slope with a sharp change in grade

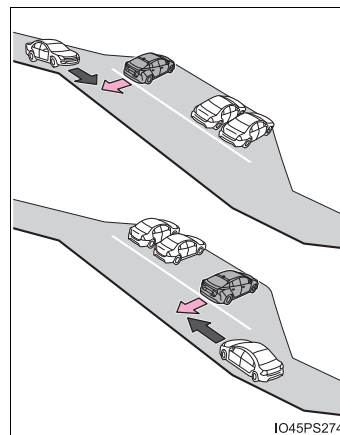


- When backing out of a sharp angle parking spot

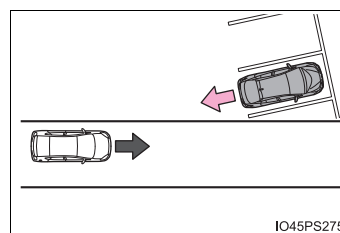


- When towing a trailer
- When there is a significant difference in height between your vehicle and the vehicle that enters the detection area
- When a sensor or the area around a sensor is extremely hot or cold
- If the suspension has been modified or tires of a size other than specified are installed

- If the front of the vehicle is raised or lowered due to the carried load
- When turning while backing up

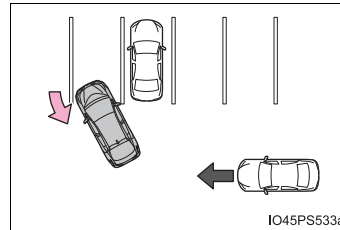


- When a vehicle turns into the detection area

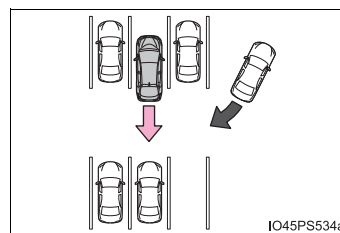


#### ■ Situations in which the system may operate even if there is no possibility of a collision

Instances of the Rear Crossing Traffic Alert function unnecessarily detecting a vehicle and/or object may increase in the following situations:

- When the parking space faces a street and vehicles are being driven on the street

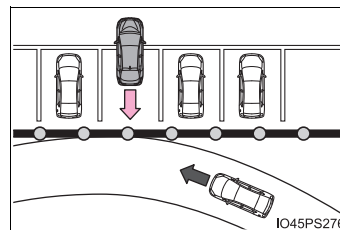


- When the distance between your vehicle and metal objects, such as a guardrail, wall, sign, or parked vehicle, which may reflect electrical waves toward the rear of the vehicle, is short

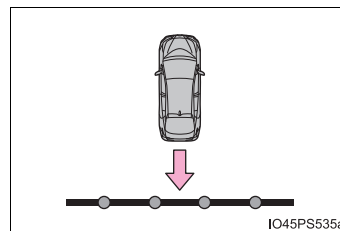


- When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow

- When a vehicle passes by the side of your vehicle

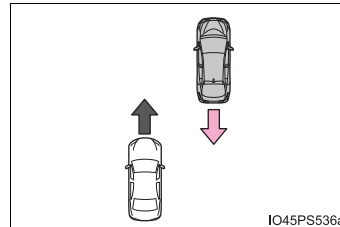

- When a detected vehicle turns while approaching the vehicle

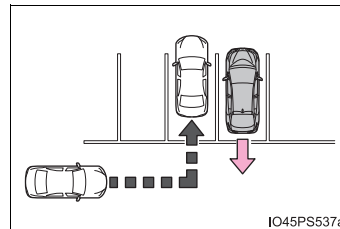


- When there are spinning objects near your vehicle such as the fan of an air conditioning unit
- When water is splashed or sprayed toward the rear bumper, such as from a sprinkler
- Moving objects (flags, exhaust fumes, large rain droplets or snowflakes, rain water on the road surface, etc.)
- When the distance between your vehicle and a guardrail, wall, etc., that enters the detection area is short
- Gratings and gutters
- When a sensor or the area around a sensor is extremely hot or cold
- If the suspension has been modified or tires of a size other than specified are installed
- If the front of the vehicle is raised or lowered due to the carried load

## Toyota parking assist-sensor\*


The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the displays and a buzzer. Always check the surrounding area when using this system.

### Types of sensors


- ① Front corner sensors
- ② Front center sensors
- ③ Rear corner sensors
- ④ Rear center sensors
- ⑤ Front side sensors
- ⑥ Rear side sensors

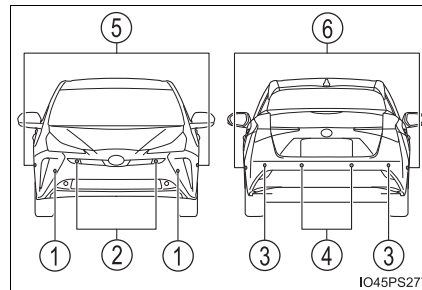


### Turning the Toyota parking assist-sensor on/off

The Toyota parking assist-sensor can be enabled/disabled on the  screen (→P. 153) of the multi-information display.

When on is selected, Toyota parking assist-sensor indicator will come on.

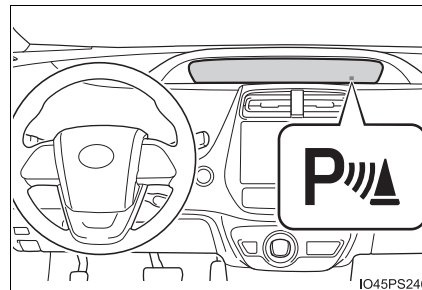

Once off is selected, the Toyota parking assist-sensor will not return to on until it is turned to on by the  screen of multi-information display again. (The system does not automatically return to on even when the hybrid system is restarted.)


\*: If equipped

## Display

When the sensors detect an obstacle, the following displays inform the driver of the position and distance to the obstacle.

### ■ Multi-information display

- ① Front center sensor operation
- ② Front corner sensor operation
- ③ Front side sensor operation
- ④ Rear side sensor operation
- ⑤ Rear corner sensor operation
- ⑥ Rear center sensor operation

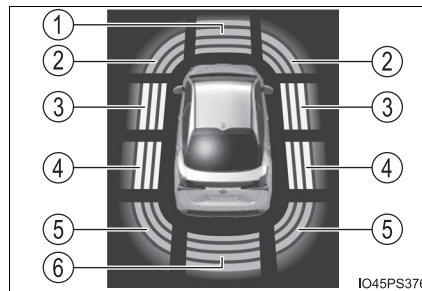


IO45PS376

- The operation display is gray when the sensors are operating.
- The front side sensor operation displays and rear side sensor operation displays are not shown until a scan of the side areas is completed.

### ■ Audio system screen

When the Toyota parking assist monitor\* is displayed:

A simplified image is displayed on the right upper corner of the audio system screen when an obstacle is detected.

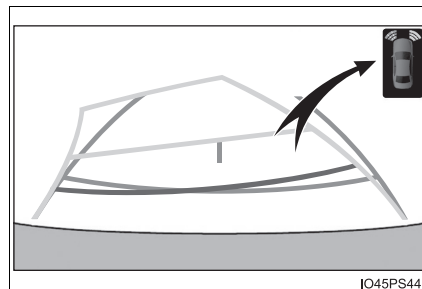

IO45PS447


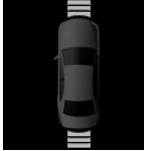






\*: If equipped



**Sensor detection display, obstacle distance**

■ **Distance display**

Sensors that detect an obstacle will illuminate continuously or blink.

Multi-information display*	Audio system screen*	Approximate distance to obstacle		
		Front corner, front center and front side sensors	Rear corner, rear center and rear side sensors	
 (continuous)	 (blinking slowly)	Far ↑ ↓ Near	① 100 cm (3.3 ft.) to 60 cm (2.0 ft.)	⑥ 150 cm (4.9 ft.) to 60 cm (2.0 ft.)
 (continuous)	 (blinking)		① 60 cm (2.0 ft.) to 45 cm (1.5 ft.) ② 60 cm (2.0 ft.) to 45 cm (1.5 ft.) ③ 100 cm (3.3 ft.) to 70 cm (2.3 ft.)	④ 100 cm (3.3 ft.) to 70 cm (2.3 ft.) ⑤ 60 cm (2.0 ft.) to 45 cm (1.5 ft.) ⑥ 60 cm (2.0 ft.) to 45 cm (1.5 ft.)
 (continuous)	 (blinking rapidly)		① 45 cm (1.5 ft.) to 35 cm (1.2 ft.) ② 45 cm (1.5 ft.) to 35 cm (1.2 ft.) ③ 70 cm (2.3 ft.) to 30 cm (1.0 ft.)	④ 70 cm (2.3 ft.) to 30 cm (1.0 ft.) ⑤ 45 cm (1.5 ft.) to 35 cm (1.2 ft.) ⑥ 45 cm (1.5 ft.) to 35 cm (1.2 ft.)
 (blinking)	 (continuous)		① Less than 35 cm (1.2 ft.) ② Less than 35 cm (1.2 ft.) ③ Less than 30 cm (1.0 ft.)	④ Less than 30 cm (1.0 ft.) ⑤ Less than 35 cm (1.2 ft.) ⑥ Less than 35 cm (1.2 ft.)

- ① Front center sensors
- ② Front corner sensors
- ③ Front side sensors
- ④ Rear side sensors
- ⑤ Rear corner sensors
- ⑥ Rear center sensors

\*: The images may differ from those shown in the illustrations depending on the detection status. (→P. 382)

## Buzzer


When an obstacle is detected, the buzzer sounds.

- As the obstacle is approached, the buzzer sounds more rapidly. When the obstacle is extremely close, the buzzer switches from sounding intermittently (short beeps) to continuously (a long beep).
  - Distance to obstacle detected by front corner sensor is approximately 35 cm (1.2 ft.) or less
  - Distance to obstacle detected by front side sensor or rear side sensor is approximately 30 cm (1.0 ft.) or less
  - Distance to obstacle detected by front sensor is approximately 35 cm (1.2 ft.) or less
  - Distance to obstacle detected by rear corner sensor is approximately 35 cm (1.2 ft.) or less
  - Distance to obstacle detected by back sensor is approximately 35 cm (1.2 ft.) or less
- When an obstacle is detected by multiple sensors simultaneously, the buzzer sounds according to the distance to the closest obstacle.
- When obstacles are simultaneously detected to the front and rear of the vehicle, separate buzzers sound patterns according to the distance to each obstacle.

The volume and timing of the buzzer can be changed. (→P. 670)

### Detection range of the sensors

- ① Approximately 100 cm (3.3 ft.)
- ② Approximately 150 cm (4.9 ft.)
- ③ Approximately 60 cm (2.0 ft.)
- ④ Approximately 100 cm (3.3 ft.)
  - The detection range is shown in the illustration to the right. However, the sensor will not detect the obstacle if it is too close.
  - For details regarding obstacle detection in the side areas. (→P. 388)
  - The distance at which an obstacle can be detected and whether it can be detected depends on the shape and condition of the obstacle.

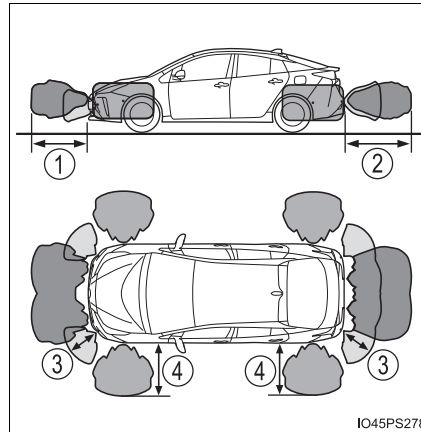

The obstacle detection range can be changed. (→P. 670)

**■ Operation conditions**

The power switch is turned on.

- Front corner sensors:
  - Shift position is not in P
  - Vehicle speed is approximately 10 km/h (6 mph) or less
- Front side sensors/rear side sensors:
  - Shift position is not in P
  - Vehicle speed is approximately 10 km/h (6 mph) or less
  - Steering wheel is turned approximately 90° or more
- Front center sensors:
  - Shift position is not in P or R
  - Vehicle speed is approximately 10 km/h (6 mph) or less
- Rear corner sensors/rear center sensors:

Shift position is in R

**■ Toyota parking assist-sensor pop-up display**

→P. 409


**■ Sensor detection information**

- The sensor's detection areas are limited to the areas around the vehicle's bumper.
- Depending on the shape of the obstacle and other factors, the detection distance may shorten, or detection may be impossible.
- Obstacles may not be detected if they are too close to the sensor.
- There will be a short delay between obstacle detection and display. Even when traveling at a low speed, if you come too close to an obstacle before the display and buzzer activate, the display and buzzer may not activate at all.
- Thin posts or objects lower than the sensor may not be detected when approached, even if they have been detected once.
- It might be difficult to hear beeps due to the volume of audio system or air flow noise of the air conditioning system.

### ■ Obstacle warning function

When an obstacle in the side areas is within the vehicle course while the vehicle is moving forward or backward, this function inform the driver by the display and the buzzer.

- ① Obstacle
- ② Calculated vehicle course

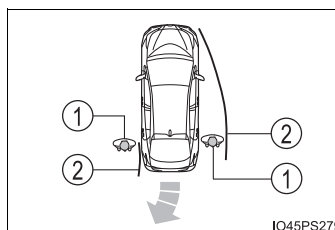

### ■ Obstacle detection in side areas

- Obstacles in the side areas are detected while driving by scanning the side areas with the side sensors. Recognized obstacles are retained in memory for up to approximately 2 minutes.
- Obstacles may not be detected in the side areas until the scan completes. After the power switch is turned on, scanning completes after driving the vehicle for a short period of time.
- When an obstacle such as another vehicle, pedestrian or animal is detected by the side sensors, the obstacle may continue to be detected even after it has left the side sensor detection area.

### ■ If “Clean Parking Assist Sensor” is displayed on the multi-information display

A sensor may be dirty or covered with snow or ice. In such cases, if it is removed from the sensor, the system should return to normal.

Also, due to the sensor being frozen at low temperatures, a malfunction display may appear or an obstacle may not be detected. If the sensor thaws out, the system should return to normal.

### ■ If “Parking Assist Malfunction” is displayed on the multi-information display

Depending on the malfunction of the sensor, the device may not be working normally. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

### ■ Customization

Settings (e.g. buzzer volume) can be changed.  
(Customizable features: →P. 670)

### ■ Objects which the system may not properly detect


The shape of the object may prevent the sensor from detecting it. Pay particular attention to the following objects:

- Wires, fences, ropes, etc.
- Cotton, snow and other materials that absorb sound waves
- Sharply-angled objects
- Low objects
- Tall objects with upper sections projecting outwards in the direction of your vehicle

### ■ Situations in which the system may not operate properly

Certain vehicle conditions and the surrounding environment may affect the ability of a sensor to correctly detect objects. Particular instances where this may occur are listed below.

- There is dirt, snow, water drops or ice on a sensor. (Cleaning the sensors will resolve this problem.)
- A sensor is frozen. (Thawing the area will resolve this problem.) In especially cold weather, if a sensor is frozen the sensor display may be displayed abnormally, or objects, such as a wall, may not be detected.
- When a sensor or the area around a sensor is extremely hot or cold.

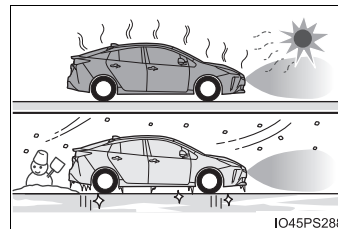


- On an extremely bumpy road, on an incline, on gravel, or on grass.
- When vehicle horns, vehicle detectors, motorcycle engines, air brakes of large vehicles, the clearance sonar of other vehicles or other devices which produce ultrasonic waves are near the vehicle
- A sensor is coated with a sheet of spray or heavy rain.
- If objects draw too close to the sensor.
- When a pedestrian is wearing clothing that does not reflect ultrasonic waves (ex. skirts with gathers or frills).
- When objects that are not perpendicular to the ground, not perpendicular to the vehicle traveling direction, uneven, or waving are in the detection range.
- Strong wind is blowing
- When driving in inclement weather such as fog, snow or a sandstorm
- When an object that cannot be detected is between the vehicle and a detected object
- If an object such as a vehicle, motorcycle, bicycle or pedestrian cuts in front of the vehicle or runs out from the side of the vehicle

- If the orientation of a sensor has been changed due to a collision or other impact
- When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow
- If the front of the vehicle is raised or lowered due to the carried load
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- When tire chains, a compact spare tire or an emergency tire puncture repair kit are used.


■ **Situations in which the system may operate even if there is no possibility of a collision**

In some situations, such as the following, the system may operate even though there is no possibility of a collision.

- When driving on a narrow road

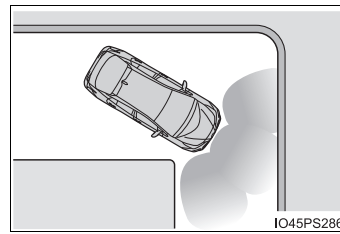


- When driving toward a banner, flag, low-hanging branch or boom barrier (such as those used at railroad crossings, toll gates and parking lots)
- When there is a rut or hole in the surface of the road
- When driving on a metal cover (grating), such as those used for drainage ditches
- When driving up or down a steep slope
- If a sensor is hit by a large amount of water, such as when driving on a flooded road
- There is dirt, snow, water drops or ice on a sensor. (Cleaning the sensors will resolve this problem.)
- A sensor is coated with a sheet of spray or heavy rain
- When driving in inclement weather such as fog, snow or a sandstorm
- When strong winds are blowing

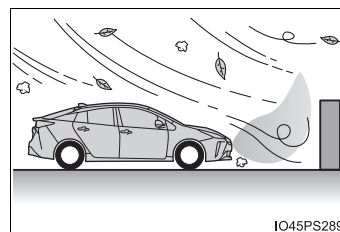



- When vehicle horns, vehicle detectors, motorcycle engines, air brakes of large vehicles, the clearance sonar of other vehicles or other devices which produce ultrasonic waves are near the vehicle
- If the front of the vehicle is raised or lowered due to the carried load
- If the orientation of a sensor has been changed due to a collision or other impact
- Driving close to columns (H-shaped steel beams, etc.) in multi-story parking garages, construction sites, etc.
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- On an extremely bumpy road, on an incline, on gravel, or on grass

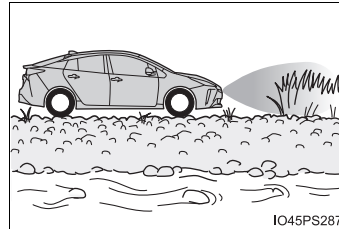

- When tire chains, a compact spare tire or an emergency tire puncture repair kit are used.

 **WARNING****■ Cautions regarding the use of the system**

There is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle's surroundings and driving safely.

**■ To ensure the system can operate properly**

Observe the following precautions to avoid an unexpected accident.

- Do not damage the sensors, and always keep them clean.
- Do not attach a sticker or install an electronic component, such as a backlit license plate (especially fluorescent type), fog lights, fender pole or wireless antenna near a radar sensor.
- Do not subject the surrounding area of the sensor to a strong impact. If subjected to an impact, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. If the front or rear bumper needs to be removed/installed or replaced, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not modify, disassemble or paint the sensors.
- Do not attach a license plate cover.
- Keep your tires properly inflated.

**■ When to disable the function**

In the following situations, disable the function as it may operate even though there is no possibility of a collision.

- Failing to observe the warnings above.
- A non-genuine Toyota suspension (lowered suspension, etc.) is installed.


**■ Side sensors**

In the following situations, the Toyota parking assist-sensor may not operate normally and may result in an unexpected accident. Drive carefully.

- Obstacles may not be detected in the side areas until the vehicle is driven for a short time and a scan of the side areas is completed. (→P. 388)
- Even after the scan of the side areas is completed, obstacles such as other vehicles, people or animals that approach from the sides cannot be detected.
- Even after the scan of the side areas is completed, obstacles may not be detected depending on the surrounding situation of the vehicle.  
At that time, the side sensor operation displays (→P. 382) temporary turn off.

 WARNING**■ Notes when washing the vehicle**

- Do not apply intensive bursts of water or steam to the sensor area. Doing so may result in the sensor malfunctioning.
- When using steam to wash the vehicle, do not direct steam too close to the sensors. The sensors may not function properly if subjected to steam.

 NOTICE**■ When using Toyota parking assist-sensor**

In the following situations, the system may not function correctly due to a sensor malfunction etc. Have the vehicle checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- Toyota parking assist-sensor operation display flashes, and a beep sounds when no obstacles are detected.
- If the area around a sensor collides with something, or is subjected to strong impact.
- If the bumper collides with something.
- If the display shows up and remains on without a beep.
- If a display error occurs, first check the sensor.  
If the error occurs even when there is no ice, snow or mud on the sensor, it is likely that the sensor is malfunctioning.


## Parking Support Brake function\*

When a collision may occur with an obstacle while parking or traveling at low speeds, when the vehicle suddenly moves forward due to mistaken accelerator pedal operation, or when the vehicle moves due to the wrong shift position being selected, the sensors detect obstacles to the front or rear in the traveling direction of the vehicle, and the system operates to lessen impact with obstacles such as walls, and reduce resulting damage.

### Examples of system operation


The system operates in the following situations when an obstacle is detected in the traveling direction of the vehicle.

- ◆ The vehicle is driven at low speeds and the brake pedal is not depressed, or is depressed too late

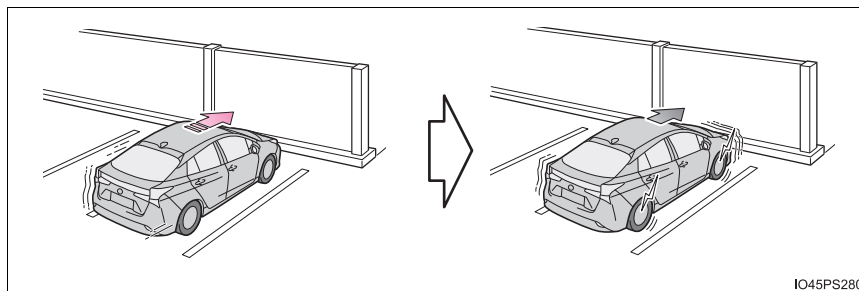

IO45PS280


- ◆ The accelerator pedal is depressed too far

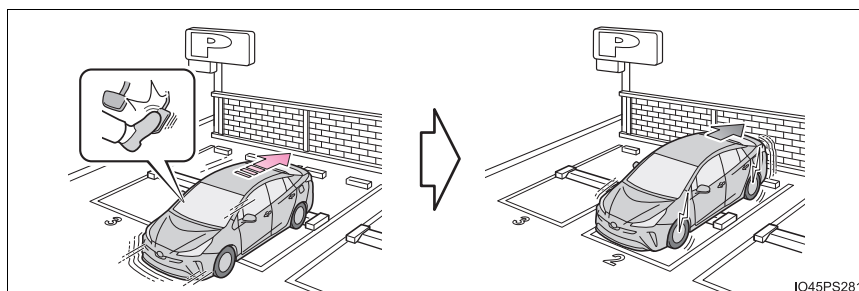

IO45PS281


\*: If equipped

◆ The vehicle moves due to the wrong shift position being selected

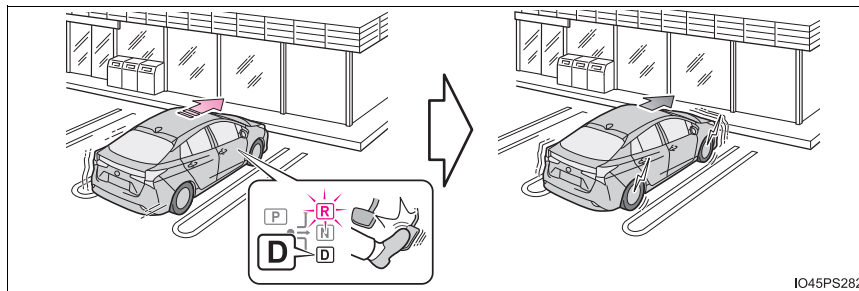

### Types of sensors

- ① Front corner sensors
- ② Front center sensors
- ③ Rear corner sensors
- ④ Rear center sensors

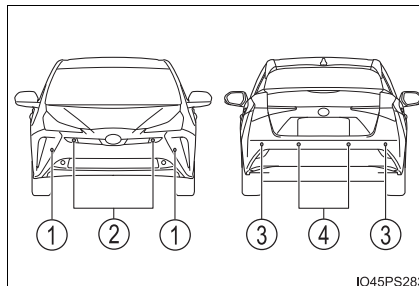


### Changing settings of the Parking Support Brake function


The Parking Support Brake function can be enabled/disabled on the



screen (→P. 153) of the multi-information display.

When the Parking Support Brake function is off, the PKSB OFF indicator illuminates.

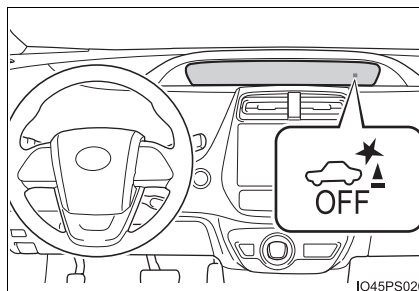


When the Parking Support Brake function is switched off, system operation does not resume until the function is switched back on through the  screen on the multi-information display. (System operation does not resume by operating the power switch.)

**Operation**

When the Parking Support Brake function detects an obstacle with a probability of collision, hybrid system output is restricted to restrain an increase in vehicle speed. (Hybrid system output restriction control: A)

Furthermore, when the accelerator pedal continues to be depressed, the brakes are applied to reduce the vehicle speed. (Brake control: B)

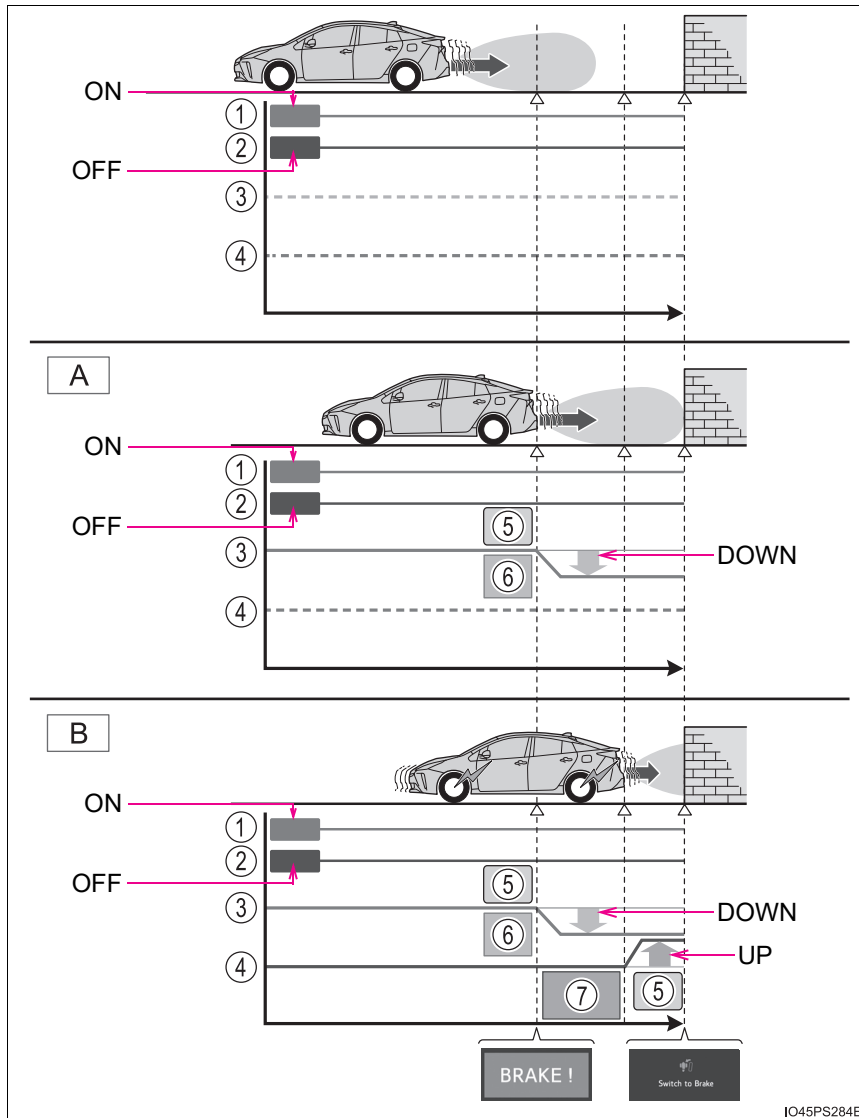

- ① Accelerator pedal
- ② Brake pedal
- ③ Hybrid system output
- ④ Braking force
- ⑤ Control starts
- ⑥ Collision is possible
- ⑦ Collision is likely



## Operation conditions

### ■ Operation starting conditions

When the PKSB OFF indicator is not illuminated or flashing (→P. 402, 580) and all of the following conditions are met, the system operates.

▶ Hybrid system output restriction control

- The Parking Support Brake function is on.
- The vehicle speed is approximately 15 km/h (10 mph) or less.
- There is an obstacle in the traveling direction of the vehicle (approximately 2 to 4 m [6 to 13 ft.] ahead).
- The system determined that a stronger-than-normal brake operation was necessary to avoid a collision.

▶ Brake control

- Hybrid system output restriction control is being performed.
- The system determined that an emergency brake operation was necessary to avoid a collision.

### ■ Operation ending conditions

In any of the following situations, the system stops operating.

▶ Hybrid system output restriction control

- The Parking Support Brake function has been turned off (stopped).
- The collision became avoidable with normal brake operation.
- The obstacle is no longer in the traveling direction of the vehicle (approximately 2 to 4 m [6 to 13 ft.] ahead).




▶ Brake control

- The Parking Support Brake function has been turned off (stopped).
- Approximately 2 seconds elapsed after the vehicle was stopped by brake control.
- The brake pedal was depressed after the vehicle was stopped by brake control.
- The obstacle is no longer in the traveling direction of the vehicle (approximately 2 to 4 m [6 to 13 ft.] ahead).

### Display and buzzer for hybrid system output restriction control and brake control

When the hybrid system output restriction control or brake control operates, the buzzer sounds and a message is displayed on the multi-information display to alert the driver.

Depending on the situation, output restriction control operates to either limit acceleration or restrict output as much as possible.

Control	Situation	Multi-information display	PKSB OFF Indicator	Buzzer
Hybrid system output restriction control is operating (acceleration limitation control)	Acceleration at a certain speed or higher is not possible.		Not illuminated	Short beep
Hybrid system output restriction control is operating (control to restrict output as much as possible)	A stronger-than-normal brake operation is necessary		Not illuminated	
Brake control is operating	Emergency braking is necessary			
The vehicle is stopped by system operation	The vehicle is stopped after brake control operation		Illuminated	

**■ Sensor detection range**

The detection range of the Parking Support Brake function differs from the detection range of the Toyota parking assist-sensor. (→P. 386)

Therefore, even if the Toyota parking assist-sensor detects an obstacle and provides a warning, the Parking Support Brake function may not start operating.

**■ System operation**

When the vehicle is stopped by system operation, the Parking Support Brake function stops and the PKSB OFF indicator illuminates.

**■ System recovery**

When the Parking Support Brake function is stopped by system operation and you would like to resume operation, either turn the Parking Support Brake function on again (→P. 396), or turn the power switch off and then back on. Furthermore, when the vehicle moves with an obstacle no longer in the traveling direction of the vehicle, or when the traveling direction of the vehicle changes (such as when switching from moving forward to backing up, and vice versa), system operation automatically resumes.

**■ Obstacles not detected by the sensors**

The following obstacles may not be detected by the sensors.

- Objects such as people, cloth and snow, that are difficult for sonic waves to reflect off of. (In particular, people may also not be detected depending on the type of clothing they are wearing.)
- Objects not perpendicular with the ground, objects not at a right angle to the traveling direction of the vehicle, uneven objects or waving objects
- Low objects
- Thin objects such as wires, fences, ropes and signposts
- Objects that are extremely close to the bumper

**■ Situations in which the system may not operate properly**

→P. 389

**■ Situations in which the system may operate even if there is no possibility of a collision**

→P. 390

**■ In the unlikely event that the Parking Support Brake function mistakenly operates at a crossing or elsewhere**

Even in the unlikely event that the Parking Support Brake function mistakenly operates at a crossing or elsewhere, brake control is canceled after approximately 2 seconds, allowing you to proceed forward and leave the area. Furthermore, brake control is also canceled when the brake pedal is depressed. Depressing the accelerator pedal again allows you to proceed forward and leave the area.

**■ When removing and installing the 12-volt battery**

The system needs to be initialized.

The system can be initialized by driving the vehicle straight ahead for 5 seconds or more at a speed of approximately 35 km/h (22 mph) or higher.

**■ When “PKSB Unavailable” is displayed on the multi-information display and the PKSB OFF indicator flashes**

● Ice, snow, dirt, etc., may have adhered to the sensor. If this occurs, remove the ice, snow, dirt, etc., from the sensor to return the system to normal.

Also, a warning message may be displayed at low temperatures due to ice forming on the sensor, and the sensor may not detect obstacles. Once the ice melts, the system will return to normal.

● If this message is shown even after removing dirt from the sensor, or shown when the sensor was not dirty to begin with, have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**■ When “PKSB Malfunction Visit Your Dealer” is displayed on the multi-information display, the PKSB OFF indicator flashes and the buzzer sounds**

The system may not be operating properly. Have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**WARNING****■ Cautions regarding the use of the system**

Do not rely solely upon the system. Relying solely upon the system may lead to an unexpected accident.

● Driving safely is the sole responsibility of the driver. Pay careful attention to the surrounding conditions in order to ensure safe driving. The Parking Support Brake function can provide support to lessen the severity of collisions. However, it may not operate depending on the situation.

● The Parking Support Brake function is not a system designed to completely stop the vehicle. Furthermore, even if the Parking Support Brake function is able to stop the vehicle, brake control is canceled after approximately 2 seconds, so depress the brake pedal immediately.

● It is extremely dangerous to check the system operations by intentionally driving the vehicle into the direction of a wall, etc. Never attempt such actions.

 **WARNING****■ When to disable the Parking Support Brake**

In the following situations, disable the Parking Support Brake as the system may operate even though there is no possibility of a collision.

- When inspecting the vehicle using a chassis roller, chassis dynamo or free roller
- When loading the vehicle onto a boat, truck or other transport vessel
- If the suspension has been modified or tires of a size other than specified are installed
- If the front of the vehicle is raised or lowered due to the carried load
- When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow
- When using automatic car washing devices
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- When the vehicle is driven in a sporty manner or off-road
- When the tires are not properly inflated
- When the tires are very worn
- When tire chains, compact spare tire or an emergency tire puncture repair kit are used

**■ To ensure the system can operate properly**

→P. 392

**■ Handling the suspension**

Do not modify the suspension, as changes to the height or incline of the vehicle may prevent the sensors from correctly detecting obstacles, may cause the system not operate, or may cause the system to operate unnecessarily.

**■ If the Parking Support Brake function (static objects) operates unnecessarily, such as at a railroad crossing**

→P. 401

**■ Notes when washing the vehicle**

→P. 393



## NOTICE

**■ Preventing sensor malfunctions**

- If the area around a sensor is subjected to an impact, equipment may not operate properly due to a sensor malfunction. Have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- When using a high-pressure washer to wash the vehicle, do not spray water directly on the sensors. The sensors may not function properly if subjected to an impact from strong water pressure.
- When using steam to wash the vehicle, do not direct steam too close to the sensors. The sensors may not function properly if subjected to steam.

**■ Preventing unnecessary operation**

In the following situations, turn the Parking Support Brake function off. The system may operate even though there is no possibility of a collision.

- A chassis roller, chassis dynamo, free roller or similar equipment is being used for an inspection, etc.
- The vehicle is being loaded onto a ship, truck or other transport vessel
- The suspension has been lowered or tires that have a different size than the genuine tires are equipped
- The height of the vehicle has drastically changed due to the carried load (the nose tilts up or down).
- A towing eyelet is installed
- When using an automatic car wash

**■ Notes when washing the vehicle**

→P. 393

## S-IPA (Simple Intelligent Parking Assist System)\*

### Simple Intelligent Parking Assist System

#### ■ Function summary

The Simple Intelligent Parking Assist System automatically operates the steering wheel to provide support when backing into an area near a target parking spot, and when departing from a parallel parking spot. (Changing the shift position and speed adjustment when moving forward or backing up are not performed automatically.)

- The Simple Intelligent Parking Assist System does not park the vehicle automatically. It is a system that provides support when pulling out of a perpendicular or parallel parking spot.
- The Simple Intelligent Parking Assist System provides steering wheel operation assistance to guide the vehicle toward the selected intended parking spot. The selected intended parking spot may not always be reachable, depending on road and vehicle conditions at the time of parking, and the distance to the intended parking spot.

#### ■ Linking with the Parking Support Brake function

While the Simple Intelligent Parking Assist System is operating, if the system detects an obstacle that could result in a collision, the emergency brakes operate, regardless of whether the Parking Support Brake function is on or off. (→P. 407)

#### WARNING

- When backing up or proceeding forward, be sure to directly confirm the safety of the area to the front or rear, and the area around the vehicle, and slowly back up or proceed forward while adjusting the vehicle speed by depressing the brake pedal.
- If it seems the vehicle may make contact with a pedestrian, another vehicle or any other obstacles, stop the vehicle by depressing the brake pedal, and then press the S-IPA switch (→P. 408) to turn the system off.

\*: If equipped

**Chart of Simple Intelligent Parking Assist System assist modes and functions**

Assist mode	Type of parking	Function summary	See page
Parallel parking assist mode	Parallel parking	Guidance is provided to detect the intended parking spot and reach a position to begin backing up from. Assistance is provided from when the vehicle begins backing up until it reaches the intended parking spot.	P. 411
Exit parallel parking assist mode	Exit parallel parking	Assistance starts after the vehicle has been parallel parked. Assistance is provided to guide the vehicle from the parking space to a position from which it can take off.	P. 418
Back-in parking assist mode (with forward guidance function)	Back-in parking	Assistance starts after stopping the vehicle in front of the intended parking spot, and is provided for backing into a parking space, including guidance to reach a position to begin backing up from.	P. 423



**■ Parking Support Brake function while the Simple Intelligent Parking Assist System is operating**

While the Simple Intelligent Parking Assist System is operating, if the system detects an obstacle that could result in a collision, hybrid system output restriction control and brake control of the Parking Support Brake function are operated, regardless of whether the Parking Support Brake function is on or off. (→P. 396)

- After the Parking Support Brake function operates, operation of the Simple Intelligent Parking Assist System is temporarily stopped, and operation of the Parking Support Brake function is indicated on the multi-information display. (→P. 400)
- When operation of the Simple Intelligent Parking Assist System is stopped 3 times by operation of the Parking Support Brake function, the Simple Intelligent Parking Assist System is canceled.
- Once the Simple Intelligent Parking Assist System becomes available after the Parking Support Brake function is operated, a message prompting you to shift is displayed on the multi-information display. Operation of the Simple Intelligent Parking Assist System can be resumed by shifting according to the prompt on the multi-information display and pressing the S-IPA switch (→P. 408) again.

**■ Shifting while the Simple Intelligent Parking Assist System is operating**

If the system determines that the driver intends to move forward or in reverse, assistance continues even if the driver shifted before being prompted to do so by the system. However, because driver operation differs from the guidance provided by the system, the number of turning maneuvers may increase.

**■ Customization**


Settings (e.g. obstacle detection range) can be changed. (Customizable features: →P. 670)

**Switching assist mode**

■ **Switching using the S-IPA switch**

Press the switch



This allows you to switch functions and cancel or restart assist modes.

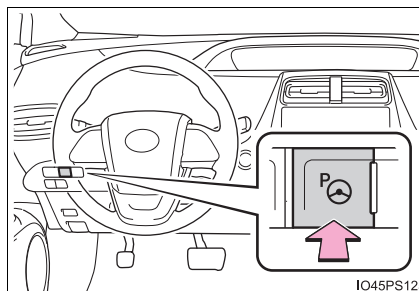

While the power switch is on, the vehicle speed is approximately 30 km/h (19 mph) or less, each time the S-IPA switch is pressed the function switches as follows.

The selected function is indicated on the operation display area of the multi-information display. (→P. 409)

- ▶ When the S-IPA switch is pressed with the shift position not in P
- ▶ When the S-IPA switch is pressed with the shift position in P

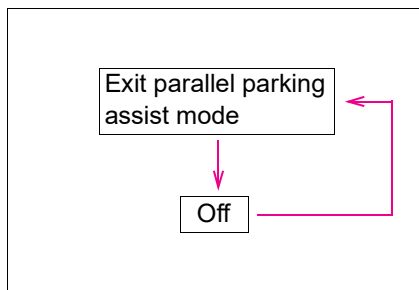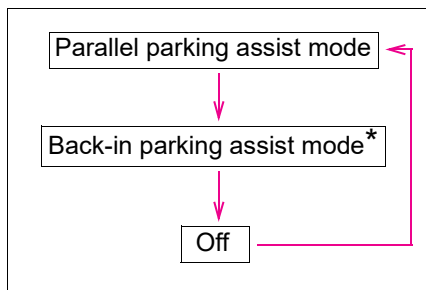

\*: The back-in parking assist mode can be switched to when its operating conditions are met (→P. 428). When the operating conditions are not met, it switches to off.

### Guidance screen

The guidance screen is displayed on the multi-information display.

① Assistance level indicator

Displays a gauge indicating the level until the vehicle's stopping position/the position at which assist control ends.

② Stop display

When illuminated, depress the brake pedal and stop the vehicle at once.

③ Operation display area

Displays the operating condition of the Simple Intelligent Parking Assist System.

④ Advice display

Follow the instructions on the display and perform any indicated operations. As an example, the illustration shows the display indicating it is necessary to depress the brake pedal in order to control the vehicle speed and to confirm the safety of your surroundings.

⑤ S-IPA switch icon


Displayed when the assist mode can be changed and the system can be turned off or on using the S-IPA switch.

⑥ Steering wheel auto operation display

Displays when the steering wheel auto operation is being performed.

⑦ Toyota parking assist-sensor display/door position (open/close) display

→P. 382

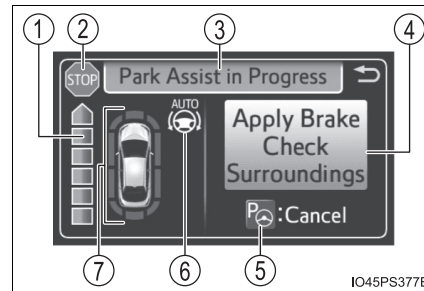

■ **S-IPA indicator inside the meter (→P. 114)**

This indicator illuminates when the steering wheel auto operation is being performed by the Simple Intelligent Parking Assist System. After control ends, the indicator blinks for a short period of time and then turns off.

■ **Toyota parking assist-sensor pop-up display**

While the Simple Intelligent Parking Assist System is operating, if the Toyota parking assist-sensor detects an obstacle, the Toyota parking assist-sensor display automatically pops up on the guidance screen (→P. 382), regardless of whether the Toyota parking assist-sensor is on or off. (→P. 381)

### Canceling or stopping assist mode

Assist mode will be canceled or stopped in the following cases.

#### ■ Assist control is canceled when

- The system temperature preservation function operates
- There is a system malfunction
- System determined that the parking environment is not suitable for assist to continue

When assist control is canceled, firmly grasp the steering wheel, depress the brake pedal and stop the vehicle.

Start again from the beginning, as the system will already be canceled. When continuing to park manually, operate the steering wheel as you normally would.

#### ■ Assist control is stopped when


- The steering wheel is operated
- The vehicle speed exceeds 7 km/h (4 mph) during assist control
- The Parking Support Brake function operates

When assist control is stopped, it can be resumed by following the guidance shown on the screen.

#### ■ If the vehicle speed is about to exceed the speed limit during assist control

A buzzer sounds and the message indicating there is possibility that the vehicle speed may exceed the speed limit.

When the message is displayed, immediately depress the brake pedal to decelerate. If the vehicle continues to accelerate, assist control will be canceled when the vehicle speed exceeds a certain speed. (→P. 433)

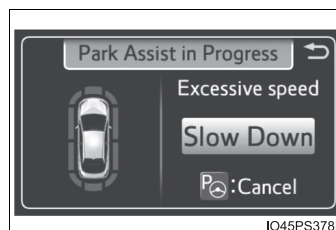


### How to parallel park (parallel parking assist mode)

#### ■ Function summary

If a parking space can be detected, you will be guided forward until you reach the assist control starting position, and then the parallel parking assist mode can be used. Furthermore, depending on the parking space and other conditions, multi-turn maneuvering assist control is also provided if necessary.

- ① Continue moving forward with the vehicle parallel to the curb or road, and stop so that the center of the target parking spot appears nearly perpendicular to the vehicle. Then press the S-IPA switch 1 time to select the parallel parking assist mode.

- ② Travel straight ahead parallel with the road or curb so that the parking space is detected.

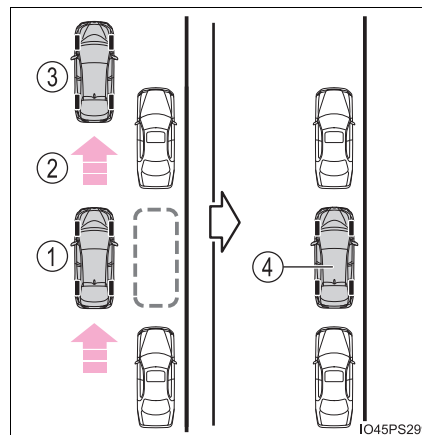

- ③ A sound is issued and a display is shown to notify you when the vehicle reaches a position where assist control can be used to begin backing up from, and then when the shift position is changed according to guidance provided by the system, steering wheel auto operation begins.


If the detected parking space or road width (distance to the side of the road across from the parking space) is narrow, or if there are obstacles in front of the vehicle, guidance will not be issued.

- ④ Parking is complete



This completes the assist mode. Depending on the condition of the parking space, guidance to starting points for moving forward and backing up, as well as the steering wheel auto operation, are repeated any time multi-turn maneuvering is necessary following step ③ from the time the vehicle begins backing up until parking completes.

■ Parking


- 1 Stop so that the center of the target parking spot appears nearly perpendicular to vehicle. Then press the S-IPA switch 1 time and check that the display on the multi-information display switches to “Parallel Parking”.
- The mode switches each time the S-IPA switch is pressed.  
(→P. 408)
  - When the vehicle speed is approximately 30 km/h (19 mph) or higher, pressing the S-IPA switch will not cause the screen to switch to the “Parallel Parking” display.

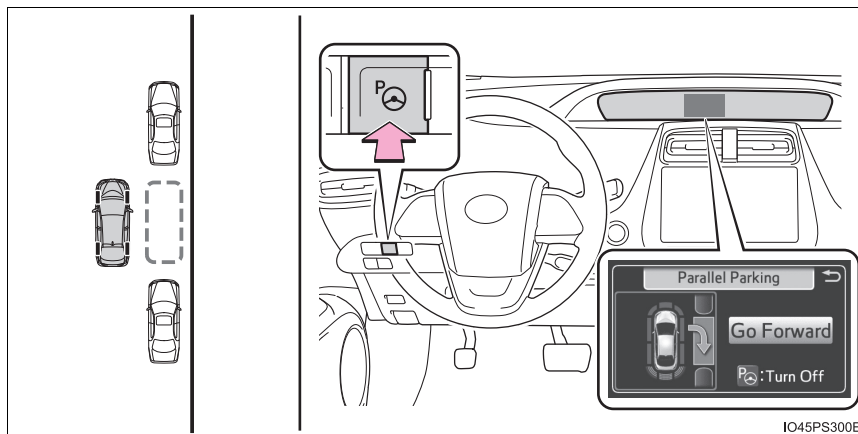

- 2 Travel straight ahead parallel with the road (or curb), and maintain a gap of approximately 1 m (3.3 ft.) from any parked vehicles.
- Proceed slowly.
  - The system will begin searching for a parking space.
  - While searching for a space, the turn signal lever (→P. 259) can be operated to select a parking space on the left or right.
  - When stopping the function, press the S-IPA switch once to turn the function off.
  - When a parking space is detected, the screen will change.

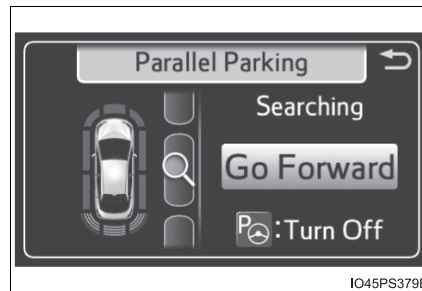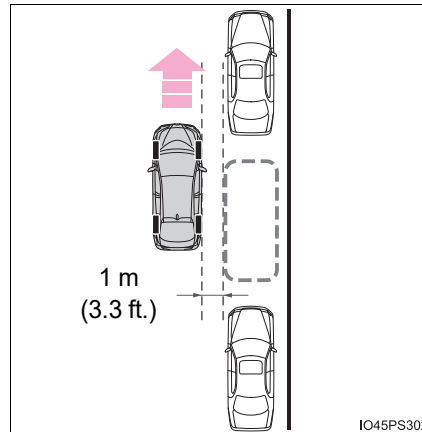


- 3 When a beep sounds once and the stop display (→P. 409) is shown on the display, stop the vehicle.

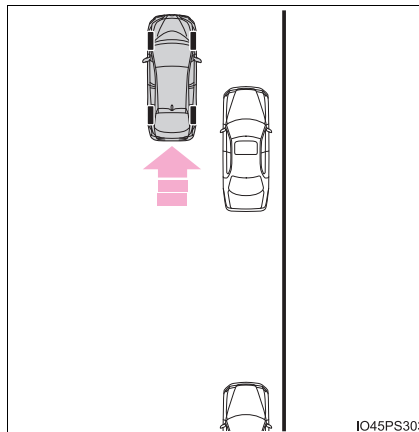

- 4 When the shift position is changed to R, a high-pitched beep is emitted and assist control will start.
- When the steering wheel auto operation starts, the steering wheel auto operation display (→P. 409) and assistance level indicator (→P. 409) will be shown in the display area.
  - To stop assist control, press the S-IPA switch.
- 5 Assume an ordinary posture for backing up, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the rear and around the vehicle, confirm that there are no obstacles in the parking space, and slowly back up while adjusting your speed by depressing the brake pedal.
- When backing up too quickly, a sharp beeping sound is emitted and assist control is stopped. (→P. 410)
  - When the vehicle cannot be cleanly entered within the target parking spot on the first try and multi-turn maneuvering is necessary, proceed to step 6.
- When multi-turn maneuvering is not necessary, proceed to step 12.



- 6 When a beep sounds once and the stop display (→P. 409) is shown on the display, stop the vehicle.

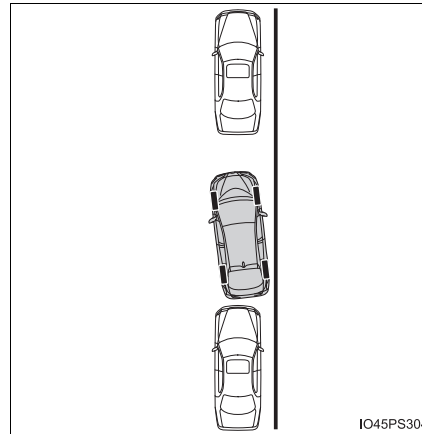

- 7 Change the shift position to D.
- 8 Assume an ordinary driving posture, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the front and around the vehicle and slowly proceed forward while adjusting your speed by depressing the brake pedal.
- 9 When a beep sounds once and the stop display (→P. 409) is shown on the display, stop the vehicle.
- 10 Change the shift position to R.
- 11 Assume an ordinary posture for backing up, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the rear and around the vehicle and slowly back up while adjusting your speed by depressing the brake pedal.

Depending on the condition of the parking space, steps 6 to 11 may need to be repeated.

- 12 When the vehicle is almost entirely within the target parking spot, a high-pitched beep is emitted and the stop display is shown on the display, stop the vehicle.

This completes the parallel parking assist mode.

- After stopping, feel free to maneuver the vehicle to reach the desired parking spot.
- Be sure to back up while checking the area to the front and rear of the vehicle directly and by using the mirrors.

---

#### ■ Parallel parking assist mode operating conditions

- In order to operate the parallel parking assist mode correctly, drive slowly (at a speed at which the vehicle can be quickly stopped) parallel to the road (or shoulder) while maintaining a distance of approximately 1 m (3.3 ft.) to any parked vehicles.
- The function cannot be used when the vehicle speed is approximately 30 km/h (19 mph) or higher.
- The front side sensors and rear side sensors are used to detect parked vehicles and determine the parking spot. Therefore, when detection is not possible (→P. 439), guidance is not issued.
- If there are no parked vehicles, the parking spot cannot be determined. Therefore, the parallel parking assist mode cannot be operated.
- If unable to detect the environment surrounding the parking space, the parallel parking assist mode may not be able to operate.
- Guidance will continue until the vehicle speed meets or exceeds approximately 30 km/h (19 mph) or the function is turned off using the S-IPA switch.

#### ■ Timing for pressing the S-IPA switch


In the following cases, the assist mode may also operate during the steps taken to park using the parallel parking assist mode. However, in these cases, conduct parking procedures according to the information on the multi-information display.

- In step 1 the S-IPA switch is pressed after already passing over the target parking spot.  
If the vehicle is not stopped in step 1, pressing the S-IPA switch 1 time while the vehicle is in motion allows you to select “Parallel Parking” and proceed directly to step 2.
- The vehicle is moved up to the position in step 3 without the S-IPA switch being pressed. Then the S-IPA switch is pressed after having changed the shift position to R.

 NOTICE

- If the road surface has any dips or inclines, the target parking spot cannot be correctly set. Therefore, the vehicle may be parked at an angle or may deviate from the parking spot. In these cases, do not use the parallel parking assist mode.

- When the other parked vehicle is narrow or parked extremely close to the curb, assist control will also guide the vehicle to a position close to the curb. If it seems the vehicle may make contact with the curb or any other obstacles, or if it seems the tire position will deviate from the intended parking spot, stop the vehicle by depressing the brake pedal, and then press the S-IPA switch to turn off the system.

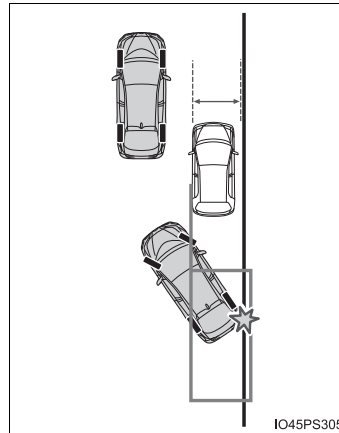

- When there is a wall or other obstacle on the inner side of the parking space, or when another parked vehicle extends into the road from its parking spot, the target parking spot may be set in a position that juts out slightly into the road.

- Depending on the surrounding environment, such as other parked vehicles, the vehicle may be parked at an angle or may deviate from the parking spot. Manually adjust vehicle alignment as necessary.

- The system provides assistance to guide the vehicle based on position of adjacent vehicles, even if there are obstacles, bumps, drops or curb stones in the parking space.

If it seems the vehicle may make contact, stop the vehicle by depressing the brake pedal, and then press the S-IPA switch to turn off the system.


- It may not be possible to detect objects that are low to the ground. Directly confirm the safety of your surroundings and, if it seems the vehicle may make contact with an obstacle, stop the vehicle by depressing the brake pedal.

### How to depart from a parallel parking position (exit parallel parking assist mode)

#### ■ Function summary

When departing from a parallel parking position, select the direction you would like to depart in, and steering wheel operation assist control will be provided to guide the vehicle to a position from which you can take off.

- ① With the shift position in P, press the S-IPA switch, select exit parallel parking assist mode, and then operate the turn signal lever to select the desired departure direction.
- ② Steering wheel auto operation starts when the shift position is changed according to guidance provided by the system.

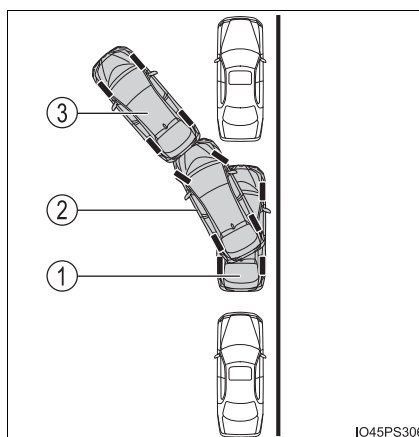


- ③ A sound is issued and a display is shown to notify you when the vehicle reaches a position from which you can take off.

Depending on the condition of the parking space, guidance to starting points for moving forward and backing up, as well as the steering wheel auto operation, are repeated any time multi-turn maneuvering is necessary from the time the steering wheel auto operation begins in step ② up until the vehicle reaches a position from which it can take off.

### ■ Using the exit parallel parking assist mode to depart

- 1 With the shift position in P, press the S-IPA switch and check that the display on the multi-information display switches to “Exit Parallel Parking”.

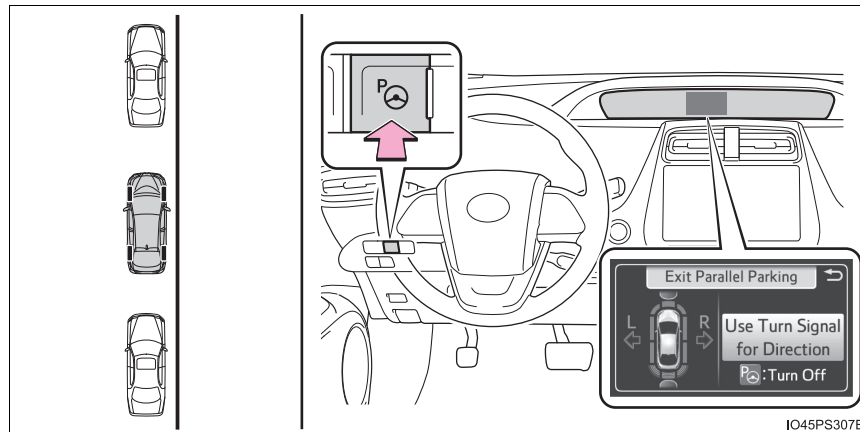

- 2 Operate the turn signal lever (→P. 259) to select whether you would like to depart to the left or right.

If there are any obstacles in the direction the vehicle is departing in, the system determines that it is not possible to depart, and assist control is stopped.

- 3 When the shift position is changed to R (or D) according to the advice display on the screen (→P. 409), a high-pitched beep is emitted and assist control will start.


Step 4 and onward is for cases in which the advice display shows “Shift to [R]” after operating the turn signal lever to select a departure direction.

- When the steering wheel auto operation starts, the steering wheel auto operation display (→P. 409) and assistance level indicator (→P. 409) will be shown in the display area.
- To stop assist control, press the S-IPA switch.

- 4 Assume an ordinary posture for backing up, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the rear and around the vehicle and slowly back up while adjusting your speed by depressing the brake pedal.


- When backing up too quickly, a sharp beeping sound is emitted and assist control is stopped. (→P. 410)

- 5 When a beep sounds once and the stop display (→P. 409) is shown on the display, stop the vehicle.

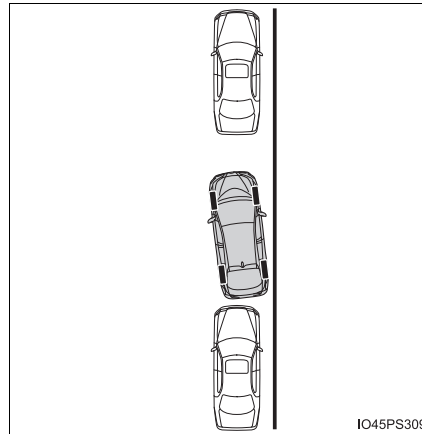

- 6 Change the shift position to D.
- 7 Assume an ordinary driving posture, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the front and around the vehicle and slowly proceed forward while adjusting your speed by depressing the brake pedal.
- When departure cannot be accomplished on the first try and multi-turn maneuvering is necessary, proceed to step 8.
  - When multi-turn maneuvering is not necessary, proceed to step 14 (→P. 422).

- 8 When a beep sounds once and the stop display (→P. 409) is shown on the display, stop the vehicle.

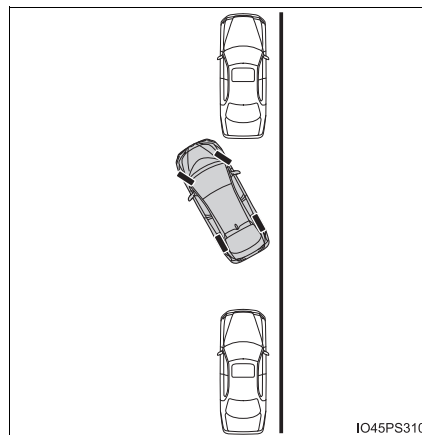


- 9 Change the shift position to R.

- 10 Assume an ordinary posture for backing up, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the rear and around the vehicle and slowly back up while adjusting your speed by depressing the brake pedal.


Depending on the condition of the parking space, steps 5 to 10 may need to be repeated.

- 11 When a beep sounds once and the stop display (→P. 409) is shown on the display, stop the vehicle.

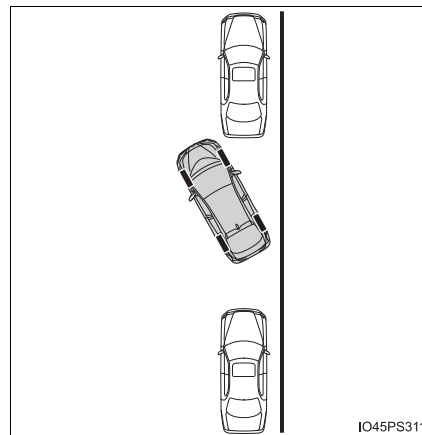

- 12 Change the shift position to D.
- 13 Assume an ordinary driving posture, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the front and around the vehicle and slowly proceed forward while adjusting your speed by depressing the brake pedal.

- 14 When the vehicle has nearly reached the take-off point, a high-pitched beep is emitted and assist control finishes. From there, grasp the steering wheel and proceed forward.

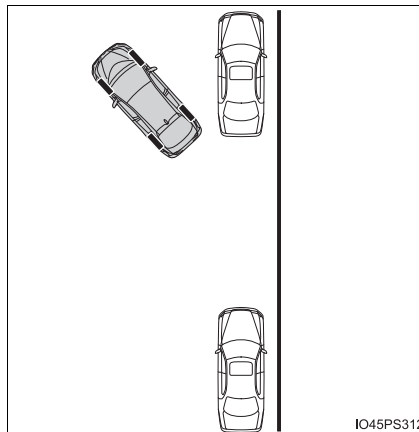

■ **Exit parallel parking assist mode**

- During assist control, if the driver determines that they are at a position where take-off is possible and operates the steering wheel, assist control is stopped at that position.
- Assist control cannot be used if there are no parked vehicles ahead, or if the gap between the front of your vehicle and the vehicle parked ahead is too large.
- When using the exit parallel parking assist mode, the assist mode may not be able to operate depending on the surrounding environment.

 **NOTICE**

- The detection range of the sensors (→P. 386) is limited. Directly confirm the safety of your surroundings, and if there is a possibility of a contact accident, stop the vehicle by depressing the brake pedal.
- It may not be possible to detect objects that are low to the ground. Directly confirm the safety of your surroundings and, if it seems the vehicle may make contact with an obstacle, stop the vehicle by depressing the brake pedal.
- When departing for a position from which you can take off, directly confirm the safety of your surroundings.



### How to park next to other vehicles (back-in parking assist mode)

#### ■ Function summary

Stop so that the center of the target parking spot appears nearly perpendicular to the vehicle. If the space is detectable, the forward guidance function can be used. Furthermore, depending on the parking space and other conditions, multi-turn maneuvering assist control is also provided if necessary.

- ① Stop so that the center of the target parking spot appears nearly perpendicular to the vehicle. Then press the S-IPA switch 2 times to select back-in parking assist mode.

- ② Steering wheel auto operation starts when the vehicle begins to move.


- ③ A sound is issued and a display is shown to notify you when the vehicle reaches the position to start backing up from.

If the detected parking space or road width (distance to the side of the road across from the parking space) is narrow, or if there are obstacles in front of the vehicle, guidance will not be issued.

- ④ Parking is complete

This completes the assist mode.


Depending on the condition of the parking space, guidance to starting points for moving forward and backing up, as well as the steering wheel auto operation, are repeated any time multi-turn maneuvering is necessary following step ③ from the time the vehicle begins backing up until parking completes.

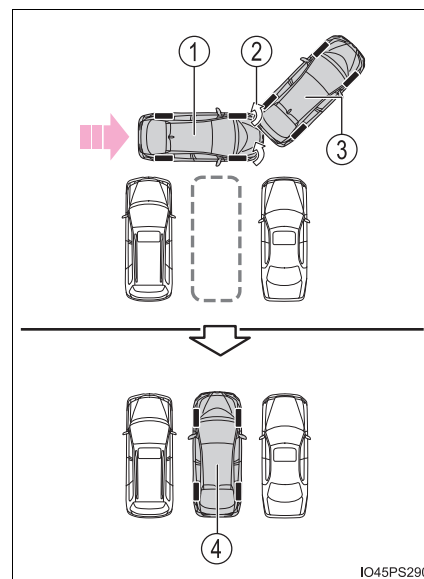


■ Parking

1 Stop so that the center of the target parking spot appears nearly perpendicular to vehicle. Then press the S-IPA switch 2 times and check that the display on the multi-information display switches to “Back-in Parking”.

- Visually check the area in the direction of the arrow indicating the direction of the steering wheel auto operation and the target parking spot on the display.
- The mode switches each time the S-IPA switch is pressed. (→P. 408)
- When the shift position is not in D or B, the screen will not switch to the “Back-in Parking” display.
- When the vehicle speed has been detected, the screen switches to the “Parallel Parking” display. To switch the screen to the “Back-in Parking” display, stop the vehicle completely and press the S-IPA switch again.
- The turn signal lever (→P. 259) can be operated to select whether you would like to park to the left or right.
- The system cannot be used when the parking space is narrow or there is not a sufficient enough area for assist control to operate. Please refer to the information shown on the multi-information display to use a different parking space.

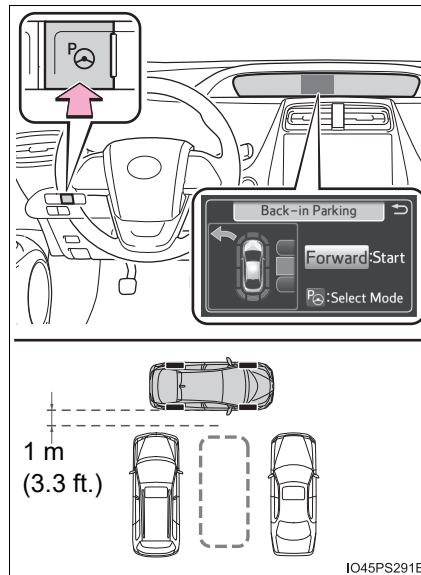


- 2 Assume an ordinary driving posture, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the front and around the vehicle and slowly proceed forward while adjusting your speed by depressing the brake pedal. When this is done, a high-pitched beep is emitted and an indicator on the meter illuminates at the same time, after which assist control will start.

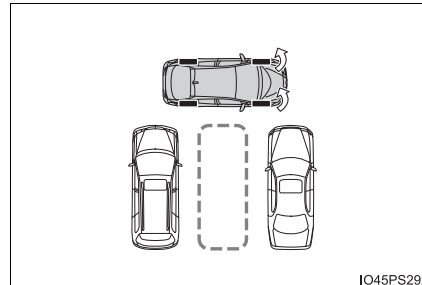

- When the steering wheel auto operation starts, the steering wheel auto operation display (→P. 409) and assistance level indicator (→P. 409) will be shown in the display area.
- To stop assist control, press the S-IPA switch.
- When the vehicle speed is too high, a sharp beeping sound is emitted and assist control is stopped. (→P. 410)
- If the space turns out to be too narrow after assist control starts, a sharp beeping sound is emitted and assist control is stopped.


- 3 When a beep sounds once and the stop display (→P. 409) is shown on the display, stop the vehicle.

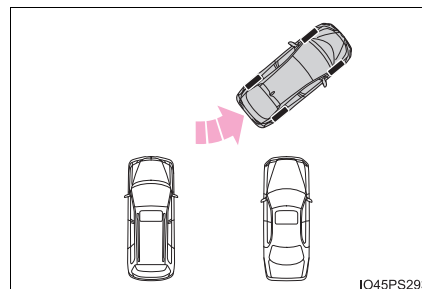

- 4 Change the shift position to R.

- 5 Assume an ordinary posture for backing up, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the rear and around the vehicle, confirm that there are no obstacles in the parking space, and slowly back up while adjusting your speed by depressing the brake pedal.
- When the vehicle cannot be cleanly entered within the target parking spot on the first try and multi-turn maneuvering is necessary, proceed to step 6.
  - When multi-turn maneuvering is not necessary, proceed to step 12. (→P. 427)

- 6 When a beep sounds once and the stop display (→P. 409) is shown on the display, stop the vehicle.

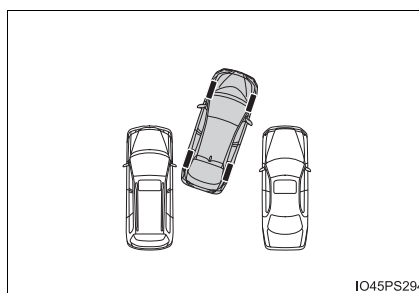


- 7 Change the shift position to D.

When you would like to end assist control at your current position, change the shift position to P.

- 8 Assume an ordinary driving posture, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the front and around the vehicle and slowly proceed forward while adjusting your speed by depressing the brake pedal.

- 9 When a beep sounds once and the stop display (→P. 409) is shown on the display, stop the vehicle.

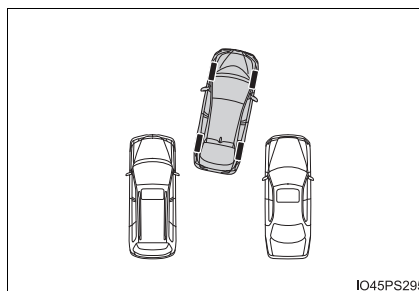

- 10 Change the shift position to R.

- 11 Assume an ordinary posture for backing up, rest your hands lightly on the steering wheel without applying any force, directly confirm the safety of the area to the rear and around the vehicle slowly back up while adjusting your speed by depressing the brake pedal.

Depending on the condition of the parking space, steps 6 to 11 may need to be repeated.

- 12 When the vehicle is almost entirely within the target parking spot, a high-pitched beep is emitted and the stop display is shown on the display (→P. 409), stop the vehicle.


This completes the back-in parking assist mode.

- For safety, the buzzer sounds slightly before the vehicle is completely entered within the target parking spot. Furthermore, at that point, system operation will also finish. Firmly hold the steering wheel and slowly back up while adjusting your speed by depressing the brake pedal to reach the desired parking spot.
- Be sure to back up while checking the area to the front and rear of the vehicle directly and by using the mirrors.

■ **Back-in parking assist mode operating conditions**



- In order to operate the function correctly, drive slowly (at a speed at which the vehicle can be quickly stopped).
- In order to operate the function correctly, drive slowly (at a speed at which the vehicle can be quickly stopped). Come to a full stop so that the center of the parking space is nearly perpendicular to the vehicle, and then operate the S-IPA switch.
- The function cannot be used when the vehicle speed is approximately 30 km/h (19 mph) or higher.
- The front side sensors and rear side sensors are used to detect parked vehicles and determine the parking spot. Therefore, when detection is not possible (→P. 439), guidance is not issued.
- If there are no parked vehicles, the parking spot cannot be determined. Therefore, the back-in parking assist mode cannot be operated.
- If unable to detect the environment surrounding the parking space, the back-in parking assist mode may not be able to operate.
- Depending on the condition of the parking space, if there is not enough space in front of the vehicle required to perform the parking operation, the target parking spot may not be reachable.

- ① Intended parking spot
- ② Wall

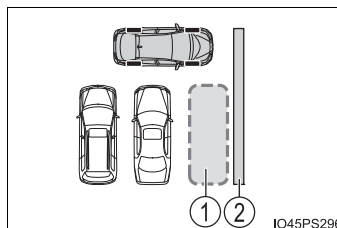

### ■ Tips for using the back-in parking assist mode

- Leave a gap of approximately 1 m (3.3 ft.) from any parked vehicles and approach the target parking spot. If the gap between your vehicle and any parked vehicles is too large, the front side sensors and rear side sensors may not be able to detect the parked vehicles.
- Stop so that the center of the target parking spot is perpendicular to the vehicle. Furthermore, only push the S-IPA switch when the vehicle is at a complete stop.

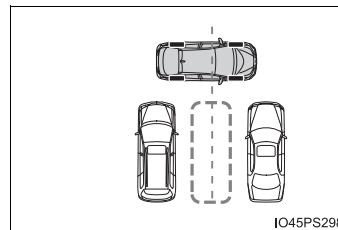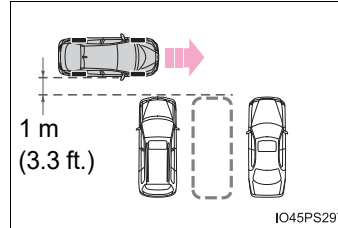


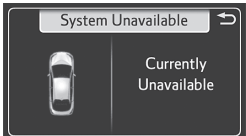
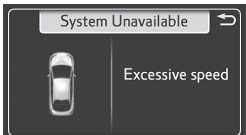
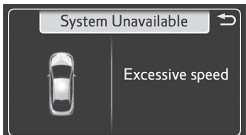
#### ⚠ NOTICE

- If the road surface has any dips or inclines, the target parking spot cannot be correctly set. Therefore, the vehicle may be parked at an angle or may deviate from the parking spot. In these cases, do not use the back-in parking assist mode.
- When parking in a narrow space, the vehicle will come close to adjacent vehicles. If it seems the vehicle may make contact, stop the vehicle by depressing the brake pedal.
- It may not be possible to detect objects that are low to the ground. Directly confirm the safety of your surroundings and, if it seems the vehicle may make contact with an obstacle, stop the vehicle by depressing the brake pedal.
- Depending on the surrounding environment, such as other parked vehicles, the vehicle may be parked at an angle or may deviate from the parking spot. Manually adjust vehicle alignment as necessary.






**Multi-information display messages**


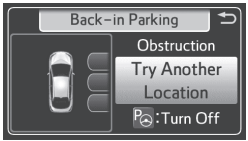
When the Simple Intelligent Parking Assist System cannot be operated, or when operation is stopped, canceled, etc., the one of the following message is displayed on the multi-information display. Take appropriate action according to the display.

■ **When it is not possible to operate**





Message	Situation/Handling method
	<p>The system may be malfunctioning.                      → <b>Turn the power switch off and then start the hybrid system.</b>  <b>Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer if the message is displayed again.</b></p>
	<p>There may be a system failure.</p>
	<p>Power steering equipment is temporarily overheating.                      → <b>Turn the power switch off, wait for a little while, and then start the hybrid system again.</b></p>
	<p>The hybrid system is not operating.                      → <b>Start the hybrid system.</b></p>
	<p>Ice, snow, dirt, etc., has adhered to the sensor.                      → <b>Remove any ice, snow, dirt, etc.</b></p>
	<p>The sensor is frozen.                      → <b>Once the sensor thaws, the system will return to normal.</b></p>
	<p>The 12-volt battery has been removed and reinstalled.                      → <b>Drive the vehicle straight ahead for 5 seconds or more at a speed of approximately 35 km/h (22 mph) or higher.</b></p>
	<p>The S-IPA switch is operated when the vehicle speed exceeds 30 km/h (19 mph).                      → <b>Operate the switch when the vehicle speed is approximately 30 km/h (19 mph) or less.</b></p>

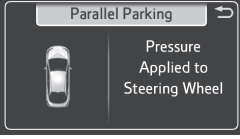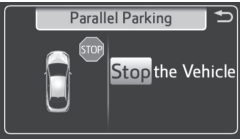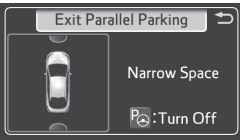
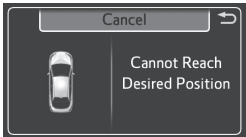


Message	Situation/Handling method
	<p>Assist control is started while the steering wheel is held.</p> <p>→ <b>Rest your hands on the steering wheel without applying any force. Assist control will start.</b></p>
	<p>The vehicle is moved and assist control is started while the steering wheel is held.</p> <p>→ <b>Stop the vehicle and follow the guidance provided by the system to start assist control.</b></p>
	<p>The S-IPA switch is operated when there is not enough space to the front and rear of the vehicle when departing from a parallel parking spot.</p> <p>→ <b>The vehicle cannot depart using assist control as there is not enough space to the front and rear of the vehicle. Confirm the safety of your surroundings before departing.</b></p>
	<p>The S-IPA switch is operated in an area where there are no obstacles to the front of the vehicle, or there are obstacles to the sides and the vehicle cannot depart from the parallel parking spot.</p> <p>→ <b>Assist control cannot be used for departure, as there are obstacles to the sides of the vehicle or departure can easily be performed manually. Confirm the safety of your surroundings before departing.</b></p>
	<p>The S-IPA switch is operated in an area with no parking spaces, or operated in an area where the road width for parking is narrow.</p> <p>→ <b>Assist control cannot be used, as there is no parking space. Proceed to a parking space which width is approximately 2.6 m (8.5 ft.) or larger.</b></p> <p>→ <b>Assist control cannot be used, as the road width is narrow. Proceed to a parking space where the road width is approximately 4.5 m (15 ft.) or larger.</b></p>


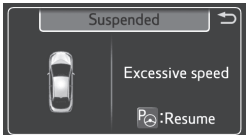
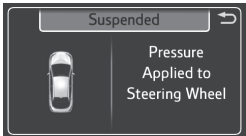

Message	Situation/Handling method
	<p>The S-IPA switch is operated at a space that is too narrow for the vehicle to park in.                      → <b>Assist control cannot be used, as there is no parking space. Proceed to a parking space that is approximately 2.6 m (8.5 ft.) or larger.</b></p>
	<p>The S-IPA switch is operated in an area where there are obstacles to the front, and the vehicle cannot move forward to the starting point for backing up.                      → <b>Assist control cannot be used, as there are obstacles in front of the vehicle. Use parking spaces that have no obstacles in front of them.</b></p>


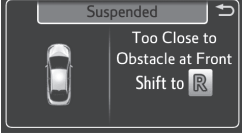
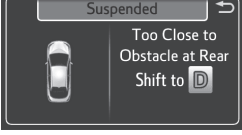
■ When the operation is canceled

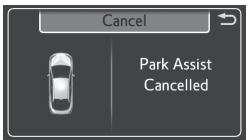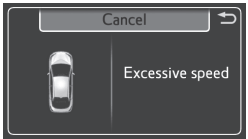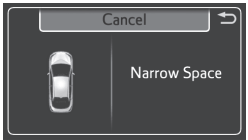Message	Situation/Handling method
	<p>While assist control is operating, the driver changes the shift position to P or operates the S-IPA switch.</p>
	<p>The vehicle speed exceeds 30 km/h (19 mph) when searching for a parallel parking assist mode space.</p>
	<p>Assist control is started in an area with narrow parking spaces.</p>
	<p>The shift position is changed without having used the turn signal lever to select a departure direction when using the exit parallel parking assist mode.                      → <b>Follow the guidance provided by the system.</b></p>

Message	Situation/Handling method
	<p>When assist control starts, the vehicle proceeds in a direction opposite to the guidance.                      → <b>Follow the guidance provided by the system to proceed forward.</b></p>
	<p>The maximum number of movements for multi-turn maneuvering is reached during assist control, or the target parking spot cannot be reached due to the control being used on a road with steep grade.                      → <b>Follow the assist control guidance and use the system in a wide space that does not have a steep grade.</b></p>

■ When the operation is suspended

Message	Situation/Handling method	
	<p>The driver holds the steering wheel during assist control.</p>	<p>→ <b>Stop the vehicle and rest your hands on the steering wheel without applying any force. Then press the S-IPA switch to restart assist control.</b></p>
	<p>The vehicle speed exceeds 7 km/h (4 mph) during assist control.</p>	
	<p>The S-IPA switch is pressed while assist control is temporarily stopped and the steering wheel is firmly held.</p>	<p>→ <b>Rest your hands on the steering wheel without applying any force. Then stop the vehicle to restart assist control.</b></p>
	<p>The S-IPA switch is pressed while assist control is temporarily stopped and the vehicle is moving.</p>	


Message	Situation/Handling method	
 <p>The image shows a 'Suspended' message with a car icon and a 'Resume' button.</p>	<p>Assist control is temporarily stopped (able to be restarted)</p>	<p>→ <b>Stop the vehicle and rest your hands on the steering wheel without applying any force. Then press the S-IPA switch to restart assist control.</b></p>
 <p>The image shows a 'Suspended' message with a car icon, the text 'Too Close to Obstacle at Front', and a 'Shift to R' button.</p>	<p>The vehicle moved too close to an obstacle in front of the vehicle.</p>	<p>→ <b>Press the S-IPA switch after changing the shift position to R to restart assist control.</b></p>
 <p>The image shows a 'Suspended' message with a car icon, the text 'Too Close to Obstacle at Rear', and a 'Shift to D' button.</p>	<p>The vehicle moved too close to an obstacle to the rear of the vehicle.</p>	<p>→ <b>Press the S-IPA switch after changing the shift position to D to restart assist control.</b></p>

**Precautions during use**

■ **Sensors**

Detect the vehicle to help determine the parking spot.


- ① Front side sensors
- ② Rear side sensors

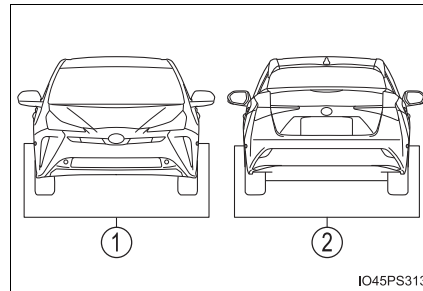

IO45PS313

- The sensor detection range when using back-in parking assist mode


- ① Intended parking spot

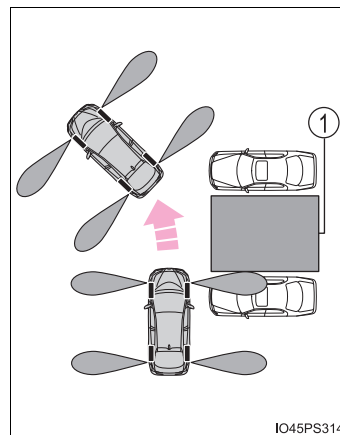

IO45PS314

- The sensor detection range when using parallel parking assist mode

- ① Intended parking spot

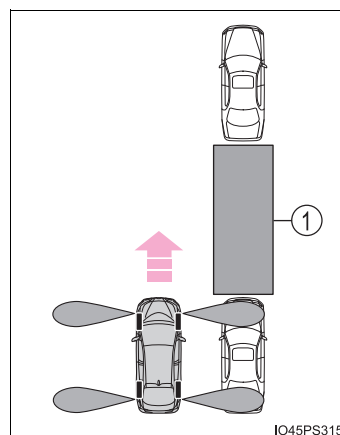


IO45PS315

- When there is a parked vehicle behind the target parking spot, it may not be detected due to the distance. Also, depending on the shape of the vehicle and other conditions, the detectable range may shorten or detection may not be possible.

- Objects other than parked vehicles, such as poles and walls, may not be detected. Also, even if these objects can be detected, the target parking spot may deviate.


- ① Poles
- ② Wall

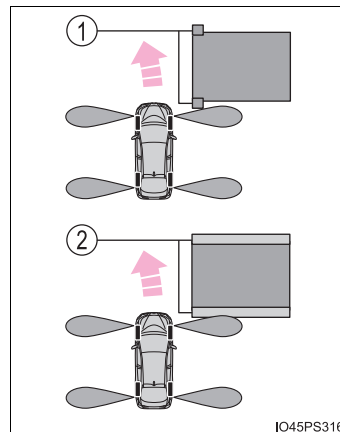

IO45PS316

- Also, the target parking spot may deviate when a pedestrian, etc. is detected.

- ① Pedestrian

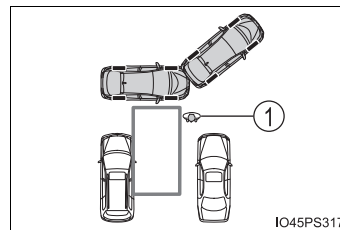

IO45PS317

- The Simple Intelligent Parking Assist System may not operate if grating, diamond plates or similar materials are detected on the surface of the parking space.

 WARNING

- Do not rely solely upon the Simple Intelligent Parking Assist System. As with unequipped vehicles, move forward and back up carefully while directly confirming the safety of your surroundings and the area to the rear of the vehicle.
- Do not back up while viewing the multi-information display. Backing up while only viewing the monitor screen may cause a collision or lead to an accident, as the image displayed on the monitor screen may differ from actual conditions. Make sure to visually check the surrounding areas and the area to the rear of the vehicle with and without the mirror while backing up.
- Drive slowly while adjusting your speed by depressing the brake pedal when backing up or moving forward.
- If it seems the vehicle may make contact with a pedestrian, another vehicle or any other obstacles, stop the vehicle by depressing the brake pedal, and then press the S-IPA switch to turn off the system.
- Use the system in a parking lot with a flat surface.
- Observe the following precautions, as the steering wheel automatically turns during use.
  - There is risk of a necktie, scarf, your arm, etc. being caught on the steering wheel. Please do not allow your upper body to be close to the steering wheel. Also, do not allow children close to the steering wheel.
  - There is a possibility of injury when the steering wheel turns if you have long fingernails.
  - In case of emergency, stop the vehicle by depressing the brake pedal, and then press the S-IPA switch to turn off the system.
- Always confirm that there is appropriate space before attempting to park the vehicle and operate the system.

 **WARNING**

- Do not use the system in the following situations, as the system may be unable to correctly assist you in reaching the target parking spot and may lead to an unexpected accident.
  - In an area that is not a parking lot
  - A parking lot that is not paved and has no parking space lines, such as a sand or gravel parking lot
  - A parking lot that has a slope or undulations in the road
  - A frozen, snow-covered or slippery road
  - The asphalt is melting due to hot weather
  - There is an obstacle between the vehicle and the target parking spot
  - Using tire chains or compact spare tire (if equipped)
- Do not use tire other than that provided by the manufacturer. The system may not operate properly. When replacing tires, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- The system may not be able position the vehicle in the set location in the following situations.
  - The tires are extremely worn or the tire pressure is low
  - The vehicle is carrying very heavy load
  - The vehicle is tilted due to having luggage, etc. located on one side of the vehicle
  - There are road heaters installed in the parking lot to prevent the road surface from freezing.In any other situations when the set position and vehicle position greatly differ, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Make sure to observe the following precautions regarding the exit parallel parking assist mode.

Exit parallel parking assist mode is a function used when departing from a parallel parking spot. However, this function may not be usable if obstacles or people are detected in front of the vehicle. Only use this function when departing from a parallel parking spot. In the event that the steering control operates, either turn the system off using the S-IPA switch or operate the steering wheel to stop the control.
- If exit parallel parking assist mode is mistakenly used in the following situations, the vehicle may make contact with an obstacle.

The departure function is operated in a direction where an obstacle is present, but the obstacle is not detected by the side sensors (situations such as when the vehicle is directly beside a pole).



 **WARNING**

- Observe the following precautions, as the sensors may stop functioning properly which may lead to an accident.
  - Do not subject the sensor to strong shocks by hitting it, etc. The sensors may not function properly.
  - When using a high-pressure washer to wash the vehicle, do not spray water directly on the sensors. Equipment may not function properly if subjected to an impact from strong water pressure. If the vehicle bumper strikes something, equipment may not operate properly due to a sensor malfunction. Have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- In the following situations, the sensors may not operate normally and may lead to an accident. Drive carefully.
  - Obstacles cannot be detected in the side areas until a scan of the side areas is completed. (→P. 388)
  - Even after the scan of the side areas is completed, obstacles such as other vehicles, people or animals that approach from the sides cannot be detected.
  - The sensor is frozen (if it thaws, the system returns to normal). A warning message may display at particularly low temperatures due to the sensor freezing and it may not detect parked vehicles.
  - The sensor is blocked by someone's hand.
  - The vehicle is tilted a large amount.
  - The temperature is extremely hot or cold.
  - The vehicle is driven on undulating roads, slopes, gravel roads, in areas with tall grass, etc.
  - An ultrasonic wave source is nearby, such as the horn or sensors of another vehicle, a motorcycle engine or the air brake of a large vehicle.
  - Heavy rain or a water strikes the vehicle.
  - The angle of the sensor may be deviated when assist control starts even if there is a parked vehicle in the target parking spot. Have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
  - Do not install any accessories within the sensor detection range.

## GPF (Gasoline Particulate Filter) system\*

The GPF system collects particulate matter in the exhaust gas by using an exhaust gas filter.

The system will operate to regenerate the filter automatically, depending on the vehicle conditions.

■ **If “Exhaust Filter Full See Owner’s Manual” is shown on the multi-information display**

- The message may be displayed while high load driving with particulate matter accumulating.
- Hybrid system output (engine speed) is restricted when a certain amount of particulate matter accumulates, however, it is possible to drive the vehicle unless the malfunction indicator lamp comes on.
- Particulate matter can accumulate more quickly if the vehicle is frequently driven short trips or at low speeds, or if the hybrid system is regularly started in an extremely cold environment. Excessive accumulation of particulate matter can be prevented by periodically driving long distances continuously with intermittent releasing of the accelerator pedal, such as when driving on highways and freeways.

■ **If the malfunction indicator lamp comes on or “Exhaust Filter Full Visit Your Dealer” is shown on the multi-information display**

The amount of accumulated particulate matter has exceeded a certain level. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

 NOTICE

■ **To prevent the GPF system from not operating properly**

- Do not use fuel other than the specified type
- Do not modify the exhaust pipes

\*: If equipped

## Driving assist systems

To keep driving safety and performance, the following systems operate automatically in response to various driving situations. Be aware, however, that these systems are supplementary and should not be relied upon too heavily when operating the vehicle.

### ◆ ECB (Electronically Controlled Brake System)

The electronically controlled system generates braking force corresponding to the brake operation

### ◆ ABS (Anti-lock Brake System)

Helps to prevent wheel lock when the brakes are applied suddenly, or if the brakes are applied while driving on a slippery road surface

### ◆ Brake assist

Generates an increased level of braking force after the brake pedal is depressed when the system detects a panic stop situation

### ◆ VSC (Vehicle Stability Control)

Helps the driver to control skidding when swerving suddenly or turning on slippery road surfaces.

### ◆ VSC+ (Vehicle Stability Control+)

Provides cooperative control of the ABS, TRC, VSC and EPS. Helps to maintain directional stability when swerving on slippery road surfaces by controlling steering performance.

### ◆ TRC (Traction Control)

Helps to maintain drive power and prevent the drive wheels from spinning when starting the vehicle or accelerating on slippery roads

### ◆ Active Cornering Assist (ACA)

Helps to prevent the vehicle from drifting to the outer side by performing inner wheel brake control when attempting to accelerate while turning

◆ **Hill-start assist control**

Helps to reduce the backward movement of the vehicle when starting on an uphill

◆ **EPS (Electric Power Steering)**

Employs an electric motor to reduce the amount of effort needed to turn the steering wheel

◆ **Emergency brake signal**


When the brakes are applied suddenly, the emergency flashers automatically flash to alert the vehicle behind.

◆ **E-Four (Electronic On-Demand AWD system) (AWD models)**


Automatically switches from front-wheel drive to all-wheel drive (AWD) according to the driving conditions, helping to ensure reliable handling and stability. Examples of conditions where the system will switch to AWD are when cornering, going uphill, starting off or accelerating, and when the road surface is slippery due to snow, rain, etc.

**When the TRC/VSC/ABS systems are operating**

The slip indicator light will flash while the TRC/VSC/ABS systems are operating.

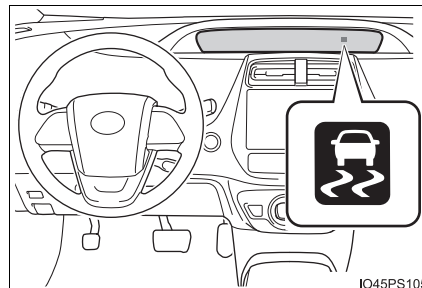


### Disabling the TRC system


If the vehicle gets stuck in mud, dirt or snow, the TRC system may reduce power from the hybrid system to the wheels. Pressing  to turn the system off may make it easier for you to rock the vehicle in order to free it.

To turn the TRC system off, quickly press and release




The “Traction Control Turned Off” will be shown on the multi-information display.


Press  again to turn the system back on.

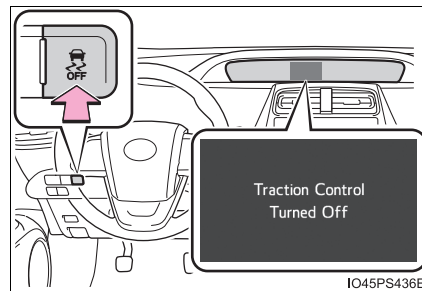

### Turning off both TRC and VSC systems

To turn the TRC and VSC systems off, press and hold  for more than 3 seconds while the vehicle is stopped.

The VSC OFF indicator will come on and the “Traction Control Turned Off” will be shown on the multi-information display.\*

Press  again to turn the systems back on.

\*: On vehicles with pre-collision system, pre-collision brake assist and pre-collision braking will also be disabled. The PCS warning light will come on and the message will be shown on the multi-information display. (→P. 582)

### When the message is displayed on the multi-information display showing that TRC has been disabled even if has not been pressed

TRC is temporary deactivated. If the information continues to show, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**■ Operating conditions of hill-start assist control**

When the following four conditions are met, the hill-start assist control will operate:

- The shift position is in a position other than P or N (when starting off forward/backward on an upward incline)
- The vehicle is stopped
- The accelerator pedal is not depressed
- The parking brake is not engaged

**■ Automatic system cancelation of hill-start assist control**

The hill-start assist control will turn off in any of the following situations:

- Shift the shift position to P or N
- The accelerator pedal is depressed
- The parking brake is engaged
- No more than 2 seconds have elapsed after the brake pedal is released.

**■ Sounds and vibrations caused by the ABS, brake assist, VSC, TRC and hill-start assist control systems**

- A sound may be heard from the engine compartment when the brake pedal is depressed repeatedly, when the hybrid system is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in any of these systems.
- Any of the following conditions may occur when the above systems are operating. None of these indicates that a malfunction has occurred.
  - Vibrations may be felt through the vehicle body and steering.
  - A motor sound may be heard also after the vehicle comes to a stop.

**■ ECB operating sound**

ECB operating sound may be heard in the following cases, but it does not indicate that a malfunction has occurred.

- Operating sound heard from the engine compartment when the brake pedal is operated.
- Motor sound of the brake system heard from the front part of the vehicle when the driver's door is opened.
- Operating sound heard from the engine compartment when one or two minutes passed after the stop of the hybrid system.

**■ Active Cornering Assist operation sounds and vibrations**

When the Active Cornering Assist is operated, operation sounds and vibrations may be generated from the brake system, but this is not a malfunction.

**■ EPS operation sound**

When the steering wheel is operated, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

**■ Automatic reactivation of TRC and VSC systems**

After turning the TRC and VSC systems off, the systems will be automatically re-enabled in the following situations:

- When the power switch is turned off
- If only the TRC system is turned off, the TRC will turn on when vehicle speed increases

If both the TRC and VSC systems are turned off, automatic re-enabling will not occur when vehicle speed increases.

**■ Operating conditions of Active Cornering Assist**

The system operates when the following occurs.

- TRC/VSC can operate
- The driver is attempting to accelerate while turning
- The system detects that the vehicle is drifting to the outer side
- The brake pedal is released

**■ Reduced effectiveness of the EPS system**

The effectiveness of the EPS system is reduced to prevent the system from overheating when there is frequent steering input over an extended period of time. The steering wheel may feel heavy as a result. Should this occur, refrain from excessive steering input or stop the vehicle and turn the hybrid system off. The EPS system should return to normal within 10 minutes.

**■ Electric power steering system warning light (warning buzzer)**

→P. 581

**■ Operating conditions of emergency brake signal**

When the following conditions are met, the emergency brake signal will operate:

- The emergency flashers are off.
- Actual vehicle speed is over 55 km/h (35 mph).
- The system judges from the vehicle deceleration that it is a sudden braking operation.

**■ Automatic system cancelation of emergency brake signal**

The emergency brake signal will be canceled in any of the following situations:

- The emergency flashers are turned on.
- The system judges from the vehicle deceleration that is not a sudden braking operation.

■ **When a message related to AWD system is displayed on the multi-information display (AWD models)**

Perform the following actions.

Message	Details	Actions
“AWD System Overheated Switching to 2WD Mode”	AWD system is overheating.	Stop the vehicle for a certain amount of time or drive the vehicle at approximately 10 km/h (6 mph) or more to reduce the overload to the system. Once the display message on the multi-information display turns off, there is no problem continuing to drive.
“AWD System Overheated 2WD Mode Engaged”	The vehicle switched from all-wheel drive (AWD) to front wheel drive due to overheating.	
“AWD System Malfunction 2WD Mode Engaged Visit Your Dealer”	A malfunction occurred in the AWD system, and the vehicle switched to front wheel drive.	Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.



 WARNING**■ The ABS does not operate effectively when**

- The limits of tire gripping performance have been exceeded (such as excessively worn tires on a snow covered road).
- The vehicle hydroplanes while driving at high speed on wet or slick roads.

**■ Stopping distance when the ABS is operating may exceed that of normal conditions**

The ABS is not designed to shorten the vehicle's stopping distance. Always maintain a safe distance from the vehicle in front of you, especially in the following situations:

- When driving on dirt, gravel or snow-covered roads
- When driving with tire chains
- When driving over bumps in the road
- When driving over roads with potholes or uneven surfaces

**■ TRC/VSC may not operate effectively when**

Directional control and power may not be achievable while driving on slippery road surfaces, even if the TRC/VSC system is operating. Drive the vehicle carefully in conditions where stability and power may be lost.

**■ Active Cornering Assist does not operate effectively when**

- Do not overly rely on Active Cornering Assist. Active Cornering Assist may not operate effectively when accelerating down slopes or driving on slippery road surfaces.
- When Active Cornering Assist frequently operates, Active Cornering Assist may temporarily stop operating to ensure proper operation of the brakes, TRC and VSC.

**■ Hill-start assist control does not operate effectively when**

- Do not overly rely on hill-start assist control. Hill-start assist control may not operate effectively on steep inclines and roads covered with ice.
- Unlike the parking brake, hill-start assist control is not intended to hold the vehicle stationary for an extended period of time. Do not attempt to use hill-start assist control to hold the vehicle on an incline, as doing so may lead to an accident.

**■ When the TRC/ABS/VSC is activated**

The slip indicator light flashes. Always drive carefully. Reckless driving may cause an accident. Exercise particular care when the indicator light flashes.

 WARNING

■ **When the TRC/VSC systems are turned off**

Be especially careful and drive at a speed appropriate to the road conditions. As these are the systems to help ensure vehicle stability and driving force, do not turn the TRC/VSC systems off unless necessary.

■ **Replacing tires**

Make sure that all tires are of the specified size, brand, tread pattern and total load capacity. In addition, make sure that the tires are inflated to the recommended tire inflation pressure level.

The ABS, TRC and VSC systems will not function correctly if different tires are installed on the vehicle.

Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for further information when replacing tires or wheels.

■ **Handling of tires and the suspension**

Using tires with any kind of problem or modifying the suspension will affect the driving assist systems, and may cause a system to malfunction.

## Hybrid vehicle driving tips

**For economical and ecological driving, pay attention to the following points:**

### ◆ Using Eco drive mode

When using Eco drive mode, the torque corresponding to the accelerator pedal depression amount can be generated more smoothly than it is in normal conditions. In addition, the operation of the air conditioning system (heating/cooling) will be minimized, improving the fuel economy. (→P. 351)

### ◆ Use of Hybrid System Indicator

The Eco-friendly driving is possible by keeping the Hybrid System Indicator within Eco area. (→P. 132)

### ◆ Shift position operation

Shift the shift position to D when stopped at a traffic light, or driving in heavy traffic etc. Shift the shift position to P when parking. When using the N, there is no positive effect on fuel consumption. In the N, the gasoline engine operates but electricity cannot be generated. Also, when using the air conditioning system, etc., the hybrid battery (traction battery) power is consumed.

### ◆ Accelerator pedal/brake pedal operation

- Drive your vehicle smoothly. Avoid abrupt acceleration and deceleration. Gradual acceleration and deceleration will make more effective use of the electric motor (traction motor) without having to use gasoline engine power.
- Avoid repeated acceleration. Repeated acceleration consumes hybrid battery (traction battery) power, resulting in poor fuel consumption. Battery power can be restored by driving with the accelerator pedal slightly released.

◆ **When braking**

Make sure to operate the brakes gently and in a timely manner. A greater amount of electrical energy can be regenerated when slowing down.

◆ **Delays**

Repeated acceleration and deceleration, as well as long waits at traffic lights, will lead to bad fuel economy. Check traffic reports before leaving and avoid delays as much as possible. When driving in a traffic jam, gently release the brake pedal to allow the vehicle to move forward slightly while avoiding overuse of the accelerator pedal. Doing so can help control excessive gasoline consumption.

◆ **Highway driving**

Control and maintain the vehicle at a constant speed. Before stopping at a toll booth or similar, allow plenty of time to release the accelerator and gently apply the brakes. A greater amount of electrical energy can be regenerated when slowing down.

◆ **Air conditioning**

Use the air conditioning only when necessary. Doing so can help reduce excessive gasoline consumption.

In summer: When the ambient temperature is high, use the recirculated air mode. Doing so will help to reduce the burden on the air conditioning system and reduce fuel consumption as well.

In winter: Because the gasoline engine will not automatically cut out until it and the interior of the vehicle are warm, it will consume fuel. Also, fuel consumption can be improved by avoiding overuse of the heater.

---

**◆ Checking tire inflation pressure**

---

Make sure to check the tire inflation pressure frequently. Improper tire inflation pressure can cause poor fuel economy.

Also, as snow tires can cause large amounts of friction, their use on dry roads can lead to poor fuel economy. Use tires that are appropriate for the season.

**◆ Luggage**

---

Carrying heavy luggage will lead to poor fuel economy. Avoid carrying unnecessary luggage. Installing a large roof rack will also cause poor fuel economy.

**◆ Warming up before driving**

---

Since the gasoline engine starts up and cuts out automatically when cold, warming up the engine is unnecessary. Moreover, frequently driving short distances will cause the engine to repeatedly warm up, which can lead to excess fuel consumption.

## Winter driving tips

**Carry out the necessary preparations and inspections before driving the vehicle in winter. Always drive the vehicle in a manner appropriate to the prevailing weather conditions.**

### Preparation for winter

- Use fluids that are appropriate to the prevailing outside temperatures.
  - Engine oil
  - Engine/power control unit coolant
  - Washer fluid
- Have a service technician inspect the condition of the 12-volt battery.
- Have the vehicle fitted with four snow tires or purchase a set of tire chains for the front tires.

Ensure that all tires are the same size and brand, and that chains match the size of the tires.

### Before driving the vehicle

Perform the following according to the driving conditions:

- Do not try to forcibly open a window or move a wiper that is frozen. Pour warm water over the frozen area to melt the ice. Wipe away the water immediately to prevent it from freezing.
- To ensure proper operation of the climate control system fan, remove any snow that has accumulated on the air inlet vents in front of the windshield.
- Check for and remove any excess ice or snow that may have accumulated on the exterior lights, vehicle's roof, chassis, around the tires or on the brakes.
- Remove any snow or mud from the bottom of your shoes before getting in the vehicle.

### When driving the vehicle

Accelerate the vehicle slowly, keep a safe distance between you and the vehicle ahead, and drive at a reduced speed suitable to road conditions.

### When parking the vehicle

Park the vehicle and shift the shift position to P and block the wheel under the vehicle without setting the parking brake. The parking brake may freeze up, preventing it from being released. If the vehicle is parked without setting the parking brake, make sure to block the wheels.

Failure to do so may be dangerous because it may cause the vehicle to move unexpectedly, possibly leading to an accident.

### Selecting tire chains


Use the correct tire chain size when mounting the tire chains. Chain size is regulated for each tire size.

#### Side chain

- ① 3.0 mm (0.12 in.)
- ② 30.0 mm (1.18 in.)
- ③ 10.0 mm (0.39 in.)

#### Cross chain

- ④ 4.0 mm (0.16 in.)
- ⑤ 25.0 mm (0.98 in.)
- ⑥ 14.0 mm (0.55 in.)

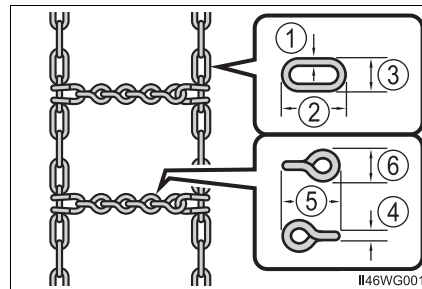

### Regulations on the use of tire chains

Regulations regarding the use of tire chains vary depending on location and type of road. Always check local regulations before installing chains.

**■ Tire chain installation**

Observe the following precautions when installing and removing chains:

- Install and remove tire chains in a safe location.
- Install tire chains on the front tires only. Do not install tire chains on the rear tires.
- Install tire chains on front tires as tightly as possible. Retighten chains after driving 0.5 - 1.0 km (1/4 - 1/2 mile).
- Install tire chains following the instructions provided with the tire chains.

**⚠ WARNING****■ Driving with snow tires**

Observe the following precautions to reduce the risk of accidents. Failure to do so may result in a loss of vehicle control and cause death or serious injury.

- Use tires of the specified size.
- Maintain the recommended level of air pressure.
- Do not drive at speeds in excess of the speed limit or the speed limit specified for the snow tires being used.
- Use snow tires on all, not just some wheels.

**■ Driving with tire chains**

Observe the following precautions to reduce the risk of accidents. Failure to do so may result in the vehicle being unable to be driven safely, and may cause death or serious injury.

- Do not drive in excess of the speed limit specified for the tire chains being used, or 50 km/h (30 mph), whichever is lower.
- Avoid driving on bumpy road surfaces or over potholes.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.
- Slow down sufficiently before entering a curve to ensure that vehicle control is maintained.
- Do not use LTA (Lane Tracing Assist) (if equipped).

**■ When parking the vehicle**

When parking the vehicle without applying the parking brake, make sure to chock the wheels. If you do not chock the wheels, the vehicle may move unexpectedly, possibly resulting in an accident.





## NOTICE

**■ Repairing or replacing snow tires (vehicle with the tire pressure warning system)**

Request repairs or replacement of snow tires from any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or legitimate tire retailers.

This is because the removal and attachment of snow tires affects the operation of the tire pressure warning valves and transmitters.

**■ Fitting tire chains (vehicle with the tire pressure warning system)**

The tire pressure warning valves and transmitters may not function correctly when tire chains are fitted.



**5-1. Using the air conditioning system and defogger**

Automatic air conditioning system .....	458
Seat heaters .....	468

**5-2. Using the interior lights**

Interior lights list.....	470
• Front interior light .....	471
• Front personal lights .....	471
• Rear interior light .....	472

**5-3. Using the storage features**

List of storage features .....	473
• Glove box .....	474
• Console box .....	474
• Cup holders .....	475
• Bottle holders/ door pockets .....	476
• Auxiliary boxes .....	477
• Seat back pockets .....	478
Luggage compartment features.....	479

**5-4. Using the other interior features**

Other interior features.....	485
• Sun visors.....	485
• Vanity mirrors .....	485
• Power outlets.....	486
• Wireless charger .....	487
• Armrest.....	493
• Coat hooks .....	493
• Assist grips .....	494


## Automatic air conditioning system

Air outlets and fan speed are automatically adjusted according to the temperature setting.

The illustrations below are for left-hand drive vehicles.


The button positions and shapes will differ for right-hand drive vehicles.


### Air conditioning controls

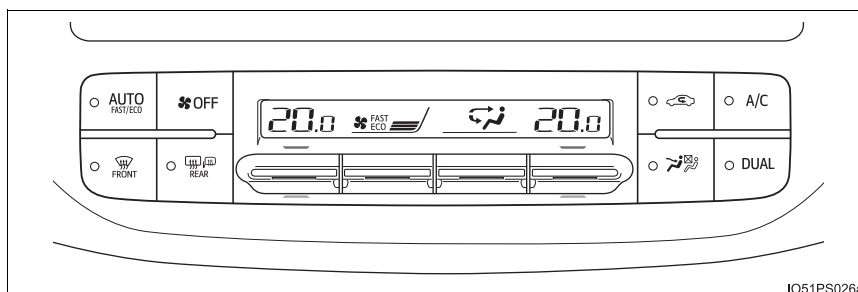

#### ■ Adjusting the temperature setting

 Move the temperature setting knob upwards to increase the temperature and downwards to decrease the temperature.


If  is not pressed, the system will blow ambient temperature air or heated air.

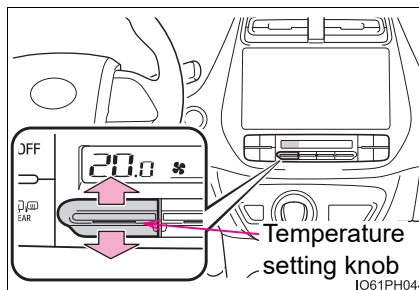


### ■ Fan speed setting

Move the fan speed setting knob upwards to increase the fan speed and downwards to decrease the fan speed.

The fan speed is shown on the display. (7 levels)

Press  to turn the fan off.

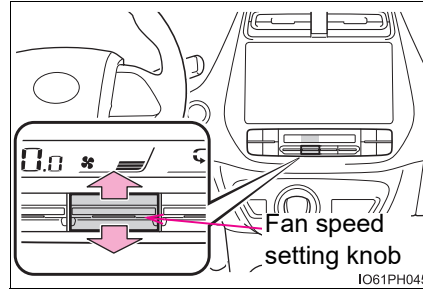


### ■ Change the airflow mode

Move the airflow change knob upwards or downwards to change the airflow mode.

The air outlets used are switched each time the knob is operated.


 
- ① Air flows to the upper body
- ② Air flows to the upper body and feet
- ③ Air flows to the feet
- ④ Air flows to the feet and the windshield defogger operates

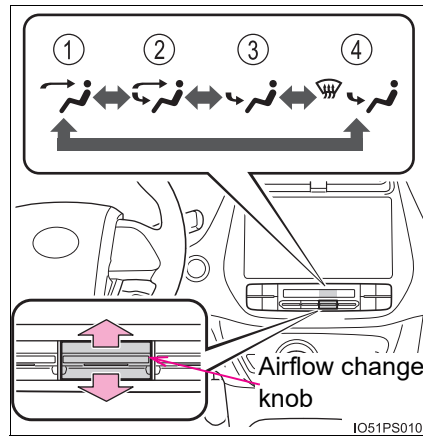


### ■ Other functions

- Switching between outside air and recirculated air modes (→P. 461)
- Defogging the windshield (→P. 462)
- Defogging the rear window and outside rear view mirrors (→P. 463)

### Using automatic mode

 
- 1 Press  .
- 2 Adjust the temperature setting. (→P. 458)
- 3 Press  .

The cooling and dehumidification function switches between on and off each time  is pressed.

- 4 To stop the operation, press  .


When in automatic mode, the air outlet modes and fan speed levels are not displayed in the air conditioning control panel display.

#### ■ Automatic mode indicator

If the fan speed setting or air flow modes are operated, the  indicator goes off. However, automatic mode for functions other than that operated is maintained.

#### ■ Adjusting the temperature for driver and passenger seats separately (DUAL mode)

To turn on the DUAL mode, perform the following either operation:

- Press  .
- Adjust the temperature setting of the passenger side with the passenger side temperature adjustment knob.

 
The  indicator illuminates when the DUAL mode is on.

### Front seat concentrated airflow mode (S-FLOW)

This function automatically controls the air conditioning airflow so that priority is given to the front seats. When the front passenger seat is not occupied, airflow may switch to only the driver's seat. Unnecessary air conditioning is suppressed, contributing to increased fuel efficiency.


Front seat concentrated airflow mode operates in the following situations.

- No passengers are detected in the rear seats
- The windshield defogger is not operating

While operating,  illuminates.

#### ■ Manually turning front seat concentrated airflow mode on/off

In front seat concentrated airflow mode, directing airflow to the front seats only and to all seats can be switched via switch operation. When the mode has been switched manually, automatic airflow control stops operating.


Press  on the air conditioning operation panel and switch the airflow.


- Indicator illuminated: Airflow to the front seats only
- Indicator off: Airflow to all the seats

### Other functions

#### ■ Switching between outside air and recirculated air modes


Press  .


The mode switches between outside air mode and recirculated air mode each time  is pressed.

The  indicator illuminates when the recirculated air mode is selected.

### ■ Blower customization

Fan speed setting during the automatic mode operation can be customized.

To change the fan speed setting mode, press  .

Each time  is pressed, the fan speed setting mode changes as follows.

“NORMAL” → “ECO” → “FAST” → “NORMAL”


When “ECO” is displayed in the air conditioning control panel display, the air conditioning is controlled with low fuel consumption prioritized such as reducing fan speed, etc.

When “FAST” is displayed in the air conditioning control panel display, fan speed will be increased.


### ■ Defogging the windshield


Defoggers are used to defog the windshield and front side windows.

Press  .

Set  to outside air mode if the recirculated air mode is used. (It may switch automatically.)

To defog the windshield and the side windows early, turn the air flow and temperature up.

The  indicator illuminates when the defoggers are on.


To return to the previous mode, press  again when the windshield is defogged.




### ■ Defogging the rear window and outside rear view mirrors

Defoggers are used to defog the rear window and to remove rain-drops, dew and frost from the outside rear view mirrors.

Press  .

Defoggers switch between on and off each time  is pressed.

The  indicator illuminates when the defoggers are on.

The defoggers will automatically turn off after approximately 15 minutes.


### ■ Eco score (A/C score)

→P. 150

## Air outlets


### ■ Location of air outlets

The air outlets and air volume change according to the selected airflow mode.

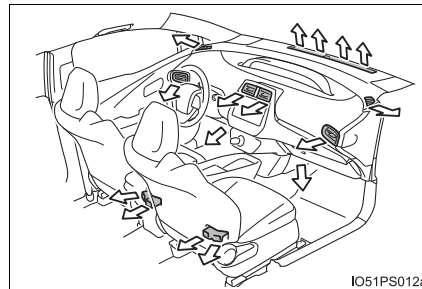


### ■ Adjusting the air flow direction

Direct air flow to the left or right, up or down.

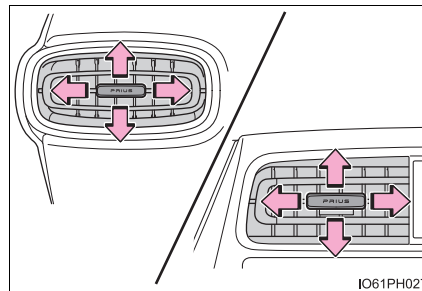


■ Opening and closing the air outlets

- ▶ Left side outlet/right side outlet
- ▶ Center outlets

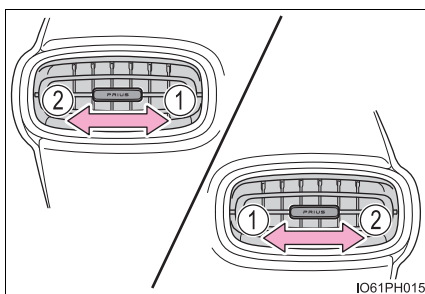


- ① Open the vent
- ② Close the vent

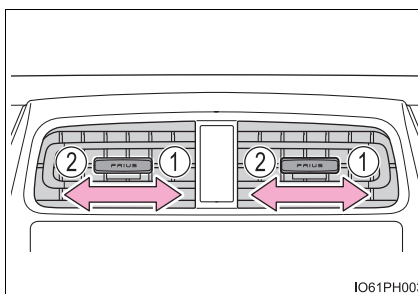

- ① Open the vent
- ② Close the vent


■ Using automatic mode


Fan speed is adjusted automatically according to the temperature setting and the ambient conditions.

Therefore, the fan may stop for a while until warm or cool air is ready to flow immediately after  is pressed.

■ Setting confirmation screen

When changing the settings of the air conditioning system, the setting confirmation screen is shown as a pop-up on the multi-information display.

Press  of the meter control switches to go back to the previous screen.

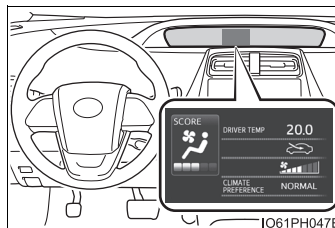

■ Operation of automatic airflow control

- In order to maintain a comfortable interior, airflow may be directed to seats without passengers immediately after the hybrid system is started and at other times depending on the outside temperature.
- After the hybrid system is started, if passengers move around inside or enter/exit the vehicle, the system cannot accurately detect the presence of passengers and automatic airflow control will not operate.


■ Operation of manual airflow control


Even if the function is manually switched to directing airflow to only the front seats, when a rear seat is occupied, it may automatically direct airflow to all seats.

### ■ To return to automatic airflow control


- 1 With the indicator off, turn the power switch off.
- 2 After 60 minutes or more elapse, turn the power switch to ON.

### ■ Front seat concentrated airflow mode (S-FLOW) operation

When  is pressed, the front seat concentrated airflow mode (S-FLOW) status is displayed on the multi-information display.

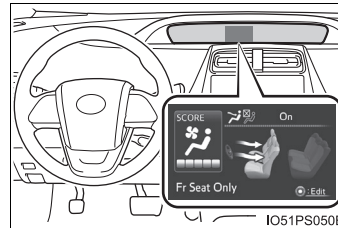



### ■ Changing settings using the multi-information display

The air conditioning system settings can be changed on the  screen of the multi-information display. (→P. 148)

### ■ Fogging up of the windows

 - The windows will easily fog up when the humidity in the vehicle is high.

 Turning  on will dehumidify the air from the outlets and defog the windshield effectively.

- If you turn  off, the windows may fog up more easily.
- The windows may fog up if the recirculated air mode is used.

### ■ When driving on dusty roads

Close all windows. If dust thrown up by the vehicle is still drawn into the vehicle after closing the windows, it is recommended that the air intake mode be set to outside air mode and the fan speed to any setting except off.


### ■ Outside/recirculated air mode

- Setting to the recirculated air mode temporarily is recommended in preventing dirty air from entering the vehicle interior and helping to cool the vehicle when the outside air temperature is high.
- Outside/recirculated air mode may automatically switch depending on the temperature setting or the inside temperature.

 
### ■ Fresh air intake system while parking

When parking, the system automatically switches to outside air mode to encourage better air circulation throughout the vehicle, helping to reduce odors that occur when starting the vehicle.

■ **Operation of the air conditioning system when the blower customization is set to “ECO”**

- In the “ECO” mode, the air conditioning system is controlled as follows to prioritize fuel efficiency:
  - Engine speed and compressor operation controlled to restrict heating/cooling capacity
  - Fan speed restricted when automatic mode is selected
- To improve air conditioning performance, perform the following operations:
  - Adjust the fan speed
  - Adjust the temperature setting
  - Set the blower customization to “FAST” or “NORMAL” mode.
- When the driving mode is set to Eco driving mode, the fan speed setting mode will be changed to “ECO” mode automatically. Even in this case, the fan speed control mode can be changed by pressing  . (→P. 351)

■ **When the outside temperature falls to nearly 0°C (32°F)**

The dehumidification function may not operate even when  is pressed.

■ **Ventilation and air conditioning odors**

- To let the fresh air in, set the air conditioning system to the outside air mode.
- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- In order to suppress odors that occur when the air conditioning system starts, fresh air is automatically taken in when parked.
- To reduce potential odors from occurring, the start timing of the blower may be delayed for a short period of time immediately after the air conditioning system is started in automatic mode.


■ **Air conditioning filter**


→P. 542

■ **Customization**

Settings (e.g. outside/recirculated air mode) can be changed.  
(Customizable features: →P. 670)

**⚠ WARNING****■ To prevent the windshield from fogging up**

- Do not use  during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.
- Do not place anything on the instrument panel which may cover the air outlets. Otherwise, air flow may be obstructed, preventing the windshield defoggers from defogging.

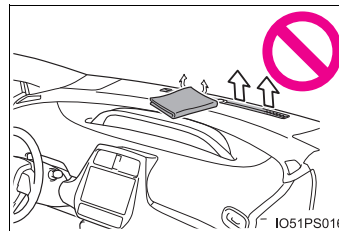**■ To prevent burns**

Do not touch the rear view mirror surfaces when the outside rear view mirror defoggers are on.

**⚠ NOTICE****■ To prevent 12-volt battery discharge**

Do not leave the air conditioning system on longer than necessary when the hybrid system is off.

**■ Air outlets**

The air outlets become hot when used for heating. Therefore, use caution and adjust the air outlets accordingly.

## Seat heaters\*

**Seat heaters heat the front seats.**

### WARNING

- Care should be taken to prevent injury if anyone in the following categories comes in contact with the seats when the heater is on:
  - Babies, small children, the elderly, the sick and the physically challenged
  - Persons with sensitive skin
  - Persons who are fatigued
  - Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)
- Observe the following precautions to prevent minor burns or overheating:
  - Do not cover the seat with a blanket or cushion when using the seat heater.
  - Do not use seat heater more than necessary.

### NOTICE

- Do not put heavy objects that have an uneven surface on the seat and do not stick sharp objects (needles, nails, etc.) into the seat.
- To prevent 12-volt battery discharge, do not use the functions when the hybrid system is off.


\*: If equipped

**Operating instructions**

- ① Heats the seat at low temperature (LO)
- ② Heats the seat at high temperature (HI)


The indicator light comes on when one side of the switch is pressed.

To stop operation, gently press the other side of the switch.

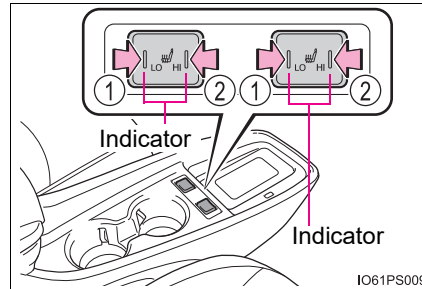

- The seat heaters can be used when the power switch is in ON mode.
- When not in use, turn off the switch. The indicator light turns off.

## Interior lights list

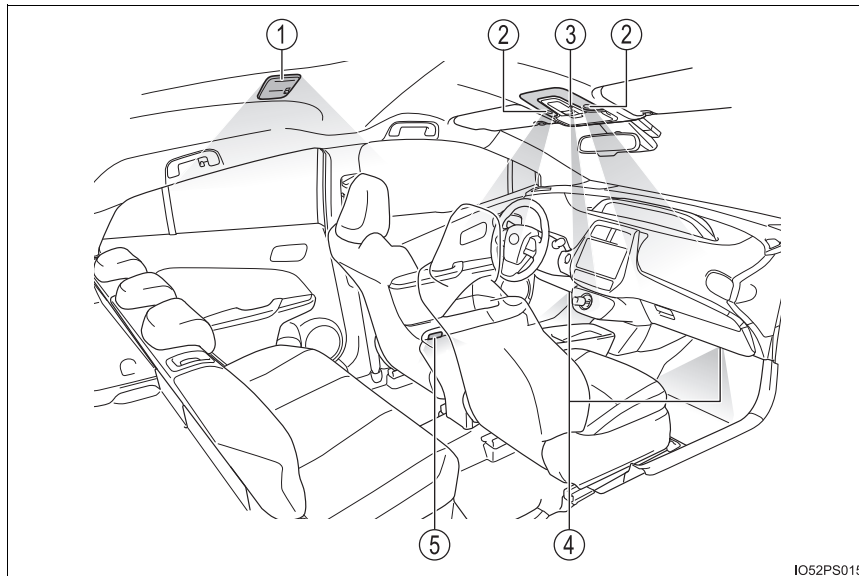


- ① Rear interior light (→P. 472)
- ② Front personal/interior lights (→P. 471)
- ③ Shift lever lighting
- ④ Footwell lights
- ⑤ Front door courtesy lights




**Front interior light**

▶ Vehicles without moon roof

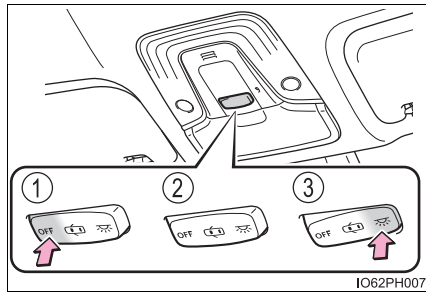

- ① Turns the lights off
- ② Turns the door position on
- ③ Turns the lights on


▶ Vehicles with moon roof

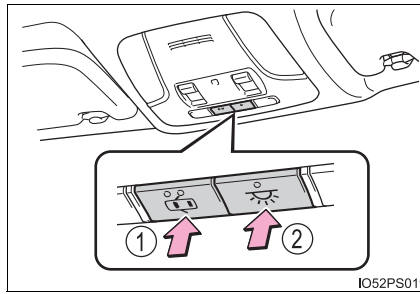

- ① Turns the door position on/off
- ② Turns the lights on/off


**Front personal lights**

▶ Vehicles without moon roof

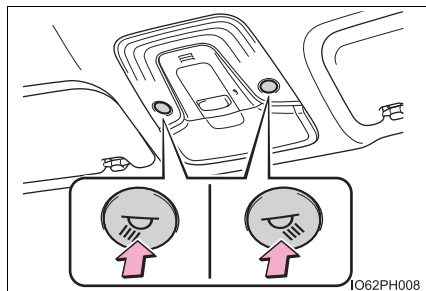

Turns the lights on/off


▶ Vehicles with moon roof

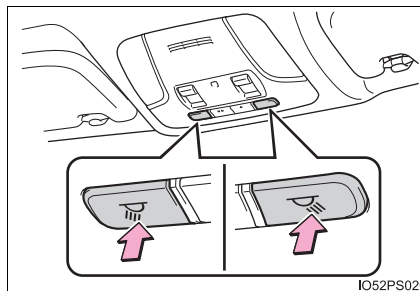

Turns the lights on/off

### Rear interior light

- ① Turns the switch to the door position (door linked)  
Operation is linked with the front interior light main switch. When the switch is off, the light does not illuminate.
- ② Turns the light on

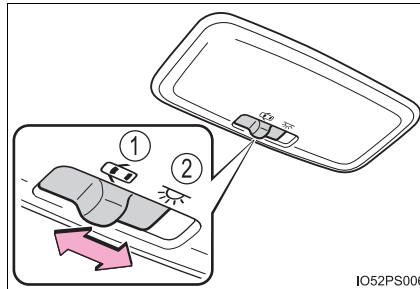

#### ■ Illuminated entry system

The lights automatically turn on/off according to power switch mode, the presence of the electronic key, whether the doors are locked/unlocked, and whether the doors are opened/closed.

#### ■ To prevent the 12-volt battery from being discharged

If the interior lights remain on when the power switch is turned off, the light will go off automatically after 20 minutes.


#### ■ Customization

Settings (e.g. the time elapsed before the lights turn off) can be changed.  
(Customizable features: →P. 670)

#### ⚠ NOTICE

To prevent 12-volt battery discharge, do not leave the lights on longer than necessary when the hybrid system is off.

## List of storage features

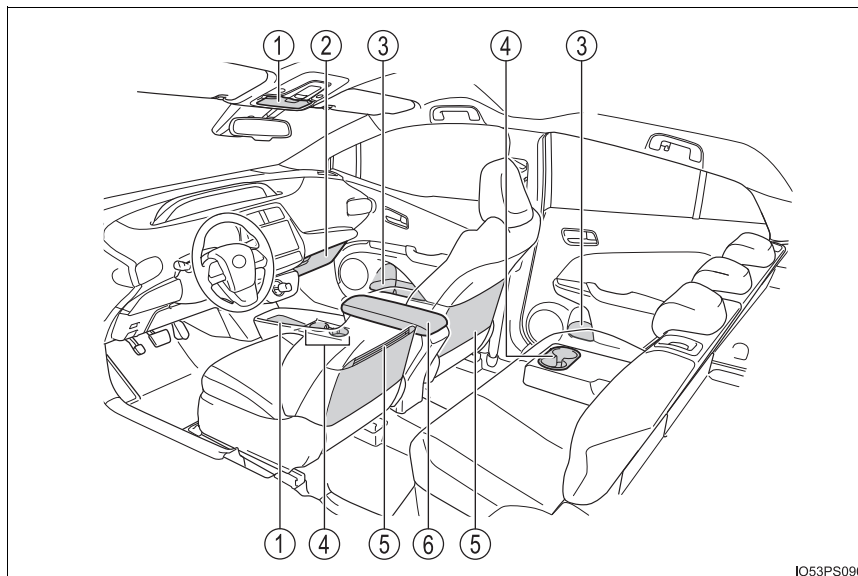


- |   |                               |
|---|-------------------------------|
| ① Auxiliary boxes (→P. 477)             | ④ Cup holders (→P. 475)       |
| ② Glove box (→P. 474)                   | ⑤ Seat back pockets (→P. 478) |
| ③ Bottle holders/door pockets (→P. 476) | ⑥ Console box (→P. 474)       |

### **⚠** WARNING

- Do not leave glasses, lighters or spray cans in the storage spaces, as this may cause the following when cabin temperature becomes high:
  - Glasses may be deformed by heat or cracked if they come into contact with other stored items.
  - Lighters or spray cans may explode. If they come into contact with other stored items, the lighter may catch fire or the spray can may release gas, causing a fire hazard.
- When driving or when the storage compartments are not in use, keep the lids closed.  
In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by an open lid or the items stored inside.

**Glove box**


Pull up the lever.

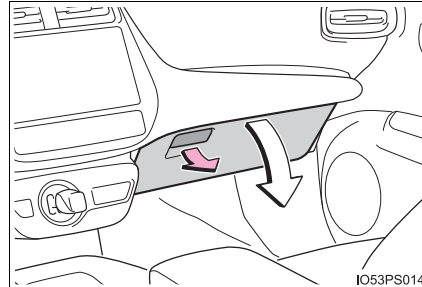


The glove box light turns on when the tail lights are on.

**Console box**

Press the knob and open the lid.

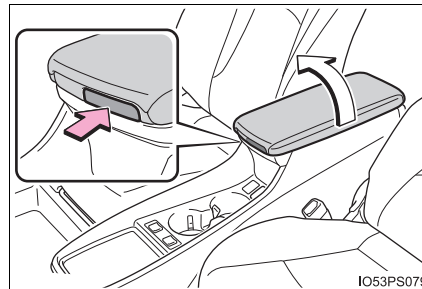


The tray slides forward/backward and can be removed.

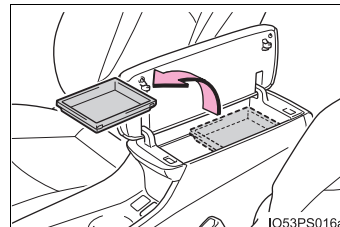


**Cup holders**

▶ Front

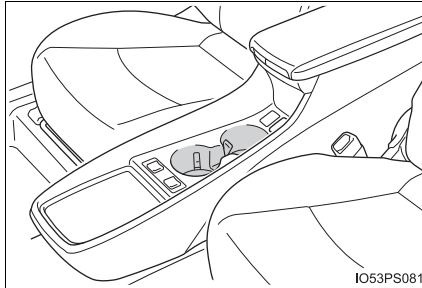

▶ Rear

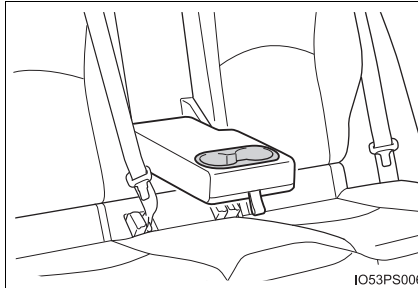


Pull down the armrest.

**⚠ WARNING**


Do not place anything other than cups or aluminum cans in the cup holders. Other items may be thrown out of the holders in the event of an accident or sudden braking, causing injury. If possible, cover hot drinks to prevent burns.

### Bottle holders/door pockets


► Front doors

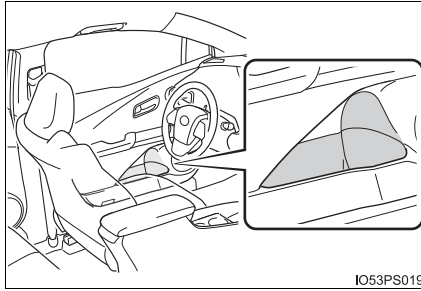

► Rear doors

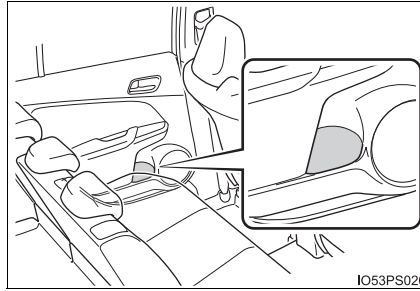


- When storing a bottle, close the cap.
- The bottle may not be stored depending on its size or shape.

 NOTICE

Put the cap on before stowing a bottle. Do not place open bottles or glass and paper cups containing liquid in the bottle holders. The contents may spill and glasses may break.

### Auxiliary boxes


#### ▶ Type A (if equipped)

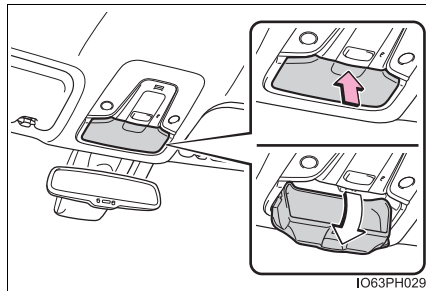

Press in the lid.


The overhead console is useful for temporarily storing small items.

#### ▶ Type B (if equipped)

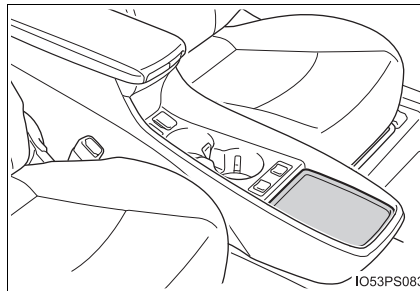

Vehicles with the wireless charger: →P. 487

#### ▶ Type C (if equipped)

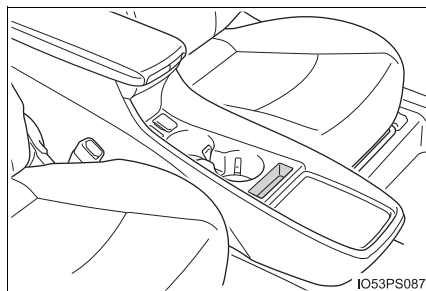

### ⚠ WARNING


Type A:

Do not store items heavier than 200 g (0.44 lb.).

Doing so may cause the auxiliary box to open and the items inside may fall out, resulting in an accident.

**Seat back pockets**

Owner's manual etc. can be stored in the left-side seatback pocket with the fastener.

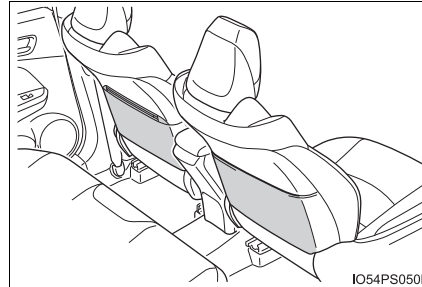





## Luggage compartment features

### Deck Board

- 1 Pull the lever upwards.

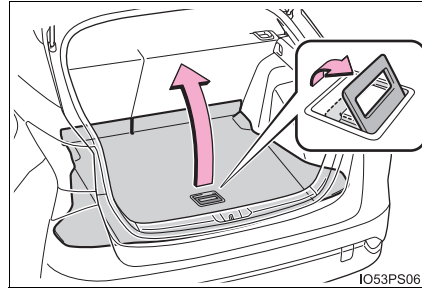

- 2 Secure it with the grocery bag hooks.

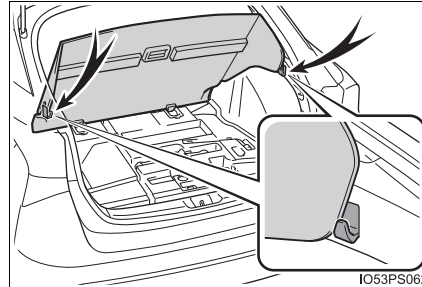

#### WARNING

- If the deck board is opened, close it before driving. In the event of sudden braking, an accident may occur due to an occupant being struck by the deck board or the items stored in the auxiliary box.
- Do not place an object which is easy to roll or taller than the storable portion on the deck under box.

#### NOTICE


To prevent damage to the deck board, do not apply too much load on the deck board.

### Cargo hooks

- ▶ Vehicles with emergency tire puncture repair kit


Raise the hook to use.

The cargo hooks are provided for securing loose items.

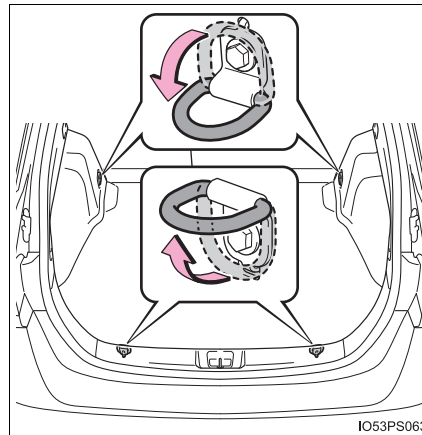


- ▶ Vehicles with compact spare tire or full-size spare tire

- 1 Open the deck board, then raise the hook to use.

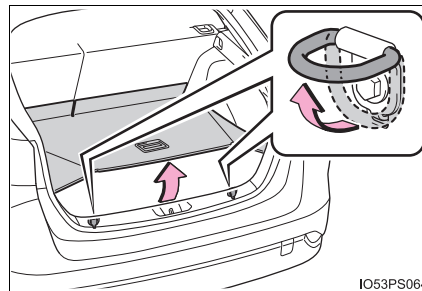

- 2 Return the deck board to its original position and close it.

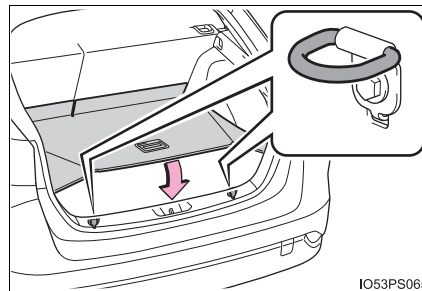


**⚠ WARNING**

To avoid injury, always return the cargo hooks to their stowed positions when not in use.

**Grocery bag hooks**

When using the hooks, press the bottom side to lift it up.


There also is a hook on the other side.

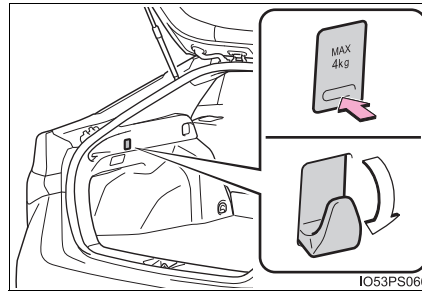**⚠ NOTICE**

In order to prevent damage to the grocery bag hooks, do not place large objects or objects that weight more than 4 kg (8.8 lb.) onto the hooks.

**First-aid kit storage space (if equipped)**



Store a first-aid kit.

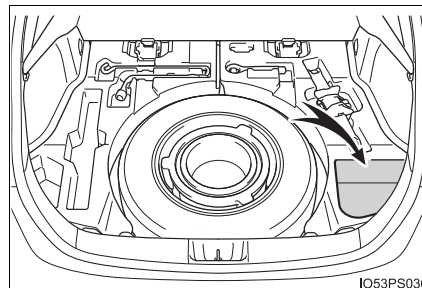



**Warning reflector storage space**

The warning reflector can be stowed on the center auxiliary box.  
 (The warning reflector itself is not included as an original equipment)

- ▶ Vehicles with emergency tire puncture repair kit (2WD models)
- ▶ Vehicles with emergency tire puncture repair kit (AWD models)

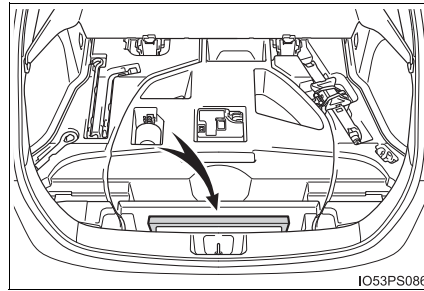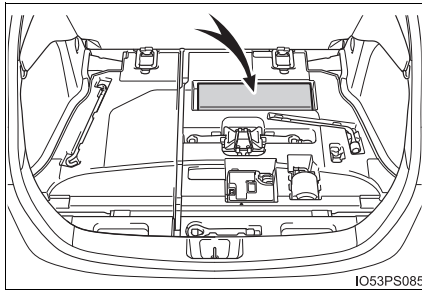

- ▶ Vehicles with compact spare tire
- ▶ Vehicles with full-size spare tire

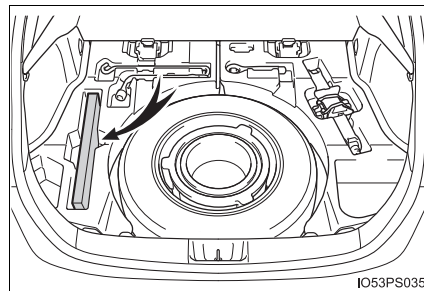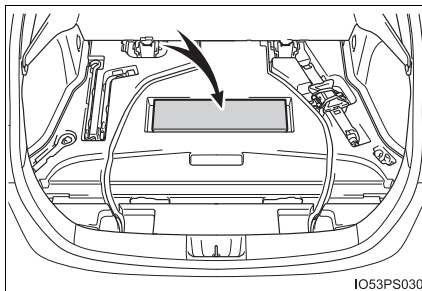


Depending on the size and shape of the warning reflector case, etc., you may not be able to store it.

**⚠ WARNING**


When storing the warning reflector, etc., make sure that it is properly stored. If the warning reflector is not properly stored, it may fly out during emergency braking and lead to an accident.

**Luggage cover****■ Installing the luggage cover**


Install one side of the luggage cover to the holder. While pushing that side in, install the other side to the opposite holder.

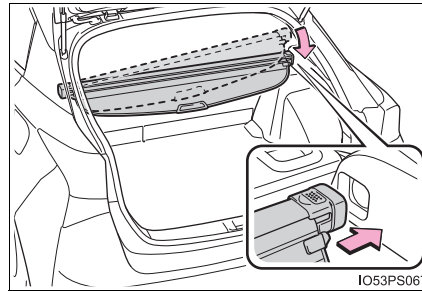**■ Using the luggage cover**

Pull out the luggage cover and secure it to the hook brackets.

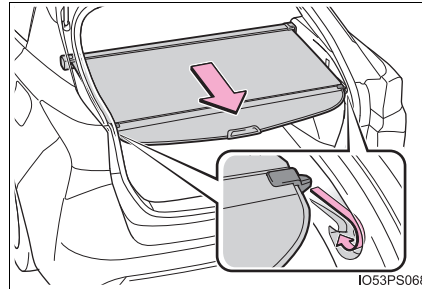
**■ Removing the luggage cover**

Push one end of the luggage cover inward and remove it from the holder.

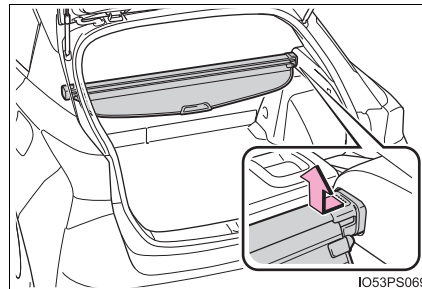


■ **Stowing the luggage cover (except vehicles with full-size spare tire)**

- 1 Open the deck board and secure it with the shopping hooks.

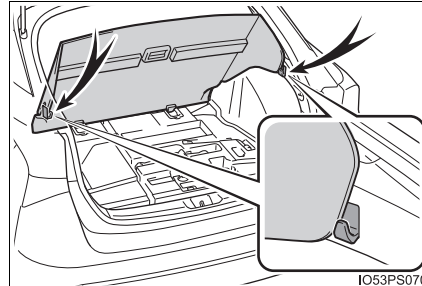

- 2 Store cover in the deck under box.

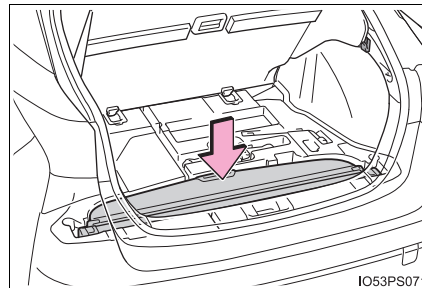

- 3 Close the deck board.


**⚠ WARNING**

- Do not place anything on the luggage cover. In the event of sudden braking or turning, the item may go flying and strike an occupant. This could lead to an unexpected accident, resulting in death or serious injury.
- Do not allow children to climb on the luggage cover. Climbing on the luggage cover could result in damage to the luggage cover, possibly causing death or serious injury to the child.
- Make sure that the rear edge of the cover is laying flat. If the cover is installed with the rear edge raised, the view from the rear window may be obstructed, which could cause an accident.
- Make sure that seat belts are not caught up in the luggage cover. If a seat belt is caught up in the cover, it may not be able to restrain passengers properly.

## Other interior features

### Sun visors


- ① To set the visor in the forward position, flip it down.
- ② To set the visor in the side position, flip down, unhook, and swing it to the side.

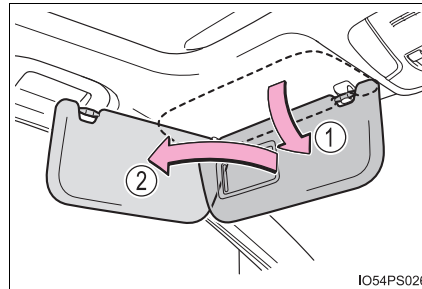

### Vanity mirrors

Slide the cover to open.

The light turns on when the cover is opened.

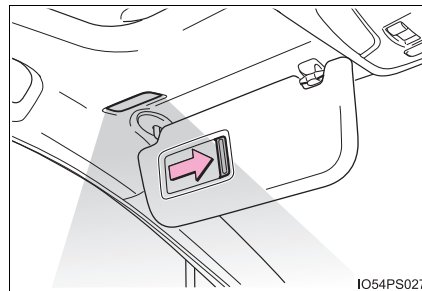

If the vanity lights remain on when the power switch is turned off, the light will go off automatically after 20 minutes.


 **NOTICE**

To prevent 12-volt battery discharge, do not leave the vanity lights on for extended periods while the hybrid system is off.

**Power outlets**


Please use as a power supply for electronic goods that use less than 12 V DC/10 A (power consumption of 120 W).

► Front

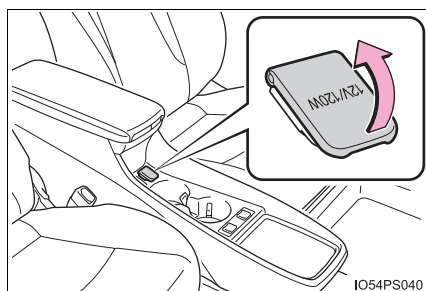

Open the lid.

► Rear

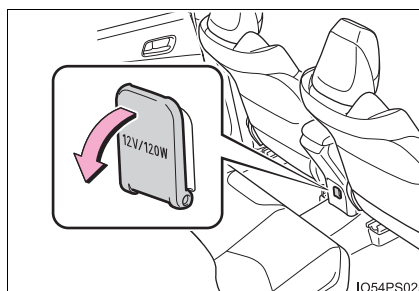

Open the lid.


■ **The power outlet can be used when**

The power switch is in ACCESSORY or ON mode.

■ **When stopping the hybrid system**

Disconnect electrical devices with charging functions, such as mobile battery packs.

If such devices are left connected, the hybrid system may not stop normally.

 <p><b>NOTICE</b></p>
<ul style="list-style-type: none"> <li>● To avoid damaging the power outlets, close the lid when the power outlet is not in use. Foreign objects or liquids that enter the power outlets may cause a short circuit.</li> <li>● To prevent 12-volt battery discharge, do not use the power outlet longer than necessary when the hybrid system is off.</li> </ul>



**Wireless charger (if equipped)**

A portable device can be charged by just placing Qi standard wireless charge compatible portable devices according to the Wireless Power Consortium, such as smart phones and mobile batteries, etc., on the charge area.


This function cannot be used with portable devices that are larger than the charging area. Also, depending on the portable device, it may not operate as normal. Please read the operation manual for portable devices to be used.

**■ The “Qi” symbol**

The “Qi” symbol is a trademark of the Wireless Power Consortium.

**■ Name for all parts**

- ① Power supply switch
- ② Operation indicator light
- ③ Charge area

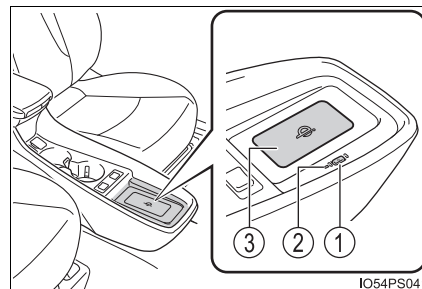


**■ Using the wireless charger**

- 1 Press the power supply switch of the wireless charger.

Switches on and off with each press of the power supply switch.

When turned on, the operation indicator light (green) comes on.


Even with the hybrid system off, the on/off state of the power supply switch is memorized.

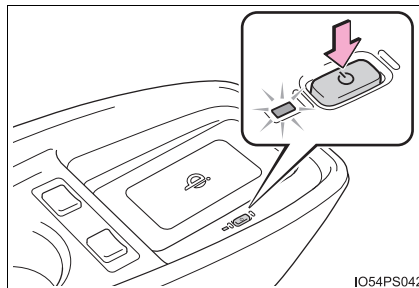

- 2 Place the charging side of the portable device down.

When charging, the operation indicator light (orange) comes on.

If charging is not occurring, try placing the portable device as close to the center of the charging area as possible.

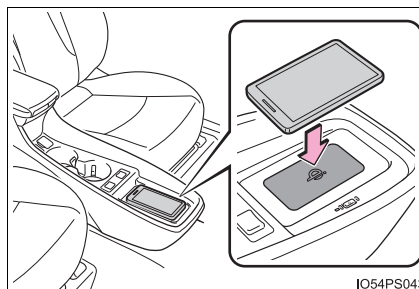

When charging is complete, the operation indicator light (green) comes on.

**● Recharging function**

- When charging is complete and after a fixed time in the charge suspension state, charging restarts.
- When the portable device is moved, charging is stopped for a moment and then it restarts.

### ■ Lighting conditions of operation indicator light

Operation indicator light	Conditions
Turning off	When the Wireless charger power supply is off
Green (comes on)	On Standby (charging possible state)
	When charging is complete*
Orange (comes on)	When placing the portable device on the charging area (detecting the portable device)
	Charging

\*: Depending on the portable device, there are cases where the operation indicator light will continue being lit up orange even after the charging is complete.

#### ● When the operation indicator light flashes

When an error occurs, the operation indicator light flashes an orange color. Handle the error based on the following table.

Operation indicator light	Suspected causes	Handling method
Flashing repeatedly once every second (Orange)	Vehicle to charger communication failure.	Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
Repeatedly flashes 3 times continuously (Orange)	A foreign substance is between the portable device and charge area.	Remove the foreign substance from between portable device and the charge area.
	The portable device is out of sync due to the device being shifted from its position.	Place the portable device near the center of the charge area.
Repeatedly flashes 4 times continuously (Orange)	Temperature rising within the wireless charger.	Stop charging at once and start charging again after for a while.

■ **The wireless charger can be operated when**

The power switch is in ACCESSORY or ON mode.

■ **Usable portable devices**

Qi standard wireless charge standard can be used on compatible devices. However, not all Qi standard devices and compatibility are guaranteed.

Starting with mobile phones and smart phones, it is aimed for low power electrically supplied portable devices of no more than 5W.

■ **When covers and accessories are attached to portable devices**

Do not charge in situations where cover and accessories not able to handle Qi are attached to the portable device. Depending on the type of cover and accessory, it may not be possible to charge. When charging is not performed even with the portable device placed on the charge area, remove the cover and accessories.

■ **While charging, noise enters the AM radio**

Turn off the wireless charger and confirm that the noise has decreased. If the noise decreases, continuously pushing the power supply switch of the wireless charger for 2 seconds, the frequency of the charger can be changed and the noise can be reduced.

Also, on that occasion, the operation indicator light will flash orange 2 times.

■ **Important points of the wireless charger**

- If the electronic key cannot be detected within the vehicle interior, charging cannot be done. When the door is opened and closed, charging may be temporarily suspended.
- When charging, the wireless charging device and portable device will get warmer, however this is not a malfunction.  
When a portable device gets warm while charging, charging may stop due to the protection function on the portable device side. In this case, when the temperature of the portable device drops significantly, charge again.

■ **Operation sounds**

When the power supply is turned on, while searching for the portable device a sound will be produced, however this is not a malfunction.

 **WARNING****■ Caution while driving**

When charging a portable device, for safety reasons, the driver should not operate the main part of the portable device while driving.

**■ Caution regarding interference with electronic devices**

People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators, as well as any other electrical medical device, should consult their physician about the usage of the wireless charger. The operations of the wireless charger may have an affect on medical devices.

**■ To prevent damage or burns**

Observe the following precautions.

Failure to do so may result in a possibility of equipment failure and damage, catch fire, burns due to overheat.

- Do not insert any metallic objects between the charging area and the portable device while charging
- Do not attach stickers, metallic objects, etc., to the charger area or portable device
- Do not cover with cloth, etc., and charge
- Do not charge portable devices other than designated
- Do not attempt to dismantle for disassembly or modifications
- Do not hit or apply a strong force

 NOTICE**■ Conditions in which the function may not operate correctly**

In the following conditions, it may not operate correctly

- The portable device is fully charged
- There is foreign matter between the charge area and portable device
- The temperature of the portable device gets higher from charging
- The charging surface of the portable device is facing up
- The placement of the portable device is out of alignment with the charge area
- Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When the electronic key is in contact with, or is covered by the following metallic objects
  - Cards to which aluminum foil is attached
  - Cigarette boxes that have aluminum foil inside
  - Metallic wallets or bags
  - Coins
  - Hand warmers made of metal
  - Media such as CDs and DVDs
- When other wireless keys (that emit radio waves) are being used nearby

In addition, excluding the above-mentioned, when the charger does not perform normally or the operation indicator light is flashing continuously, it is considered that the wireless charger is malfunctioning. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**■ To prevent failure or damage to data**


- Do not bring magnetic cards, such as credit cards, or magnetic recording media, etc., close to the charger while charging, otherwise, data may disappear under the influence of magnetism. Also, do not bring precision instruments such as wrist watches, etc., close to the charger, as such objects may break.
- Do not leave portable devices in the cabin. The temperature inside the cabin may become high, when under the sun, and cause damage to the device.

**■ To prevent 12-volt battery discharge**

When the hybrid system is stopped, do not use the wireless charger for a long time.

**Armrest**


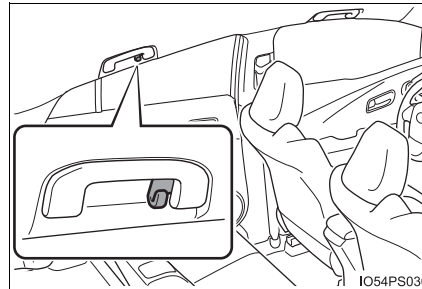
Pull the armrest down for use.

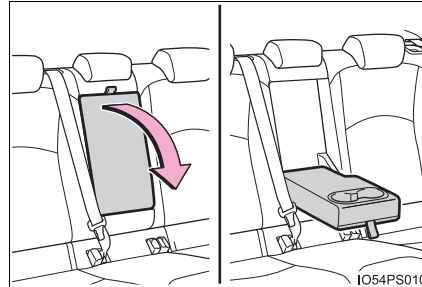 **NOTICE**

To prevent damage to the armrest, do not apply too much load on the armrest.

**Coat hooks**


The coat hooks are provided with the rear assist grips.

 **WARNING**

Do not hang coat hangers or other hard or sharp objects on the hook. If the SRS curtain shield airbags deploy, these items may become projectiles, causing death or serious injury.

### Assist grips

An assist grip installed on the ceiling can be used to support your body while sitting on the seat.

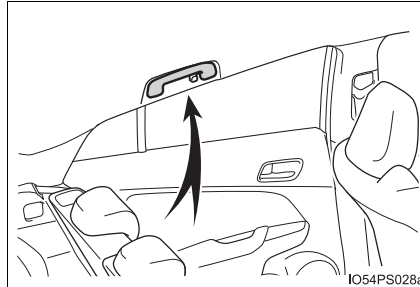

#### WARNING

Do not use the assist grip when getting in or out of the vehicle or rising from your seat.

#### NOTICE

To prevent damage to the assist grip, do not hang any heavy object or put a heavy load on the assist grip.



<b>6-1. Maintenance and care</b>	
Cleaning and protecting the vehicle exterior .....	496
Cleaning and protecting the vehicle interior .....	502
<b>6-2. Maintenance</b>	
Maintenance requirements.....	505
<b>6-3. Do-it-yourself maintenance</b>	
Do-it-yourself service precautions .....	508
Hood .....	511
Positioning a floor jack.....	513
Engine compartment.....	514
Tires.....	528
Tire inflation pressure .....	537
Wheels.....	539
Air conditioning filter .....	542
Cleaning the hybrid battery (traction battery) air intake vent and filter .....	545
Wiper insert replacement.....	550
Electronic key battery .....	554
Checking and replacing fuses .....	557
Light bulbs .....	561

## Cleaning and protecting the vehicle exterior

### Perform the following to protect the vehicle and maintain it in prime condition:

- Working from top to bottom, liberally apply water to the vehicle body, wheel wells and underside of the vehicle to remove any dirt and dust.
- Wash the vehicle body using a sponge or soft cloth, such as a chamois.
- For hard-to-remove marks, use car wash soap and rinse thoroughly with water.
- Wipe away any water.
- Wax the vehicle when the waterproof coating deteriorates.

If water does not bead on a clean surface, apply wax when the vehicle body is cool.

#### ■ Automatic car washes

- Fold the mirrors before washing the vehicle. Start washing from the front of the vehicle. Make sure to extend the mirrors before driving.
- Brushes used in automatic car washes may scratch the vehicle surface, parts (wheel, etc.) and harm your vehicle's paint.
- Rear spoiler may not be washable in some automatic car washes. There may also be an increased risk of damage to vehicle.

#### ■ High pressure car washes

As water may enter the cabin, do not bring the nozzle tip near the gaps around the doors or perimeter of the windows, or spray these areas continuously.

**■ Note for a smart entry & start system**

If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In that case, follow the following correction procedures to wash the vehicle:

- Place the key in a position 2 m (6 ft.) or more separate from the vehicle while the vehicle is being washed. (Take care to ensure that the key is not stolen.)
- Set the electronic key to battery-saving mode to disable the smart entry & start system. (→P. 189)

**■ Wheels and wheel ornaments**

- Remove any dirt immediately by using a neutral detergent.
- Wash detergent off with water immediately after use.
- To protect the paint from damage, make sure to observe the following precautions.
  - Do not use acidic, alkaline or abrasive detergent
  - Do not use hard brushes
  - Do not use detergent on the wheels when they are hot, such as after driving or parking in hot weather

**■ Brake pads and calipers**

Rust may form if the vehicle is parked with wet brake pads or disc rotors, causing them to stick. Before parking the vehicle after it is washed, drive slowly and apply the brakes several times to dry the parts.

**■ Bumpers**

Do not scrub with abrasive cleaners.

**■ Front side windows water-repellent coating (if equipped)**

The following precautions can extend the effectiveness of the water-repellent coating.

- Remove any dirt, etc. from the front side windows regularly.
- Do not allow dirt and dust to accumulate on the windows for a long period. Clean the windows with a soft, damp cloth as soon as possible.
- Do not use wax or glass cleaners that contain abrasives when cleaning the windows.
- Do not use any metallic objects to remove condensation build up.

**■ Plated portions**

If dirt cannot be removed, clean the parts as follows:

- Use a soft cloth dampened with an approximately 5% solution of neutral detergent and water to clean the dirt off.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture.
- To remove oily deposits, use alcohol wet wipes or a similar product.


**⚠ WARNING****■ When washing the vehicle**

Do not apply water to the inside of the engine compartment. Doing so may cause the electrical components etc. to catch fire.

**■ When cleaning the windshield (vehicles with rain-sensing windshield wipers)**

Set the wiper switch to the off position.

If the wiper switch is in the AUTO position, the wipers may operate unexpectedly in the following situations, and may result in hands being caught or other serious injuries and cause damage to the wiper blades.

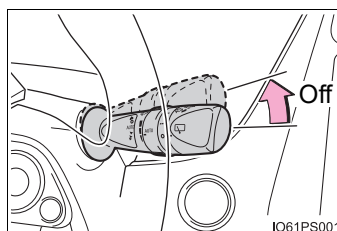

- When the upper part of the windshield where the raindrop sensor is located is touched by hand
- When a wet rag or similar is held close to the raindrop sensor
- If something bumps against the windshield
- If you directly touch the raindrop sensor body or if something bumps into the raindrop sensor

**■ Precautions regarding the exhaust pipe**

Exhaust gasses cause the exhaust pipe to become quite hot.

When washing the vehicle, be careful not to touch the pipe until it has cooled sufficiently, as touching a hot exhaust pipe can cause burns.

**■ Precaution regarding the rear bumper with Blind Spot Monitor (if equipped)**

If the paint of the rear bumper is chipped or scratched, the system may malfunction. If this occurs, consult any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.



## NOTICE

**■ To prevent paint deterioration and corrosion on the body and components (aluminum wheels etc.)**

- Wash the vehicle immediately in the following cases:

- After driving near the sea coast
- After driving on salted roads
- If coal tar or tree sap is present on the paint surface
- If dead insects, insect droppings or bird droppings are present on the paint surface
- After driving in an area contaminated with soot, oily smoke, mine dust, iron powder or chemical substances
- If the vehicle becomes heavily soiled with dust or mud
- If liquids such as benzene and gasoline are spilled on the paint surface

- If the paint is chipped or scratched, have it repaired immediately.

- To prevent the wheels from corroding, remove any dirt and store in a place with low humidity when storing the wheels.

**■ To prevent damage to the windshield wiper arms**


When lifting the wiper arms away from the windshield pull the driver side wiper arm upward first, and repeat for the passenger's side. When returning the wipers to their original position, do so from the passenger's side first.

**■ Cleaning the exterior lights**

- Wash carefully. Do not use organic substances or scrub with a hard brush. This may damage the surfaces of the lights.
- Do not apply wax to the surfaces of the lights. Wax may cause damage to the lenses.

 NOTICE**■ Handling the decorative resin parts (for vehicles equipped with 17-inch wheels)**

- Make sure to observe the following when handling wheels equipped with decorative resin parts. Failure to observe these precautions may result in damage to the decorative resin parts or wheels.
  - Do not remove the decorative resin parts  
When decorative resin parts removal is necessary, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
  - Do not hold the tire by the decorative resin parts to lift up or carry the tire.

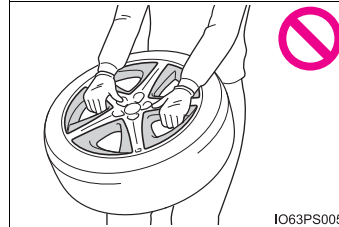

- If there is rattling in the decorative resin parts, or strange sounds from the wheel area when driving, have your wheels inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**■ When using an automatic car wash (vehicles with rain-sensing windshield wipers)**

Set the wiper switch to the off position.

If the wiper switch is in the **AUTO** position, the wipers may operate and the wiper blades may be damaged.


 NOTICE**■ When using a high pressure car wash**

- When washing the vehicle, do not spray the camera or its surrounding area directly with a high pressure washer. Shock applied from high pressure water may cause the device to not operate normally.
- Do not spray water directly on the radar which is equipped behind the emblem. Otherwise it may cause the device to be damaged.
- Do not bring the nozzle tip close to boots (rubber or resin manufactured cover), connectors or the following parts. The parts may be damaged if they come into contact with high-pressure water.
  - Traction related parts
  - Steering parts
  - Suspension parts
  - Brake parts
- Keep the cleaning nozzle at least 30 cm (11.9 in.) away from the vehicle body. Otherwise resin section, such as moldings and bumpers, may be deformed and damaged. Also, do not continuously hold the nozzle in the same place.
- Do not spray the lower part of the windshield continuously.  
If water enters the air conditioning system intake located near the lower part of the windshield, the air conditioning system may not operate correctly.
- Do not wash the underside of the vehicle using a high pressure car washer.

**■ When raising the windshield wiper arms**

Make sure to hold the hook parts of the wiper arms to raise them.

Do not hold only the wiper blades when raising them, or it may cause deformation of the wiper blades.

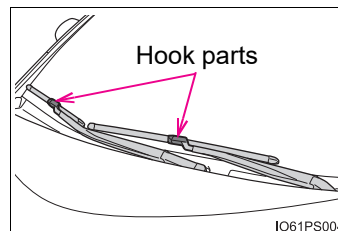

## Cleaning and protecting the vehicle interior

The following procedures will help protect your vehicle's interior and keep it in top condition:

### Protecting the vehicle interior

- Remove dirt and dust using a vacuum cleaner. Wipe dirty surfaces with a cloth dampened with lukewarm water.
- If dirt cannot be removed, wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.

Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.

### Cleaning the leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe off any excess dirt and dust with a soft cloth dampened with diluted detergent.

Use a diluted water solution of approximately 5% neutral wool detergent.

- Wring out any excess water from the cloth and thoroughly wipe off all remaining traces of detergent.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture. Allow the leather to dry in a shaded and ventilated area.

### Cleaning the synthetic leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.
- Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.



#### ■ Caring for leather areas

Toyota recommends cleaning the interior of the vehicle at least twice a year to maintain the quality of the vehicle's interior.

#### ■ Shampooing the carpets

There are several commercial foaming-type cleaners available. Use a sponge or brush to apply the foam. Rub in overlapping circles. Do not use water. Wipe dirty surfaces and let them dry. Excellent results are obtained by keeping the carpet as dry as possible.

#### ■ Seat belts

Clean with mild soap and lukewarm water using a cloth or sponge. Also check the belts periodically for excessive wear, fraying or cuts.



#### WARNING

##### ■ Water in the vehicle

- Do not splash or spill liquid in the vehicle, such as on the floor, in the hybrid battery (traction battery) air intake vent, and in the luggage compartment.

Doing so may cause the hybrid battery (traction battery), electrical components, etc. to malfunction or catch fire.

- Do not get any of the SRS components or wiring in the vehicle interior wet. (→P. 40)

An electrical malfunction may cause the airbags to deploy or not function properly, resulting in death or serious injury.

- Vehicles with wireless charger:

Do not let the wireless charger (→P. 487) get wet. Failure to do so may cause the charger to become hot and cause burns or could cause electric shock resulting in death or serious injury.

##### ■ Cleaning the interior (especially instrument panel)

Do not use polish wax or polish cleaner. The instrument panel may reflect off the windshield, obstructing the driver's view and leading to an accident, resulting in death or serious injury.



## NOTICE

**■ Cleaning detergents**

- Do not use the following types of detergent, as they may discolor the vehicle interior or cause streaks or damage to painted surfaces:
  - Non-seat portions: Organic substances such as benzene or gasoline, alkaline or acidic solutions, dye, and bleach
  - Seats: Alkaline or acidic solutions, such as thinner, benzene, and alcohol
- Do not use polish wax or polish cleaner. The instrument panel's or other interior part's painted surface may be damaged.

**■ Preventing damage to leather surfaces**

Observe the following precautions to avoid damage to and deterioration of leather surfaces:

- Remove any dust or dirt from leather surfaces immediately.
- Do not expose the vehicle to direct sunlight for extended periods of time. Park the vehicle in the shade, especially during summer.
- Do not place items made of vinyl, plastic, or containing wax on the upholstery, as they may stick to the leather surface if the vehicle interior heats up significantly.

**■ Water on the floor**

Do not wash the vehicle floor with water.

Vehicle systems such as the audio system may be damaged if water comes into contact with electrical components such as the audio system above or under the floor of the vehicle. Water may also cause the body to rust.

**■ When cleaning the inside of the windshield (vehicles with Toyota Safety Sense)**

Do not allow glass cleaner to contact the lens. Also, do not touch the lens. (→P. 283)

**■ Cleaning the inside of the rear window**

- Do not use glass cleaner to clean the rear window, as this may cause damage to the rear window defogger heater wires. Use a cloth dampened with lukewarm water to gently wipe the window clean. Wipe the window in strokes running parallel to the heater wires.
- Be careful not to scratch or damage the heater wires.

## Maintenance requirements

**To ensure safe and economical driving, day-to-day care and regular maintenance are essential. Toyota recommends the following maintenance:**

### Scheduled maintenance

Scheduled maintenance should be performed at specified intervals according to the maintenance schedule.

For full details of your maintenance schedule, refer to the “Toyota Service Booklet” or “Toyota Warranty Booklet”.

### Do-it-yourself maintenance

What about do-it-yourself maintenance?

Many maintenance items are easy to do yourself if you have a little mechanical ability and a few basic automotive tools.

Note, however, that some maintenance tasks require special tools and skills. These are best performed by qualified technicians. Even if you're an experienced do-it-yourself mechanic, we recommend that repairs and maintenance be conducted by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Any authorized Toyota retailer or repairer will keep a record of maintenance, which could be useful should you ever require Warranty Service. Should you choose to select a qualified and equipped professional other than an authorized Toyota repairer to service or maintain your vehicle, we recommend that you request that a record of maintenance be kept.

**■ Where to go for maintenance service?**

In order to maintain your vehicle in the best possible condition, Toyota recommends that maintenance service operations as well as other inspections and repairs be carried out by authorized Toyota retailers or Toyota authorized repairers, or any reliable repairers. For repairs and services covered by your warranty, please visit an authorized Toyota retailer or repairer, who will use genuine Toyota parts in repairing any difficulties you may encounter. There can also be advantages in utilizing authorized Toyota retailers or repairers for non-warranty repairs and services, as members of the Toyota network will be able to expertly assist you with any difficulties you may encounter.

Your Toyota retailer or Toyota authorized repairer, or any reliable repairer will perform all of the scheduled maintenance on your vehicle reliably and economically due to their experience with Toyota vehicles.

**■ Does your vehicle need repairs?**

Be on the alert for changes in performance and sounds, and visual tip-offs that indicate service is needed. Some important clues are:

- Engine missing, stumbling or pinging
- Appreciable loss of power
- Strange engine noises
- A fluid leak under the vehicle (However, water dripping from the air conditioning system after use is normal.)
- Change in exhaust sound (This may indicate a dangerous carbon monoxide leak. Drive with the windows open and have the exhaust system checked immediately.)
- Flat-looking tires, excessive tire squeal when cornering, uneven tire wear
- Vehicle pulls to one side when driven straight on a level road
- Strange noises related to suspension movement
- Loss of brake effectiveness, spongy feeling brake pedal, pedal almost touches the floor, vehicle pulls to one side when braking
- Engine coolant temperature continually higher than normal (→P. 583, 645)

If you notice any of these clues, take your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible. Your vehicle may need adjustment or repair.

 WARNING**■ If your vehicle is not properly maintained**

Improper maintenance could result in serious damage to the vehicle and possible serious injury or death.

**■ Handling of the 12-volt battery**

12-volt battery posts, terminals and related accessories contain lead and lead compounds which are known to cause brain damage. Wash your hands after handling. (→P. 521)

## Do-it-yourself service precautions

If you perform maintenance by yourself, be sure to follow the correct procedure as given in these sections.

Items	Parts and tools
12-volt battery condition (→P. 521)	<ul style="list-style-type: none"> <li>• Warm water</li> <li>• Baking soda</li> <li>• Grease</li> <li>• Conventional wrench (for terminal clamp bolts)</li> <li>• Distilled water</li> </ul>
Engine/power control unit coolant level (→P. 518)	<ul style="list-style-type: none"> <li>• “Toyota Super Long Life Coolant” or a similar high quality ethylene glycol-based non-silicate, non-amine, non-nitrite and non-borate coolant with long-life hybrid organic acid technology “Toyota Super Long Life Coolant” is pre-mixed with 50% coolant and 50% deionized water.</li> <li>• Funnel (used only for adding coolant)</li> </ul>
Engine oil level (→P. 515)	<ul style="list-style-type: none"> <li>• “Toyota Genuine Motor Oil” or equivalent</li> <li>• Rag or paper towel</li> <li>• Funnel (used only for adding engine oil)</li> </ul>
Fuses (→P. 557)	<ul style="list-style-type: none"> <li>• Fuse with same amperage rating as original</li> </ul>
Hybrid battery (traction battery) air intake vent (→P. 545)	<ul style="list-style-type: none"> <li>• Vacuum cleaner, etc.</li> <li>• Phillips screwdriver</li> </ul>
Light bulbs (→P. 561)	<ul style="list-style-type: none"> <li>• Bulb with same number and wattage rating as original</li> <li>• Phillips screwdriver</li> <li>• Flathead screwdriver</li> <li>• Wrench</li> </ul>
Radiator and condenser (→P. 520)	—
Tire inflation pressure (→P. 537)	<ul style="list-style-type: none"> <li>• Tire pressure gauge</li> <li>• Compressed air source</li> </ul>
Washer fluid (→P. 526)	<ul style="list-style-type: none"> <li>• Water or washer fluid containing antifreeze (for winter use)</li> <li>• Funnel (used only for adding water or washer fluid)</li> </ul>

 **WARNING**

The engine compartment contains many mechanisms and fluids that may move suddenly, become hot, or become electrically energized. To avoid death or serious injury, observe the following precautions.

**■ When working on the engine compartment**

- Make sure that the “Accessory”, “Ignition ON” or mileage display (→P. 118, 120) on the main display and the “READY” indicator are both off.
- Keep hands, clothing and tools away from the moving fan.
- Be careful not to touch the engine, power control unit, radiator, exhaust manifold, etc. right after driving as they may be hot. Oil and other fluids may also be hot.
- Do not leave anything that may burn easily, such as paper and rags, in the engine compartment.
- Do not smoke, cause sparks or expose an open flame to fuel. Fuel fumes are flammable.
- Be extremely cautious when working on the 12-volt battery. It contains poisonous and corrosive sulfuric acid.
- Take care because brake fluid can harm your hands or eyes and damage painted surfaces. If fluid gets on your hands or in your eyes, flush the affected area with clean water immediately. If you still experience discomfort, consult a doctor.

**■ When working near the electric cooling fans or radiator grille**

Be sure the power switch is off.

With the power switch in ON mode, the electric cooling fans may automatically start to run if the air conditioning is on and/or the coolant temperature is high. (→P. 520)

**■ Safety glasses**

Wear safety glasses to prevent flying or falling material, fluid spray, etc. from getting in your eyes.



## NOTICE

**■ If you remove the air cleaner filter**

Driving with the air cleaner filter removed may cause excessive engine wear due to dirt in the air.

**■ If the brake fluid level is low or high**

It is normal for the brake fluid level to go down slightly as the brake pads wear or when the fluid level in the accumulator is high.


If the reservoir needs frequent refilling, it may indicate a serious problem.




## Hood

Release the lock from the inside of the vehicle to open the hood.


- 1 Pull the hood lock release lever.  
The hood will pop up slightly.

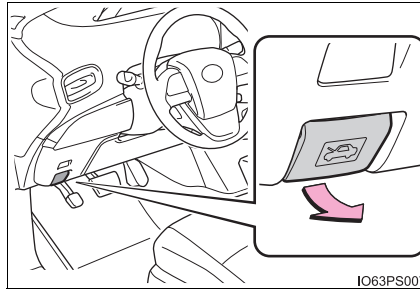

- 2 Pull the auxiliary catch lever to the left and lift the hood.

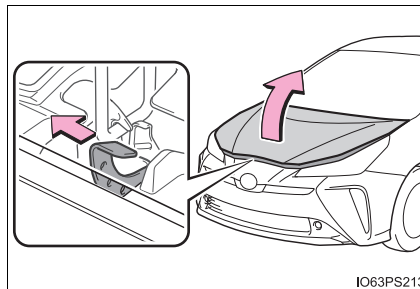

- 3 Hold the hood open by inserting the supporting rod into the slot.

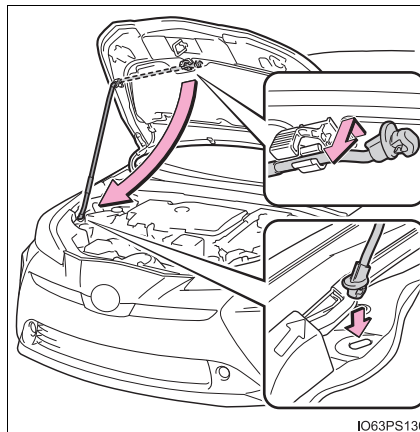

 WARNING

■ **Pre-driving check**


Check that the hood is fully closed and locked.  
If the hood is not locked properly, it may open while the vehicle is in motion and cause an accident, which may result in death or serious injury.

■ **After installing the support rod into the slot**

Make sure the rod supports the hood securely from falling down on to your head or body.

■ **When closing the hood**

When closing the hood, take extra care to prevent your fingers etc. from being caught.

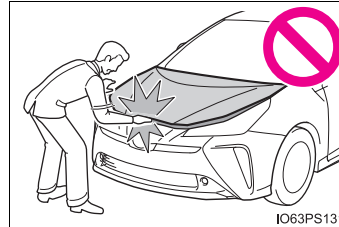

 NOTICE

■ **When closing the hood**


Be sure to return the supporting rod to its clip before closing the hood. Closing the hood without returning the support rod properly could cause the hood to bend.

## Positioning a floor jack


When using a floor jack, follow the instructions in the manual provided with the jack and perform the operation safely.

When raising your vehicle with a floor jack, position the jack correctly. Improper placement may damage your vehicle or cause injury.

### ◆ Front

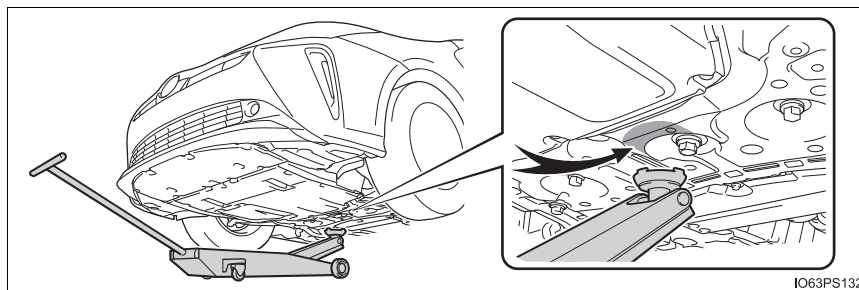


### ◆ Rear

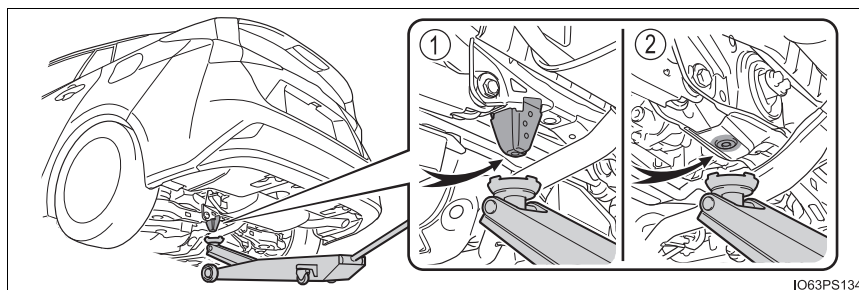

① 2WD models

② AWD models

## Engine compartment

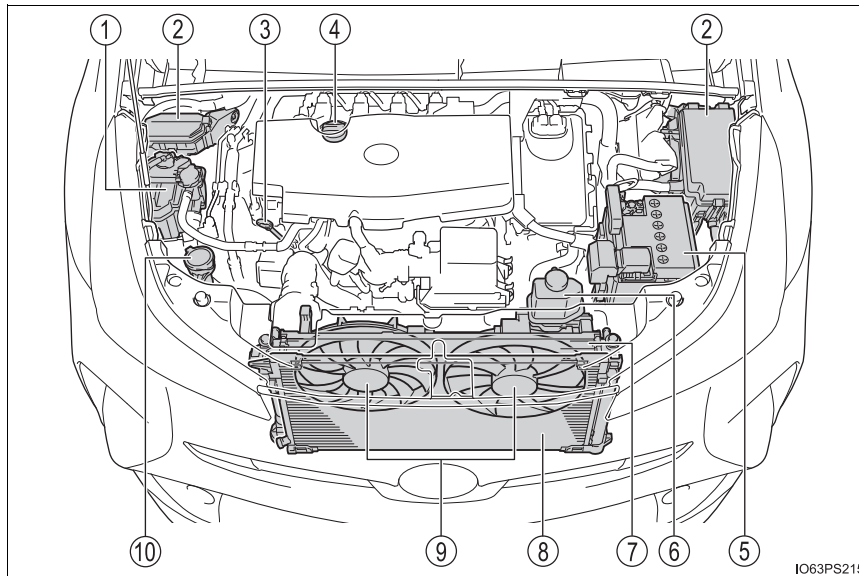


- |  |   |
|--|---|
| ① Engine coolant reservoir<br>(→P. 518)  | ⑥ Power control unit coolant<br>reservoir (→P. 518) |
| ② Fuse boxes (→P. 557)                   | ⑦ Radiator (→P. 520)                                |
| ③ Engine oil level dipstick<br>(→P. 515) | ⑧ Condenser (→P. 520)                               |
| ④ Engine oil filler cap (→P. 516)        | ⑨ Electric cooling fans                             |
| ⑤ 12-volt battery (→P. 521)              | ⑩ Washer fluid tank (→P. 526)                       |

## Engine oil


With the engine at operating temperature and turned off, check the oil level on the dipstick.

### ■ Checking the engine oil

- 1 Park the vehicle on level ground. After warming up the engine and turning off the hybrid system, wait more than 5 minutes for the oil to drain back into the bottom of the engine.
- 2 Holding a rag under the end, pull the dipstick out.

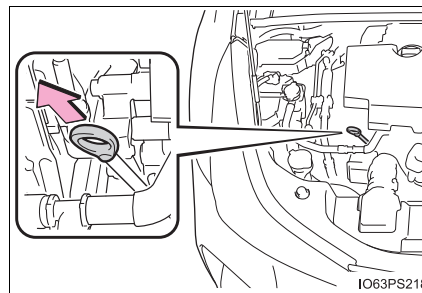


- 3 Wipe the dipstick clean.
- 4 Reinsert the dipstick fully.
- 5 Holding a rag under the end, pull the dipstick out and check the oil level.
  - 1 Low
  - 2 Normal
  - 3 Excessive

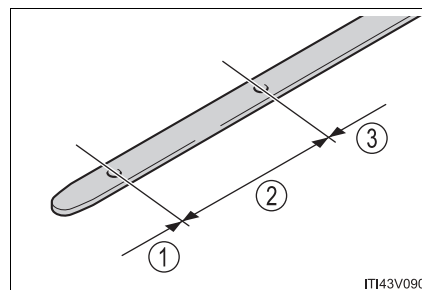

- 6 Wipe the dipstick and reinsert it fully.

■ **Adding engine oil**

If the oil level is below or near the low level mark, add engine oil of the same type as that already in the engine.

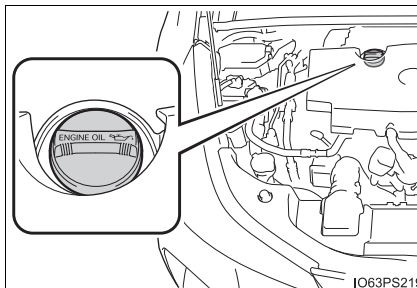

Make sure to check the oil type and prepare the items needed before adding oil.

Engine oil selection	→P. 658
Oil quantity (Low → Full)	1.5 L (1.6 qt., 1.3 Imp. qt.)
Items	Clean funnel

- 1 Remove the oil filler cap by turning it counterclockwise.
- 2 Add engine oil slowly, checking the dipstick.
- 3 Install the oil filler cap by turning it clockwise.

■ **Engine oil consumption**

A certain amount of engine oil will be consumed while driving. In the following situations, oil consumption may increase, and engine oil may need to be refilled in between oil maintenance intervals.

- When the engine is new, for example directly after purchasing the vehicle or after replacing the engine
- If low quality oil or oil of an inappropriate viscosity is used
- When driving at high engine speeds or with a heavy load, when towing, or when driving while accelerating or decelerating frequently
- When leaving the engine idling for a long time, or when driving frequently through heavy traffic

 WARNING**■ Used engine oil**

- Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation and skin cancer, so care should be taken to avoid prolonged and repeated contact. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Dispose of used oil and filters only in a safe and acceptable manner. Do not dispose of used oil and filters in household trash, in sewers or onto the ground. Call any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer, service station or auto parts store for information concerning recycling or disposal.
- Do not leave used engine oil within the reach of children.

 NOTICE**■ To prevent serious engine damage**

Check the oil level on a regular basis.

**■ When replacing the engine oil**

- Be careful not to spill engine oil on the vehicle components.
- Avoid overfilling, or the engine could be damaged.
- Check the oil level on the dipstick every time you refill the vehicle.
- Be sure the engine oil filler cap is properly tightened.


## Coolant

The coolant level is satisfactory if it is between the “MAX” and “MIN” lines on the reservoir when the hybrid system is cold.

### ■ Engine coolant reservoir

- ① Reservoir cap
- ② “MAX” line
- ③ “MIN” line


If the level is on or below the “MIN” line, add coolant up to the “MAX” line. (→P. 645)

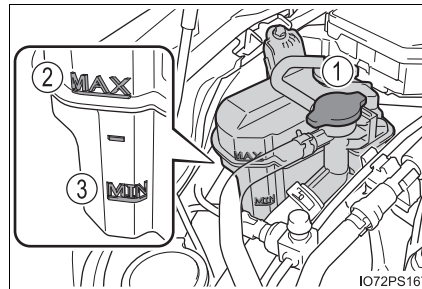

### ■ Power control unit coolant reservoir

- ① Reservoir cap
- ② “FULL” line
- ③ “LOW” line

If the level is on or below the “LOW” line, add coolant up to the “FULL” line. (→P. 647)

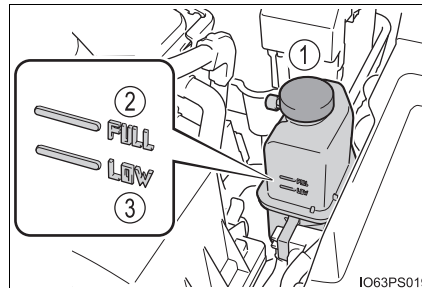



### ■ Coolant selection

Only use “Toyota Super Long Life Coolant” or a similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology.

“Toyota Super Long Life Coolant” is a mixture of 50% coolant and 50% deionized water. (Minimum temperature: -35°C [-31°F])

For more details about coolant, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

### ■ If the coolant level drops within a short time of replenishing

Visually check the radiator, hoses, engine/power control unit coolant reservoir caps, drain cock and water pump.

If you cannot find a leak, have any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer, test the cap and check for leaks in the cooling system.



#### WARNING

#### ■ When the hybrid system is hot

Do not remove the engine/power control unit coolant reservoir caps. The cooling system may be under pressure and may spray hot coolant if the cap is removed, causing serious injuries, such as burns.



#### NOTICE

#### ■ When adding coolant

Coolant is neither plain water nor straight antifreeze. The correct mixture of water and antifreeze must be used to provide proper lubrication, corrosion protection and cooling. Be sure to read the antifreeze or coolant label.

#### ■ If you spill coolant

Be sure to wash it off with water to prevent it from damaging parts or paint.

**Radiator and condenser**

Check the radiator and condenser and clear away any foreign objects. If either of the above parts is extremely dirty or you are not sure of their condition, have your vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**⚠ WARNING****■ When the hybrid system is hot**

Do not touch the radiator or condenser as they may be hot and cause serious injuries, such as burns.

**■ When the electric cooling fans are operating**

Do not touch the engine compartment.

With the power switch in ON mode, the electric cooling fans may automatically start to run if the air conditioning is on and/or the coolant temperature is high. Be sure the power switch is off when working near the electric cooling fans or radiator grille.


**12-volt battery**

Check the 12-volt battery as follows.

**■ 12-volt battery exterior**

Make sure that the 12-volt battery terminals are not corroded and that there are no loose connections, cracks, or loose clamps.


Terminals

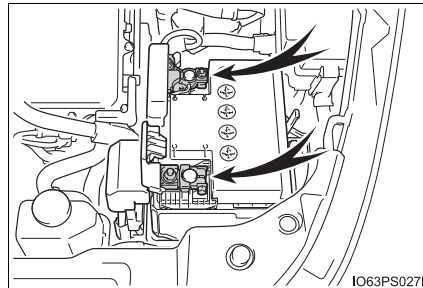**■ Checking battery fluid**

Check that the level is between the upper and lower line.

- ① Upper line
- ② Lower line

If the fluid level is at or below the lower line, add distilled water.

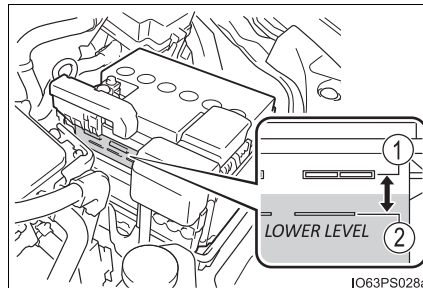


■ **Adding distilled water**

1 Remove the vent plug.

2 Add distilled water.


If the upper line cannot be seen, check the fluid level by looking directly at the cell.

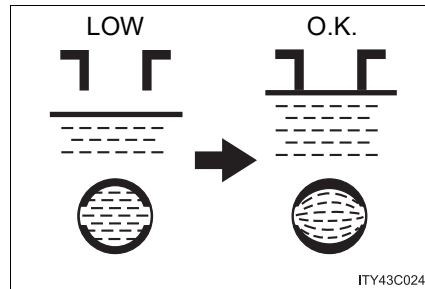

3 Put the vent plug back on and close it securely.

### ■ When opening the cover of the positive (+) battery terminal

While pushing the portion shown in the illustration from both sides, lift the end of the cover up.

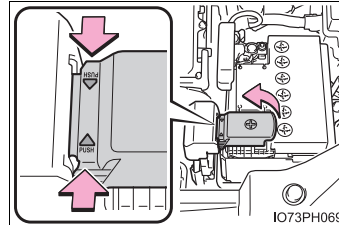

### ■ Before recharging

When recharging, the 12-volt battery produces hydrogen gas which is flammable and explosive. Therefore, observe the following precautions before recharging:

- If recharging with the 12-volt battery installed on the vehicle, be sure to disconnect the ground cable.
- Make sure the power switch on the charger is off when connecting and disconnecting the charger cables to the 12-volt battery.

### ■ After recharging/reconnecting the 12-volt battery

- Unlocking the doors using the smart entry & start system may not be possible immediately after reconnecting the 12-volt battery. If this happens, use the wireless remote control or the mechanical key to lock/unlock the doors.
- Start the hybrid system with the power switch in ACCESSORY mode. The hybrid system may not start with the power switch turned off. However, the hybrid system will operate normally from the second attempt.
- The power switch mode is recorded by the vehicle. If the 12-volt battery is reconnected, the vehicle will return the power switch mode to the status it was in before the 12-volt battery was disconnected. Make sure to turn off the power switch before disconnect the 12-volt battery. Take extra care when connecting the 12-volt battery if the power switch mode prior to discharge is unknown.

If the system will not start even after multiple attempts at all methods above, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**WARNING****■ Chemicals in the 12-volt battery**

The 12-volt battery contains poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near the 12-volt battery:

- Do not cause sparks by touching the 12-volt battery terminals with tools.
- Do not smoke or light a match near the 12-volt battery.
- Avoid contact with eyes, skin and clothes.
- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the 12-volt battery.
- Keep children away from the 12-volt battery.

**■ Where to safely charge the 12-volt battery**

Always charge the 12-volt battery in an open area. Do not charge the 12-volt battery in a garage or closed room where there is insufficient ventilation.

**■ Emergency measures regarding electrolyte**

- If electrolyte gets in your eyes  
Flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while traveling to the nearest medical facility.
- If electrolyte gets on your skin  
Wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.
- If electrolyte gets on your clothes  
It can soak through clothing on to your skin. Immediately take off the clothing and follow the procedure above if necessary.
- If you accidentally swallow electrolyte  
Drink a large quantity of water or milk. Get emergency medical attention immediately.

 WARNING**■ When disconnecting the 12-volt battery**

Do not disconnect the negative (-) terminal on the body side. The disconnected negative (-) terminal may touch the positive (+) terminal, which may cause a short and result in death or serious injury.

 NOTICE**■ When recharging the 12-volt battery**


Never recharge the 12-volt battery while the hybrid system is operating. Also, be sure all accessories are turned off.

**■ When adding distilled water**

Avoid overfilling. Water spilled during 12-volt battery recharging may cause corrosion.


### Washer fluid

- 1 Open the lid.

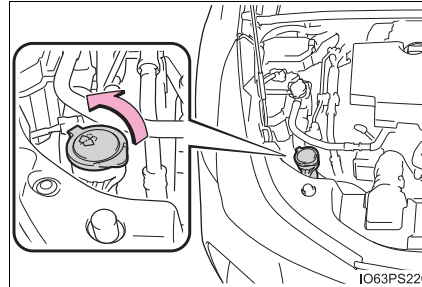

- 2 Vehicles with the level gauge: Check the washer fluid level on the level gauge.

- ① "NORMAL"
- ② "LOW"

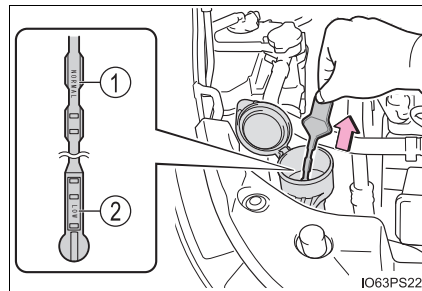

- 3 If the washer fluid level is at "LOW", add washer fluid.






**■ Using the gauge (if equipped)**

The washer fluid level can be checked by observing the position of the level on the liquid-covered holes in the gauge.

If the level falls below the second hole from the bottom (the "LOW" position), refill the washer fluid.

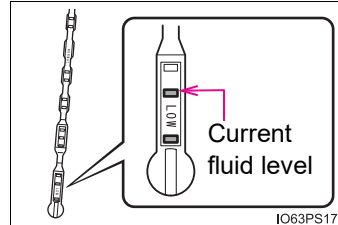**⚠ WARNING****■ When adding washer fluid**

Do not add washer fluid when the hybrid system is hot or operating as washer fluid contains alcohol and may catch fire if spilled on the engine etc.

**⚠ NOTICE****■ Do not use any fluid other than washer fluid**

Do not use soapy water or engine antifreeze instead of washer fluid. Doing so may cause streaking on the vehicle's painted surfaces, as well as damaging the pump leading to problems of the washer fluid not spraying.

**■ Diluting washer fluid**

Dilute washer fluid with water as necessary. Refer to the freezing temperatures listed on the label of the washer fluid bottle.


## Tires

Replace or rotate tires in accordance with maintenance schedules and treadwear.

### Checking tires

Check if the treadwear indicators are showing on the tires. Also check the tires for uneven wear, such as excessive wear on one side of the tread.

Check the spare tire condition and pressure if not rotated.

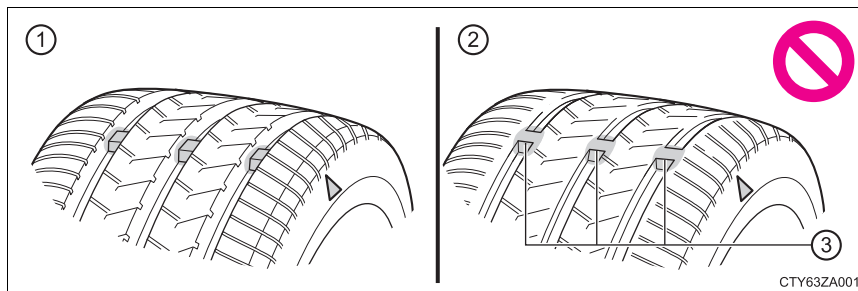

- ① New tread
- ② Worn tread
- ③ Treadwear indicator

The location of treadwear indicators is shown by a “TWI” or “Δ” mark, etc., molded into the sidewall of each tire.

Replace the tires if the treadwear indicators are showing on a tire.

**Tire rotation**



Rotate the tires in the order shown.

To equalize tire wear and help extend tire life, Toyota recommends that tire rotation is carried out approximately every 10000 km (6000 miles).

Vehicle with the tire pressure warning system:

Do not fail to initialize the tire pressure warning system after tire rotation.

- ▶ Vehicles without full-size spare tire
- ▶ Vehicles with full-size spare tire

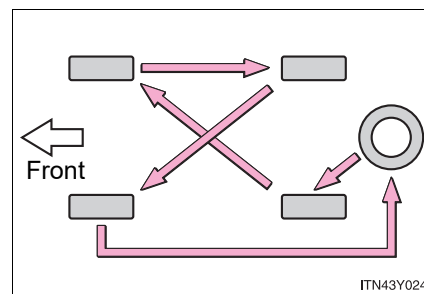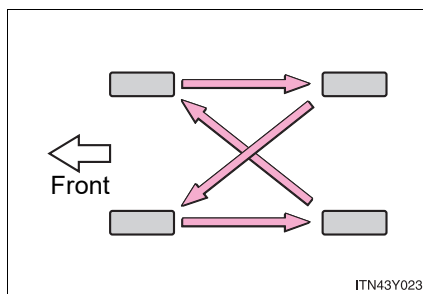

**Tire pressure warning system (if equipped)**

Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

If the tire pressure drops below a predetermined level, the driver is warned by a warning light. (→P. 584)

The compact spare tire is not equipped with a tire pressure warning valve and transmitter.

**◆ Installing tire pressure warning valves and transmitters**

When replacing tires or wheels, tire pressure warning valves and transmitters must also be installed.













When new tire pressure warning valves and transmitters are installed, new ID codes must be registered in the tire pressure warning computer and the tire pressure warning system must be initialized. Have tire pressure warning valve and transmitter ID codes registered by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. (→P. 531)


**◆ Initializing the tire pressure warning system****■ The tire pressure warning system must be initialized in the following circumstances:**

- When rotating front and rear tires which have different tire inflation pressures
- When the tire inflation pressure is changed such as when changing traveling speed or load weight.

When the tire pressure warning system is initialized, the current tire inflation pressure is set as the benchmark pressure.

### ■ How to initialize the tire pressure warning system

- 1 Park the vehicle in a safe place and turn the power switch off.  
Initialization cannot be performed while the vehicle is moving.
- 2 Adjust the tire inflation pressure to the specified cold tire inflation pressure level. (→P. 665)  
Make sure to adjust the tire pressure to the specified cold tire inflation pressure level. The tire pressure warning system will operate based on this pressure level.
- 3 Turn the power switch to ON mode.
- 4 Switch the multi-information display to the  screen.  
(→P. 153)
- 5 Press  or  of the meter control switches, select  (“Vehicle Settings”), and then press .
- 6 Press  or  of the meter control switches, select “Maintenance System”, and then press .
- 7 Press  or  of the meter control switches, select “TPMS”, and then press .
- 8 Press and hold .
- 9 When initialization completes, a message is displayed on the multi-information display and the tire pressure warning light illuminates.

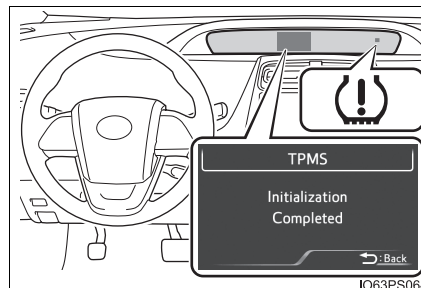

### ◆ Registering ID codes

The tire pressure warning valve and transmitter is equipped with a unique ID code. When replacing a tire pressure warning valve and transmitter, it is necessary to register the ID code. Have the ID code registered by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**■ When to replace your vehicle's tires**

Tires should be replaced if:

- The treadwear indicators are showing on a tire.
- You have tire damage such as cuts, splits, cracks deep enough to expose the fabric, and bulges indicating internal damage.
- A tire goes flat repeatedly or cannot be properly repaired due to the size or location of a cut or other damage.

If you are not sure, consult with any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**■ Replacing tires and wheels (vehicles with the tire pressure warning system)**

If the ID code of the tire pressure warning valve and transmitter is not registered, the tire pressure warning system will not work properly. After driving for about 10 minutes, the tire pressure warning light blinks for 1 minute and stays on to indicate a system malfunction.

**■ Tire life**

Any tire over 6 years old must be checked by a qualified technician even if it has seldom or never been used or damage is not obvious.

**■ Routine tire inflation pressure checks (vehicles with the tire pressure warning system)**

The tire pressure warning system does not replace routine tire inflation pressure checks. Make sure to check tire inflation pressure as part of your routine of daily vehicle checks.

**■ If the tread on snow tires wears down below 4 mm (0.16 in.)**

The effectiveness of the tires as snow tires is lost.

**■ Low profile tires (vehicles with 215/45R17 tires)**

Generally, low profile tires will wear more rapidly and tire grip performance will be reduced on snowy and/or icy roads when compared to standard tires. Be sure to use snow tires or tire chains on snowy and/or icy roads and drive carefully at a speed appropriate for road and weather conditions.

**■ Situations in which the tire pressure warning system may not operate properly (if equipped)**

- In the following cases, the tire pressure warning system may not operate properly.
  - If non-genuine Toyota wheels are used.
  - When a replacement tire is used, the system may not operate correctly due to the structure of the replacement tire.
  - A tire has been replaced with a tire that is not of the specified size.
  - Tire chains etc. are equipped.
  - An auxiliary-supported run-flat tire is equipped.
  - If a window tint that affects the radio wave signals is installed.
  - If there is a lot of snow or ice on the vehicle, particularly around the wheels or wheel housings.
  - If the tire inflation pressure is extremely higher than the specified level.
  - If wheel without the tire pressure warning valve and transmitter is used.
  - If the ID code on the tire pressure warning valves and transmitters is not registered in the tire pressure warning computer.
- Performance may be affected in the following situations.
  - Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
  - When carrying a portable radio, cellular phone, cordless phone or other wireless communication device
- When the vehicle is parked, the time taken for the warning to start or go off could be extended.
- When tire inflation pressure declines rapidly for example when a tire has burst, the warning may not function.

**■ The initialization operation (vehicles with the tire pressure warning system)**

- Make sure to carry out initialization after adjusting the tire inflation pressure. Also, make sure the tires are cold before carrying out initialization or tire inflation pressure adjustment.
- If you have accidentally turned the power switch off during initialization, it is not necessary to press the reset switch again as initialization will restart automatically when the power switch has been turned to ON mode for the next time.
- If you accidentally press the reset switch when initialization is not necessary, adjust the tire inflation pressure to the specified level when the tires are cold, and conduct initialization again.

**■ Warning performance of the tire pressure warning system (if equipped)**

The warning of the tire pressure warning system will change in accordance with the conditions under which it was initialized. For this reason, the system may give a warning even if the tire pressure does not reach a low enough level, or if the pressure is higher than the pressure that was adjusted to when the system was initialized.

**■ When initialization of the tire pressure warning system has failed (vehicles with the tire pressure warning system)**

Initialization can be completed in a few minutes. However, in the following cases, the settings have not been recorded and the system will not operate properly. If repeated attempts to record tire inflation pressure settings are unsuccessful, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- When operating the initialization of the system, the tire pressure warning light does not flash 3 times and the setting message does not appear on the multi-information display.
- After driving for a certain period of time since the initialization has been completed, the warning light comes on after blinking for 1 minute.

**■ Registering ID codes (vehicles with the tire pressure warning system)**

The ID codes of the tire pressure warning valve and transmitters for two sets of wheels can be registered.

It is not necessary to register the ID codes when replacing normal tires with snow tires, if the ID codes for the wheels of both normal tires and snow tires are registered beforehand.

For information about changing ID codes, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.



 **WARNING****■ When inspecting or replacing tires**

Observe the following precautions to prevent accidents.

Failure to do so may cause damage to parts of the drive train as well as dangerous handling characteristics, which may lead to an accident resulting in death or serious injury.

- Do not mix tires of different makes, models or tread patterns.  
Also, do not mix tires of remarkably different treadwear.
- Do not use tire sizes other than those recommended by Toyota.
- Do not mix differently constructed tires (radial, bias-belted or bias-ply tires).
- Do not mix summer, all season and snow tires.
- Do not use tires that have been used on another vehicle.  
Do not use tires if you do not know how they were used previously.
- Vehicles with a compact spare tire: Do not tow if your vehicle has a compact spare tire installed.
- Vehicles with an emergency tire puncture repair kit: Do not tow anything if a tire that has been repaired using the emergency tire puncture repair kit is installed. The load on the tire may cause unexpected damage to the tire.

**■ When initializing the tire pressure warning system (if equipped)**

Do not initialize the tire pressure warning system without first adjusting the tire inflation pressure to the specified level. Otherwise, the tire pressure warning light may not come on even if the tire inflation pressure is low, or it may come on when the tire inflation pressure is actually normal.



## NOTICE

**■ Repairing or replacing tires, wheels, tire pressure warning valves, transmitters and tire valve caps (vehicles with the tire pressure warning system)**

- When removing or fitting the wheels, tires or the tire pressure warning valves and transmitters, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as the tire pressure warning valves and transmitters may be damaged if not handled correctly.
- Make sure to install the tire valve caps. If the tire valve caps are not installed, water could enter the tire pressure warning valves and the tire pressure warning valves could be bound.
- When replacing tire valve caps, do not use tire valve caps other than those specified.  
The cap may become stuck.

**■ To avoid damage to the tire pressure warning valves and transmitters (vehicles with the tire pressure warning system)**

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or other qualified service shop as soon as possible. After use of liquid sealant, make sure to replace the tire pressure warning valve and transmitter when repairing or replacing the tire. (→P. 530)

**■ Driving on rough roads**

Take particular care when driving on roads with loose surfaces or potholes. These conditions may cause losses in tire inflation pressure, reducing the cushioning ability of the tires. In addition, driving on rough roads may cause damage to the tires themselves, as well as the vehicle's wheels and body.

**■ Low profile tires (vehicles with 215/45R17 tires)**

Low profile tires may cause greater damage than usual to the wheel when receiving impact from the road surface. Therefore pay attention to the following:

- Be sure to use proper tire inflation pressure. If tires are under-inflated, they may be damaged more severely.
- Avoid pot holes, uneven pavement, curbs and other road hazards. Failure to do so can lead to severe tire and wheel damage.

**■ If tire inflation pressure of each tire becomes low while driving**

Do not continue driving, or your tires and/or wheels may be ruined.

## Tire inflation pressure

**Make sure to maintain proper tire inflation pressure. Tire inflation pressure should be checked at least once per month. However, Toyota recommends that tire inflation pressure be checked once every two weeks. (→P. 665)**

### ■ Effects of incorrect tire inflation pressure

Driving with incorrect tire inflation pressure may result in the following:

- Reduced fuel economy
- Reduced driving comfort and poor handling
- Reduced tire life due to wear
- Reduced safety
- Damage to the drive train

If a tire needs frequent inflating, have it checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

### ■ Instructions for checking tire inflation pressure

When checking tire inflation pressure, observe the following:

- Check only when the tires are cold.  
If your vehicle has been parked for at least 3 hours or has not been driven for more than 1.5 km or 1 mile, you will get an accurate cold tire inflation pressure reading.
- Always use a tire pressure gauge.  
It is difficult to judge if a tire is properly inflated based only on its appearance.
- It is normal for the tire inflation pressure to be higher after driving as heat is generated in the tire. Do not reduce tire inflation pressure after driving.
- Passengers and luggage weight should be placed so that the vehicle is balanced.

**WARNING****■ Proper inflation is critical to save tire performance**

Keep your tires properly inflated.

If the tires are not properly inflated, the following conditions may occur which could lead to an accident resulting in death or serious injury:

- Excessive wear
- Uneven wear
- Poor handling
- Possibility of blowouts resulting from overheated tires
- Air leaking from between tire and wheel
- Wheel deformation and/or tire damage
- Greater possibility of tire damage while driving (due to road hazards, expansion joints, sharp edges in the road, etc.)

**NOTICE****■ When inspecting and adjusting tire inflation pressure**

Be sure to put the tire valve caps back on.

If a valve cap is not installed, dirt or moisture may get into the valve and cause an air leak, resulting in decreased tire inflation pressure.

## Wheels

**If a wheel is bent, cracked or heavily corroded, it should be replaced. Otherwise, the tire may separate from the wheel or cause a loss of handling control.**

### Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width and inset\*.

Replacement wheels are available at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

\*: Conventionally referred to as "offset".

Toyota does not recommend using the following:

- Wheels of different sizes or types
- Used wheels
- Bent wheels that have been straightened

### Aluminum wheel precautions

- Use only Toyota wheel nuts and wrenches designed for use with your aluminum wheels.
- When rotating, repairing or changing your tires, check that the wheel nuts are still tight after driving 1600 km (1000 miles).
- Be careful not to damage the aluminum wheels when using tire chains.
- Use only Toyota genuine balance weights or equivalent and a plastic or rubber hammer when balancing your wheels.

**■ When replacing wheels (vehicles with the tire pressure warning system)**

The wheels of your vehicle are equipped with tire pressure warning valves and transmitters that allow the tire pressure warning system to provide advance warning in the event of a loss in tire inflation pressure. Whenever wheels are replaced, tire pressure warning valves and transmitters must be installed. (→P. 530)

**⚠ WARNING****■ When replacing wheels**

- Do not use wheels that are a different size from those recommended in the Owner's Manual, as this may result in a loss of handling control.
- Never use an inner tube in a leaking wheel which is designed for a tubeless tire. Doing so may result in an accident, causing death or serious injury.

**■ When installing the wheel nuts**

- Be sure to install the wheel nuts with the tapered ends facing inward. (→P. 627)

Installing the nuts with the tapered ends facing outward can cause the wheel to break and eventually cause the wheel to come off while driving, which could lead to an accident resulting in death or serious injury.

- Never use oil or grease on the wheel bolts or wheel nuts. Oil and grease may cause the wheel nuts to be excessively tightened, leading to bolt or disc wheel damage. In addition, the oil or grease can cause the wheel nuts to loosen and the wheel may fall off, causing an accident and resulting in death or serious injury. Remove any oil or grease from the wheel bolts or wheel nuts.

**■ Use of defective wheels prohibited**

Do not use cracked or deformed wheels. Doing so could cause the tire to leak air during driving, possibly causing an accident.



## NOTICE

**■ Replacing tire pressure warning valves and transmitters (vehicles with the tire pressure warning system)**


- Because tire repair or replacement may affect the tire pressure warning valves and transmitters, make sure to have tires serviced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or other qualified service shop. In addition, make sure to purchase your tire pressure warning valves and transmitters at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Ensure that only genuine Toyota wheels are used on your vehicle.  
Tire pressure warning valves and transmitters may not work properly with non-genuine wheels.

## Air conditioning filter


The air conditioning filter must be changed regularly to maintain air conditioning efficiency.

### Replacing the air conditioning filter

- 1 Turn the power switch off.
- 2 Open the glove box and slide off the damper.

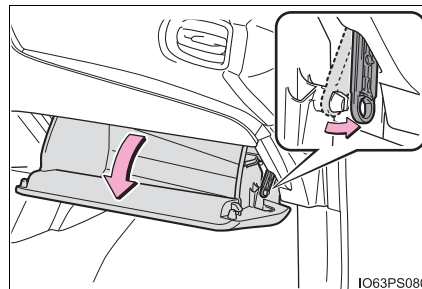


- 3 Push in each side of the glove box to disconnect the claws, and then slowly and fully open the glove box while supporting it.

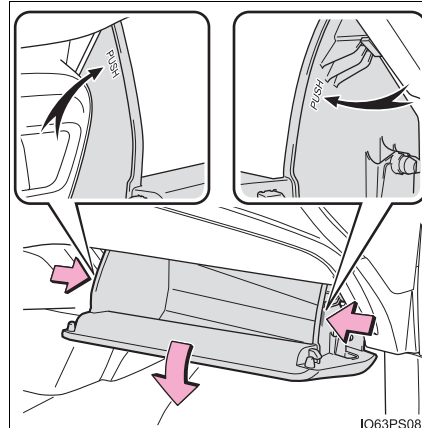

- 4 With the glove box fully open, slightly lift up the glove box and pull toward the seat to detach the bottom of the glove box.

Do not use excessive force if the glove box does not detach when lightly pulled. Instead, pull toward the seat while slightly adjusting the height of the glove box.

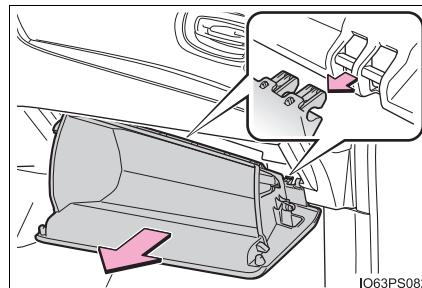





**5** Remove the filter cover.

- ① Unlock the filter cover.
- ② Move the filter cover in the direction of the arrow, and then pull it out of the claws.


▶ Left-hand drive vehicles

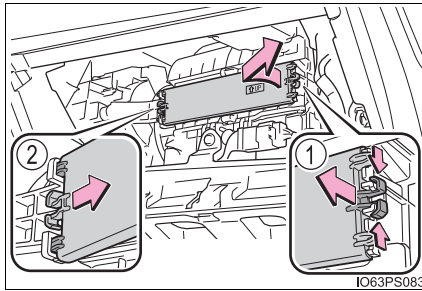

▶ Right-hand drive vehicles

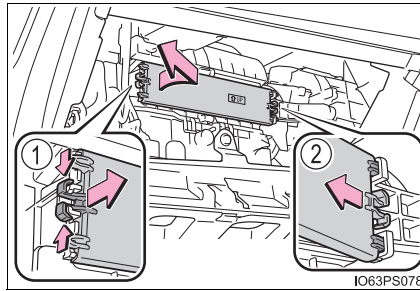


**6** Remove the filter case.

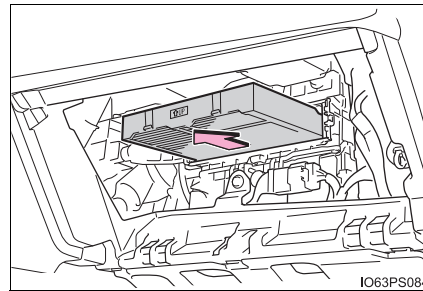

**7** Remove the air conditioning filter from the filter case and replace it with a new one.

The “↑UP” marks shown on the filter should be pointing up.

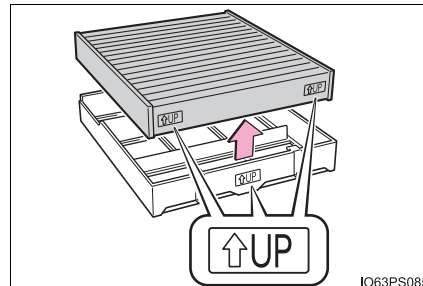

**8** When installing, reverse the steps listed.

**■ Checking interval**

Inspect and replace the air conditioning filter according to the maintenance schedule. In dusty areas or areas with heavy traffic flow, early replacement may be required. (For scheduled maintenance information, please refer to the “Toyota Service Booklet” or “Toyota Warranty Booklet”.)

**■ If air flow from the vents decreases dramatically**

The filter may be clogged. Check the filter and replace if necessary.

 **NOTICE****■ When using the air conditioning system**


Make sure that a filter is always installed.  
Using the air conditioning system without a filter may cause damage to the system.

**■ When removing the glove box**

Always follow the specified procedure to remove the glove box (→P. 542). If the glove box is removed without following the specified procedure, the hinge of the glove box may become damaged.

**■ To prevent damage to the filter cover**

When moving the filter cover in the direction of arrow to release the fitting, pay attention not to apply excessive force to the claws. Otherwise, the claws may be damaged.

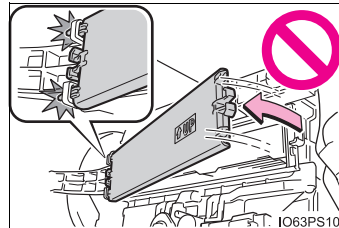


## Cleaning the hybrid battery (traction battery) air intake vent and filter

To prevent the fuel economy from being affected, visually inspect the hybrid battery (traction battery) air intake vent periodically for dust and clogs. If it is dusty or clogged or if “Maintenance Required for Traction Battery Cooling Parts See Owner’s Manual” is shown on the multi-information display, clean the air intake vent using the following procedures:

### Cleaning the air intake vent

Remove the dust from the air intake vent with a vacuum cleaner, etc.


Make sure to only use a vacuum to suck out dust and clogs. Attempting to blow out dust and clogs using an airgun, etc. may push it into the air intake vent. (→P. 549)

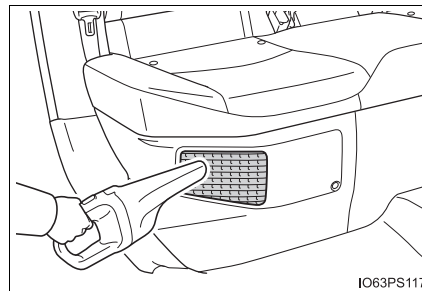

### If dust and clogs cannot be completely removed


If dust and clogs cannot be completely removed with the air intake vent cover installed, remove the cover and clean the filter.

- 1 Turn the power switch off.
- 2 Using a Phillips screwdriver, remove the clip.

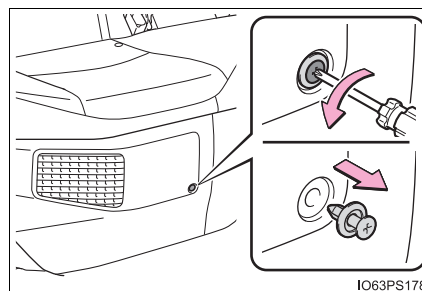


- 3 Remove the air intake vent cover.

- ① Pull the cover as shown in the illustration to disengage the 5 claws, starting from the claw in the upper right corner.
- ② Pull the cover toward the front of the vehicle to remove it.

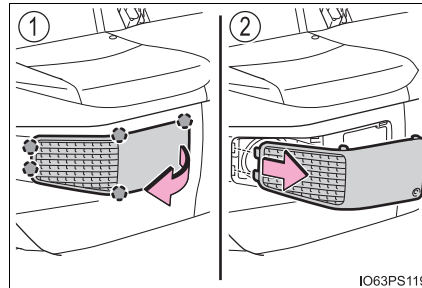


- 4 Remove the air intake vent filter.

- ① Disengage the 1 claw as shown in the illustration.
- ② Disengage the 2 claws to remove the filter from the cover.

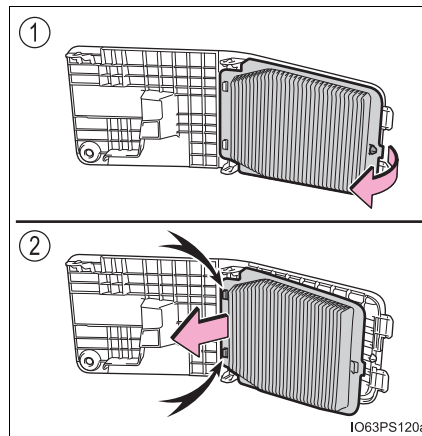

- 5 Remove the dust and clogs from the filter using a vacuum cleaner, etc.


Make sure to also remove the dust and clogs from the inside of the air intake vent cover.

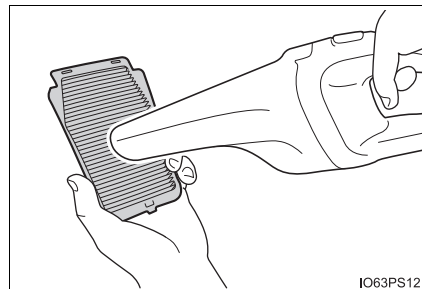



**6** Reinstall the filter to the cover.

- ① Engage the filter to the 2 claws as shown in the illustration.
- ② Engage the 1 claw to install the filter.

Make sure that the filter is not crooked or deformed when installing it.

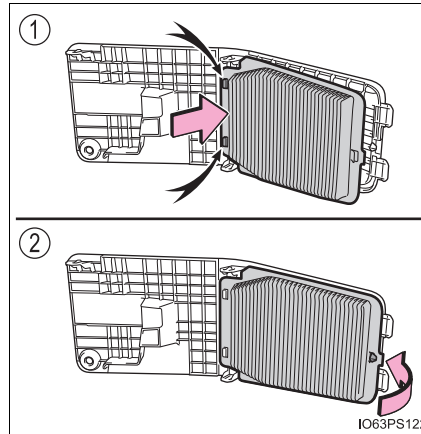**7** Install the air intake vent cover.

- ① Insert the tab of the cover as shown in the illustration.
- ② Push the cover to engage the 5 claws.

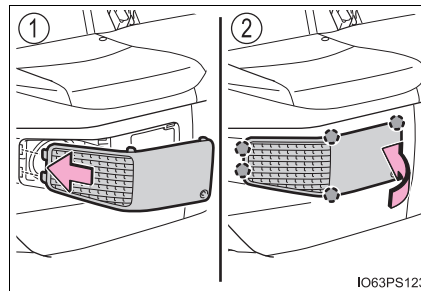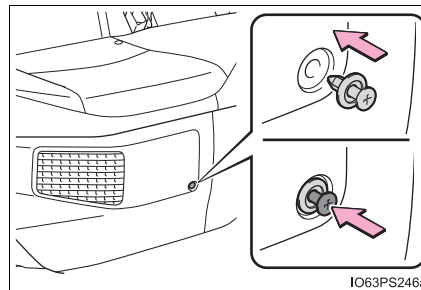**8** Install the clip.

**■ Scheduled maintenance of the air intake vent is necessary when**

In some situations such as when the vehicle is used frequently or in heavy traffic or dusty areas, the air intake vent may need to be cleaned more regularly. For details, refer to the “Toyota Service Booklet” or “Toyota Warranty Booklet”.

**■ Cleaning the air intake vent**

- Dust in the air intake vent may interfere with the cooling of the hybrid battery (traction battery). If charging/discharging of the hybrid battery (traction battery) becomes limited, the distance that the vehicle can be driven using the electric motor (traction motor) may be reduced and the fuel economy may be reduced. Inspect and clean the air intake vent periodically.
- Improper handling of the air intake vent cover and filter may result in damage to them. If you have any concerns about cleaning the filter, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**■ If “Maintenance Required for Traction Battery Cooling Parts See Owner’s Manual” is shown on the multi-information display**

- If this warning message is shown on the multi-information display, remove the air intake vent cover and clean the filter. (→P. 545)
- After cleaning the air intake vent, start the hybrid system and check that the warning message is no longer shown.  
It may take approximately 20 minutes after the hybrid system is started until the warning message disappears. If the warning message does not disappear, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**WARNING****■ When cleaning the air intake vent**

- Do not use water or other liquids to clean the air intake vent. If water is applied to the hybrid battery (traction battery) or other components, a malfunction or fire may occur.
- Before cleaning the air intake vent, make sure to turn the power switch off to stop the hybrid system.


**■ When removing the air intake vent cover**

Do not touch the service plug located near the air intake vent. (→P. 87)

 NOTICE

■ **When cleaning the air intake vent**

When cleaning the air intake vent, make sure to only use a vacuum to suck out dust and clogs. If a compressed air blow gun, etc. is used to blow out dust and clogs, the dust or clogs may be pushed into the air intake vent, which may affect the performance of the hybrid battery (traction battery) and cause a malfunction.

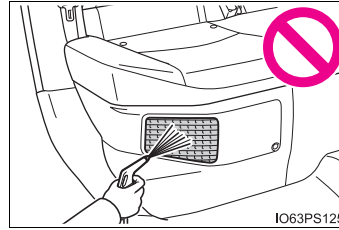

■ **To prevent damage to the vehicle**

- Do not allow water or foreign matter to enter the air intake vent when the cover is removed.
- Carefully handle the removed filter so that it will not be damaged. If the filter is damaged, have it replaced with a new filter by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Make sure to reinstall the filter and cover to their original positions after cleaning.
- Do not install anything to the air intake vent other than the exclusive filter for this vehicle or use the vehicle without the filter installed.

■ **If “Maintenance Required for Traction Battery Cooling Parts See Owner’s Manual” is shown on the multi-information display**

If the vehicle is continuously driven with the warning message (indicating that charging/discharging of the hybrid battery [traction battery] may become limited) displayed, the hybrid battery (traction battery) may malfunction. If the warning message is shown, clean the air intake vent immediately.


## Wiper insert replacement

When replacing the wiper insert, perform the following procedure to operate each wiper.

### Windshield wipers


#### ■ Windshield wiper blade removal and installation

- 1 While securely supporting the wiper blade connection by hand, press the lock knob to release the lock, and then pull out the wiper blade.

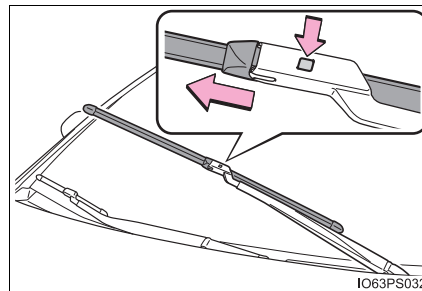


- 2 Align the wiper blade with the connecting portion of the wiper arm, and then slide it in the direction it was removed from.

After installing the wiper blade, check that the connection is locked.

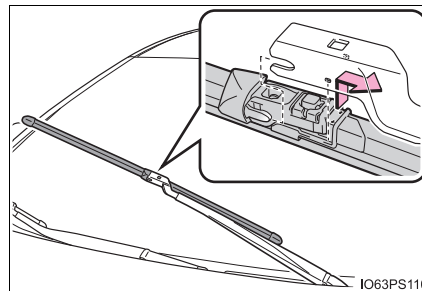


#### ■ Wiper insert replacement

- 1 Pull the wiper insert until it protrudes from the slit on the back of the wiper blade.

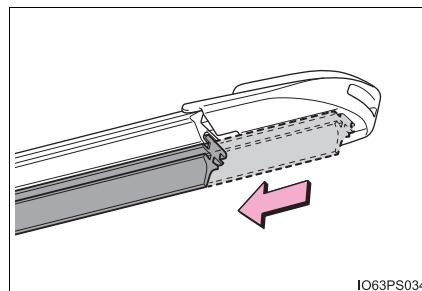




- 2 Pull out the end of the wiper insert from the slit, and then pull out the rest of the wiper insert.

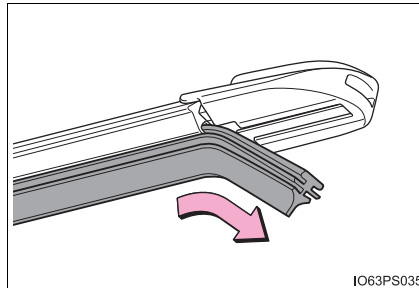


- 3 When installing a new wiper insert, perform the procedure in reverse.

After installation, check that the end of the wiper insert is installed all the way to the end of the cap.

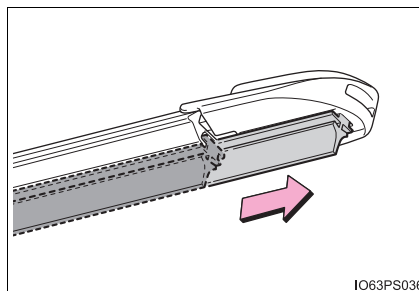


### Rear window wiper

- 1 Slide the rear window wiper arm head cap.

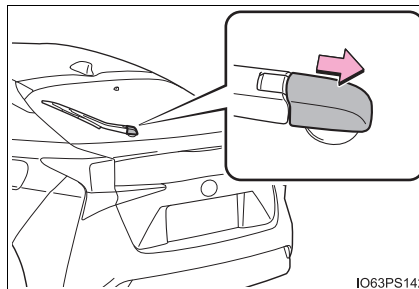


- 2 Move the wiper blade until a click sound can be heard and the claw detaches, and then remove the wiper blade from the wiper arm.

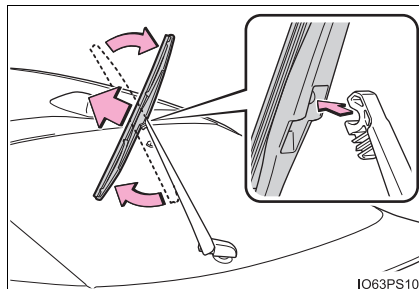


- 3 Pull the wiper insert out past the stopper on the wiper blade, and then continue to pull until it is completely removed.

Lightly grasp between the claws of the wiper blade to allow the wiper insert to lift up, making it easier to remove.

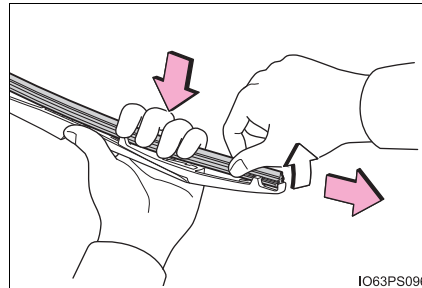


- 4 Remove the 2 metal plates from the old wiper insert and install them to the replacement wiper insert.

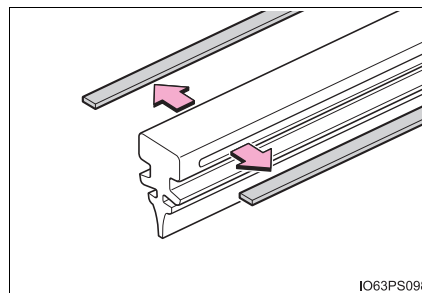

- 5 Insert the wiper insert starting from the claw at the center of the wiper blade. Pass the wiper insert through the 3 claws so that it sticks out from the stopper, and then pass the wiper insert through the final remaining claw.


Applying a small amount of washer fluid to the wiper insert can make it easier to insert the claws into the grooves.

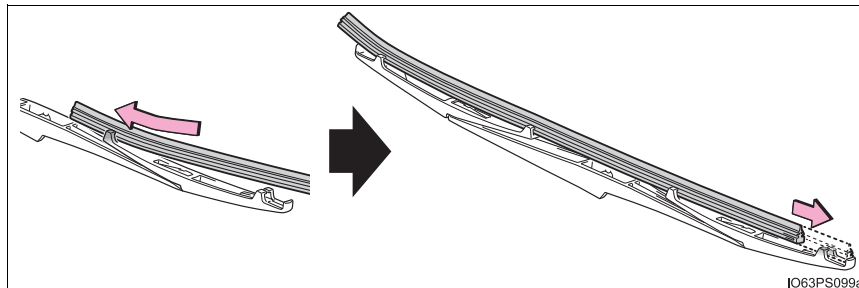

- 6 Check that the wiper blade claws are fitted in the grooves of the wiper insert.

- If the wiper blade claws are not fitted in the grooves of the wiper insert, grasp the wiper insert and slide it back and forth multiple times to insert the claws into the grooves.

- Lightly lift up the center of the wiper insert to make the insert easier to slide.

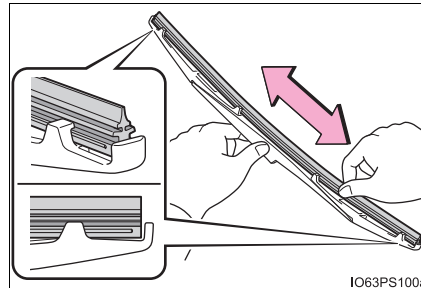

- 7 When installing a wiper blade, reverse the procedure in steps 1 and 2.

After installing the wiper blade, check that the connection is locked.

#### ■ Wiper blade and wiper insert handling

Improper handling may result in damage to the wiper blades or wiper insert. If you have any concerns about replacing the wiper blades or wiper insert yourself, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### ■ Front wiper blade cap

The cap cannot be removed, as it is integrated with the front wiper blade.

#### ⚠ NOTICE

##### ■ To prevent damage

- Be careful not to damage the claws when replacing the wiper insert.
- After the wiper blade is removed from the wiper arm, place a cloth, etc., between the rear window and wiper arm to prevent damage to the rear window.
- Be sure not to pull excessively on the wiper insert or deform its metal plates.

## Electronic key battery


Replace the battery with a new one if it is depleted.

### You will need the following items:

- Flathead screwdriver
- Lithium battery CR2032

### Replacing the battery


- 1 Release the lock and take out the mechanical key.

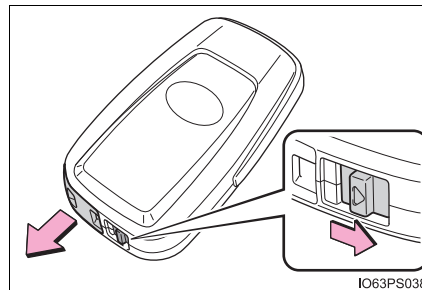

- 2 Remove the cover.

Use a screwdriver of an appropriate size. Forcedly prying may cause the cover damaged.

To prevent damage to the key, cover the tip of the screwdriver with a rag.

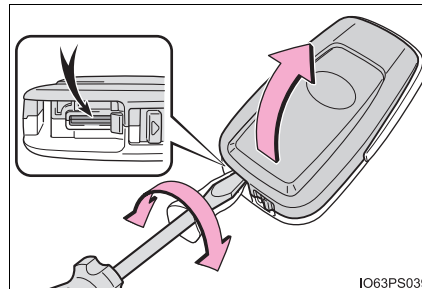


**3** Remove the depleted battery.

When removing the cover, if the battery cannot be seen due to the electronic key module attaching to the upper cover, remove the electronic key module from the cover so that the battery is visible as shown in the illustration.

When removing the battery, use a screwdriver of an appropriate size.

Insert a new battery with the “+” terminal facing up.

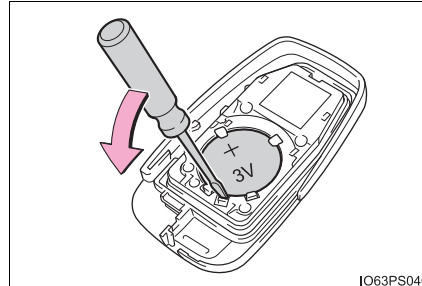**4** When installing, reverse the steps listed.**■ Use a CR2032 lithium battery**

- Batteries can be purchased at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer, local electrical appliance shops or camera stores.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to the local laws.

**■ If the electronic key battery is depleted**

The following symptoms may occur:

- The smart entry & start system and wireless remote control will not function properly.
- The operational range will be reduced.

 WARNING**■ Battery precautions**

Observe the following precautions.

Failure to do so may result in death or serious injury.

- Do not swallow the battery. Doing so may cause chemical burns.
- A coin battery or button battery is used in the electronic key. If a battery is swallowed, it may cause severe chemical burns in as little as 2 hours and may result in death or serious injury.
- Keep away new and removed batteries from children.
- If the cover cannot be firmly closed, stop using the electronic key and stow the key in the place where children cannot reach, and then contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.
- If you accidentally swallow a battery or put a battery into a part of your body, get emergency medical attention immediately.

**■ To prevent battery explosion or leakage of flammable liquid or gas**

- Replace the battery with a new battery of the same type. If a wrong type of battery is used, it may explode.
- Do not expose batteries to extremely low pressure due to high altitude or extremely high temperatures.
- Do not burn, break or cut a battery.

**■ Certification for the smart entry & start system**

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

 NOTICE**■ For normal operation after replacing the battery**

Observe the following precautions to prevent accidents:

- Always work with dry hands.  
Moisture may cause the battery to rust.
- Do not touch or move any other component inside the remote control.
- Do not bend either of the battery terminals.


## Checking and replacing fuses

If any of the electrical components do not operate, a fuse may have blown. If this happens, check and replace the fuses as necessary.

- 1 Turn the power switch off.
- 2 Open the fuse box cover.
  - ▶ Engine compartment type A fuse box

While pushing the 2 claws, lift up the cover.

When closing the cover, make sure to attach the 2 claws.

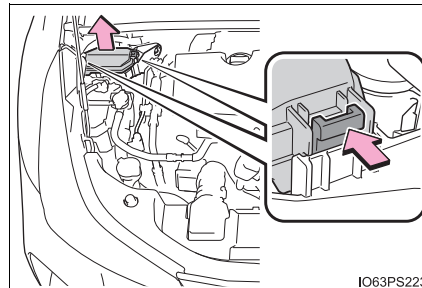


IO63PS223

- ▶ Engine compartment type B fuse box

While pushing the 3 claws, lift up the cover.

When closing the cover, make sure to attach the 3 claws.

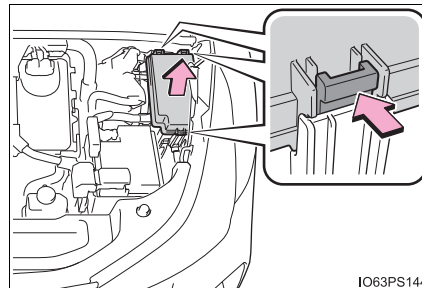


IO63PS144

- ▶ Left side instrument panel (left-hand drive vehicles)

Remove the lid.

Make sure to press the claw during removal or installation.

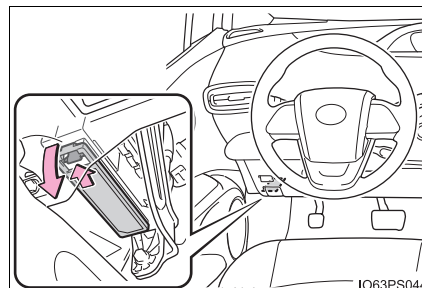


IO63PS044

▶ Left side instrument panel (right-hand drive vehicles)


- ① Push the tab in and remove the cover.
- ② Unplug the connector while pressing the lock release.
- ③ Remove the lid.

Make sure to press the claw during removal or installation.

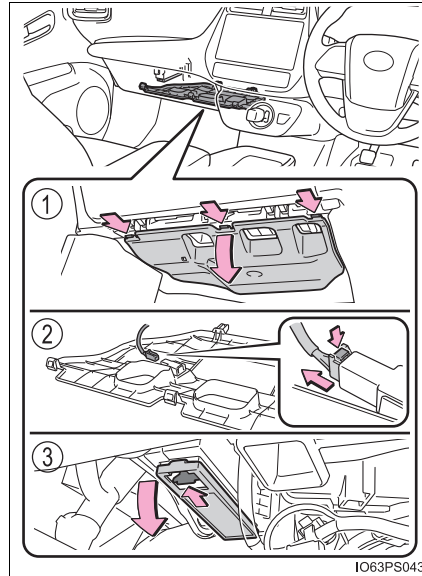

- ③ Remove the fuse.

Only type A fuse can be removed using the pullout tool.

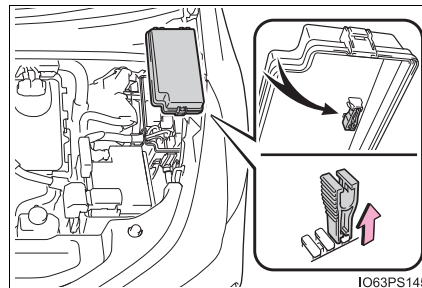




**4** Check if the fuse is blown.


- ① Normal fuse
- ② Blown fuse

Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.


## ▶ Type A

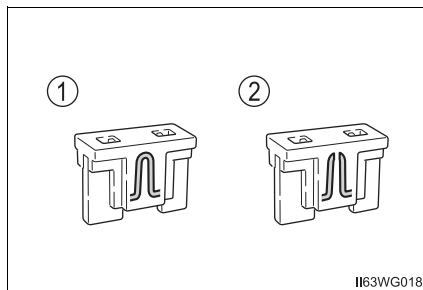

## ▶ Type B

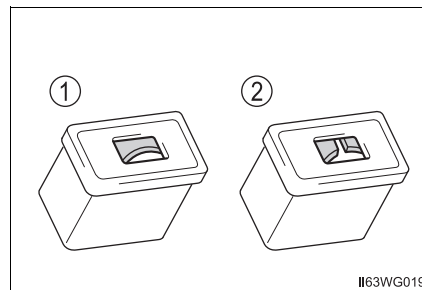

## ▶ Type C

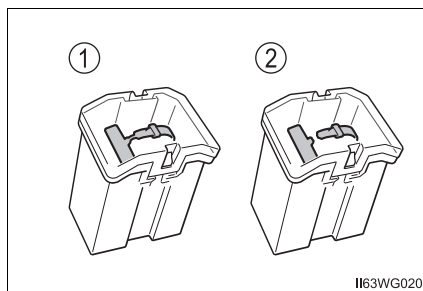

**■ After a fuse is replaced**

- If the lights do not turn on even after the fuse has been replaced, a bulb may need replacement. (→P. 561)
- If the replaced fuse blows again, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**■ If there is an overload in a circuit**

The fuses are designed to blow, protecting the wiring harness from damage.

**■ When replacing light bulbs**

Toyota recommends that you use genuine Toyota products designed for this vehicle. Because certain bulbs are connected to circuits designed to prevent overload, non-genuine parts or parts not designed for this vehicle may be unusable.

**⚠ WARNING****■ To prevent system breakdowns and vehicle fire**

Observe the following precautions.

Failure to do so may cause damage to the vehicle, and possibly a fire or injury.

- Never use a fuse of a higher amperage rating than that indicated, or use any other object in place of a fuse.
- Always use a genuine Toyota fuse or equivalent.  
Never replace a fuse with a wire, even as a temporary fix.
- Do not modify the fuses or fuse boxes.

**⚠ NOTICE****■ Before replacing fuses**

Have the cause of electrical overload determined and repaired by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.


## Light bulbs

You may replace the following bulbs by yourself. The difficulty level of replacement varies depending on the bulb. As there is a danger that components may be damaged, we recommend that replacement is carried out by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

### Preparing for light bulb replacement

Check the wattage of the light bulb to be replaced. (→P. 667)

### Bulb locations

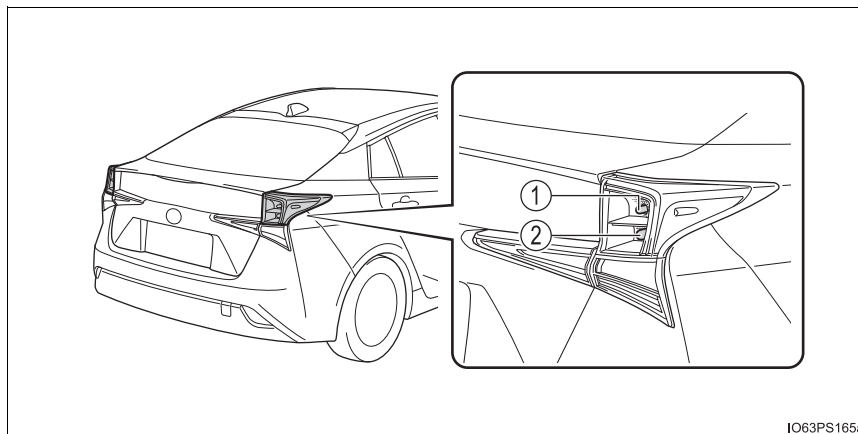


- ① Back-up light\*
- ② Rear turn signal light

\*: The back-up light is installed only on the front passenger side.

## Replacing light bulbs


### ■ Rear turn signal lights and back-up light

- 1 Open the back door. Insert a screwdriver into the cover on the side of the light and detach the claws indicated by the dotted lines near the exterior of the vehicle. Then, pry the cover and pull it diagonally backward to the luggage compartment to detach the claws indicated by the dotted lines near the vehicle interior.

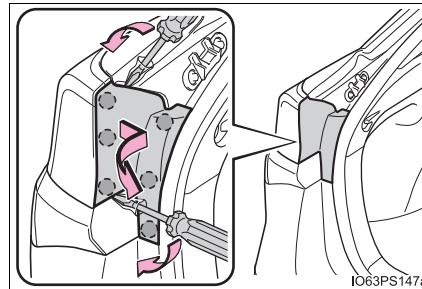


To prevent damage to the cover, protect the tip of the screwdriver with a rag.

- 2 Remove the 2 screws.

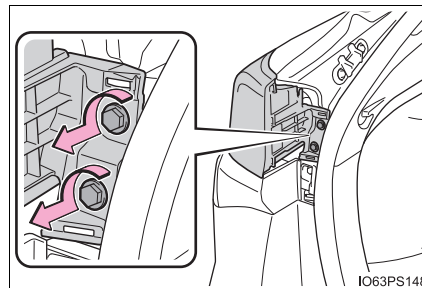


- 3 Pull the light unit toward the rear of the vehicle to remove it.

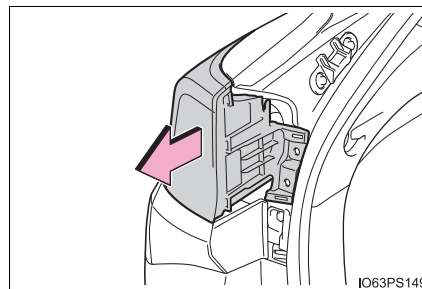


4 Turn the bulb base counterclockwise.

▶ Back-up light

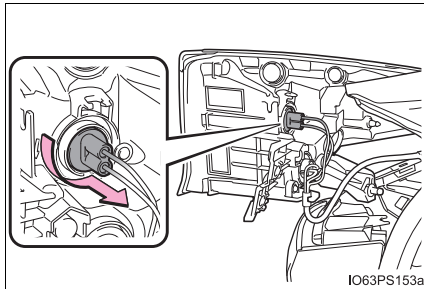


▶ Rear turn signal light

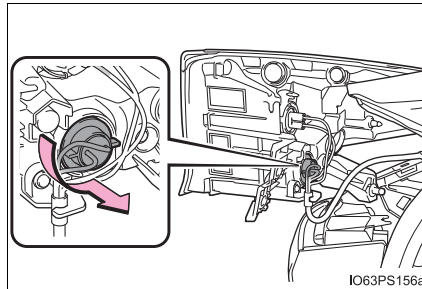


5 Remove the light bulb.

▶ Back-up light

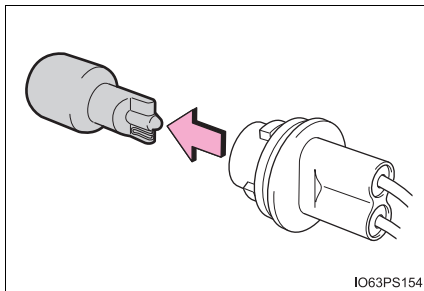


▶ Rear turn signal light

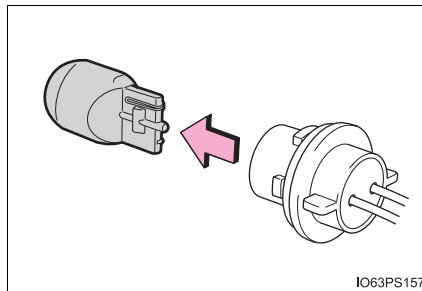


6 Install a new light bulb then install the bulb base to the light unit by inserting it and turning the bulb base clockwise.


▶ Back-up light

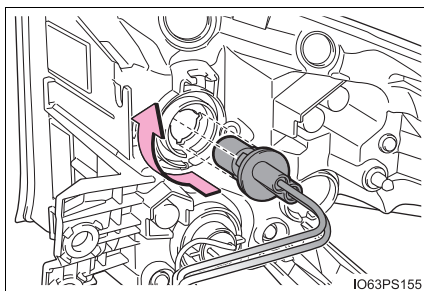


▶ Rear turn signal light

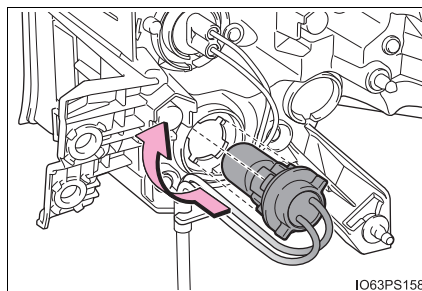


- 7 Align the grooves on the light unit with the claws, and insert the light unit straight so that the 2 pins on the light unit fit into the holes. Confirm that the light unit is completely secured.

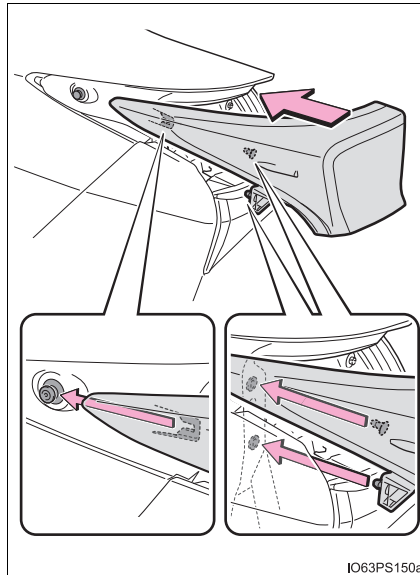

- 8 Install the 2 screws.

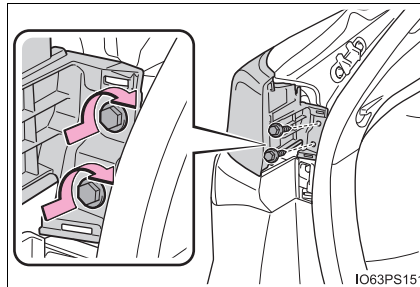

- 9 Install the cover.

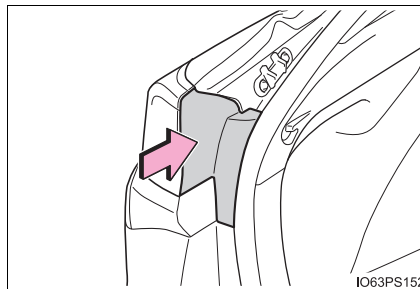

---

**■ Replacing the following bulbs**

If any of the lights listed below has burnt out, have it replaced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- Headlights
- Daytime running lights
- Front position lights
- Front fog lights
- Front turn signal lights
- Side turn signal lights
- Rear fog light
- Tail lights
- Stop lights
- High mounted stoplight
- License plate lights

---

**■ LED lights**

The lights other than the rear turn signal lights and back-up light each consist of a number of LEDs. If any of the LEDs burn out, take your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer to have the light replaced.

**■ Condensation build-up on the inside of the lens**

Temporary condensation build-up on the inside of the headlight lens does not indicate a malfunction. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for more information in the following situations:

- Large drops of water have built up on the inside of the lens.
- Water has built up inside the light.

**■ When replacing light bulbs**

→P. 560

**WARNING****■ Replacing light bulbs**

- Be sure to stop the hybrid system and turn off the lights. Do not attempt to replace the bulb immediately after turning off the lights. The bulbs become very hot and may cause burns.
- Do not touch the glass portion of the light bulb with bare hands. When it is unavoidable to hold the glass portion, use and hold with a clean dry cloth to avoid getting moisture and oils on the bulb. Also, if the bulb is scratched or dropped, it may blow out or crack.
- Fully install light bulbs and any parts used to secure them. Failure to do so may result in heat damage, fire, or water entering the headlight unit. This may damage the headlights or cause condensation to build up on the lens.
- Do not attempt to repair or disassemble light bulbs, connectors, electric circuits or component parts. Doing so may result in death or serious injury due to electric shock.

**■ To prevent damage or fire**

- Make sure bulbs are fully seated and locked.
- Check the wattage of the bulb before installing to prevent heat damage.



## When trouble arises

## 7

**7-1. Essential information**

- Emergency flashers ..... 568
- If your vehicle has to be stopped in an emergency ..... 569
- If the vehicle is submerged or water on the road is rising ..... 570

**7-2. Steps to take in an emergency**


- If your vehicle needs to be towed ..... 572
- If you think something is wrong ..... 579
- If a warning light turns on or a warning buzzer sounds ..... 580
- If a warning message is displayed ..... 589
- If you have a flat tire (vehicles without spare tire) ..... 598
- If you have a flat tire (vehicles with spare tire) ..... 618
- If the hybrid system will not start ..... 634
- If the electronic key does not operate properly ..... 636
- If the 12-volt battery is discharged ..... 639
- If your vehicle overheats ..... 645
- If the vehicle becomes stuck ..... 650

## Emergency flashers

**The emergency flashers are used to warn other drivers when the vehicle has to be stopped in the road due to a breakdown, etc.**

Press the switch.

All the turn signal lights will flash.  
To turn them off, press the switch  
once again.

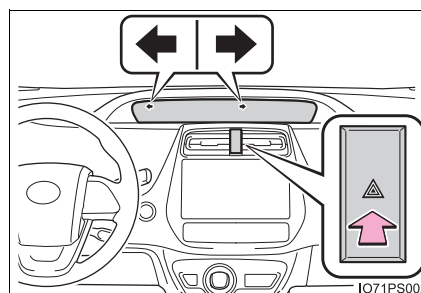


### ■ Emergency flashers

- If the emergency flashers are used for a long time while the hybrid system is not operating (while the "READY" indicator is not illuminated), the 12-volt battery may discharge.
- If any of the SRS airbags deploy (inflate) or in the event of a strong rear impact, the emergency flashers will turn on automatically. The emergency flashers will turn off automatically after operating for approximately 20 minutes. To manually turn the emergency flashers off, press the switch twice.  
(The emergency flashers may not turn on automatically depending on the force of the impact and conditions of the collision.)

## If your vehicle has to be stopped in an emergency

**Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:**

- 1 Steadily step on the brake pedal with both feet and firmly depress it.  
Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.
- 2 Shift the shift position to N.
  - ▶ If the shift position is shifted to N
- 3 After slowing down, stop the vehicle in a safe place by the road.
- 4 Stop the hybrid system.
  - ▶ If the shift position cannot be shifted to N
- 3 Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.
- 4 To stop the hybrid system, press and hold the power switch for 2 consecutive seconds or more, or press it briefly 3 times or more in succession.

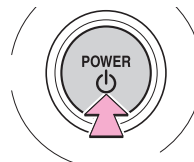

Press and hold for 2 seconds or more, or press briefly 3 times or more

CTY52AD214

- 5 Stop the vehicle in a safe place by the road.

### WARNING

#### ■ If the hybrid system has to be turned off while driving

Power assist for the steering wheel will be lost, making the steering wheel heavier to turn. Decelerate as much as possible before turning off the hybrid system.

## If the vehicle is submerged or water on the road is rising

**This vehicle is not designed to be able to drive on roads that are deeply flooded with water. Do not drive on roads where the roads may be submerged or the water may be rising. It is dangerous to remain in the vehicle, if it anticipated that the vehicle will be flooded or set a drift. Remain calm and follow the following.**

- If the door can be opened, open the door and exit the vehicle.
- If the door can not be opened, open the window using the power window switch and ensure an escape route.
- If the window can be opened, exit the vehicle through the window.
- If the door and window cannot be opened due to the rising water, remain calm, wait until the water level inside the vehicle rises to the point that the water pressure inside of the vehicle equals the water pressure outside of the vehicle and then open the door after waiting for the rising water to enter the vehicle, and exit the vehicle. When the outside water level exceeds half the height of the door, the door cannot be opened from the inside due to water pressure.

### ■ Water level exceeds the floor

When the water level exceeds the floor and time has passed, the electrical equipment will get damaged, the power windows will not operate, the engine and motor stop, and the vehicle may not be able to get moving.

### ■ Using an emergency escape hammer\*1

Laminated glass\*2 is used in the windshield and the windows on this vehicle. Laminated glass cannot be shattered with an emergency hammer\*1.


\*1: Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or aftermarket accessory manufacturer for further information about an emergency hammer.

\*2: If equipped

### ■ How to distinguish laminated glass

When looking from the cross-sectional view point, laminated glass is two sheets of glass pasted together.

- ① Laminated glass
- ② Tempered glass

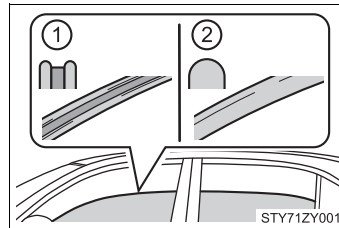

### ⚠ WARNING

#### ■ Caution while driving

Do not drive on roads where the roads may be submerged or the water may be rising. Otherwise the vehicle may be damaged and cannot move, as well as become flooded and set a drift, which may lead to death.

## If your vehicle needs to be towed

**If towing is necessary, we recommend having your vehicle towed by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or commercial towing service, using a wheel-lift type truck or flatbed truck.**

**Use a safety chain system for all towing, and abide by all state/provincial and local laws.**

### Situations when it is not possible to be towed by another vehicle

In the following situations, it is not possible to be towed by another vehicle using cables or chains, as the front wheels may be locked due to the parking lock. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or commercial towing service.

- There is a malfunction in the shift control system. (→P. 247, 597)
- There is a malfunction in the immobilizer system. (→P. 91)
- There is a malfunction in the smart entry & start system. (→P. 636)
- The 12-volt battery is discharged. (→P. 639)


### Situations when it is necessary to contact dealers before towing

The following may indicate a problem with your hybrid transmission. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or commercial towing service before towing.

- The hybrid system warning message is displayed and the vehicle does not move.
- The vehicle makes an abnormal sound.


**Towing with a wheel-lift type truck**

▶ From the front (2WD models)

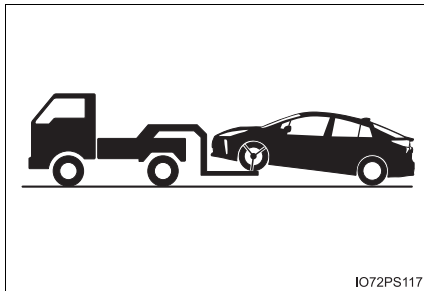


Release the parking brake.

▶ From the front (AWD models)

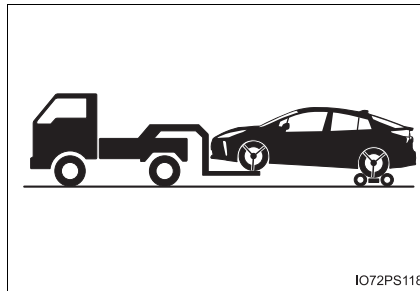

Use a towing dolly under the rear wheels.

▶ From the rear

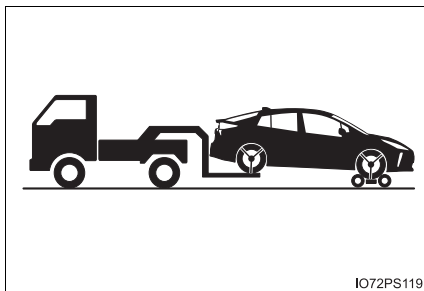

Use a towing dolly under the front wheels.

### **Using a flatbed truck**

When using a flatbed truck to transport the vehicle, use tire strapping belts. Refer to the owner's manual of the flatbed truck for the tire strapping method.

In order to suppress vehicle movement during transportation, set the parking brake and turn the power switch off.

### **Emergency towing**

If a tow truck is not available in an emergency, your vehicle may be temporarily towed using cables or chains secured to the emergency towing eyelets. This should only be attempted on hard surfaced roads for short distances at under 30 km/h (18 mph).

A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train, axles, steering and brakes must be in good condition.




### Emergency towing procedure

To have your vehicle towed by another vehicle, the towing eyelet must be installed to your vehicle. Install the towing eyelet using the following procedure.


- 1 Take out the wheel nut wrench and towing eyelet. (→P. 600, 619)

- 2 Remove the eyelet cover using a flathead screwdriver.

To protect the bodywork, place a rag between the screwdriver and the vehicle body as shown in the illustration.

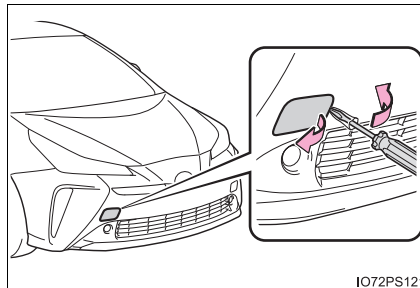


- 3 Insert the towing eyelet into the hole and tighten partially by hand.

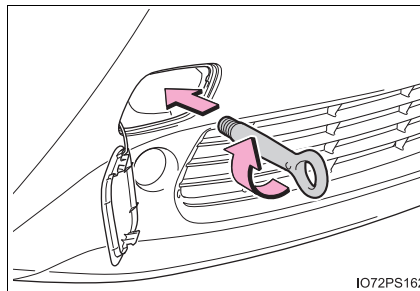

- 4 Tighten down the towing eyelet securely using a wheel nut wrench or hard metal bar.

When tightening with a wheel nut wrench or hard metal bar, make sure not to damage the vehicle body.

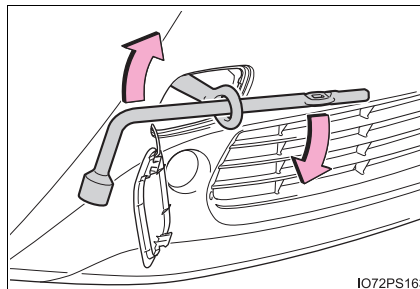

- 5 Securely attach cables or chains to the towing eyelet.

Take care not to damage the vehicle body.

- 6 Enter the vehicle being towed and start the hybrid system.

If the hybrid system does not start, turn the power switch to ON mode.

Turn off the Parking Support Brake function. (if equipped): →P. 396

- 7 Shift the shift position to N\* and release the parking brake.

\*: If the shift position cannot be changed or the current shift position can not be confirmed, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or commercial towing service before towing.

---

■ **While towing**


If the hybrid system is off, the power assist for the brakes and steering will not function, making steering and braking more difficult.

■ **Wheel nut wrench**

Wheel nut wrench is installed in luggage compartment. (→P. 600, 619)

■ **Towing eyelet installation hole on the rear of the vehicle**

The hole is equipped for fastening the vehicle while shipping. The towing eyelet installed in this hole cannot be used for towing another vehicle.

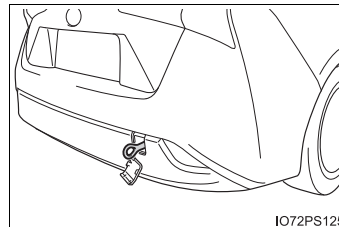


**⚠ WARNING**

Observe the following precautions.  
Failure to do so may result in death or serious injury.

■ **When towing the vehicle**


▶ **2WD models**

Be sure to transport the vehicle with the front wheels raised or with all four wheels raised off the ground. If the vehicle is towed with the front wheels contacting the ground, the drivetrain and related parts may be damaged or electricity generated by the operation of the motor may cause a fire to occur depending on the nature of the damage or malfunction.

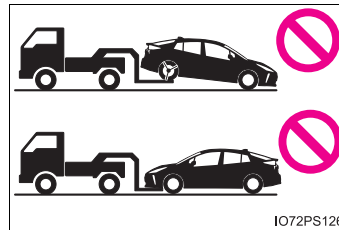

▶ **AWD models**

Be sure to transport the vehicle with all four wheels raised off the ground. If the vehicle is towed with the tires contacting the ground, the drivetrain or related parts may be damaged, the vehicle may fly off the truck, or electricity generated by the operation of the motor may cause a fire to occur depending on the nature of the damage or malfunction.

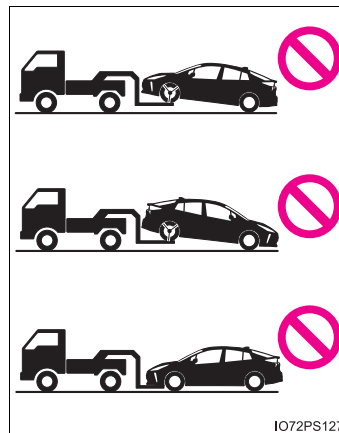

■ **While towing**


- When towing using cables or chains, avoid sudden starts, etc. which place excessive stress on the towing eyelets, cables or chains. The towing eyelets, cables or chains may become damaged, broken debris may hit people, and cause serious damage.
- Do not turn the power switch off.  
This may lead to an accident as the front wheels will be locked by the parking lock.

 WARNING

Observe the following precautions.  
Failure to do so may result in death or serious injury.


■ **Installing towing eyelets to the vehicle**

- The towing eyelets are only for the vehicle equipped with them. Do not use the towing eyelets for another vehicle, and do not use the towing eyelets for this vehicle on another vehicle.
- Make sure that towing eyelets are installed securely.  
If not securely installed, towing eyelets may come loose during towing.

 NOTICE

■ **Towing with a sling-type truck**

Do not tow with a sling-type truck to prevent body damage.

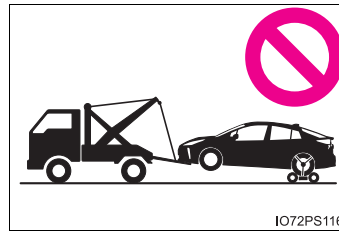

■ **To prevent damage to the vehicle when towing using a wheel-lift type truck**

When raising the vehicle, ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Without adequate clearance, the vehicle could be damaged while being towed.

■ **To prevent damage to the vehicle when towing with a sling-type truck**

Do not tow with a sling-type truck, either from the front or rear.

■ **To prevent damage to the vehicle during emergency towing**

Do not secure cables or chains to the suspension components

## If you think something is wrong

If you notice any of the following symptoms, your vehicle probably needs adjustment or repair. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

### Visible symptoms

- Fluid leaks under the vehicle  
(Water dripping from the air conditioning after use is normal.)
- Flat-looking tires or uneven tire wear
- High coolant temperature warning light flashes or comes on

### Audible symptoms

- Changes in exhaust sound
- Excessive tire squeal when cornering
- Strange noises related to the suspension system
- Pinging or other noises related to the hybrid system



 
### Operational symptoms






- Engine missing, stumbling or running roughly
- Appreciable loss of power
- Vehicle pulls heavily to one side when braking
- Vehicle pulls heavily to one side when driving on a level road
- Loss of brake effectiveness, spongy feeling, pedal almost touches the floor




## If a warning light turns on or a warning buzzer sounds

Calmly perform the following actions if any of the warning lights comes on or flashes. If a light comes on or flashes, but then goes off, this does not necessarily indicate a malfunction in the system. However, if this continues to occur, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.





### Warning light and warning buzzer list





Warning light	Warning light/Details/Actions
	<p><b>Brake system warning light and warning buzzer (red indicator)*1</b></p> <p>Indicates that:</p> <ul style="list-style-type: none"> <li>• The brake fluid level is low; or</li> <li>• The brake system is malfunctioning</li> </ul> <p>→ <b>Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Continuing to drive the vehicle may be dangerous.</b></p>
	<p><b>Brake system warning light (yellow indicator)</b></p> <p>Indicates a malfunction in:</p> <ul style="list-style-type: none"> <li>• The regenerative braking system; or</li> <li>• The electronically controlled brake system</li> </ul> <p>→ <b>Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.</b></p>
	<p><b>Charging system warning light</b></p> <p>Indicates a malfunction in the vehicle's charging system</p> <p>→ <b>Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.</b></p>


Warning light	Warning light/Details/Actions
	<p><b>Low engine oil pressure warning light (warning buzzer)*2</b>            Indicates that the engine oil pressure is too low            → <b>Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.</b></p>
	<p><b>Malfunction indicator lamp</b>            Indicates a malfunction in:</p> <ul style="list-style-type: none"> <li>• The hybrid system;</li> <li>• The electronic engine control system;</li> <li>• The electronic throttle control system; or</li> <li>• The emission control system (if equipped)</li> </ul> <p>→ <b>Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.</b></p>
	<p><b>SRS warning light</b>            Indicates a malfunction in:</p> <ul style="list-style-type: none"> <li>• The SRS airbag system; or</li> <li>• The seat belt pretensioner system</li> </ul> <p>→ <b>Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.</b></p>
	<p><b>ABS warning light</b>            Indicates a malfunction in:</p> <ul style="list-style-type: none"> <li>• The ABS; or</li> <li>• The brake assist system</li> </ul> <p>→ <b>Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.</b></p>
 (Red/yellow)	<p><b>Electric power steering system warning light (warning buzzer)</b>            Indicates a malfunction in the EPS (Electric Power Steering) system            → <b>Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.</b></p>

Warning light	Warning light/Details/Actions
 <p>(Flashes or illuminates) (If equipped)</p>	<p><b>PCS warning light</b></p> <ul style="list-style-type: none"> <li>When a buzzer sounds simultaneously: Indicates a malfunction has occurred in the PCS (Pre-Collision System).</li> </ul> <p>→ <b>Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.</b></p> <ul style="list-style-type: none"> <li>When a buzzer does not sound: The PCS (Pre-Collision System) has become temporarily unavailable, corrective action may be necessary.</li> </ul> <p>→ <b>Follow the instructions displayed on the multi-information display. (→P. 294, 596)</b></p> <p>If the PCS (Pre-Collision System) or VSC (Vehicle Stability Control) system is disabled, the PCS warning light will illuminate.</p> <p>→ <b>P. 306</b></p>
 <p>(Orange) (If equipped)</p>	<p><b>LTA indicator (warning buzzer)</b></p> <p>Indicates a malfunction in the LTA (Lane Tracing Assist)</p> <p>→ <b>Follow the instructions displayed on the multi-information display. (→P. 322)</b></p>
	<p><b>Slip indicator light</b></p> <p>Indicates a malfunction in:</p> <ul style="list-style-type: none"> <li>The VSC system;</li> <li>The TRC system; or</li> <li>The hill-start assist control system</li> </ul> <p>→ <b>Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.</b></p> <p>The light will flash when the ABS, VSC or TRC system is operating.</p>



Warning light	Warning light/Details/Actions
	<p><b>High coolant temperature warning light (vehicles without exhaust heat recirculator system)</b>            Indicates that the engine coolant temperature is too high            Changes from a flashing to a solid light when the engine coolant temperature increases            → <b>Immediately stop the vehicle in a safe place.</b>            (→P. 645)</p>
	<p><b>High coolant temperature warning light (vehicles with exhaust heat recirculator system)</b></p> <ul style="list-style-type: none"> <li>• When the light flashes:                Indicates that the engine coolant temperature is too high                The light changes from a flashing to a solid light when the temperature further increases                → <b>Immediately stop the vehicle in a safe place.</b>                (→P. 645)</li> <li>• When the light comes on without flashing:                Indicates a malfunction in the exhaust heat recirculator system                → <b>Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.</b></li> </ul>
 <p>(Flashes) (If equipped)</p>	<p><b>PKSB OFF indicator</b>            Indicates a malfunction in the Parking Support Brake function            → <b>Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.</b></p> <p>The warning light will operate as follows, even when the system is not malfunctioning:</p> <ul style="list-style-type: none"> <li>• The light will come on when the Parking Support Brake function is turned off (→P. 396)</li> <li>• The light will come on when the Parking Support Brake function is operating (→P. 400)</li> <li>• The light will flash when the system cannot temporarily be used (→P. 402)</li> </ul>
	<p><b>Open door warning light (warning buzzer)*3</b>            Indicates that a door is not fully closed            → <b>Check that all the doors are closed.</b></p>
	<p><b>Low fuel level warning light</b>            Indicates that remaining fuel is approximately 6.4 L (1.7 gal., 1.4 Imp.gal.) or less            → <b>Refuel the vehicle.</b></p>

Warning light	Warning light/Details/Actions
	<p><b>Driver's and front passenger's seat belt reminder light (warning buzzer)*4</b>  Warns the driver and/or front passenger to fasten their seat belts  → <b>Fasten the seat belt.</b>  <b>If the front passenger's seat is occupied, the front passenger's seat belt also needs to be fastened to make the warning light (warning buzzer) turn off.</b></p>
	<p><b>Rear passengers' seat belt reminder lights (warning buzzer)*5</b>  Warns the rear passengers to fasten their seat belts  → <b>Fasten the seat belt.</b></p>
	<p><b>Master warning light</b>  A buzzer sounds and the warning light comes on and flashes to indicate that the master warning system has detected a malfunction.  → <b>P. 589</b></p>
 <small>(If equipped)</small>	<p><b>Tire pressure warning light</b>  When the light comes on:  Low tire inflation pressure such as  • Natural causes (→P. 587)  • Flat tire (→P. 598, 618)  → <b>Adjust the tire inflation pressure to the specified level.</b>  <b>The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.</b>  When the light comes on after blinking for 1 minute:  Malfunction in the tire pressure warning system (→P. 587)  → <b>Have the system checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.</b></p>

Warning light	Warning light/Details/Actions
	<p><b>Inappropriate pedal operation warning light*6 (warning buzzer)</b></p> <p>When a buzzer sounds: Indicates a malfunction in:</p> <ul style="list-style-type: none"> <li>• The Brake Override System</li> <li>• The Drive-Start Control</li> </ul> <p>→ <b>Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.</b></p> <p>Indicates that the shift position was changed and Drive-Start Control was operated while depressing the accelerator pedal.</p> <p>→ <b>Momentarily release the accelerator pedal.</b></p> <p>Indicates that the Parking Support Brake function (if equipped) is operating (→P. 400)</p> <p>→ <b>Follow the instruction that is displayed on the multi-information display.</b></p> <p>When a buzzer does not sound: Indicates that the accelerator and brake pedals are being depressed simultaneously, and the Brake Override System is operating.</p> <p>→ <b>Release the accelerator pedal and depress the brake pedal.</b></p>

\*1: Brake system warning buzzer:

When there is a possible problem that could affect braking performance, the warning light will come on and a warning buzzer will sound.

\*2: Low engine oil pressure warning buzzer:

A buzzer also sounds continuously for approximately 30 seconds at maximum in addition to the low engine oil pressure warning light when the "READY" indicator is illuminated.

\*3: Open door warning buzzer:

The open door warning buzzer sounds to alert one or more of the doors is not fully closed (with the vehicle having reached a speed of 5 km/h [3 mph]).

\*4: Driver's and front passenger's seat belt warning buzzer:

The driver's and front passenger's seat belt warning buzzer sounds to alert the driver and front passenger that his or her seat belt is not fastened. If the seat belt is unfastened, the buzzer sounds intermittently for a certain period of time after the vehicle reaches a certain speed.

\*5: Rear passengers' seat belt warning buzzer:

The rear passengers' seat belt warning buzzer sounds to alert the rear passenger that his or her seat belt is not fastened. If the seat belt is unfastened, the buzzer sounds intermittently for a certain period of time, after the seat belt is fastened and unfastened and the vehicle reaches a certain speed.

\*6: This symbol is displayed on the multi-information display.

---

■ **Front passenger detection sensor, seat belt reminder and warning buzzer**

- If luggage is placed on the front passenger seat, the front passenger detection sensor may cause the warning light to flash and the warning buzzer to sound even if a passenger is not sitting in the seat.
- If a cushion is placed on the seat, the sensor may not detect a passenger, and the warning light may not operate properly.

■ **Electric power steering system warning light (warning buzzer)**

When the 12-volt battery charge becomes insufficient or the voltage temporarily drops, the electric power steering system warning light may come on and the warning buzzer may sound.

■ **If the malfunction indicator lamp comes on while driving**

For some models, the malfunction indicator lamp will come on if the fuel tank becomes completely empty. If the fuel tank is empty, refuel the vehicle immediately. The malfunction indicator lamp will go off after several trips.

If the malfunction indicator lamp does not go off, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

■ **When the tire pressure warning light comes on (if equipped)**

Inspect the appearance of the tire to check that the tire is not punctured.

If the tire is punctured: →P. 598, 618

If the tire is not punctured:

Carry out the following procedure after the tire temperature has lowered sufficiently.

- Check the tire inflation pressure and adjust to the appropriate level.
- If the warning light does not go out even after several minutes, check that the tire inflation pressure is at the specified level and carry out initialization. (→P. 531)

The warning light may come on again if the above operations are conducted without first allowing the tire temperature to lower sufficiently.

**■ The tire pressure warning light may come on due to natural causes (if equipped)**

The tire pressure warning light may come on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature. In this case, adjusting the tire inflation pressure will turn off the warning light (after a few minutes).

**■ When a tire is replaced with a spare tire (vehicles with the tire pressure warning system)**

Vehicles with compact spare tire: The compact spare tire is not equipped with a tire pressure warning valve and transmitter. If a tire goes flat, the tire pressure warning light will not turn off even though the flat tire has been replaced with the spare tire. Replace the spare tire with the repaired tire and adjust the tire inflation pressure. The tire pressure warning light will go off after a few minutes.

Vehicles with full-size spare tire: The spare tire is also equipped with a tire pressure warning valve and transmitter. The tire pressure warning light will turn on if the tire inflation pressure of the spare tire is low. If a tire goes flat, the tire pressure warning light will not turn off even though the flat tire has been replaced with the spare tire. Replace the spare tire with the repaired tire and adjust the tire inflation pressure. The tire pressure warning light will go off after a few minutes.

**■ Conditions that the tire pressure warning system may not function properly (if equipped)**

→P. 533

**■ If the tire pressure warning light frequently comes on after blinking for 1 minute (if equipped)**

If the tire pressure warning light frequently comes on after blinking for 1 minute when the power switch is turned to ON mode, have it checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**■ Warning buzzer**

In some cases, the buzzer may not be heard due to being in a noisy location or audio sound.

 WARNING**■ When the electric power steering system warning light comes on**

When the light comes on yellow, the assist to the power steering is restricted. When the light comes on red, the assist to the power steering is lost and handling operations of the steering wheel become extremely heavy. When steering wheel operations are heavier than usual, grip the steering wheel firmly and operate it using more force than usual.

**■ If the tire pressure warning light comes on (vehicles with the tire pressure warning system)**

Be sure to observe the following precautions. Failure to do so could cause a loss of vehicle control and result in death or serious injury.

- Stop your vehicle in a safe place as soon as possible. Adjust the tire inflation pressure immediately.
- Vehicles with emergency tire puncture repair kit: If the tire pressure warning light comes on even after tire inflation pressure adjustment, it is probable that you have a flat tire. Check the tires. If a tire is flat, repair the flat tire by using emergency tire puncture repair kit.
- Vehicles with spare tire: If the tire pressure warning light comes on even after tire inflation pressure adjustment, it is probable that you have a flat tire. Check the tires. If a tire is flat, change it with the spare tire and have the flat tire repaired by the nearest any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Avoid abrupt maneuvering and braking. If the vehicle tires deteriorate, you could lose control of the steering wheel or the brakes.

**■ If a blowout or sudden air leakage should occur (vehicles with the tire pressure warning system)**

The tire pressure warning system may not activate immediately.

 NOTICE**■ To ensure the tire pressure warning system operates properly (vehicles with the tire pressure warning system)**

Do not install tires with different specifications or makers, as the tire pressure warning system may not operate properly.

## If a warning message is displayed

The multi-information display shows warnings of system malfunctions, incorrectly performed operations, and messages that indicate a need for maintenance. When a message is shown, perform the correction procedure appropriate to the message.


### ① Master warning light

The master warning light also comes on or flashes in order to indicate that a message is currently being displayed on the multi-information display.\*

### ② Multi-information display

### ③ Handling method

Follow the instructions of the message on the multi-information display.

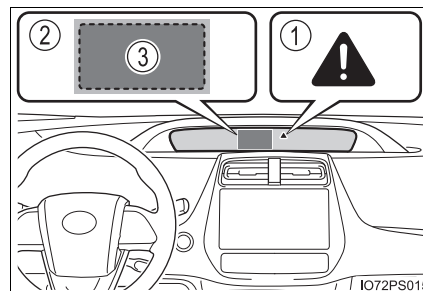


If any of the warning messages are shown again after the following actions have been performed, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

\*: The master warning light may not come on or flash when a warning message is displayed.

### Messages and warnings

The warning lights and warning buzzers operate as follows depending on the content of the message. If a message indicates the need for inspection by a dealer, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

	System warning light	Warning buzzer*	Warning
Comes on	—	Sounds	Indicates an important situation, such as when a system related to driving is malfunctioning or that danger may result if the correction procedure is not performed
—	Comes on or flashes	Sounds	Indicates an important situation, such as when the systems shown on the multi-information display may be malfunctioning
Flashes	—	Sounds	Indicates a situation, such as when damage to the vehicle or danger may result
Comes on	—	Does not sound	Indicates a condition, such as malfunction of electrical components, their condition, or indicates the need for maintenance
Flashes	—	Does not sound	Indicates a situation, such as when an operation has been performed incorrectly, or indicates how to perform an operation correctly

The operation of the warning lights and warning buzzers may differ from those stated. In this case, perform the correction procedure according to the displayed message.

\*: A buzzer sounds the first time a message is shown on the multi-information display.



---

**■ Warning messages**

The warning messages explained below may differ from the actual messages according to operation conditions and vehicle specifications.

**■ System warning lights**

The master warning light does not come on or flash in the following cases. Instead, a separate system warning light will come on along with a message or image shown on the multi-information display.

- “Antilock Brake System Malfunction Visit Your Dealer”:  
The ABS warning light comes on. (→P. 581)
- “Braking Power Low Visit Your Dealer”:  
The brake system warning light (yellow) will come on. (→P. 580)
- Indicates that a door is not fully closed while the vehicle is stopped.:  
The Open door warning light comes on. (→P. 583)

**■ If “Visit Your Dealer” is shown**

The system or part shown on the multi-information display is malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **If a message about an operation is shown**

- If a message about an operation of the accelerator pedal or brake pedal is shown
  - A warning message about an operation of the brake pedal may be shown while the driving assist systems such as PCS (Pre-Collision System) (if equipped) or the dynamic radar cruise control with full-speed range (if equipped) is operating. If a warning message is shown, be sure to decelerate the vehicle or follow an instruction shown on the multi-information display.
  - A warning message is shown when Brake Override System operates. (→P. 221, 596)
  - A warning message is shown when Drive-Start Control or Parking Support Brake function (if equipped) operates (→P. 222, 400). Follow the instructions on the multi-information display.
- If a message about an operation of the power switch is shown  
An instruction for operation of the power switch is shown when the incorrect procedure for starting the hybrid system is performed or the power switch is operated incorrectly. Follow the instructions shown on the multi-information display to operate the power switch again.
- If a message about a shift operation is shown  
To prevent the shift position from being selected incorrectly or the vehicle from moving unexpectedly, the shift position may be changed automatically (→P. 255) or shift operation may be required. In this case, change the shift position following the instructions on the multi-information display.
- If a message or image about an open/close state of a part or replenishment of a consumable is shown  
Confirm the part indicated by the multi-information display or a warning light, and then perform the coping method such as closing the open door or replenishing a consumable.

**■ If “See Owner’s Manual” is shown**

- If “Braking Power Low Stop in a Safe Place See Owner’s Manual” is shown, this may be a malfunction. Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Continuing to drive the vehicle may be dangerous.
- If “Engine Oil Pressure Low” is shown, this may be a malfunction. Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- If the following messages are shown, there may be a malfunction. Immediately have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
  - “Hybrid System Malfunction”
  - “Check Engine”
  - “Hybrid Battery System Malfunction”
  - “Accelerator System Malfunction”
  - “Smart Entry & Start System Malfunction See Owner’s Manual”
- Vehicles with GPF system: If “Exhaust Filter Full See Owner’s Manual” is shown on the multi-information display is shown, follow the instruction. (→P. 440)

**■ If “Shift System Not Active Apply Parking Brake Securely While Parking See Owner’s Manual” is shown**

Indicates a temporary operation failure or malfunction in the shift control system. Immediately have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

When the message is shown, the hybrid system may not be started or the shift position may not be changed normally. (Coping method: →P. 597)

**■ If “Shift System Malfunction Apply Parking Brake Securely While Parking See Owner’s Manual” is shown**

Indicates a malfunction in the shift control system. Immediately have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

When the message is shown, the hybrid system may not be started or the shift position may not be changed normally. (Coping method: →P. 597)

**■ If “ Switch Malfunction Apply Parking Brake Securely While Parking See Owner’s Manual” is shown**

The P position switch may not operate. Immediately have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

When parking the vehicle, stop the vehicle on level ground and apply the parking brake firmly.

■ **If “Shift System Malfunction Shifting Unavailable See Owner’s Manual” is shown**

Indicates a malfunction in the shift control system. Immediately have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

The shift position may not be shifted from P to other than P.

■ **If “Shift System Malfunction Stop in a Safe Place See Owner’s Manual” is shown**

Indicates a malfunction in the shift control system. Immediately have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

The shift position may not be changed. Stop the vehicle in a safe place.

■ **If “Shift System Malfunction See Owner’s Manual” is shown**

Indicates a malfunction in the shift control system. Immediately have the system inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

The system may not operate properly.

■ **If “Low 12-Volt Battery Apply Parking Brake Securely While Parking See Owner’s Manual” is shown**

Indicates that the 12-volt battery charge is insufficient. Charge or replace the 12-volt battery.

● When the message is shown, the hybrid system may not start or the shift position may not be changed normally. (Coping method: →P. 597)

● After charging the 12-volt battery, the message may not go off until the shift position is changed from P.

■ **If “Shifting Unavailable Low 12-Volt Battery See Owner’s Manual” is shown**

Indicates that the shift position cannot be changed because the voltage of the 12-volt battery drops. Charge or replace the 12-volt battery.

(Coping method in the case the 12-volt battery is discharged: →P. 639)

■ **If “Hybrid System Overheated. Reduced Output Power.” is shown**

The message may be shown when driving under severe operating conditions. (For example, when driving up a long steep hill or driving up a steep hill in reverse.)

Coping method: →P. 645

■ **If “Maintenance Required for Traction Battery Cooling Parts See Owner's Manual” is shown**

The filter may be clogged, the air intake vent may be blocked or there may be a gap in the duct.

- If the air intake vent is dirty, refer to P. 545 for information on how to clean the air intake vent.
- If the message is shown when the air intake vent is not dirty, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **If “Traction Battery Needs to be Protected Refrain From the Use of **N** Position” is shown**

This message may be displayed when the shift position is in N.

As the hybrid battery (traction battery) can not be charged when the shift position is in N, shift the shift position to P when the vehicle is stopped.

■ **If “Traction Battery Needs to be Protected Shift into **P** to Restart” is shown**

This message is displayed when the hybrid battery (traction battery) charge has become extremely low because the vehicle has been left with the N shift position selected for a certain amount of time.

When operating the vehicle, shift to P and restart the hybrid system.

■ **If “Shifted into **P** Shift Again to Start Vehicle” is shown**

Message is displayed when the automatic P position selection function operates. (→P. 256)

To start off the vehicle after the shift position is changed to P, operate the shift lever again.

■ **If “Shift to **P** Before Exiting Vehicle” is shown**

Message is displayed when the driver's door is opened without turning the power switch to off with the shift position in any position other than P.

Shift the shift position to P.

■ **If “Shift is in **N** Release Accelerator Before Shifting” is shown**

Message is displayed when the accelerator pedal has been depressed and the shift position is in N.

Release the accelerator pedal and shift the shift position to D or R.

■ **If “Depress Brake When Vehicle is Stopped. Hybrid System may Overheat.” is shown**

The message may be shown when the accelerator pedal is depressed to hold the vehicle while the vehicle is stopped on an uphill, etc.

The hybrid system may overheat. Release the accelerator pedal and depress the brake pedal.

■ **If “Shifted to **N** Stop Vehicle to Shift to **P**” is shown**

If the P position switch is pressed while driving, the shift position is changed to N and the message is shown. (→P. 255)

■ **If “Auto Power OFF to Conserve Battery” is shown**

The power switch has been turned off by the automatic power off function. When starting the hybrid system next time, operate the hybrid system for approximately 5 minutes to recharge the 12-volt battery.

■ **If “Engine Oil Level Low Add or Replace” is displayed**

The engine oil level may be low. Check the level of the engine oil, and add engine oil if necessary. This message may be displayed if the vehicle is stopped on a slope. Move the vehicle to a level surface and check if the message disappears.

■ **If “Accelerator and Brake Pedals Pressed Simultaneously” is shown**

The accelerator and brake pedals are being depressed simultaneously. (→P. 221)

Release the accelerator pedal and depress the brake pedal.

■ **If a message that indicates the malfunction of front camera is displayed**

The following systems may be suspended until the problem shown in the message is resolved. (→P. 294, 580)

- PCS (Pre-Collision System) (if equipped)
- LTA (Lane Tracing Assist) (if equipped)
- AHB (Automatic High Beam) (if equipped)
- RSA (Road Sign Assist) (if equipped)
- Dynamic radar cruise control with full-speed range (if equipped)

■ **If a message that indicates the malfunction of radar sensor is displayed**

The following systems may be suspended until the problem shown in the message is resolved. (→P. 294, 580)

- PCS (Pre-Collision System) (if equipped)
- LTA (Lane Tracing Assist) (if equipped)
- Dynamic radar cruise control with full-speed range (if equipped)

■ **If “Radar Cruise Control Unavailable See Owner’s Manual” is shown**

The dynamic radar cruise control with full-speed range system is suspended temporarily or until the problem shown in the message is resolved. (causes and coping methods: →P. 294)

■ **If “Radar Cruise Control Unavailable” is shown**

The dynamic radar cruise control with full-speed range system cannot be used temporarily. Use the system when it becomes available again.

■ **If the shift position cannot be changed or the power switch is turned to ACCESSORY mode even if trying to turn the power switch off when a warning message is shown**

If the 12-volt battery is discharged or the shift control system is malfunctioning, the followings may occur.

- The shift position may not be changed to P.  
When parking, stop the vehicle on level ground and apply the parking brake firmly.
- The hybrid system may not start.
- The power switch may be turned to ACCESSORY mode even if trying to turn the power switch off.  
In this case, the power switch may be turned off after applying the parking brake.
- The automatic P position selection function (→P. 256) may not operate.  
Before turning the power switch off, be sure to press the P position switch and check that the shift position is in P by the shift position indicator or P position switch indicator.

■ **Warning buzzer**

→P. 587



**NOTICE**

■ **If “Maintenance Required for Traction Battery at Your Dealer” is shown**

The hybrid battery (traction battery) is scheduled to be inspected or replaced. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

- Continuing to drive the vehicle without having the hybrid battery (traction battery) inspected will cause the hybrid system not to start.
- If the hybrid system does not start, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

## If you have a flat tire (vehicles without spare tire)

Your vehicle is not equipped with a spare tire, but instead is equipped with an emergency tire puncture repair kit.

A puncture caused by a nail or screw passing through the tire tread can be repaired temporarily using the emergency tire puncture repair kit. (The kit contains a bottle of sealant. The sealant can be used only once to temporarily repair one tire without removing the nail or screw from the tire.) After temporarily repairing the tire with the kit, have the tire repaired or replaced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

### WARNING

#### ■ If you have a flat tire

Do not continue driving with a flat tire.

Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair, which could result in an accident.




### Before repairing the tire

- Stop the vehicle in a safe place on a hard, flat surface.
- Set the parking brake.
- Shift the shift position to P.
- Stop the hybrid system.
- Turn on the emergency flashers.
- Check the degree of the tire damage.

A tire should only be repaired with the emergency tire puncture repair kit if the damage is caused by a nail or screw passing through the tire tread.

- Do not remove the nail or screw from the tire. Removing the object may widen the opening and make emergency repair with the repair kit impossible.
- To avoid sealant leakage, move the vehicle until the area of the puncture, if known, is positioned at the top of the tire.

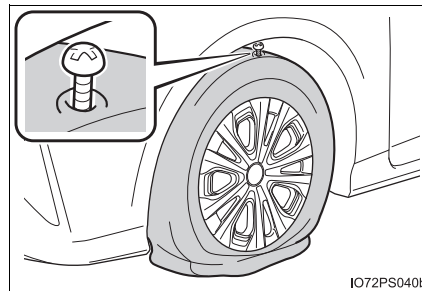


### ■ A flat tire that cannot be repaired with the emergency tire puncture repair kit

In the following cases, the tire cannot be repaired with the emergency tire puncture repair kit. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- When the tire is damaged due to driving without sufficient air pressure
- When there are any cracks or damage at any location on the tire, such as on the side wall, except the tread
- When the tire is visibly separated from the wheel
- When the cut or damage to the tread is 4 mm (0.16 in.) long or more
- When the wheel is damaged
- When two or more tires have been punctured
- When more than one sharp objects such as nails or screws have passed through the tread on a single tire
- When the sealant has expired

**Location of the emergency tire puncture repair kit and tools**


► 2WD models

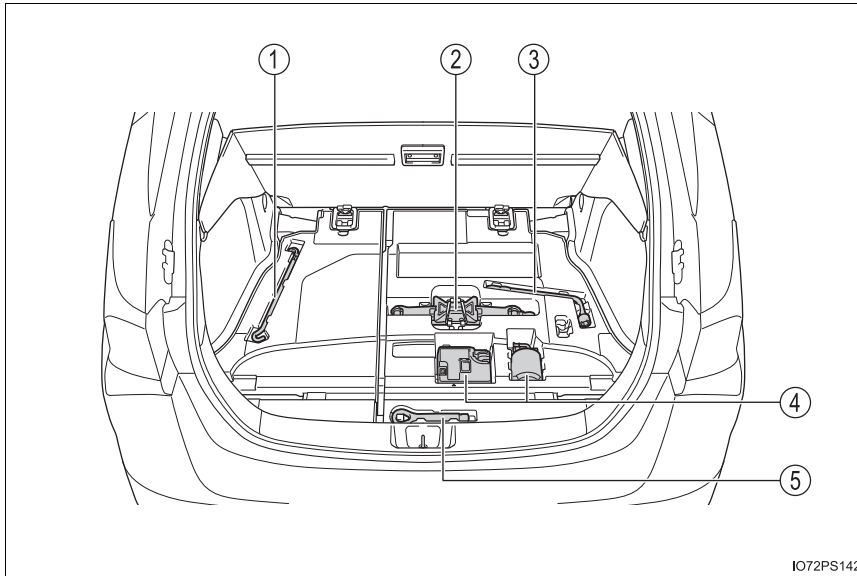

IO72PS142


- ① Jack handle
- ② Jack  
(Use of the jack: →P. 604)
- ③ Wheel nut wrench
- ④ Emergency tire puncture repair kit
- ⑤ Towing eyelet

## ▶ AWD models

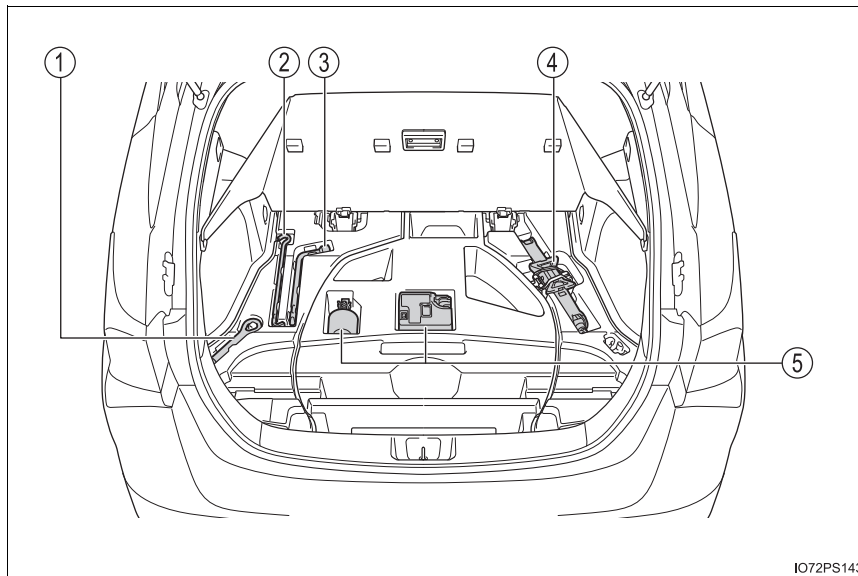

- |                    |   |
|--------------------|---|
| ① Towing eyelet    | ④ Jack<br>(Use of the jack: →P. 604)    |
| ② Jack handle      | ⑤ Emergency tire puncture<br>repair kit |
| ③ Wheel nut wrench |   |


### Emergency tire puncture repair kit components

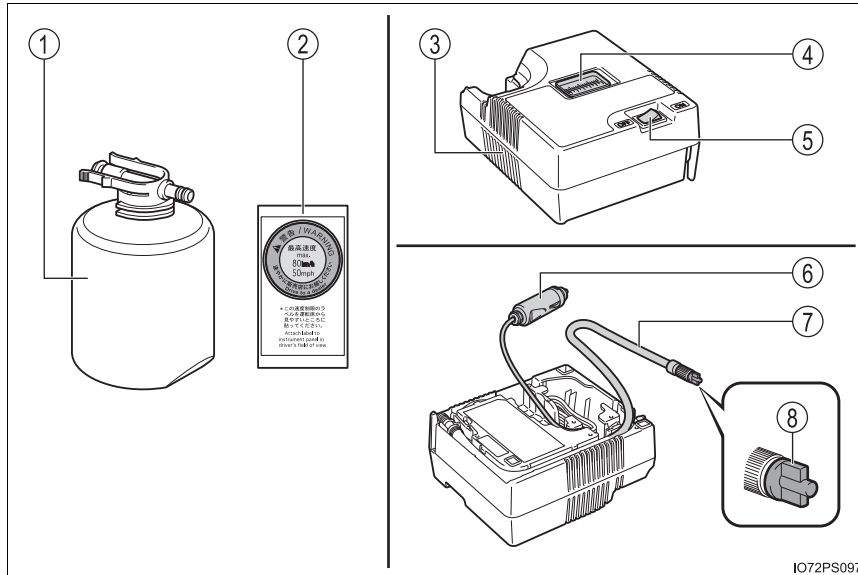


- ① Bottle
- ② Sticker
- ③ Compressor
- ④ Air pressure gauge
- ⑤ Compressor switch
- ⑥ Power plug
- ⑦ Hose
- ⑧ Air release cap

### Taking out the emergency tire puncture repair kit

- 1 Pull up the handle to open the deck board.

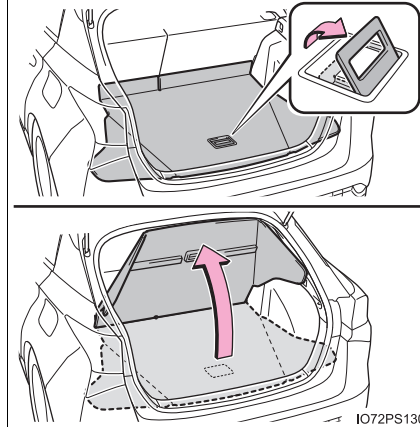


- 2 Secure the deck board using the grocery bag hooks. (→P. 481)

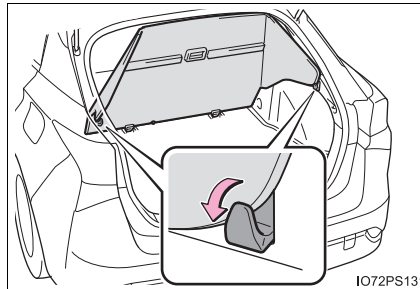


- 3 Take out the emergency tire puncture repair kit.

If the luggage cover is stowed, turn over the luggage cover to take out the emergency tire puncture repair kit.

▶ 2WD models

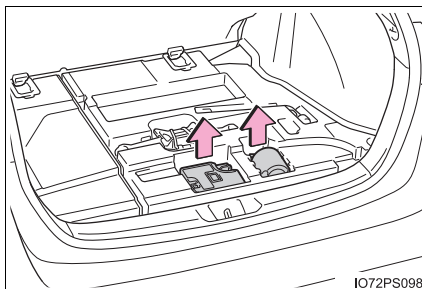


▶ AWD models

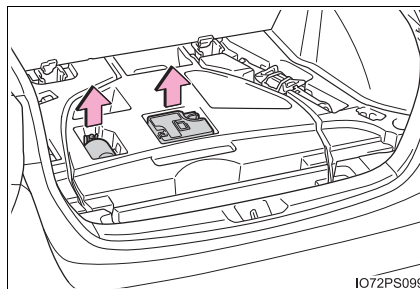


■ **Taking out the jack**

Unhook the tightening strap and take out the jack.

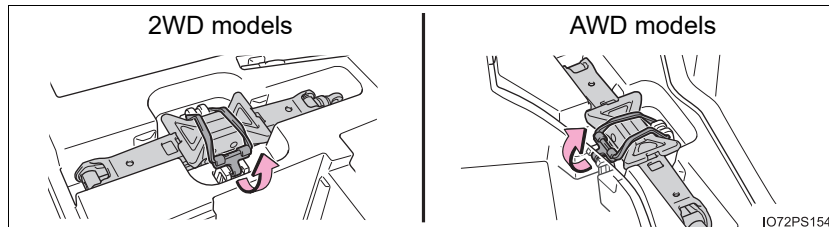

■ **Storing the jack**

Place the jack in the same direction as the mark next to the storage space.

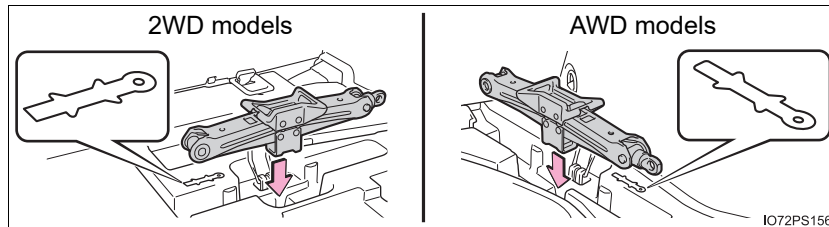

**⚠ WARNING**

■ **After using the tools and jack**


Before driving, make sure all the tools and jack are securely in place in their storage location to reduce the possibility of personal injury during a collision or sudden braking.

**Emergency repair method**

- 1 Take out the repair kit from the plastic bag.


Attach the sticker enclosed with the bottle on the specified locations. (See step 10.)

- 2 Remove the hose and take out the power plug from the compressor.

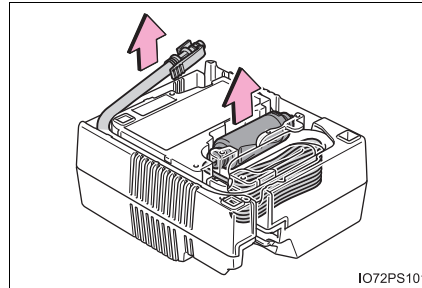


- 3 Connect the bottle to the compressor.

Insert and connect the bottle straight into the compressor as shown in the illustration, and check that the claws of the bottle are concealed in the holes.

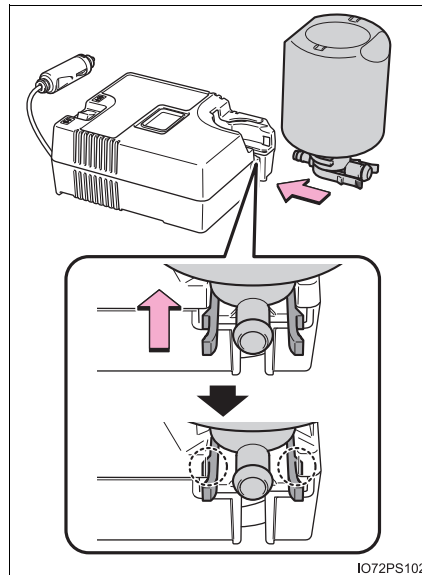


**4** Connect the hose to the bottle.

As shown in the illustration, make sure the hose is connected securely to the bottle.

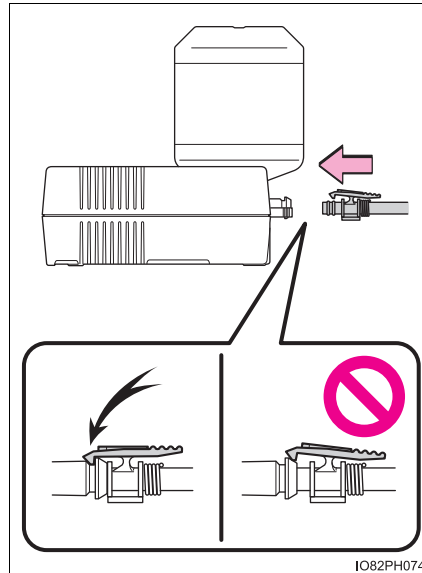

IO82PH074


**5** Remove the valve cap from the valve of the punctured tire.

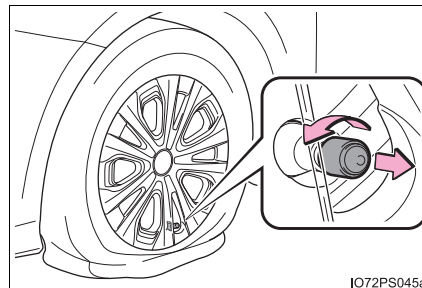

IO72PS045a

**6** Extend the hose. Remove the air release cap from the hose.


You will use the air release cap again. Therefore keep it in a safe place.

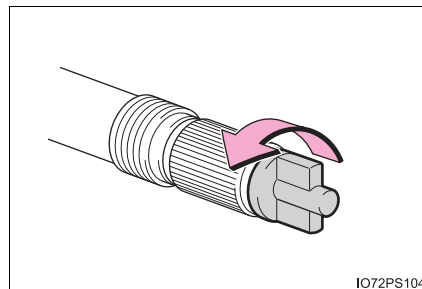

IO72PS104




- 7 Connect the hose to the valve.  
Screw the end of the hose clockwise as far as possible.

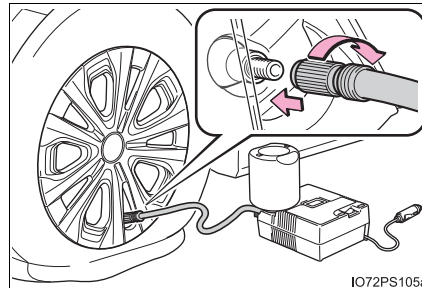

IO72PS105a


- 8 Make sure that the compressor switch is off.

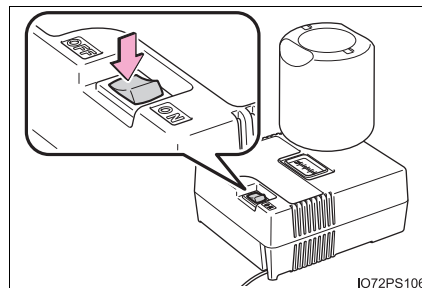

IO72PS106


- 9 Connect the power plug to the power outlet socket. (→P. 486)

► Front

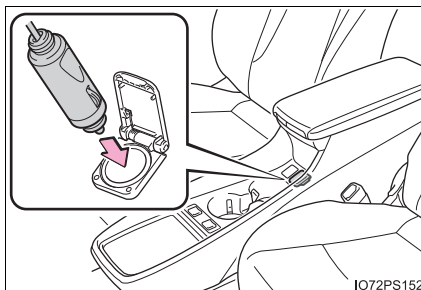


IO72PS152

► Rear

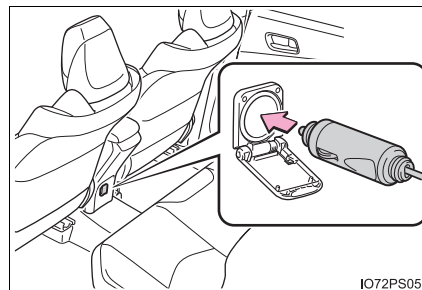

IO72PS051

- 10 Attach the sticker provided with the tire puncture repair kit to a position easily seen from the driver's seat.

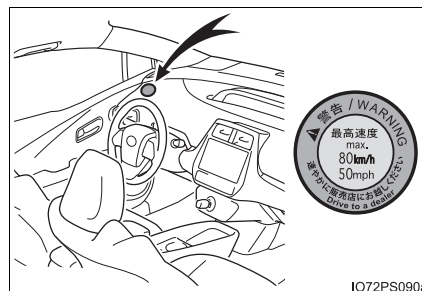



IO72PS090a

11 Check the specified tire inflation pressure.

Tire inflation pressure is specified on the label as shown. (→P. 665)


▶ Left-hand drive vehicles

▶ Right-hand drive vehicles

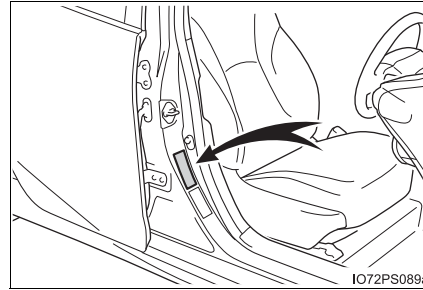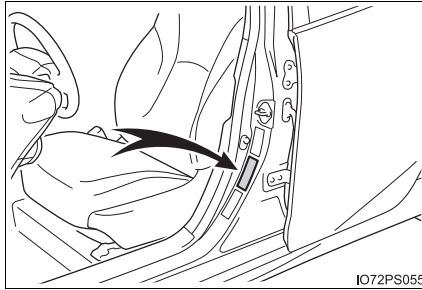

12 Start the hybrid system. (→P. 244)

13 To inject the sealant and inflate the tire, turn the compressor switch on.

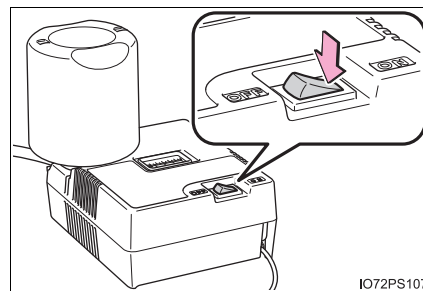

**14** Inflate the tire until the specified air pressure is reached.

- ① The sealant will be injected and the pressure will spike to 300 kPa (3.0 kgf/cm<sup>2</sup> or bar, 44 psi) or 400 kPa (4.0 kgf/cm<sup>2</sup> or bar, 58 psi), then gradually decrease.

- ② The air pressure gauge will display the actual tire inflation pressure about 1 to 5 minutes after the switch is turned on.

Turn the compressor switch off and then check the tire inflation pressure.

Being careful not to over inflate, check and repeat the inflation procedure until the specified tire inflation pressure is reached.

The tire can be inflated for about 5 to 20 minutes (depending on the outside temperature). If the tire inflation pressure is still lower than the specified point after inflation for 25 minutes, the tire is too damaged to be repaired. Turn the compressor switch off and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

If the tire inflation pressure exceeds the specified air pressure, let out some air to adjust the tire inflation pressure. (→P. 612, 665)



- 15** With the compressor switch off, pull out the power plug from the power outlet socket and then disconnect the hose from the valve on the tire.

Some sealant may leak when the hose is removed.

- 16** Install the valve cap onto the valve of the emergency repaired tire.

- 17** Attach the air release cap to the end of the hose.

If the air release cap is not attached, the sealant may leak and the vehicle may get dirty.

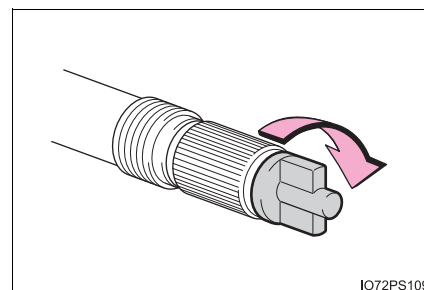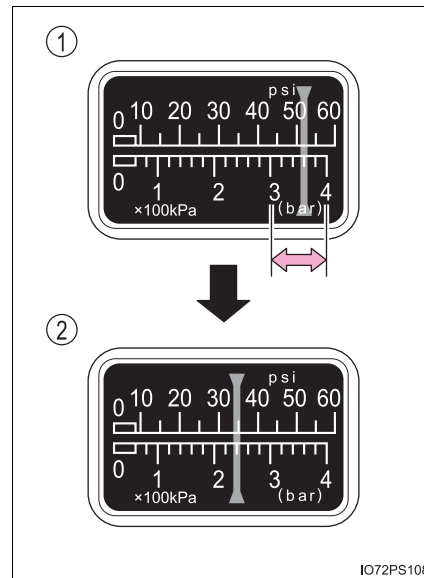


**610** 7-2. Steps to take in an emergency

- 18 Temporarily store the bottle in the luggage compartment while it is connected to the compressor.
- 19 To spread the liquid sealant evenly within the tire, immediately drive safely for about 5 km (3 miles) below 80 km/h (50 mph).


- 20 After driving, stop your vehicle in a safe place on a hard, flat surface and reconnect the repair kit.

Remove the air release cap from the hose before reconnecting the hose.

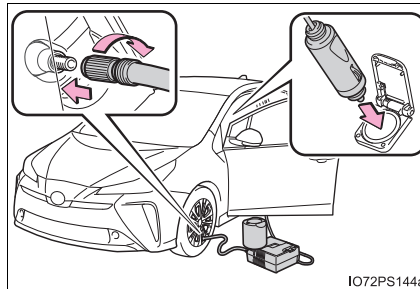

- 21 Turn the compressor switch on and wait for several seconds, then turn it off. Check the tire inflation pressure.

- ① If the tire inflation pressure is under 130 kPa (1.3 kgf/cm<sup>2</sup> or bar, 19 psi): The puncture cannot be repaired. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

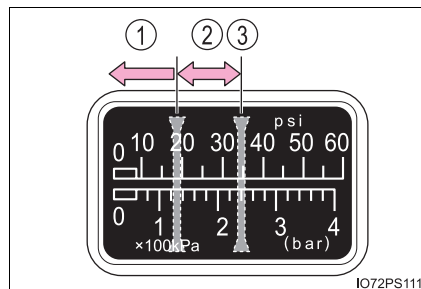


- ② If the tire inflation pressure is 130 kPa (1.3 kgf/cm<sup>2</sup> or bar, 19 psi) or higher, but less than the specified air pressure: Proceed to step 22.

- ③ If the tire inflation pressure is the specified air pressure (→P. 665): Proceed to step 23.

- 22 Turn the compressor switch on to inflate the tire until the specified air pressure is reached. Drive for about 5 km (3 miles) and then perform step 20.

- 23 Attach the air release cap to the end of the hose.

If the air release cap is not attached, the sealant may leak and the vehicle may get dirty.

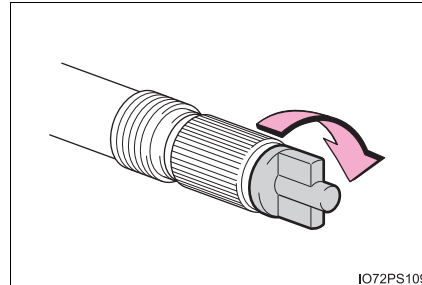


- 24 Store the bottle in the luggage compartment while it is connected to the compressor.
- 25 Taking precautions to avoid sudden braking, sudden acceleration and sharp turns, drive carefully at under 80 km/h (50 mph) to the nearest authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer that is less than 100 km (62 miles) away for tire repair or replacement.

For repair and replacement of a tire or disposal of a tire puncture repair kit, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

When having the tire repaired or replaced, make sure to tell any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer that the sealant is injected.

■ **If the tire is inflated to more than the specified air pressure**

- 1 Disconnect the hose from the valve.
- 2 Install the air release cap to the end of the hose and push the protrusion on the air release cap into the tire valve to let some air out.

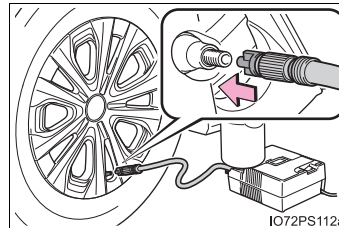

- 3 Disconnect the hose from the valve, remove the air release cap from the hose and then reconnect the hose.
- 4 Turn the compressor switch on and wait for several seconds, and then turn it off. Check that the air pressure indicator shows the specified air pressure. (→P. 665)

If the air pressure is under the designated pressure, turn the compressor switch on again and repeat the inflation procedure until the specified air pressure is reached.

■ **The valve of a tire that has been repaired**

After a tire is repaired with the emergency tire puncture repair kit, the valve should be replaced.

■ **After a tire is repaired with the emergency tire puncture repair kit (vehicles with the tire pressure warning system)**

- The tire pressure warning valve and transmitter should be replaced.
- Even if the tire inflation pressure is at the recommended level, the tire pressure warning light may come on/flash.

■ **Note for checking the emergency tire puncture repair kit**

Check the sealant expiry date occasionally.  
The expiry date is shown on the bottle. Do not use sealant whose expiry date has already passed. Otherwise, repairs conducted using the emergency tire puncture repair kit may not be performed properly.

**■ Emergency tire puncture repair kit**

- The emergency tire puncture repair kit is for filling the car tire with air.
- The sealant has a limited life span. The expiry date is marked on the bottle. The sealant should be replaced before the expiry date. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for replacement.
- The sealant stored in the emergency tire puncture repair kit can be used only once to temporarily repair a single tire. If the sealant in the bottle and other parts of the kit have been used and need to be replaced, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- The compressor can be used repeatedly.
- The sealant can be used when the outside temperature is from -40°C (-40°F) to 60°C (140°F).
- The kit is exclusively designed for size and type of tires originally installed on your vehicle. Do not use it for tires that a different size than the original ones, or for any other purposes.
- If the sealant gets on your clothes, it may stain.
- If the sealant adheres to a wheel or the surface of the vehicle body, the stain may not be removable if it is not cleaned at once. Immediately wipe away the sealant with a wet cloth.
- During operation of the repair kit, a loud operation noise is produced. This does not indicate a malfunction.
- Do not use to check or to adjust the tire pressure.

 WARNING

■ **Do not drive the vehicle with a flat tire**

Do not continue driving with a flat tire.

Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair.

Driving with a flat tire may cause a circumferential groove on the side wall. In such a case, the tire may explode when using a repair kit.

■ **Caution while driving**

● Store the repair kit in the luggage compartment.

Injuries may result in the event of an accident or sudden braking.

● The repair kit is exclusively only for your vehicle.

Do not use repair kit on other vehicles, which could lead to an accident causing death or serious injury.

● Do not use repair kit for tires that are different size than the original ones, or for any other purpose. If the tires have not been completely repaired, it could lead to an accident causing death or serious injury.

■ **Precautions for use of the sealant**

● Ingesting the sealant is hazardous to your health. If you ingest sealant, consume as much water as possible, and then immediately consult a doctor.

● If sealant gets in eyes or adheres to skin, immediately wash it off with water. If discomfort persists, consult a doctor.



 **WARNING****■ When fixing the flat tire**

- Stop your vehicle in a safe and flat area.
- Do not touch the wheels or the area around the brakes immediately after the vehicle has been driven.  
After the vehicle has been driven, the wheels and the area around the brakes may be extremely hot. Touching these areas with hands, feet or other body parts may result in burns.
- Connect the valve and hose securely with the tire installed on the vehicle. If the hose is not properly connected to the valve, air leakage may occur as sealant may be sprayed out.
- If the hose comes off the valve while inflating the tire, there is a risk that the hose will move abruptly due to air pressure.
- After inflation of the tire has completed, the sealant may splatter when the hose is disconnected or some air is let out of the tire.
- Follow the operation procedure to repair the tire. If the procedures not followed, the sealant may spray out.
- Keep back from the tire while it is being repaired, as there is a chance of it bursting while the repair operation is being performed. If you notice any cracks or deformation of the tire, turn off the compressor switch and stop the repair operation immediately.
- The repair kit may overheat if operated for a long period of time. Do not operate the repair kit continuously for more than 40 minutes.
- Parts of the repair kit become hot during operation. Be careful handling the repair kit during and after operation. Do not touch the metal part connecting the bottle and the compressor. It will be extremely hot.
- Do not attach the vehicle speed warning sticker to an area other than the one indicated. If the sticker is attached to an area where an SRS airbag is located, such as the pad of the steering wheel, it may prevent the SRS airbag from operating properly.

 WARNING**■ Driving to spread the liquid sealant evenly**

Observe the following precautions to reduce the risk of accidents. Failing to do so may result in a loss of vehicle control and cause death or serious injury.

- Drive the vehicle carefully at a low speed. Be especially careful when turning and cornering.
- If the vehicle does not drive straight or you feel a pull through the steering wheel, stop the vehicle and check the following.
  - Tire condition. The tire may have separated from the wheel.
  - Tire inflation pressure. If the tire inflation pressure is 130 kPa (1.3 kgf/cm<sup>2</sup> or bar, 19 psi) or less, the tire may be severely damaged.

 NOTICE**■ When performing an emergency repair**

- A tire should only be repaired with the emergency tire puncture repair kit if the damage is caused by a sharp object such as nail or screw passing through the tire tread.

Do not remove the sharp object from the tire. Removing the object may widen the opening and disable emergency repair with the repair kit.

- The repair kit is not waterproof. Make sure that the repair kit is not exposed to water, such as when it is being used in the rain.
- Do not put the repair kit directly onto dusty ground such as sand at the side of the road. If the repair kit vacuums up dust etc., a malfunction may occur.
- Make sure the sealant bottle of the repair kit is in a vertical position. The repair kit does not operate properly when it is laid.

**■ Precautions for the emergency tire puncture repair kit**

- The repair kit power source should be 12 V DC suitable for vehicle use. Do not connect the repair kit to any other source.
- If fuel splatters on the repair kit, the repair kit may deteriorate. Take care not to allow fuel to contact it.
- Place the repair kit in a storage to prevent it from being exposed to dirt or water.
- Store the repair kit in the luggage compartment out of reach of children.
- Do not disassemble or modify the repair kit. Do not subject parts such as the air pressure indicator to impacts. This may cause a malfunction.



## NOTICE

**■ To avoid damage to the tire pressure warning valves and transmitters (vehicles with the tire pressure warning system)**

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or other qualified service shop as soon as possible. After use of liquid sealant, make sure to replace the tire pressure warning valve and transmitter when repairing or replacing the tire. (→P. 530)

## If you have a flat tire (vehicles with spare tire)

Your vehicle is equipped with a spare tire. The flat tire can be replaced with the spare tire.

For details about tires: →P. 528

### WARNING

#### ■ If you have a flat tire

Do not continue driving with a flat tire.


Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair, which could result in an accident.

### Before jacking up the vehicle

- Stop the vehicle in a safe place on a hard, flat surface.
- Set the parking brake.
- Shift the shift position to P.
- Stop the hybrid system.
- Turn on the emergency flashers. (→P. 568)


**Location of the spare tire, jack and tools**

## ► Vehicles with compact spare tire

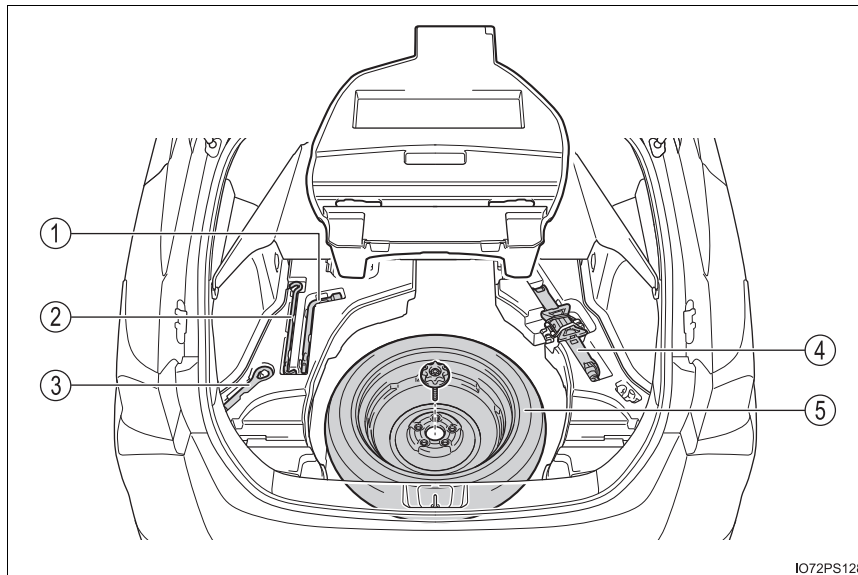

- |                    |              |
|--------------------|--------------|
| ① Wheel nut wrench | ④ Jack       |
| ② Jack handle      | ⑤ Spare tire |
| ③ Towing eyelet    |              |

► Vehicles with full-size spare tire

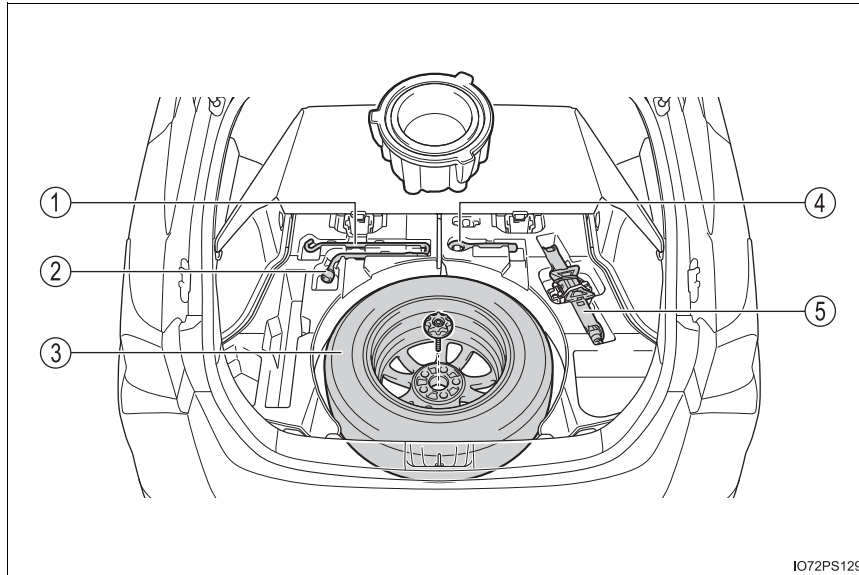


- ① Jack handle
- ② Wheel nut wrench
- ③ Spare tire
- ④ Towing eyelet
- ⑤ Jack

**⚠ WARNING****■ Using the tire jack**

Observe the following precautions.

Improper use of the tire jack may cause the vehicle to suddenly fall off the jack, leading to death or serious injury.


- Only use the tire jack that comes with this vehicle for replacing a flat tire. Do not use it on other vehicles, and do not use other tire jacks for replacing tires on this vehicle.
- Do not raise the vehicle while someone is inside.
- Do not use the tire jack for any purpose other than replacing tires or installing and removing tire chains.
- Put the jack properly in its jack point.  
(→P. 625)

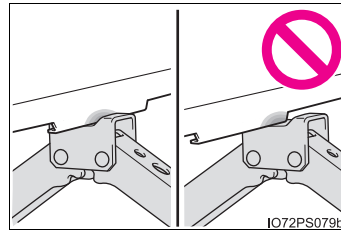


- Do not put any part of your body under the vehicle while it is supported by the jack.
- Do not start the hybrid system or drive the vehicle while the vehicle is supported by the jack.
- When raising the vehicle, do not put an object on or under the jack.
- Do not raise the vehicle to a height greater than that required to replace the tire.
- Use a jack stand if it is necessary to get under the vehicle.
- When lowering the vehicle, make sure that there is no-one near the vehicle. If there are people nearby, warn them vocally before lowering.

### Taking out the jack


- 1 Pull up the handle to open the deck board.

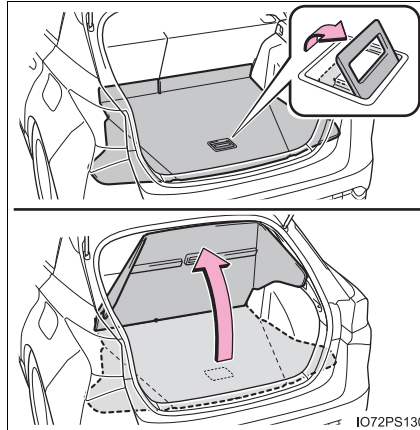

- 2 Secure the deck board using the grocery bag hooks. (→P. 481)

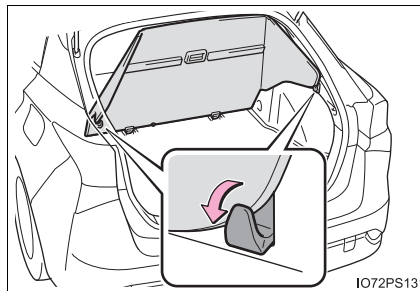

- 3 Unhook the tightening strap and take out the jack.

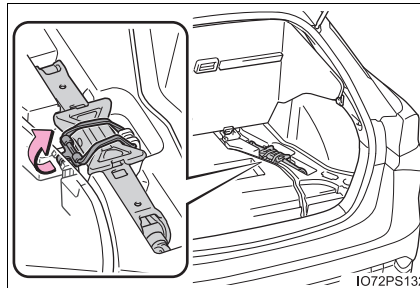





### Taking out the spare tire


- 1 Open and secure the deck board. (→P. 622)
- 2 Remove the tray.

Vehicles with compact spare tire: If the luggage cover is stowed (→P. 484), remove both the tray and luggage cover.

- ▶ Vehicles with compact spare tire
- ▶ Vehicles with full-size spare tire

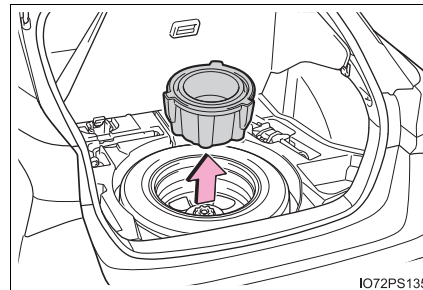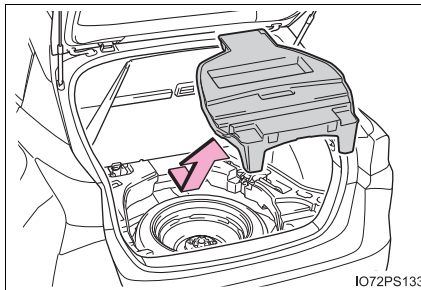

- 3 Loosen the center fastener that secures the spare tire.

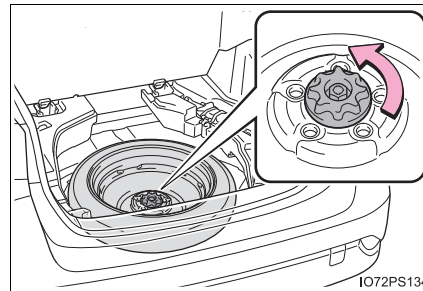


#### WARNING

##### ■ When storing the spare tire

Be careful not to catch fingers or other body parts between the spare tire and the body of the vehicle.

**Replacing a flat tire**


- 1 Chock the tires.

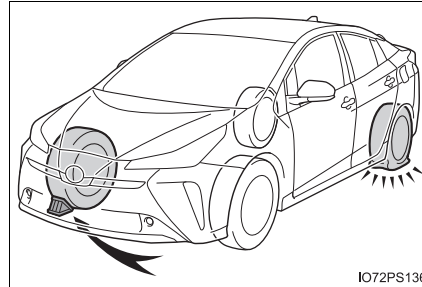

IO72PS136


Flat tire		Wheel chock positions
Front	Left-hand side	Behind the rear right-hand side tire
	Right-hand side	Behind the rear left-hand side tire
Rear	Left-hand side	In front of the front right-hand side tire
	Right-hand side	In front of the front left-hand side tire

- 2 For vehicles with 195/65R15 tires: Remove the wheel ornament using the wrench. To prevent damage, cover the tip of the wrench with a rag.

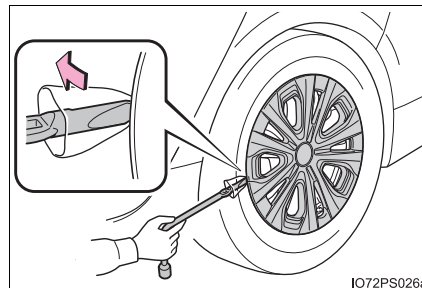


IO72PS026a

- 3 Slightly loosen the wheel nuts (one turn).

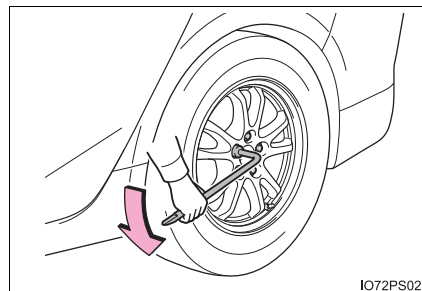


IO72PS027


- 4 Turn the tire jack portion (A) by hand until the center of the recessed portion of the jack is in contact with the center of the jack point.

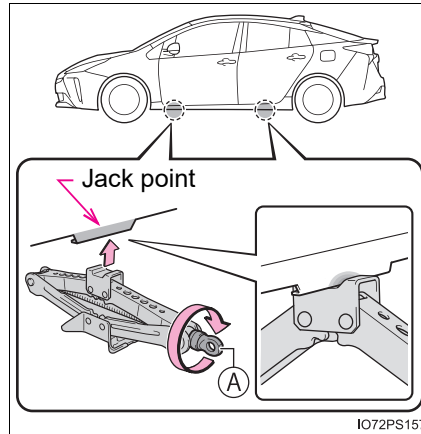

- 5 Assemble the jack handle and the wheel nut wrench as shown in the illustration.

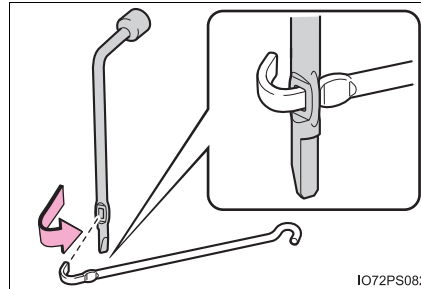


- 6 Raise the vehicle until the tire is slightly raised off the ground.

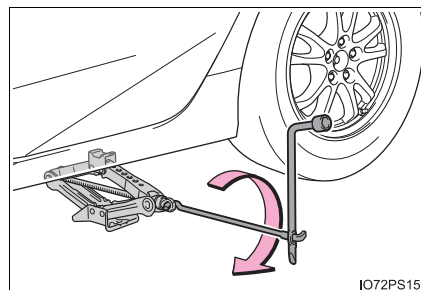

- 7 Remove all the wheel nuts and the tire.

When resting the tire on the ground, place the tire so that the wheel design faces up to avoid scratching the wheel surface.

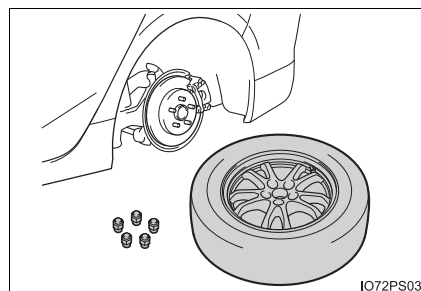


**WARNING****■ Replacing a flat tire**

- Do not touch the disc wheels or the area around the brakes immediately after the vehicle has been driven.  
After the vehicle has been driven the disc wheels and the area around the brakes will be extremely hot. Touching these areas with hands, feet or other body parts while changing a tire, etc. may result in burns.
- Failure to follow these precautions could cause the wheel nuts to loosen and the tire to fall off, resulting in death or serious injury.
  - Have the wheel nuts tightened with a torque wrench to 103 N•m (10.5 kgf•m, 76 ft•lbf) as soon as possible after changing wheels.
  - When installing a tire, only use wheel nuts that have been specifically designed for that wheel.
  - If there are any cracks or deformations in the bolt screws, nut threads or bolt holes of the wheel, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
  - When installing the wheel nuts, be sure to install the wheel nuts with the tapered ends facing inward.

### Installing the spare tire


- 1 Remove any dirt or foreign matter from the wheel contact surface.

If foreign matter is on the wheel contact surface, the wheel nuts may loosen while the vehicle is in motion, causing the tire to come off.

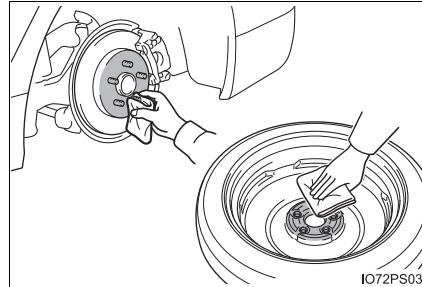


- 2 Install the spare tire and loosely tighten each wheel nut by hand by approximately the same amount.


When replacing an aluminum wheel with a steel wheel (including a compact spare tire), tighten the wheel nuts until the tapered portion comes into loose contact with the disc wheel seat.

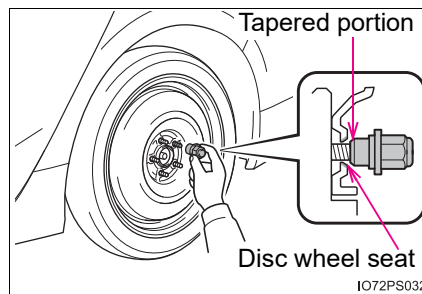

When replacing an aluminum wheel with an aluminum wheel, turn the wheel nuts until the washers come into contact with the disc wheel.

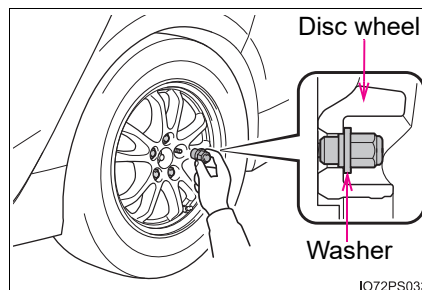


- 3 Lower the vehicle.

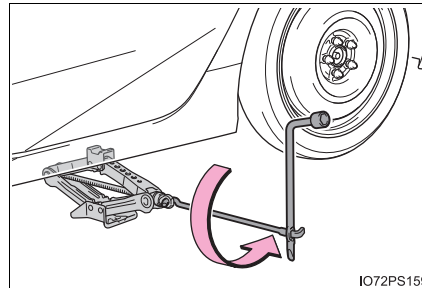


- 4 Firmly tighten each wheel nut two or three times in the order shown in the illustration.

**Tightening torque:**  
103 N•m (10.5 kgf•m, 76 ft•lbf)

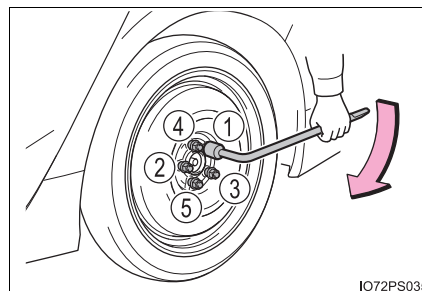

- 5 For vehicles with 195/65R15 tires: When reinstalling an original wheel or installing a full-size spare tire, reinstall the wheel ornament.\*

Align the cutout of the wheel ornament with the valve stem as shown.

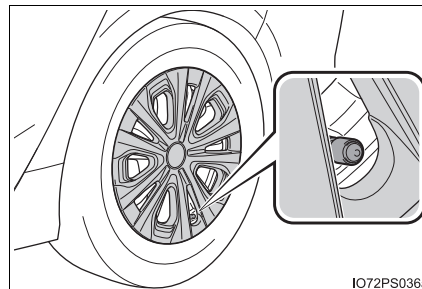

\*: The wheel ornament cannot be installed on the compact spare tire.

- 6 Stow the flat tire, tire jack and all tools.

### ■ The compact spare tire (if equipped)

- The compact spare tire is identified by the label “TEMPORARY USE ONLY” on the tire sidewall.  
Use the compact spare tire temporarily, and only in an emergency.
- Make sure to check the tire inflation pressure of the compact spare tire. (→P. 665)

### ■ When using the compact spare tire (vehicles with the tire pressure warning system)

As the compact spare tire is not equipped with a tire pressure warning valve and transmitter, low inflation pressure of the spare tire will not be indicated by the tire pressure warning system. Also, if you replace the compact spare tire after the tire pressure warning light comes on, the light remains on.

### ■ When the compact spare tire is equipped (if equipped)

The vehicle height may become lower when driving with the compact spare tire compared to when driving with standard tires.


### ■ If you have a flat front tire on a road covered with snow or ice (vehicles with compact spare tire)

Install the compact spare tire on one of the rear wheels of the vehicle. Perform the following steps and fit tire chains to the front tires:

- 1 Replace a rear tire with the compact spare tire.
- 2 Replace the flat front tire with the tire removed from the rear of the vehicle.
- 3 Fit tire chains to the front tires.


### ■ Jack point

The mark indicating the jack point is stamped on the underside of the vehicle.

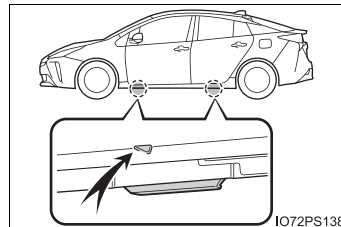

### ■ Storing the jack

Place the jack in the same direction as the mark next to the storage space.

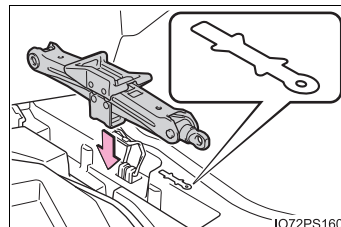

■ Certification for the jack



Manufacturer's Declaration of Conformity

Manufacturer:  
Kawasaki Industrial Co., Ltd.  
4618 Mukaijima Shimada, Shizuoka, Japan

The EU Directives covered by this Declaration

2006/42/EC Machinery Directive

The product covered by this declaration

JACK SUB-ASSY,PANTOGRAPH

model

0.8ton , 1.1ton , 1.35ton , 1.5ton , 1.4ton

The basis on which conformity is being declared

The product identified above complies with the requirements of  
the Machinery Directive  
Directive above by meeting following standards

JIS D 8103

The technical documentation required to demonstrate that the product  
meets the requirement the Machinery Directive has been compiled by  
the signatory below and is available for inspection by the relevant  
enforcement authorities.

A sample of the product has been tested by the manufacturer

Technical File No: KSF-201-00-03

The CE mark was first applied in:2010

Done at Shizuoka, Japan

Signature:

A handwritten signature in black ink, appearing to read 'Koji Kawasaki', is written over a horizontal line.

Koji Kawasaki  
PRESIDENT ,Kawasaki Industrial Co., Ltd.

Date of Issue: 20 APRIL ,2015





## Manufacturer's Declaration of Conformity

**Manufacturer:**

Kawasaki Industrial Co., Ltd.  
1131 Kamo Kikugawa, Shizuoka, Japan

**The Regulations covered by this Declaration**

The Supply of Machinery (Safety) Regulations 2008

**The product covered by this declaration**

JACK SUB-ASSY,PANTOGRAPH

**model**

0.8ton , 1.1ton , 1.3ton , 1.35ton , 1.4ton , 1.5ton

**The basis on which conformity is being declared**

The product identified above complies with the requirements of  
the Supply of Machinery (Safety) Regulations  
Directive above by meeting following standards

JIS D 8103

The technical documentation required to demonstrate that the product  
meets the requirement the Supply of Machinery (Safety) Regulations  
has been compiled by the signatory below and is available  
for inspection by the relevant enforcement authorities.

 
A sample of the product has been tested by the manufacturer

Technical File No: KSF-201-00-05

The UKCA mark was first applied in:2021

Done at Shizuoka, Japan

Signature:

  
Keji Kawasaki  
PRESIDENT ,Kawasaki Industrial Co., Ltd.

Date of Issue: 21 SEP ,2021

7

When trouble arises

**⚠ WARNING****■ When using the compact spare tire (if equipped)**

- Remember that the spare tire provided is specifically designed for use with your vehicle. Do not use your spare tire on another vehicle.
- Do not use more than one compact spare tire simultaneously.
- Replace the spare tire with a standard tire as soon as possible.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.

**■ When the compact spare tire is attached (if equipped)**

The vehicle speed may not be correctly detected, and the following systems may not operate correctly:

- |   |   |
|---|---|
| • ABS & Brake assist                                  | • Cruise control*                           |
| • VSC   | • BSM (Blind Spot Monitor)*                 |
| • TRC   | • Toyota parking assist-sensor*             |
| • EPS   | • Parking Support Brake function*           |
| • AHB (Automatic High Beam)*                          | • Simple Intelligent Parking Assist System* |
| • PCS (Pre-Collision System)*                         | • Toyota parking assist monitor*            |
| • LTA (Lane Tracing Assist)*                          | • Navigation system*                        |
| • Dynamic radar cruise control with full-speed range* | • Panoramic view monitor*                   |

Also, not only can the following system not be utilized fully, but it may even negatively affect the drive-train components:

- E-Four (Electric Four wheel drive system)\*

\*: If equipped

**■ Speed limit when using the compact spare tire (if equipped)**

Do not drive at speeds in excess of 80 km/h (50 mph) when a compact spare tire is installed on the vehicle.

The compact spare tire is not designed for driving at high speeds. Failure to observe this precaution may lead to an accident causing death or serious injury.

**■ After using the tools and jack**

Before driving, make sure all the tools and jack are securely in place in their storage location to reduce the possibility of personal injury during a collision or sudden braking.



## NOTICE

**■ Be careful when driving over bumps with the compact spare tire installed on the vehicle. (if equipped)**

The vehicle height may become lower when driving with the compact spare tire, compared to when driving with standard tires. Be careful when driving over uneven road surfaces.

**■ Driving with tire chains and the compact spare tire (if equipped)**

Do not fit tire chains to the compact spare tire.

Tire chains may damage the vehicle body and adversely affect driving performance.

**■ When replacing the tires (vehicles with the tire pressure warning system)**

When removing or fitting the wheels, tires or the tire pressure warning valve and transmitter, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as the tire pressure warning valve and transmitter may be damaged if not handled correctly.

**■ Handling the decorative resin parts (for vehicles equipped with 17-inch wheels)**

→P. 500

## If the hybrid system will not start

Reasons for the hybrid system not starting vary depending on the situation. Check the following and perform the appropriate procedure:

### The hybrid system will not start even though the correct starting procedure is being followed. (→P. 244)

One of the following may be the cause of the problem:

- The electronic key may not be functioning properly.\* (→P. 636)
- There may not be sufficient fuel in the vehicle's tank.  
Refuel the vehicle. (→P. 86)
- There may be a malfunction in the immobilizer system.\* (→P. 91)
- There may be a malfunction in the shift control system.\*  
(→P. 247, 597)
- The hybrid system may be malfunctioning due to an electrical problem such as electronic key battery depletion or a blown fuse. However, depending on the type of malfunction, an interim measure is available to start the hybrid system. (→P. 635)

\*: It may not be possible to shift the shift position other than P.

### The interior lights and headlights are dim, or the horn does not sound or sounds at a low volume.

One of the following may be the cause of the problem:

- The 12-volt battery may be discharged. (→P. 639)
- The 12-volt battery terminal connections may be loose or corroded.  
(→P. 521)

**The interior lights and headlights do not turn on, or the horn does not sound.**

One of the following may be the cause of the problem:

- The 12-volt battery may be discharged. (→P. 639)
- One or both of the 12-volt battery terminals may be disconnected. (→P. 521)

Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer if the problem cannot be repaired, or if repair procedures are unknown.

**Emergency start function**

When the hybrid system does not start, the following steps can be used as an interim measure to start the hybrid system if the power switch is functioning normally.

Do not use this starting procedure except in cases of emergency.

- 1 Set the parking brake.
- 2 Turn the power switch to ACCESSORY mode.
- 3 Press and hold the power switch for about 15 seconds while depressing the brake pedal firmly.

Even if the hybrid system can be started using the above steps, the system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

## If the electronic key does not operate properly

If communication between the electronic key and vehicle is interrupted (→P. 190) or the electronic key cannot be used because the battery is depleted, the smart entry & start system and wireless remote control cannot be used. In such cases, the doors can be opened and the hybrid system can be started by following the procedure below.


### Locking and unlocking the doors

Use the mechanical key (→P. 173) in order to perform the following operations:

- ① Locks all the doors
- ② Closes the windows and moon roof \*1 (turn and hold)\*2
- ③ Unlocks all the doors
- ④ Opens the windows and moon roof \*1 (turn and hold)\*2

\*1: If equipped


\*2: This setting must be customized at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. (→P. 670)

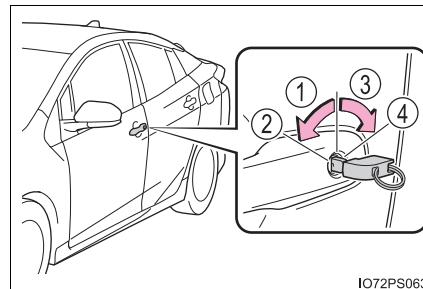


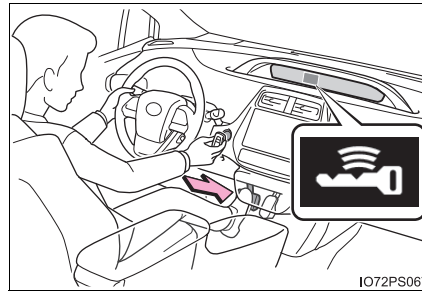
**Starting the hybrid system**

- 1 Depress the brake pedal.
- 2 Touch the Toyota emblem side of the electronic key to the power switch.

When the electronic key is detected, a buzzer sounds and the power switch will turn to ON mode. When the smart entry & start system is deactivated in customization setting, the power switch will turn to ACCESSORY mode.

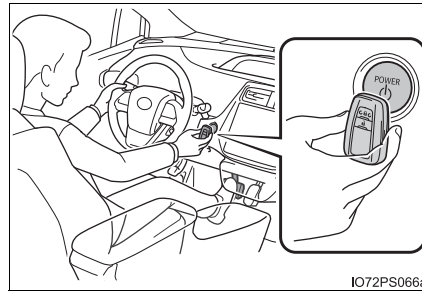

- 3 Firmly depress the brake pedal and check that  is shown on the multi-information display.



- 4 Press the power switch.

In the event that the hybrid system still cannot be operated, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Stopping the hybrid system**

Set the parking brake, shift the shift position to P and press the power switch as you normally do when stopping the hybrid system.

■ **Replacing the key battery**

As the above procedure is a temporary measure, it is recommended that the electronic key battery be replaced immediately when the battery is depleted. (→P. 554)

■ **Alarm (if equipped)**

Using the mechanical key to lock the doors will not set the alarm system. If a door is unlocked using the mechanical key when the alarm system is set, the alarm may be triggered. (→P. 93)

■ **Changing power switch modes**

Release the brake pedal and press the power switch in step 3 above. The hybrid system does not start and modes will be changed each time the switch is pressed. (→P. 246)

■ **When the electronic key does not work properly**

- Make sure that the smart entry & start system has not been deactivated in the customization setting. If it is off, turn the function on. (Customizable features: →P. 670)
- Check if battery-saving mode is set. If it is set, cancel the function. (→P. 189)



**WARNING**

■ **When using the mechanical key and operating the power windows or moon roof (if equipped)**

Operate the power window or moon roof after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the window or moon roof.

Also, do not allow children to operate the mechanical key. It is possible for children and other passengers to get caught in the power window or moon roof.




## If the 12-volt battery is discharged

The following procedures may be used to start the hybrid system if the vehicle's 12-volt battery is discharged.


You can also call any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

If you have a set of jumper (or booster) cables and a second vehicle with a 12-volt battery, you can jump start your vehicle by following the steps below.


- 1 Vehicles with alarm (→P. 93):  
Confirm that the electronic key is being carried.  
When connecting the jumper (or booster) cables, depending on the situation, the alarm may activate and doors locked. (→P. 95)

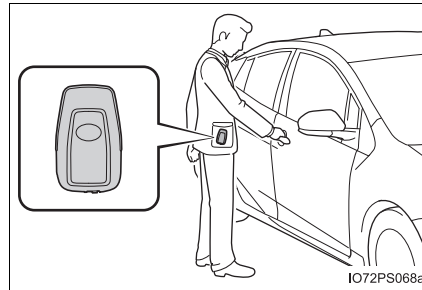

- 2 Open the hood. (→P. 511)
- 3 Remove the engine cover.  
Pull up the both ends of the cover vertically.

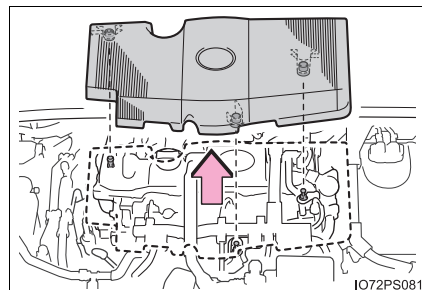

- 4 Connect the jumper cables according to the following procedure:
  - ① Connect a positive jumper cable clamp to the positive (+) battery terminal on your vehicle.
  - ② Connect the clamp on the other end of the positive cable to the positive (+) battery terminal on the second vehicle.
  - ③ Connect a negative cable clamp to the negative (-) battery terminal on the second vehicle.
  - ④ Connect the clamp at the other end of the negative cable to a solid, stationary, unpainted metallic point away from the 12-volt battery and any moving parts, as shown in the illustration.

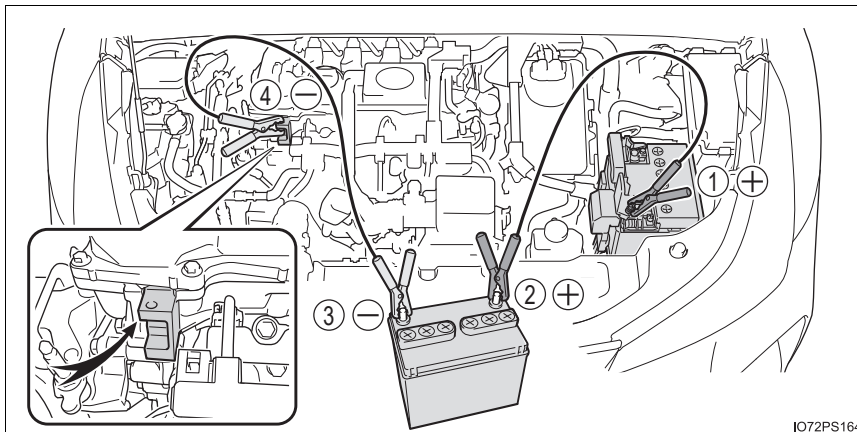

- 5 Start the engine of the second vehicle. Increase the engine speed slightly and maintain at that level for approximately 5 minutes to recharge the 12-volt battery of your vehicle.
- 6 Maintain the engine speed of the second vehicle and start the hybrid system of your vehicle by turning the power switch to ON mode.
- 7 Make sure the “READY” indicator comes on. If the indicator light does not come on, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- 8 Once the hybrid system has started, remove the jumper cables in the exact reverse order from which they were connected.
- 9 To install the engine cover, conduct the removal procedure in reverse. After installing, check that the fixed pins are inserted securely.

Once the hybrid system starts, have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

---

■ **When opening the cover of the positive (+) battery terminal**

→P. 523

■ **Starting the hybrid system when the 12-volt battery is discharged**

The hybrid system cannot be started by push-starting.

■ **To prevent 12-volt battery discharge**

- Turn off the headlights and the audio system while the hybrid system is off.
- Turn off any unnecessary electrical components when the vehicle is running at a low speed for an extended period, such as in heavy traffic.

■ **When the 12-volt battery is removed or discharged**

- Information stored in the ECU is cleared. When the 12-volt battery is depleted, have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Some systems may require initialization. (→P. 679)

■ **When removing the 12-volt battery terminals**

When the 12-volt battery terminals are removed, the information stored in the ECU is cleared. Before removing the 12-volt battery terminals, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ **Charging the 12-volt battery**

The electricity stored in the 12-volt battery will discharge gradually even when the vehicle is not in use, due to natural discharge and the draining effects of certain electrical appliances. If the vehicle is left for a long time, the 12-volt battery may discharge, and the hybrid system may be unable to start. (The 12-volt battery recharges automatically while the hybrid system is operating.)

■ **When recharging or replacing the 12-volt battery**

- In some cases, it may not be possible to unlock the doors using the smart entry & start system when the 12-volt battery is discharged. Use the wireless remote control or the mechanical key to lock or unlock the doors.
- The hybrid system may not start on the first attempt after the 12-volt battery has recharged but will start normally after the second attempt. This is not a malfunction.
- The power switch mode is memorized by the vehicle. When the 12-volt battery is reconnected, the system will return to the mode it was in before the 12-volt battery was discharged. Before disconnecting the 12-volt battery, turn the power switch off.  
If you are unsure what mode the power switch was in before the 12-volt battery discharged, be especially careful when reconnecting the 12-volt battery.
- If the 12-volt battery discharges while the shift position is in P, it may not be possible to shift the shift position to other positions. In this case, the vehicle cannot be towed without lifting both front wheels because the front wheels will be locked. (→P. 572)

■ **When replacing the 12-volt battery**

- Use a 12-volt battery that conforms to European regulations.
- Use a 12-volt battery that the case size is same as the previous one (LN1), 20 hour rate capacity (20HR) is equivalent (45Ah) or greater, and performance rating (CCA) is equivalent (295A) or greater.
  - If the sizes differ, the 12-volt battery cannot be properly secured.
  - If the 20 hour rate capacity is low, even if the time period where the vehicle is not used is a short time, the 12-volt battery may discharge and the hybrid system may not be able to start.
- For details, consult any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

 **WARNING****■ When removing the 12-volt battery terminals**

Always remove the negative (-) terminal first. If the positive (+) terminal contacts any metal in the surrounding area when the positive (+) terminal is removed, a spark may occur, leading to a fire in addition to electrical shocks and death or serious injury.

**■ Avoiding 12-volt battery fires or explosions**

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the 12-volt battery:

- Make sure each jumper cable is connected to the correct terminal and that it is not unintentionally in contact with any other than the intended terminal.
- Do not allow the other end of the jumper cable connected to the "+" terminal to come into contact with any other parts or metal surfaces in the area, such as brackets or unpainted metal.
- Do not allow the + and - clamps of the jumper cables to come into contact with each other.
- Do not smoke, use matches, cigarette lighters or allow open flame near the 12-volt battery.

**■ 12-volt battery precautions**

The 12-volt battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the 12-volt battery:

- When working with the 12-volt battery, always wear safety glasses and take care not to allow any battery fluids (acid) to come into contact with skin, clothing or the vehicle body.
- Do not lean over the 12-volt battery.
- In the event that battery fluid comes into contact with the skin or eyes, immediately wash the affected area with water and seek medical attention. Place a wet sponge or cloth over the affected area until medical attention can be received.
- Always wash your hands after handling the 12-volt battery support, terminals, and other battery-related parts.
- Do not allow children near the 12-volt battery.



**NOTICE**

■ **When handling jumper cables**

When connecting the jumper cables, ensure that they do not become entangled in the cooling fans, etc.

## If your vehicle overheats

### The following may indicate that your vehicle is overheating.

- The high coolant temperature warning light (→P. 583) comes on or flashes, or a loss of hybrid system power is experienced. (For example, the vehicle speed does not increase.)
- “Hybrid System Overheated” is shown on the multi-information display.
- Steam comes out from under the hood.

### Correction procedures


#### ■ If the high coolant temperature warning light comes on or flashes

- 1 Stop the vehicle in a safe place and turn off the air conditioning system, and then stop the hybrid system.
- 2 If you see steam:  
Carefully lift the hood after the steam subsides.  
If you do not see steam:  
Carefully lift the hood.
- 3 After the hybrid system has cooled down sufficiently, inspect the hoses and radiator core (radiator) for any leaks.

#### ① Radiator

#### ② Cooling fans


If a large amount of coolant leaks, immediately contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

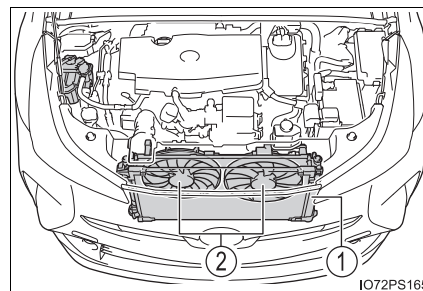

**646** 7-2. Steps to take in an emergency


- 4 The coolant level is satisfactory if it is between the “MAX” and “MIN” lines on the reservoir.

- ① Reservoir
- ② “MAX” line
- ③ “MIN” line

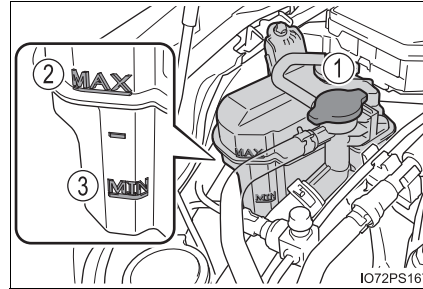

- 5 Add coolant if necessary.

Water can be used in an emergency if coolant is unavailable.

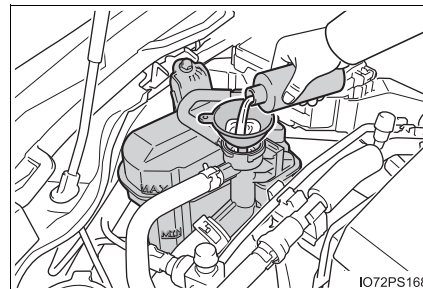



- 6 Start the hybrid system and turn the air conditioning system on to check that the radiator cooling fans operate and to check for coolant leaks from the radiator or hoses.

The fans operate when the air conditioning system is turned on immediately after a cold start. Confirm that the fans are operating by checking the fan sound and air flow. If it is difficult to check these, turn the air conditioning system on and off repeatedly. (The fans may not operate in freezing temperatures.)

- 7 If the fans are not operating:  
Stop the hybrid system immediately and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

If the fans are operating:

Have the vehicle inspected at the nearest any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.


■ **If “Hybrid System Overheated” is shown on the multi-information display**

- 1 Stop the vehicle in a safe place.  
2 Stop the hybrid system and carefully lift the hood.  
3 After the hybrid system has cooled down, inspect the hoses and radiator core (radiator) for any leaks.

① Radiator


② Cooling fans

If a large amount of coolant leaks, immediately contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

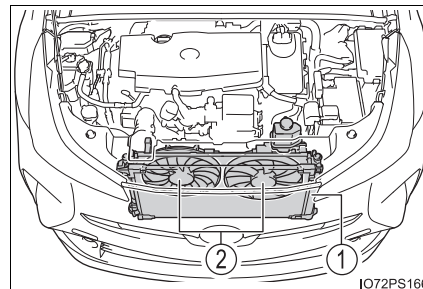

- 4 The coolant level is satisfactory if it is between the “FULL” and “LOW” lines on the reservoir.


- ① Reservoir
- ② “FULL” line
- ③ “LOW” line

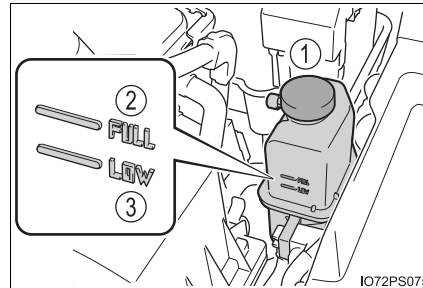

- 5 Add coolant if necessary.

Water can be used in an emergency if coolant is unavailable.

If water was added in an emergency, have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

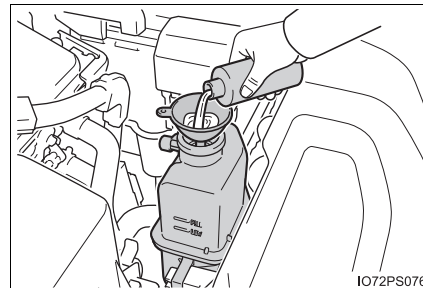

- 6 After stopping the hybrid system and waiting for 5 minutes or more, start the hybrid system again and check if “Hybrid System Overheated” is shown on the multi-information display.

If the message does not disappear:

Stop the hybrid system and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

If the message is not displayed:

The hybrid system temperature has dropped and the vehicle may be driven normally.

However, if the message appears again frequently, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

 **WARNING****■ To prevent an accident or injury when inspecting under the hood of your vehicle**

Observe the following precautions.

Failure to do so may result in serious injury such as burns.

- If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot.
- After the hybrid system has been turned off, check that the “Accessory”, “Ignition ON” or mileage display (→P. 118, 120) on the main display and the “READY” indicator are off.  
When the hybrid system is operating, the gasoline engine may automatically start, or the cooling fans may suddenly operate even if the gasoline engine stops. Do not touch or approach rotating parts such as the fan, which may lead to fingers or clothing (especially a tie, a scarf or a muffler) getting caught, resulting in serious injury.
- Do not loosen the coolant reservoir caps while the hybrid system and radiator are hot.  
High temperature steam or coolant could spray out.

 **NOTICE****■ When adding engine/power control unit coolant**

Add coolant slowly after the hybrid system has cooled down sufficiently. Adding cool coolant to a hot hybrid system too quickly can cause damage to the hybrid system.

**■ To prevent damage to the cooling system**

Observe the following precautions:


- Avoid contaminating the coolant with foreign matter (such as sand or dust etc.).
- Do not use any coolant additive.


## If the vehicle becomes stuck

Carry out the following procedures if the tires spin or the vehicle becomes stuck in mud, dirt or snow:

- 1 Set the parking brake and shift the shift position to P. Stop the hybrid system.
- 2 Remove the mud, snow or sand from around the front wheels.
- 3 Place wood, stones or some other material under the front wheels to help provide traction.
- 4 Restart the hybrid system.
- 5 Shift the shift position to D or R and release the parking brake. Then, while exercising caution, depress the accelerator pedal.

### ■ When it is difficult to free the vehicle

Press  to turn off TRC. (→P. 443)

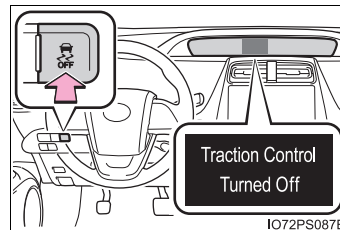

 WARNING**■ When attempting to free a stuck vehicle**

If you choose to push the vehicle back and forth to free it, make sure the surrounding area is clear to avoid striking other vehicles, objects or people. The vehicle may also lunge forward or lunge back suddenly as it becomes free. Use extreme caution.

**■ When changing the shift position**

Be careful not to change the shift position with the accelerator pedal depressed.

This may lead to unexpected rapid acceleration of the vehicle that may cause an accident resulting in death or serious injury.

 NOTICE**■ To avoid damage to the hybrid transmission and other components**

- Avoid spinning the front wheels and depressing the accelerator pedal more than necessary.
- If the vehicle remains stuck even after these procedures are performed, the vehicle may require towing to be freed.



**8-1. Specifications**

Maintenance data  
(fuel, oil level, etc.)..... 654  
Fuel information ..... 668

**8-2. Customization**

Customizable features ..... 670

**8-3. Initialization**

Items to initialize ..... 679

## Maintenance data (fuel, oil level, etc.)

### Dimensions and weights

Overall length		4575 mm (180.1 in.)	
Overall width		1760 mm (69.3 in.)	
Overall height*1	2WD models	Without raised vehicle height	1470 mm (57.9 in.)
		With raised vehicle height	1490 mm (58.7 in.)
	AWD models		1475 mm (58.1 in.)
Wheelbase		2700 mm (106.3 in.)	
Tread*1	Front		1530 mm (60.2 in.)*2 1510 mm (59.4 in.)*3
	Rear	Without raised vehicle height	1540 mm (60.6 in.)*2 1520 mm (59.8 in.)*3
		With raised vehicle height	1530 mm (60.2 in.)*2 1510 mm (59.4 in.)*3
Gross vehicle mass	2WD models		1790 kg (3946 lb.)
	AWD models		1845 kg (4068 lb.)
Maximum permissible axle capacity	Front		1020 kg (2249 lb.)
	Rear		975 kg (2150 lb.)
Drawbar load*4		60kg (132 lb.)	
Towing capacity*4	Without brake		725 kg (1598 lb.)
	With brake		

\*1: Unladen vehicle

\*2: Vehicles with 195/65R15 tires

\*3: Vehicles with 215/45R17 tires


\*4: Vehicles that can tow a trailer. (→P. 233)




**Vehicle identification****■ Vehicle identification number**

The vehicle identification number (VIN) is the legal identifier for your vehicle. This is the primary identification number for your Toyota. It is used in registering the ownership of your vehicle.


This number is on the top left of the instrument panel.

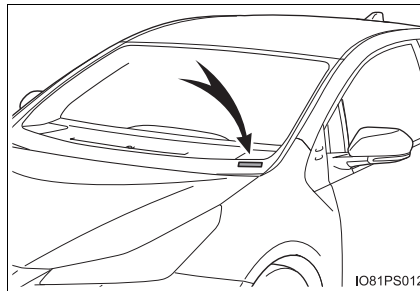

This number is also stamped under the right-hand front seat.

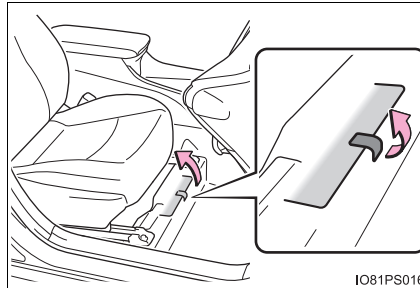


This number is also on the manufacturer's label.

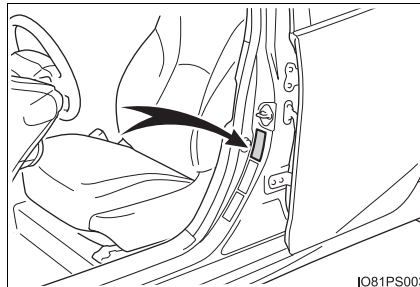

■ **Engine number**

The engine number is stamped on the engine block as shown.

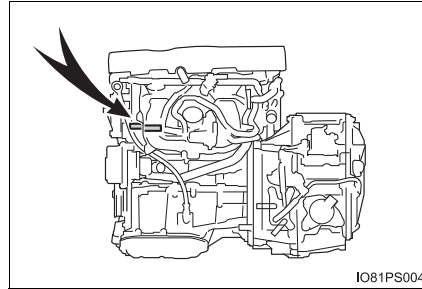


IO81PS004

**Engine**

Model	2ZR-FXE
Type	4-cylinder in line, 4-cycle, gasoline
Bore and stroke	80.5 × 88.3 mm (3.17 × 3.48 in.)
Displacement	1798 cm <sup>3</sup> (109.7 cu.in.)
Valve clearance	Automatic adjustment

**Fuel**

Fuel type	<p>When you find these types of fuel label at the gas station, use only the fuel with one of the following labels.</p>  <p>EU area: Unleaded gasoline conforming to European standard EN228 only</p> <p>Except EU area: Unleaded gasoline only</p>
Research Octane Number	<p>EU area: 95 or higher</p> <p>Except EU area: 95 or higher</p> <p>Russia only: 91 or higher</p>
Fuel tank capacity (Reference)	43 L (11.4 gal., 9.5 Imp.gal.)

**Electric motor (traction motor)**

	Front	Rear (AWD models)
Type	Permanent magnet synchronous motor	Permanent induction motor
Maximum output	53 kW	5.3 kW
Maximum torque	163 N•m (16.6 kgf•m, 120.2 ft•lbf)	55 N•m (5.6 kgf•m, 40.6 ft•lbf)

**Hybrid battery (traction battery)**

Type	Nickel-Metal hydride battery
Voltage	7.2 V/module
Capacity	6.5 Ah (3HR)
Quantity	28 modules
Nominal voltage	201.6 V

**Lubrication system (except for Georgia, New Caledonia and Russia)**

■ **Oil capacity (Drain and refill [Reference\*])**

With filter	4.2 L (4.4 qt., 3.7 Imp.qt.)
Without filter	3.9 L (4.1 qt., 3.4 Imp.qt.)

\*: The engine oil capacity is a reference quantity to be used when changing the engine oil. Park the vehicle on level ground. After warming up the engine and turning off the hybrid system, wait more than 5 minutes, and check the oil level on the dipstick.

■ **Engine oil selection**

“Toyota Genuine Motor Oil” is used in your Toyota vehicle. Toyota recommends the use of approved “Toyota Genuine Motor Oil”. Another motor oil of matching quality can also be used.

Oil grade:

0W-16:

API grade SN “Resource-Conserving”, SN PLUS “Resource-Conserving” or SP “Resource-Conserving”; or ILSAC GF-6B multigrade engine oil


0W-20 and 5W-30:

API grade SM “Energy-Conserving”, SN “Resource-Conserving”, SN PLUS “Resource-Conserving” or SP “Resource-Conserving”; or ILSAC GF-6A multigrade engine oil

Recommended viscosity (SAE):

SAE 0W-16 is filled into your Toyota vehicle at manufacturing, and the best choice for good fuel economy and good starting in cold weather.

If SAE 0W-16 oil is not available, SAE 0W-20 oil may be used. However, it should be replaced with SAE 0W-16 at the next oil change.

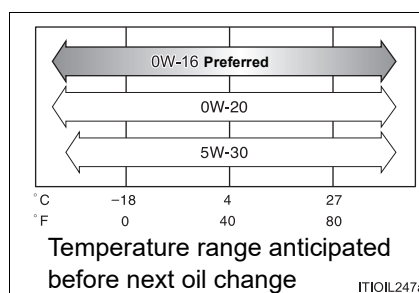

Oil viscosity (0W-16 is explained here as an example):

- The 0W in 0W-16 indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.
- The 16 in 0W-16 indicates the viscosity characteristic of the oil when the oil is at high temperature. An oil with a higher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

How to read oil container labels:


Either or both API registered marks are added to some oil containers to help you select the oil you should use.

① API Service Symbol

Top portion: “API SERVICE SP” means the oil quality designation by American Petroleum Institute (API).

Center portion: “SAE 0W-16” means the SAE viscosity grade.

Lower portion: “Resource-Conserving” means that the oil has fuel-saving and environmental protection capabilities.

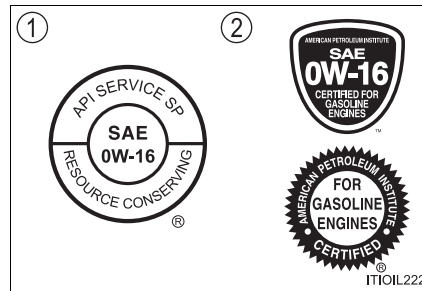

② ILSAC Certification Mark

The International Lubricant Specification Advisory Committee (ILSAC) Certification Mark is displayed on the front of the container.

### Lubrication system (for Georgia, New Caledonia and Russia)

#### Oil capacity (Drain and refill [Reference\*])

With filter	4.2 L (4.4 qt., 3.7 Imp.qt.)
Without filter	3.9 L (4.1 qt., 3.4 Imp.qt.)

\*: The engine oil capacity is a reference quantity to be used when changing the engine oil. Park the vehicle on level ground. After warming up the engine and turning off the hybrid system, wait more than 5 minutes, and check the oil level on the dipstick.

#### Engine oil selection

“Toyota Genuine Motor Oil” is used in your Toyota vehicle. Use Toyota approved “Toyota Genuine Motor Oil” or equivalent to satisfy the following grade and viscosity.

Oil grade:


0W-20, 5W-20, 5W-30 and 10W-30:

API grade SL “Energy-Conserving”, SM “Energy-Conserving”, SN “Resource-Conserving”, SN PLUS “Resource-Conserving” or SP “Resource-Conserving”; or ILSAC GF-6A multigrade engine oil

Recommended viscosity (SAE):

SAE 0W-20 is filled into your Toyota vehicle at manufacturing, and the best choice for good fuel economy and good starting in cold weather.

If you use SAE 10W-30 or a higher viscosity engine oil in extremely low temperatures, the engine may become difficult to start, so SAE 0W-20, 5W-20 or 5W-30 engine oil is recommended.

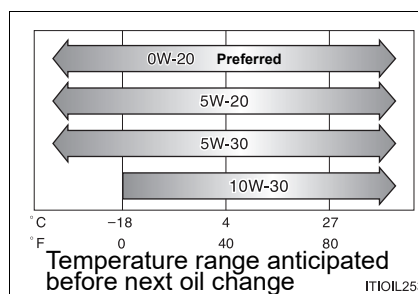

Oil viscosity (0W-20 is explained here as an example):

- The 0W in 0W-20 indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.
- The 20 in 0W-20 indicates the viscosity characteristic of the oil when the oil is at high temperature. An oil with a higher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

How to read oil container labels:


Either or both API registered marks are added to some oil containers to help you select the oil you should use.

① API Service Symbol

Top portion: "API SERVICE SP" means the oil quality designation by American Petroleum Institute (API).

Center portion: "SAE 0W-20" means the SAE viscosity grade.

Lower portion: "Resource-Conserving" means that the oil has fuel-saving and environmental protection capabilities.

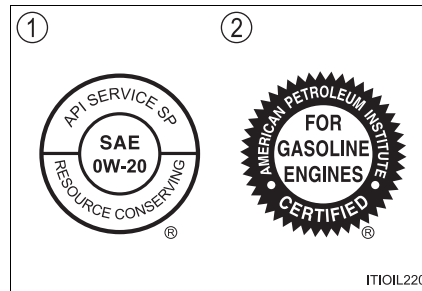

② ILSAC Certification Mark

The International Lubricant Specification Advisory Committee (ILSAC) Certification Mark is displayed on the front of the container.

**Cooling system**

Capacity*	Gasoline engine	<ul style="list-style-type: none"> <li>▶ Without exhaust heat recirculator system 5.6 L (5.9 qt., 4.9 Imp.qt.)</li> <li>▶ With exhaust heat recirculator system 6.2 L (6.6 qt., 5.5 Imp.qt.)</li> </ul>
	Power control unit	1.4 L (1.5 qt., 1.2 Imp.qt.)
Coolant type	Use either of the following: <ul style="list-style-type: none"> <li>• “Toyota Super Long Life Coolant”</li> <li>• Similar high-quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology</li> </ul> Do not use plain water alone.	

\*: The fluid capacity is the quantity of reference.  
 If replacement is necessary, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**Ignition system (spark plug)**

Make	DENSO FC16HR-CY9
Gap	0.9 mm (0.035 in.)

 NOTICE

■ **Iridium-tipped spark plugs**

Use only iridium-tipped spark plugs. Do not adjust the spark plug gap.



**Electrical system (12-volt battery)**

Specific gravity reading at 20°C (68°F):		1.25 or higher If the specific gravity is lower than the standard value, charge the battery.
Charging rates	Quick charge	15 A max.
	Slow charge	5 A max.

**Transmission**

Fluid capacity*	3.6 L (3.8 qt., 3.2 Imp.qt.)
Fluid type	Toyota Genuine ATF WS

\*: The fluid capacity is the quantity of reference.  
If replacement is necessary, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.


 NOTICE**■ Transmission fluid type**

Using transmission fluid other than the above type may cause abnormal noise or vibration, or ultimately damage the transmission of your vehicle.

**Rear differential (rear electric motor) (AWD models)**

Fluid capacity*	1.2 L (1.3 qt., 1.1 Imp.qt.)
Fluid type	Toyota Genuine ATF WS

\*: The fluid capacity is the quantity of reference.  
If replacement is necessary, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

 NOTICE**■ Transmission fluid type**

Using transmission fluid other than the above type may cause abnormal noise or vibration, or ultimately damage the transmission of your vehicle.

**Brakes**

Pedal clearance*1	<ul style="list-style-type: none"> <li>▶ Left-hand drive vehicles 119 mm (4.69 in.) Min.</li> <li>▶ Right-hand drive vehicles 117 mm (4.61 in.) Min.</li> </ul>
Pedal free play	1.0 — 6.0 mm (0.04 — 0.24 in.)
Parking brake pedal travel*2	8 — 11 clicks
Fluid type	SAE J1703 or FMVSS No.116 DOT 3 or SAE J1704 or FMVSS No.116 DOT 4

\*1: Minimum pedal clearance when depressed with a force of 300 N (30.6 kgf, 67.4 lbf) while the hybrid system is operating.

\*2: Parking brake pedal travel when depressed with a force of 300 N (30.6 kgf, 67.4 lbf).

**Steering**

Free play	Less than 30 mm (1.2 in.)
-----------	---------------------------

### Tires and wheels

► 15-inch tires (vehicles without full-size spare tire)

Tire size		195/65R15 91H
Tire inflation pressure (Recommended cold tire inflation pressure)	Front	250 kPa (2.5 kgf/cm <sup>2</sup> or bar, 36 psi)
	Rear	240 kPa (2.4 kgf/cm <sup>2</sup> or bar, 35 psi)
Wheel size		15 × 6 1/2J
Wheel nut torque		103 N•m (10.5 kgf•m, 76 ft•lbf)

► 15-inch tires (vehicles with full-size spare tire)

Tire size		195/65R15 91H
Tire inflation pressure (Recommended cold tire inflation pressure)	Front	220 kPa (2.2 kgf/cm <sup>2</sup> or bar, 32 psi)
	Rear	
Wheel size		15 × 6 1/2J
Wheel nut torque		103 N•m (10.5 kgf•m, 76 ft•lbf)

► 17-inch tires

Tire size		215/45R17 87W
Tire inflation pressure (Recommended cold tire inflation pressure)	Front	220 kPa (2.2 kgf/cm <sup>2</sup> or bar, 32 psi)
	Rear	210 kPa (2.1 kgf/cm <sup>2</sup> or bar, 30 psi)
Wheel size		17 × 7J
Wheel nut torque		103 N•m (10.5 kgf•m, 76 ft•lbf)

► Compact spare tire (if equipped)

Tire size	T125/70D17 98M
Tire inflation pressure (Recommended cold tire inflation pressure)	420 kPa (4.2 kgf/cm <sup>2</sup> or bar, 60 psi)
Wheel size	17 × 4T
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)

■ **When towing a trailer\***

Add 20.0 kPa (0.2 kgf/cm<sup>2</sup> or bar, 3 psi) to the recommended tire inflation pressure and drive at speeds below 100 km/h (62 mph).

\*: Vehicles that can tow a trailer. (→P. 233)

**Light bulbs**

	Light bulbs	W	Type
Exterior	Rear turn signal lights	21	A
	Back-up light	16	B
Interior	Vanity lights	8	B
	Front interior/personal lights	5	B
	Rear interior light	8	C
	Door courtesy lights	5	B
	Luggage compartment light	5	B

A: Wedge base bulbs (amber)

B: Wedge base bulbs (clear)

C: Double end bulbs

## Fuel information

When you find these types of fuel label at the gas station, use only the fuel with one of the following labels.



**EU area:**

You must only use unleaded gasoline conforming to European standard EN228.

Select unleaded gasoline with a Research Octane Number of 95 or higher for optimum engine performance.

**Except EU area (except Russia):**

You must only use unleaded gasoline.

Select unleaded gasoline with a Research Octane Number of 95 or higher for optimum engine performance.

**Except EU area (Russia):**

You must only use unleaded gasoline.

Select unleaded gasoline with a Research Octane Number of 91 or higher for optimum engine performance.

### ■ Use of ethanol blended gasoline in a gasoline engine

Toyota allows the use of ethanol blended gasoline where the ethanol content is up to 10%. Make sure that the ethanol blended gasoline to be used has a Research Octane Number that follows the above.

### ■ If your engine knocks

- Consult any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- You may occasionally notice light knocking for a short time while accelerating or driving uphill. This is normal and there is no need for concern.

 NOTICE**■ Notice on fuel quality**

- Do not use improper fuels. If improper fuels are used, the engine will be damaged.
- Do not use gasoline with metallic additives, for example manganese, iron or lead, otherwise it may cause damage on your engine or emission control system.
- Do not add aftermarket fuel additives which contain metallic additives.
- EU area: Bioethanol fuel sold under names such as “E50” or “E85” and fuel containing a large amount of ethanol should not be used. The use of these fuels will damage the vehicle’s fuel system. In case of any doubt, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Except EU area: Bioethanol fuel sold under names such as “E50” or “E85” and fuel containing a large amount of ethanol should not be used. Your vehicle can use gasoline mixed with 10% max ethanol. The use of fuel with more than 10% ethanol content (E10) will damage the vehicle’s fuel system. You must ensure that refueling is carried out only from a source where fuel specification and quality can be guaranteed. In case of any doubt, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not use the methanol blended gasoline such as M15, M85, M100. The use of gasoline containing methanol may cause engine damage or failure.

## Customizable features














**Your vehicle includes a variety of electronic features that can be personalized to suit your preferences. The settings of these features can be changed using the multi-information display, the navigation/multimedia system, or at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**


Some function settings are changed simultaneously with other functions being customized. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for further details.

### Customizing vehicle features

When customizing vehicle features, ensure that the vehicle is parked in a safe place with the parking brake set and the shift position in P.

#### ■ Changing using the multi-information display

- 1 Press  or  of the meter control switches, select .
- 2 Press  or  of the meter control switches, select  ("Vehicle Settings"), and then press .
- 3 Press  or  of the meter control switches, select the item, and then press .
- 4 Press  or  of the meter control switches, select the desired setting, and then press .

To go back to the previous screen or exit the customize mode, press .



### ■ Changing using the navigation/multimedia system

- ① Press the "SETUP" button.
- ② Select "Vehicle" on the "Setup" screen and select "Vehicle customization".

Various settings can be changed. Refer to the list of settings that can be changed for details.

### Customizable features

- ① Settings that can be changed using the multi-information display
- ② Settings that can be changed using the navigation/multimedia system
- ③ Settings that can be changed by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer

Definition of symbols: O = Available, – = Not available

### ■ Instrument cluster (→P. 100)

Function	Default setting	Customized setting	①	②	③
Sensor sensitivity for darkening the brightness of the instrument cluster depending on the outside brightness	Standard	-2 to 2	–	–	O
Sensor sensitivity for returning the brightness of the instrument cluster to the original level depending on the outside brightness	Standard	-2 to 2	–	–	O

■ **Smart entry & start system and wireless remote control**  
 (→P. 177, 187)

Function	Default setting	Customized setting	①	②	③
Operation signal (emergency flashers)	On	Off	–	○	○
Open door reminder buzzer (When locking the vehicle)	On	Off	–	–	○
Time elapsed before the automatic door lock function is activated if a door is not opened after being unlocked	30 seconds	60 seconds	–	–	○
		120 seconds			

■ **Smart entry & start system (→P. 187)**

Function	Default setting	Customized setting	①	②	③
Smart entry & start system	On	Off	–	○	○
Number of consecutive door lock operations*	2 times	As many as desired	–	–	○

\*: If equipped

■ **Wireless remote control (→P. 177)**

Function	Default setting	Customized setting	①	②	③
Wireless remote control	On	Off	–	–	○

■ **Rear seat reminder (→P. 180)**

Function	Default setting	Customized setting	①	②	③
Rear seat reminder function	On	Off	○	–	–

### ■ Outside rear view mirrors (→P. 207)

Function	Default setting	Customized setting	①	②	③
Automatic mirror folding and extending operation	Linked to the locking/unlocking of the doors	Off			
		Linked to operation of the power switch	-	-	○

### ■ Power windows and moon roof\* (→P. 210, 215)

Function	Default setting	Customized setting	①	②	③
Mechanical key linked operation (open)	Off	On	-	-	○
Mechanical key linked operation (close)	Off	On	-	-	○
Wireless remote control linked operation (open)	Off	On	-	-	○
Wireless remote control linked operation (close)	Off	On	-	-	○
Wireless remote control linked operation signal (buzzer)	On	Off	-	-	○

\*: If equipped

### ■ Reverse warning buzzer (→P. 253)

Function	Default setting	Customized setting	①	②	③
Signal (buzzer) when the shift position is in R	Off	Intermittent	-	-	○

### ■ Turn signal lever (→P. 259)

Function	Default setting	Customized setting	①	②	③
Times of flashing of the lane change signal flashers	3	Off			
		5	-	-	○
		7			

■ Automatic light control system (→P. 261)

Function	Default setting	Customized setting	①	②	③
Light sensor sensitivity	Level 0	Level -2 to 2	–	○	○
Time elapsed before headlights turn off (Extended Headlight Lighting system)	30 seconds	60 seconds	–	–	○
		90 seconds			
		120 seconds			

■ Rain-sensing windshield wipers\* (→P. 271)

Function	Default setting	Customized setting	①	②	③
Wiper operation when the wiper switch is in the AUTO position	Rain-sensing operation	Intermittent operation linked to vehicle speed (with interval adjuster)	–	–	○

\*: If equipped

### ■ RSA (Road Sign Assist)\*<sup>1</sup> (→P. 323)

Function	Default setting	Customized setting	①	②	③
RSA (Road Sign Assist)* <sup>2</sup>	On	Off	O	–	–
Excess speed notification method* <sup>3</sup>	Display only	No notification	O	–	–
		Display and buzzer			
Excess speed notification level	2 km/h (1 mph)	5 km/h (3 mph)	O	–	–
		10 km/h (5 mph)			
No overtaking notification method	Display only	No notification	O	–	–
		Display and buzzer			
Other notifications method (No-entry notification)* <sup>4</sup>	Display only	No notification	O	–	–
		Display and buzzer			

\*<sup>1</sup>: If equipped

\*<sup>2</sup>: RSA (Road Sign Assist) function becomes On when the power switch is turned to ON mode.

\*<sup>3</sup>: If a speed limit with supplemental mark is exceeded, the notification buzzer does not operate.

\*<sup>4</sup>: Vehicles with navigation system.

### ■ BSM (Blind Spot Monitor)\* (→P. 356)

Function	Default setting	Customized setting	①	②	③
Outside rear view mirror indicator brightness	Bright	Dim	–	–	O

\*: If equipped

**■ Toyota parking assist-sensor\* (→P. 381)**

Function	Default setting	Customized setting	①	②	③
Detection distance of the front center sensors	Far	Near	–	–	○
Detection distance of the rear center sensors	Far	Near	–	–	○
Buzzer volume	3	1 to 5	–	–	○

\*: If equipped

**■ S-IPA (Simple Intelligent Parking Assist System)\* (→P. 405)**

Function	Default setting	Customized setting	①	②	③
Obstacle detection range	Standard	Near	–	–	○
		Slightly far			
		Far			
Back-in parking space	Standard	Narrow	–	–	○
		Slightly wide			
		Wide			
Parallel parking space	Standard	Narrow	–	–	○
		Slightly wide			
		Wide			

\*: If equipped

**■ Automatic air conditioning system (→P. 458)**

Function	Default setting	Customized setting	①	②	③
Switching between outside air and recirculated air mode linked to A/C auto switch operation	On	Off	–	○	○

### ■ Illumination (→P. 470)

Function	Default setting	Customized setting	①	②	③
Time elapsed before the interior lights turn off	15 seconds	Off			
		7.5 seconds	–	○	○
		30 seconds			
Operation after the power switch is turned off	On	Off	–	–	○
Operation when the doors are unlocked	On	Off	–	–	○
Operation when you approach the vehicle with the electronic key on your person	On	Off	–	–	○
Footwell lighting	On	Off	–	–	○
Interior lights illumination control	On	Off	–	–	○

### ■ Maintenance system

Tire pressure warning system*	Initializing the tire pressure warning system: →P. 530
-------------------------------	---

\*: If equipped

■ In the following situations, customize mode in which the settings can be changed through the multi-information display will automatically be turned off.

- A warning message appears after the customize mode screen is displayed.
- The power switch is turned off.
- The vehicle begins to move while the customize mode screen is displayed.

**WARNING****■ Cautions during customization**

As the hybrid system needs to be operating during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

**NOTICE****■ During customization**

To prevent 12-volt battery discharge, ensure that the hybrid system is operating while customizing features.



## Items to initialize

The following items must be initialized for normal system operation after such cases as the 12-volt battery being reconnected, or maintenance being performed on the vehicle:

Item	When to initialize	Reference
Power window	When functioning abnormally	P. 211
Moon roof (if equipped)	When functioning abnormally	P. 217
Parking Support Brake function (if equipped)	After reconnecting or changing the 12-volt battery	P. 402
S-IPA (Simple Intelligent Parking Assist System) (if equipped)	After reconnecting or changing the 12-volt battery	P. 430
Panoramic view monitor (if equipped)	After reconnecting or changing the 12-volt battery	Refer to "Navigation and multimedia system Owner's manual".
Tire pressure warning system (if equipped)	<ul style="list-style-type: none"> <li>• When rotating the tires on vehicles with differing front and rear tire inflation pressures</li> <li>• When changing the tire inflation pressure by changing traveling speed or load weight, etc.</li> </ul>	P. 530



## Index

681

What to do if... (Troubleshooting).....	682
Alphabetical index .....	686

For vehicles with navigation system or multimedia system, refer to the “Navigation and multimedia system Owner’s manual” for information regarding the equipment listed below.

- Navigation system
- Hands-free system (for cellular phone)
- Audio/video system
- Toyota parking assist monitor
- Panoramic view monitor

## What to do if... (Troubleshooting)

**If you have a problem, check the following before contacting any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.**

### The doors cannot be locked, unlocked, opened or closed



#### You lose your keys

- If you lose your mechanical keys, new genuine mechanical keys can be made by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. (→P. 173)
- If you lose your electronic keys, the risk of vehicle theft increases significantly. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately. (→P. 176)



#### The doors cannot be locked or unlocked

- Is the electronic key battery weak or depleted? (→P. 554)
- Is the power switch in ON mode?  
When locking the doors, turn the power switch off. (→P. 246)
- Is the electronic key left inside the vehicle?  
When locking the doors, make sure that you have the electronic key on your person.
- The function may not operate properly due to the condition of the radio wave. (→P. 190)



#### The rear door cannot be opened

- Is the child-protector lock set?  
The rear door cannot be opened from inside the vehicle when the lock is set. Open the rear door from outside and then unlock the child-protector lock. (→P. 180)

**If you think something is wrong****The hybrid system does not start**

- Did you press the power switch while firmly depressing the brake pedal?  
(→P. 244)
- Is the shift position in P? (→P. 254)
- Is the electronic key anywhere detectable inside the vehicle? (→P. 188)
- Is the electronic key battery weak or depleted?  
In this case, the hybrid system can be started in a temporary way.  
(→P. 637)
- Is the 12-volt battery discharged? (→P. 639)

**The windows do not open or close by operating the power window switches**

- Is the window lock switch pressed?  
The power windows except for the one at the driver's seat cannot be operated if the window lock switch is pressed. (→P. 210)

**The power switch is turned off automatically**

- The auto power off function will be operated if the vehicle is left in ACCESSORY or ON mode (the hybrid system is not operating) for a period of time. (→P. 246)



**A warning buzzer sounds during driving**

- The seat belt reminder light is flashing  
Are the driver and the front passenger wearing the seat belts? (→P. 585)
  - The parking brake indicator is on  
Is the parking brake released? (→P. 260)
- Depending on the situation, other types of warning buzzer may also sound.  
(→P. 580, 589)



**An alarm is activated and the horn sounds  
(vehicles with alarm)**

- Did anyone inside the vehicle open a door during setting the alarm?  
The sensor detects it and the alarm sounds. (→P. 93)
- To stop the alarm, turn the power switch to ON mode or start the hybrid system.



**A warning buzzer sounds when leaving the vehicle**

- Is the electronic key left inside the vehicle?  
Check the message on the multi-information display. (→P. 589)



**A warning light turns on or a warning message is displayed**

- When a warning light turns on or a warning message is displayed, refer to P. 580, 589.

**When a problem has occurred****If you have a flat tire**

- Vehicles without spare tire  
Stop the vehicle in a safe place and repair the flat tire temporarily with the emergency tire puncture repair kit. (→P. 598)
- Vehicles with spare tire  
Stop the vehicle in a safe place and replace the flat tire with the spare tire. (→P. 618)

**The vehicle becomes stuck**

- Try the procedure for when the vehicle becomes stuck in mud, dirt, or snow. (→P. 650)

## Alphabetical index

### A

<b>A/C</b> .....	<b>458</b>
Air conditioning filter.....	542
Automatic air conditioning system.....	458
Blower customization.....	462
Eco score (A/C score).....	150
Front seat concentrated airflow mode (S-FLOW).....	461
<b>ABS (Anti-lock Brake System)</b> .....	<b>441</b>
Function.....	441
Warning light.....	581
<b>ACA (Active Cornering Assist)</b> .....	<b>441</b>
<b>Active Cornering Assist (ACA)</b> .....	<b>441</b>
<b>AHB (Automatic High Beam)</b> .....	<b>266</b>
<b>Air conditioning filter</b> .....	<b>542</b>
<b>Air conditioning system</b> .....	<b>458</b>
Air conditioning filter.....	542
Automatic air conditioning system.....	458
Blower customization.....	462
Eco score (A/C score).....	150
Front seat concentrated airflow mode (S-FLOW).....	461
<b>Air intake vent</b> .....	<b>85</b>
Cleaning.....	545
<b>Airbag manual on-off system</b> .....	<b>51</b>

<b>Airbags</b> .....	<b>39</b>
Airbag manual on-off system.....	51
Airbag operating conditions....	45
Airbag precautions for your child.....	41
Airbag warning light.....	581
Correct driving posture.....	32
Curtain shield airbag operating conditions.....	46
Curtain shield airbag precautions.....	43
General airbag precautions....	41
Locations of airbags.....	39
Modification and disposal of airbags.....	44
Side airbag operating conditions.....	46
Side airbag precautions.....	42
Side and curtain shield airbags operating conditions.....	46
Side and curtain shield airbags precautions.....	43
SRS airbags.....	39
<b>Alarm</b> .....	<b>93</b>
Alarm.....	93
Intrusion sensor.....	96



<b>Antenna</b>	
Smart entry & start system.....	187
<b>Anti-lock brake system</b>	
<b>(ABS)</b> .....	<b>441</b>
Function .....	441
Warning light.....	581
<b>Approach warning</b> .....	<b>339</b>
<b>Armrest</b> .....	<b>493</b>
<b>Assist grips</b> .....	<b>494</b>
<b>Audio input*</b>	
<b>Audio system*</b>	
<b>Automatic air conditioning</b>	
<b>system</b> .....	<b>458</b>
Air conditioning filter.....	542
Automatic air conditioning	
system .....	458
Blower customization .....	462
Eco score (A/C score).....	150
Front seat concentrated	
airflow mode (S-FLOW).....	461
<b>Automatic headlight leveling</b>	
<b>system</b> .....	<b>264</b>
<b>Automatic High Beam</b>	
<b>(AHB)</b> .....	<b>266</b>
<b>Automatic light control</b>	
<b>system</b> .....	<b>263</b>
<b>Auxiliary box</b> .....	<b>477</b>

**B**

<b>Back door</b> .....	<b>182</b>
<b>Back-up light</b> .....	<b>561</b>
Replacing light bulb .....	562
Wattage .....	667
<b>Battery (12-volt battery)</b> .....	<b>521</b>
Battery checking .....	521
If the 12-volt battery is	
discharged .....	639
Preparing and checking	
before winter.....	452
Replacing.....	642
Warning light.....	580
<b>Battery (traction battery)</b> .....	<b>84</b>
Air intake vent .....	85
Location .....	84
Specification .....	657
<b>Blind Spot Monitor (BSM)</b> .....	<b>356</b>
Blind Spot Monitor	
function.....	372
Rear Crossing Traffic Alert	
function.....	375
<b>Bluetooth®*</b>	
<b>Bottle holders</b> .....	<b>476</b>
<b>Brake</b>	
Fluid .....	664
Parking brake.....	260
Regenerative braking.....	81
Warning light.....	580
<b>Brake assist</b> .....	<b>441</b>
<b>Brake Override System</b> .....	<b>221</b>
<b>Break-in tips</b> .....	<b>222</b>
<b>Brightness control</b>	
Instrument cluster light	
control.....	102
<b>BSM (Blind Spot Monitor)</b> .....	<b>356</b>
Blind Spot Monitor function...	372
Rear Crossing Traffic Alert	
function.....	375

\*: Refer to “Navigation and multimedia system Owner’s manual”.

**C**

**Care**.....496, 502  
 Aluminum wheels.....497  
 Exterior.....496  
 Front camera.....285  
 Interior.....502  
 Radar sensor .....284  
 Seat belts.....503  
 Water-repellent coating.....497  
**Cargo hooks**.....480  
**Catch protection function**.....211  
**Chains**.....453  
**Child restraint system** .....54  
 Child restraint system  
   installation method.....67  
   Fixed with a seat belt .....68  
   Fixed with an ISOFIX lower  
     anchorage.....70  
   Points to remember.....54  
   Riding with children.....53  
   Using a top tether  
     anchorage.....72  
**Child safety** .....53  
   12-volt battery precautions...524  
   Airbag precautions.....41  
   Back door precautions .....184  
   Child restraint system .....54  
   How your child should wear  
     the seat belt.....36  
   Installing child restraints.....67  
   Moon roof precautions .....218  
   Power window lock switch ...210  
   Power window precautions ...213  
   Rear door child-protectors ....180  
   Removed key battery  
     precautions.....556  
   Riding with children.....53  
   Seat belt precautions .....69  
   Seat heater precautions.....468

**Child-protectors**.....180  
**Cleaning** .....496, 502  
   Aluminum wheels.....497  
   Exterior .....496  
   Front camera .....285  
   Hybrid battery (traction  
     battery) air intake vent.....545  
   Interior.....502  
   Radar sensor .....284  
   Seat belts.....503  
   Water-repellent coating.....497  
**Clock**.....100  
   Adjustment.....106  
**Coat hooks**.....493  
**Combination meter**.....100  
   Clock adjustment .....106  
   Main display .....117  
   Multi-information display .....127  
   Warning lights and  
     indicators .....110  
**Condenser**.....520  
**Console box**.....474  
**Coolant** .....518  
   Capacity.....662  
   Checking.....518  
   Preparing and checking  
     before winter.....452  
**Cooling system**.....518  
   Engine overheating.....645  
   Hybrid system overheating ...647  
**Consumption screen**.....166  
**Cruise control**  
   Cruise control.....346  
   Dynamic radar cruise control  
     with full-speed range .....329  
**Cup holders**.....475  
**Curtain shield airbags**.....39  
**Customizable features** .....670

**D**

<b>Daytime running light system</b> .....	<b>263</b>
<b>Deck board</b> .....	<b>479</b>
<b>Defogger</b>	
Outside rear view mirrors .....	463
Rear window .....	463
Windshield .....	462
<b>Dimension</b> .....	<b>654</b>
<b>Display</b>	
Drive information .....	129
Dynamic radar cruise control with full-speed range .....	329
Energy monitor .....	130, 166
Head-up display .....	160
LTA (Lane Tracing Assist) ....	316
Main display .....	117
Multi-information display .....	127
Parking Support Brake function .....	400
Pre-collision warning .....	297
RCTA detection screen .....	356
RSA (Road Sign Assist) .....	324
S-IPA (Simple Intelligent Parking Assist System) .....	409
Toyota parking assist-sensor .....	382
Warning messages .....	589
<b>Do-it-yourself maintenance</b> ....	<b>508</b>
<b>Door courtesy lights</b> .....	<b>470</b>
Location .....	470
Wattage .....	667

**Doors**

Back door .....	182
Door glasses .....	210
Door lock .....	177
Open door warning buzzer ...	180
Open door warning light .....	583
Outside rear view mirrors .....	207
Rear door child-protectors ...	180
Side doors .....	177
Side windows .....	210
<b>Double locking system</b> .....	<b>92</b>
<b>Drive information</b> .....	<b>129</b>
<b>Drive-Start Control (DSC)</b> .....	<b>221</b>
Sudden start restraint control .....	221
<b>Driver's seat belt reminder light</b> .....	<b>584</b>
<b>Driving</b> .....	<b>220</b>
Break-in tips .....	222
Correct driving posture .....	32
Driving in the rain .....	221
Driving mode select switch ...	351
Hybrid vehicle driving tips ....	449
Procedures .....	220
Winter drive tips .....	452
<b>DSC (Drive-Start Control)</b> .....	<b>221</b>
Sudden start restraint control .....	221
<b>Dynamic radar cruise control with full-speed range</b> .....	<b>329</b>

**E**

**ECB (Electronically Controlled Brake System) .... 441**  
**Eco drive mode ..... 351**  
**Electric motor (traction motor)**  
 Location ..... 79  
 Specification ..... 657  
**Electric Power Steering (EPS) ..... 442**  
 Function ..... 442  
 Warning light ..... 581  
**Electronic key ..... 172**  
 Battery-saving function ..... 189  
 If the electronic key does not operate properly ..... 636  
 Replacing the battery ..... 554  
**Electronically Controlled Brake System (ECB) ..... 441**  
**Emergency brake signal ..... 442**  
**Emergency flashers ..... 568**  
 Emergency brake signal ..... 442  
**Emergency tire puncture repair kit ..... 602**  
**Emergency, in case of**  
 If a warning buzzer sounds ... 580  
 If a warning light turns on ..... 580  
 If a warning message is displayed ..... 589  
 If the 12-volt battery is discharged ..... 639  
 If the electronic key does not operate properly ..... 636  
 If the hybrid system will not start ..... 634  
 If the vehicle becomes stuck ..... 650  
 If the vehicle is submerged or water on the road is rising ..... 570

If you have a flat tire ..... 598, 618  
 If you lose your keys ..... 173, 176  
 If you think something is wrong ..... 579  
 If your vehicle has to be stopped in an emergency ... 569  
 If your vehicle needs to be towed ..... 572  
 If your vehicle overheats ..... 645  
**Energy monitor ..... 130, 166**  
**Engine ..... 656**  
 Accessory mode ..... 246  
 Compartment ..... 514  
 Engine switch (power switch) ..... 244  
 Exhaust gas precautions ..... 50  
 Hood ..... 511  
 How to start the hybrid system ..... 244  
 Identification number ..... 656  
 If the hybrid system will not start ..... 634  
 If your vehicle has to be stopped in an emergency ... 569  
 Ignition switch (power switch) ..... 244  
 Overheating ..... 645  
 Power switch ..... 244  
**Engine coolant ..... 518**  
 Capacity ..... 662  
 Checking ..... 518  
 Preparing and checking before winter ..... 452

**Engine oil..... 515**  
 Capacity ..... 658  
 Checking ..... 515  
 Oil pressure warning light ..... 581  
 Preparing and checking  
     before winter ..... 452  
**Engine switch (power switch) ..... 244**  
 Auto power off function ..... 246  
 Changing the power switch  
     modes ..... 246  
 If your vehicle has to be  
     stopped in an emergency ... 569  
 Starting the hybrid system .... 244  
**EPS (Electric Power Steering) ..... 442**  
 Function ..... 442  
 Warning light ..... 581  
**ERA-GLONASS ..... 74**  
**EV drive mode ..... 250**  
**EV indicator ..... 132**  
**EVAK ..... 74**  
**Exhaust gas precautions ..... 50**  
**Extended Headlight Lighting system ..... 263**

**F**

**First-aid kit storage space ..... 481**  
**Flat tire ..... 598, 618**  
**Floor mat ..... 30**  
**Fluid**  
     Brake ..... 664  
     Transmission ..... 663  
     Washer ..... 526  
**Fog lights ..... 270**  
     Replacing light bulbs ..... 565  
     Switch ..... 270  
**Footwell lights ..... 470**  
**Front camera ..... 283**  
**Front doors ..... 177**  
**Front fog lights ..... 270**  
     Replacing light bulbs ..... 565  
     Switch ..... 270  
**Front passenger's seat belt reminder light ..... 584**  
**Front position lights ..... 261**  
     Light switch ..... 261  
     Replacing light bulbs ..... 565  
**Front seat concentrated airflow mode (S-FLOW) ..... 461**  
**Front seats ..... 194**  
     Adjustment ..... 194  
     Cleaning ..... 502  
     Correct driving posture ..... 32  
     Head restraints ..... 199  
     Seat heaters ..... 468  
**Front turn signal lights ..... 259**  
     Replacing light bulbs ..... 565  
     Turn signal lever ..... 259

**Fuel ..... 668**  
 Capacity ..... 657  
 Fuel gauge ..... 118, 120  
 Information ..... 668  
 Refueling ..... 277  
 Type ..... 657  
 Warning light ..... 583  
**Fuel consumption ..... 136, 169**  
**Fuel filler door ..... 279**  
 Opener ..... 279  
 Refueling ..... 277  
 When the fuel filler door  
 cannot be opened ..... 280  
**Fuses ..... 557**

**G**

**Glove box ..... 474**

**H**

**Hands-free system (for  
 cellular phone)\***  
**Head restraints ..... 199**  
**Head-up display ..... 160**  
**Headlights ..... 261**  
 AHB (Automatic High  
 Beam) ..... 266  
 Automatic headlight  
 leveling ..... 264  
 Extended Headlight  
 Lighting system ..... 263  
 Light switch ..... 261  
 Replacing light bulbs ..... 565  
**Heaters**  
 Automatic air conditioning  
 system ..... 458  
 Outside rear view mirrors ..... 463  
 Seat heaters ..... 468  
**High coolant temperature  
 warning light ..... 583**  
**High mounted stoplight**  
 Replacing ..... 565

**High-voltage components ..... 84**  
**Hill-start assist control ..... 442**  
**Hood ..... 511**  
**Hooks**  
 Cargo hooks ..... 480  
 Coat hooks ..... 493  
 Grocery bag hook ..... 481  
 Retaining hooks (floor mat) ..... 30  
**Horn ..... 203**  
**Hybrid battery (traction battery)**  
 Air intake vent ..... 85  
 Location ..... 84  
 Specification ..... 657  
**Hybrid battery (traction  
 battery) air intake vent ..... 85**  
 Cleaning ..... 545  
**Hybrid system ..... 79**  
 Brake Override System ..... 221  
 Drive-Start Control ..... 222  
 Emergency shut off system .... 85  
 Energy monitor/consumption  
 screen ..... 130, 166  
 EV drive mode ..... 250  
 High voltage components ..... 84  
 Hybrid System Indicator ..... 132  
 Hybrid system precautions .... 84  
 Hybrid vehicle driving tips .... 449  
 If the hybrid system will not  
 start ..... 634  
 Overheating ..... 645  
 Power switch ..... 244  
 Regenerative braking ..... 81  
 Starting the hybrid system .... 244  
 Vehicle proximity notification  
 system ..... 80  
**Hybrid System Indicator ..... 132**  
**Hybrid transmission ..... 253**

**I**

**Identification ..... 655**  
 Engine ..... 656  
 Vehicle ..... 655  
**Ignition switch (power switch) ..... 244**  
 Auto power off function ..... 246  
 Changing the power switch modes ..... 246  
 If your vehicle has to be stopped in an emergency ... 569  
 Starting the hybrid system .... 244  
**Illuminated entry system ..... 472**  
**Immobilizer system ..... 91**  
**Indicators ..... 110**  
**Initialization ..... 679**  
 Items to initialize ..... 679  
 Moon roof ..... 217  
 Parking Support Brake function ..... 402  
 Power windows ..... 211  
 S-IPA (Simple Intelligent Parking Assist System) ..... 430  
 Tire pressure warning system ..... 531  
**Inside rear view mirror ..... 205**  
**Instrument cluster light control ..... 102**  
**Interior lights ..... 470**  
 Switch ..... 471, 472  
 Wattage ..... 667  
**Intrusion sensor ..... 96**  
**ISOFIX lower anchorages ..... 70**

**J**

**Jack**  
 Positioning a floor jack ..... 513  
 Vehicle-equipped jack... 600, 619  
**Jack handle ..... 600, 619**  
**Jam protection function**  
 Moon roof ..... 216  
 Power windows ..... 211

**K**

**Keyless entry ..... 177**  
 Smart entry & start system ... 187  
 Wireless remote control ..... 177  
**Keys ..... 172**  
 Battery-saving function ..... 189  
 Electronic key ..... 172  
 Engine switch (power switch) ..... 244  
 If the electronic key does not operate properly ..... 636  
 If you lose your keys ..... 173, 176  
 Key number plate ..... 172  
 Keyless entry ..... 177  
 Mechanical key ..... 173  
 Power switch ..... 244  
 Replacing the battery ..... 554  
 Smart entry & start system ... 187  
 Warning buzzer ..... 188  
 Wireless remote control ..... 177  
**Knee airbag ..... 39**

\*: Refer to “Navigation and multimedia system Owner’s manual”.

**L**

**Language (multi-information display)..... 156**

**Lever**

- Auxiliary catch lever ..... 511
- Hood lock release lever ..... 511
- Shift lever ..... 253
- Tilt and telescopic steering lock release lever..... 203
- Turn signal lever ..... 259
- Wiper lever ..... 271

**License plate lights ..... 261**

- Light switch ..... 261
- Replacing light bulbs ..... 565

**Light**

- AHB (Automatic High Beam) ..... 266
- Door courtesy lights ..... 470
- Emergency flashers ..... 568
- Extended Headlight Lighting system..... 263
- Fog light switch ..... 270
- Footwell lights ..... 470
- Headlight switch..... 261
- Illuminated entry system ..... 472
- Interior lights ..... 471, 472
- Interior light list..... 470
- Luggage compartment light..... 183
- Personal lights ..... 471
- Replacing light bulbs ..... 561
- Shift lever light ..... 470
- Turn signal lever ..... 259
- Vanity lights..... 485
- Wattage..... 667

**Light bulbs**

- Replacing ..... 561
- Wattage..... 667

**LTA (Lane Tracing Assist) ..... 307**

**Luggage cover ..... 483**

**M**

**Main display ..... 117**

**Maintenance**

- Do-it-yourself maintenance... 508
- Maintenance data ..... 654
- Maintenance requirements ... 505

**Malfunction indicator lamp..... 581**

**Master warning light..... 589**

**Meter ..... 100**

- Clock adjustment ..... 106
- Combination meter ..... 100
- Head-up display..... 160
- Indicators ..... 110
- Instrument cluster light control..... 102
- Main display ..... 117
- Multi-information display ..... 127
- Warning lights ..... 110
- Warning messages ..... 589

**Microphone\***

**Mirrors**

- Inside rear view mirror ..... 205
- Outside rear view mirror defoggers ..... 463
- Outside rear view mirrors..... 207
- Vanity mirrors..... 485

**Moon roof ..... 215**

- Door lock linked moon roof operation ..... 216
- Jam protection function..... 216
- Operation ..... 215



**Multi-information display ..... 127**  
 Air conditioning system  
     settings screen ..... 148  
 Audio system-linked  
     display ..... 147  
 Display contents ..... 127  
 Drive information ..... 129  
 Driving assist system  
     information ..... 152  
 Dynamic radar cruise control  
     with full-speed range ..... 329  
 Energy monitor ..... 130  
 Language ..... 156  
 LTA (Lane Tracing Assist) .... 316  
 Parking Support Brake  
     function ..... 400  
 Pre-collision warning ..... 297  
 RCTA detection screen ..... 356  
 RSA (Road Sign Assist) ..... 324  
 S-IPA (Simple Intelligent  
     Parking Assist System) ..... 409  
 Settings display ..... 153  
 Toyota parking  
     assist-sensor ..... 382  
 Warning message display .... 152  
**Multimedia system\***

**N**

**Navigation system\***

**O**

**Odometer ..... 121**  
**Oil**  
     Engine oil ..... 658  
**Opener**  
     Back door ..... 182  
     Fuel filler door ..... 279  
     Hood ..... 511  
**Outside rear view mirrors ..... 207**  
     Adjustment ..... 207  
     BSM (Blind Spot Monitor) .... 356  
     Folding ..... 207  
     Outside rear view mirror  
         defoggers ..... 463  
**Outside temperature**  
     display ..... 118, 120  
**Overhead console ..... 477**  
**Overheating ..... 645**

\*: Refer to “Navigation and multimedia system Owner’s manual”.

**P**

**P position switch** ..... 254

**Panoramic view monitor\***

**Parking assist sensors**

    Parking Support Brake  
        function ..... 394

    S-IPA (Simple Intelligent  
        Parking Assist System)..... 405

    Toyota parking  
        assist-sensor ..... 381

**Parking brake** ..... 260

    Operation ..... 260

    Parking brake engaged  
        warning buzzer ..... 260

**Parking lock** ..... 254

**Parking Support Brake  
function** ..... 394

**PCS (Pre-Collision System) .... 296**

    Enabling/disabling the  
        system ..... 300

    Function ..... 296

    Warning light ..... 582

**Personal lights** ..... 470

    Switch ..... 471

    Wattage ..... 667

**Power control unit coolant .... 518**

    Capacity ..... 662

    Checking ..... 518

    Preparing and checking  
        before winter ..... 452

    Radiator ..... 520

**Power outlets** ..... 486

**Power steering (Electric  
Power Steering)** ..... 442

    Function ..... 442

    Warning light ..... 581

**Power switch**..... 244

    Auto power off function ..... 246

    Changing the power  
        switch modes..... 246

    If your vehicle has to be  
        stopped in an emergency ... 569

    Starting the hybrid system .... 244

**Power windows**..... 210

    Catch protection function ..... 211

    Door lock linked window  
        operation ..... 212

    Jam protection function..... 211

    Operation ..... 210

    Window lock switch..... 210

**Pre-Collision System (PCS) .... 296**

    Enabling/disabling the  
        system ..... 300

    Function ..... 296

    Warning light ..... 582

**R**

**Radar cruise control**

    Dynamic radar cruise control  
        with full-speed range ..... 329

**Radiator** ..... 520

**Radio\***

**RCTA (Rear Crossing Traffic  
Alert)**..... 375

    Blind Spot Monitor  
        function ..... 372

    Rear Crossing Traffic Alert  
        function ..... 375

**Rear Crossing Traffic Alert  
(RCTA)**..... 375

    Blind Spot Monitor  
        function ..... 372

    Rear Crossing Traffic Alert  
        function ..... 375

**Rear fog light.....270**  
 Replacing light bulb.....565  
 Switch .....270  
**Rear passengers' seat belt reminder light .....584**  
**Rear seat.....196**  
**Rear seat reminder function ...180**  
**Rear turn signal lights.....259**  
 Replacing light bulbs.....562  
 Turn signal lever .....259  
 Wattage.....667  
**Rear view mirror**  
 Inside rear view mirror .....205  
 Outside rear view mirrors.....207  
**Rear window defogger .....463**  
**Rear window wiper .....275**  
**Refueling .....277**  
 Capacity.....657  
 Fuel types .....657  
 Opening the fuel tank cap.....279  
 When the fuel filler door cannot be opened.....280  
**Regenerative braking .....81**  
**Replacing**  
 Electronic key battery.....554  
 Fuses .....557  
 Light bulbs.....561  
 Tires .....618  
 Wiper insert.....550  
**Road accident cautions .....88**  
**Road Sign Assist (RSA) .....323**  
**RSA (Road Sign Assist) .....323**

**S**

**S-FLOW (Front seat concentrated airflow mode) .....461**  
**S-IPA (Simple Intelligent Parking Assist System) .....405**  
**Seat back pockets .....478**  
**Seat belts.....34**  
 Adjusting the seat belt .....35  
 Child restraint system installation .....68  
 Cleaning and maintaining the seat belt.....503  
 Emergency Locking Retractor (ELR).....36  
 How to wear your seat belt .....32  
 How your child should wear the seat belt.....36  
 Pregnant women, proper seat belt use .....37  
 Reminder light and buzzer....584  
 Seat belt pretensioners.....35  
 SRS warning light .....581  
**Seat heaters .....468**  
**Seats .....194, 196**  
 Adjustment.....194  
 Adjustment precautions .....195  
 Armrest .....493  
 Child seats/child restraint system installation .....67  
 Cleaning.....502  
 Front seats.....194  
 Head restraint .....199  
 Properly sitting in the seat .....32  
 Rear seats .....196  
 Seat back pocket .....478  
 Seat heaters .....468

\*: Refer to "Navigation and multimedia system Owner's manual".

**Sensor**

AHB (Automatic High Beam) ..... 266

Automatic headlight system ..... 263

BSM (Blind Spot Monitor) ..... 371

Door handle ..... 177

Front camera ..... 283

Inside rear view mirror ..... 206

Intrusion sensor ..... 96

LTA (Lane Tracing Assist) .... 307

Parking Support Brake function ..... 396

Radar sensor ..... 283

Rain-sensing windshield wipers ..... 273

RCTA (Rear Crossing Traffic Alert function) ..... 371

S-IPA (Simple Intelligent Parking Assist System)..... 435

Toyota parking assist-sensor ..... 381

**Service reminder indicators ... 110**

**Shift lever ..... 253**

**Shift lever light..... 470**

**Side airbags ..... 39**

**Side doors ..... 177**

**Side mirrors..... 207**

Adjustment ..... 207

BSM (Blind Spot Monitor) ..... 356

Folding ..... 207

Outside rear view mirror defoggers..... 463

**Side turn signal lights ..... 259**

Replacing light bulbs ..... 565

Turn signal lever ..... 259

**Side windows ..... 210**

Water-repellent coating ..... 497

**Simple Intelligent Parking Assist System (S-IPA) ..... 405**

**Smart entry & start system..... 187**

Antenna location ..... 187

Entry functions ..... 177, 182

Starting the hybrid system .... 244

**Snow tires ..... 452**

**Spare tire ..... 618**

Inflation pressure ..... 665

Storage location ..... 619

**Spark plug ..... 662**

**Specifications ..... 654**

**Speech command system\***

**Speed limiter ..... 353**

**Speedometer ..... 118, 120**

**SRS airbags ..... 39**

**Steering wheel ..... 203**

Adjustment ..... 203

Audio switches\*

Meter control switches ..... 101

Talk switch\*

Telephone switches\*

TRIP switch..... 121

**Stop lights**

Replacing light bulbs ..... 565

**Storage feature ..... 473**

**Storage precautions..... 473**

**Stuck**

If the vehicle becomes stuck ..... 650

**Sun visors ..... 485**

**Sunshade**

Moon roof..... 216

**Switch**

Audio remote control switches\*

Automatic High Beam switch ..... 266

Camera switch\*

Cruise control switch..... 329, 346

Door lock switches..... 179

Driving mode select switch ... 351

Emergency flashers switch ... 568  
 Engine switch (power switch) ..... 244  
 EV drive mode switch ..... 250  
 Fog light switch ..... 270  
 Fuel filler door opener switch..... 279  
 “HUD” (Head-up display) switch..... 161  
 Ignition switch (power switch) ..... 244  
 Instrument cluster light control switch..... 102  
 LTA (Lane Tracing Assist) switch..... 315  
 Light switch ..... 261  
 Meter control switches ..... 101  
 Moon roof switches ..... 215  
 Outside rear view mirror switches..... 207  
 P position switch ..... 254  
 Power door lock switches ..... 179  
 Power switch..... 244  
 Power window switch..... 210  
 Rear window wiper and washer switch ..... 275  
 Rear window and outside rear view mirror defoggers switch..... 463  
 S-IPA switch..... 408  
 Seat heater switches..... 469  
 “SOS” button ..... 74  
 Speed limiter ..... 353  
 Talk switch\*  
 Telephone switches\*  
 TRIP switch..... 121

Vehicle-to-vehicle distance switch ..... 337  
 VSC OFF switch ..... 443  
 Window lock switch..... 210  
 Windshield wipers and washer switch..... 271  
 Wireless charger power supply switch..... 487

**T**

**Tail lights ..... 261**  
 Light switch ..... 261  
 Replacing light bulbs..... 565  
**Talk switch\***  
**Telephone switch\***  
**Theft deterrent system**  
 Alarm ..... 93  
 Double locking system..... 92  
 Immobilizer system ..... 91  
 Intrusion sensor ..... 96  
**Tire inflation pressure ..... 537**  
 Maintenance data ..... 665  
 Warning light..... 584  
**Tire pressure warning system ..... 530**  
 Function ..... 530  
 Initializing ..... 530  
 Installing tire pressure warning valves and transmitters..... 530  
 Registering ID codes ..... 531  
 Warning light..... 584

\*: Refer to “Navigation and multimedia system Owner’s manual”.

**Tires ..... 528**  
 Chains ..... 453  
 Checking ..... 528  
 Emergency tire puncture  
 repair kit ..... 598  
 If you have a flat tire ..... 598, 618  
 Inflation pressure ..... 537  
 Replacing ..... 618  
 Rotating tires ..... 529  
 Size ..... 665  
 Snow tires ..... 452  
 Spare tire ..... 618, 665  
 Tire pressure warning  
 system ..... 530  
 Warning light ..... 584

**Tonneau cover (luggage  
 cover) ..... 483**

**Tools ..... 600, 619**

**Top strap ..... 72**

**Top tether anchorages ..... 72**

**Towing**  
 Emergency towing ..... 572  
 Towing eyelet ..... 575  
 Trailer towing ..... 233, 243

**Toyota parking  
 assist-sensor ..... 381**

**Toyota Safety Sense ..... 282**

**Traction battery (hybrid  
 battery) ..... 84**  
 Air intake vent ..... 85  
 Location ..... 84  
 Specification ..... 657

**Traction control (TRC) ..... 441**  
 Function ..... 441  
 VSC OFF switch ..... 443

**Traction motor (electric  
 motor) ..... 79**

**Trailer towing ..... 233, 243**

**Transmission ..... 253**  
 Driving mode select switch ... 351  
 Hybrid transmission ..... 253  
 P position switch ..... 254

**TRC (Traction Control) ..... 441**  
 Function ..... 441  
 VSC OFF switch ..... 443

**Trip meters ..... 121**

**Turn signal lights ..... 259**  
 Replacing light bulbs ..... 562, 565  
 Turn signal lever ..... 259  
 Wattage ..... 667

**U**

**USB port\***

**V**

**Vanity lights ..... 485**  
 Wattage ..... 667

**Vanity mirrors ..... 485**  
 Vanity lights ..... 485

**Vehicle data recording ..... 10**

**Vehicle identification  
 number ..... 655**

**Vehicle proximity  
 notification system ..... 80**

**Vehicle Stability Control  
 (VSC) ..... 441**  
 Function ..... 441  
 VSC OFF switch ..... 443

**VSC (Vehicle Stability  
 Control) ..... 441**  
 Function ..... 441  
 VSC OFF switch ..... 443

**W**

**Warning buzzers**

Approach warning ..... 339  
 Brake system ..... 580  
 LTA (Lane Tracing Assist) .... 312  
 Open door ..... 180, 583  
 Parking Support Brake  
     function ..... 400  
 Pre-collision warning ..... 297  
 Radar cruise control ..... 339  
 RCTA (Rear Crossing Traffic  
     Alert) ..... 356  
 Seat belt reminder ..... 584  
 Shift position ..... 255  
 Toyota parking  
     assist-sensor ..... 385

**Warning lights..... 110**

ABS ..... 581  
 Brake Override System ..... 585  
 Brake system ..... 580  
 Charging system ..... 580  
 Drive-Start Control ..... 585  
 Driver's seat belt reminder  
     light ..... 584  
 Electronic engine control  
     system ..... 581  
 Electric power steering  
     system ..... 581  
 Front passenger's seat belt  
     reminder light ..... 584  
 High coolant temperature ..... 583  
 Low engine oil pressure ..... 581  
 Low fuel level ..... 583  
 Malfunction indicator lamp .... 581  
 Master warning light ..... 584  
 Open door ..... 583  
 Parking Support Brake  
     function ..... 585  
 PCS ..... 582  
 PKSB OFF indicator ..... 583  
 Rear passengers' seat belt  
     reminder light ..... 584  
 Seat belt reminder light ..... 584  
 Slip indicator ..... 582  
 SRS ..... 581  
 Tire pressure ..... 584

\*: Refer to "Navigation and multimedia system Owner's manual".

<b>Warning messages .....</b>	<b>589</b>
<b>Warning reflector storage</b>	
<b>space .....</b>	<b>482</b>
<b>Washer .....</b>	<b>271, 275</b>
Checking .....	526
Preparing and checking	
before winter .....	452
Switch .....	271, 275
<b>Washing and waxing .....</b>	<b>496</b>
<b>Water-repellent coating .....</b>	<b>497</b>
<b>Wheels .....</b>	<b>539</b>
Replacing wheels .....	618
Size .....	665
<b>Window glasses .....</b>	<b>210</b>
<b>Window lock switch .....</b>	<b>210</b>
<b>Windows</b>	
Power windows .....	210
Rear window defogger .....	463
Washer .....	271, 275
<b>Windshield wipers .....</b>	<b>271</b>
Handling the wiper arms .....	501
Rain-sensing windshield	
wipers .....	272
Replacing the wiper insert .....	550
<b>Winter driving tips .....</b>	<b>452</b>
<b>Wiper insert replacement .....</b>	<b>550</b>
<b>Wireless charger .....</b>	<b>487</b>
<b>Wireless remote control .....</b>	<b>172</b>
Battery-Saving Function .....	189
Locking/Unlocking .....	177
Replacing the battery .....	554





## Certifications

### Immobilizer system

Hereby, TOYOTA MOTOR CORPORATION declares that the radio equipment type TMIMB-3 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<http://www.tokai-rika.co.jp/pc>

Frequency band: 119 - 135 kHz

Maximum radio-frequency power: 55dB $\mu$ A/m @10m

TOYOTA MOTOR CORPORATION vakuuttaa, että radiolaitetyyppi TMIMB-3 on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

<http://www.tokai-rika.co.jp/pc>

Radiotaajuus: 119 - 135 kHz

suurin mahdollinen lähetysteho: 55dB $\mu$ A/m @10m

Hierbij verklaar ik, TOYOTA MOTOR CORPORATION, dat het type radioapparatuur TMIMB-3 conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

<http://www.tokai-rika.co.jp/pc>

Frequentieband: 119 - 135 kHz

Maximaal radiofrequentievermogen: 55dB $\mu$ A/m @10m

Le soussigné, TOYOTA MOTOR CORPORATION, déclare que l'équipement radioélectrique du type TMIMB-3 est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

<http://www.tokai-rika.co.jp/pc>

Bande de fréquences: 119 - 135 kHz

Puissance de radiofréquence maximale: 55dB $\mu$ A/m @10m

Härmed försäkrar TOYOTA MOTOR CORPORATION att denna typ av radioutrustning TMIMB-3 överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

<http://www.tokai-rika.co.jp/pc>

Frekvensband: 119 - 135 kHz

Maximal radiofrekvensseffekt: 55dB $\mu$ A/m @10m

Hermed erklærer TOYOTA MOTOR CORPORATION, at radioudstyrstypen TMIMB-3 er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

<http://www.tokai-rika.co.jp/pc>

Frekvensbånd: 119 - 135 kHz

Maksimal radiofrekvensseffekt: 55dB $\mu$ A/m @10m

Hiermit erklärt TOYOTA MOTOR CORPORATION, dass der Funkanlagentyp TMIMB-3 der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

<http://www.tokai-rika.co.jp/pc>

Frequenzband: 119 - 135 kHz

Abgestrahlte maximale Sendeleistung: 55dBμA/m @10m

Με την παρούσα ο/η TOYOTA MOTOR CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός TMIMB-3 πληροί την οδηγία 2014/53/EE.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

<http://www.tokai-rika.co.jp/pc>

Ζώνη συχνότητων: 119 - 135 kHz

Μέγιστη ισχύς ραδιοσυχνότητας: 55dBμA/m @10m

Il fabbricante, TOYOTA MOTOR CORPORATION, dichiara che il tipo di apparecchiatura radio TMIMB-3 è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

<http://www.tokai-rika.co.jp/pc>

Banda di frequenza: 119 - 135 kHz

Potenza massima radiofrequenza: 55dBμA/m @10m

Por la presente, TOYOTA MOTOR CORPORATION declara que el tipo de equipo radioeléctrico TMIMB-3 es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

<http://www.tokai-rika.co.jp/pc>

Banda de frecuencia: 119 - 135 kHz

Potencia máxima de radiofrecuencia: 55dB $\mu$ A/m @10m

O(a) abaixo assinado(a) TOYOTA MOTOR CORPORATION declara que o presente tipo de equipamento de rádio TMIMB-3 está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

<http://www.tokai-rika.co.jp/pc>

Banda de frequência: 119 - 135 kHz

Potência máxima de radiofrequências: 55dB $\mu$ A/m @10m

B'dan, TOYOTA MOTOR CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju TMIMB-3 huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:

<http://www.tokai-rika.co.jp/pc>

Tíðnisvið: 119 - 135 kHz

Hámarks útværpsbylgjutíðni: 55dB $\mu$ A/m @10m

Käesolevaga deklareerib TOYOTA MOTOR CORPORATION, et käesolev raadioseadme tüüp TMIMB-3 vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

<http://www.tokai-rika.co.jp/pc>

Sagedusriba: 119 - 135 kHz

Maksimaalne saatevõimsus: 55dB $\mu$ A/m @10m

TOYOTA MOTOR CORPORATION igazolja, hogy a TMIMB-3 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

<http://www.tokai-rika.co.jp/pc>

Frekvenciasáv: 119 - 135 kHz

Maximális jelerősség: 55dB $\mu$ A/m @10m

TOYOTA MOTOR CORPORATION týmto vyhlasuje, že rádiové zariadenie typu TMIMB-3 je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

<http://www.tokai-rika.co.jp/pc>

Frekvenčné pásmo: 119 - 135 kHz

Maximálny rádiový výkon: 55dB $\mu$ A/m @10m

Tímto TOYOTA MOTOR CORPORATION prohlašuje, že typ rádiového zařízení TMIMB-3 je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

<http://www.tokai-rika.co.jp/pc>

Kmitočtové pásmo: 119 - 135 kHz

Maximální radiofrekvenční výkon: 55dB $\mu$ A/m @10m

TOYOTA MOTOR CORPORATION potvrzuje, da je tip radijske opreme TMIMB-3 skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

<http://www.tokai-rika.co.jp/pc>

Frekvenčni pas: 119 - 135 kHz

Največja moč radijske frekvence: 55dB $\mu$ A/m @10m

Aš, TOYOTA MOTOR CORPORATION, patvirtinu, kad radijo įrenginių tipas TMIMB-3 atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

<http://www.tokai-rika.co.jp/pc>

Dažnių juosta: 119 - 135 kHz

Didžiausia radijo dažnių galia: 55dB $\mu$ A/m @10m

Ar šo TOYOTA MOTOR CORPORATION deklārē, ka radioiekārta TMIMB-3 atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

<http://www.tokai-rika.co.jp/pc>

Frekvenču josla: 119 - 135 kHz

Maksimālā radiofrekvenču jauda: 55dB $\mu$ A/m @10m

TOYOTA MOTOR CORPORATION niniešzīm ošwiadcza, że typ urządzenia radiowego TMIMB-3 jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

<http://www.tokai-rika.co.jp/pc>

Zakres częstotliwości: 119 - 135 kHz

Maksymalna moc częstotliwości radiowej: 55dB $\mu$ A/m @10m

TOYOTA MOTOR CORPORATION lýsir því hér með yfir að fjarskiptatækið af gerð TMIMB-3 er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisýfirlýsingin er tiltæk á eftirfarandi vefslóð:

<http://www.tokai-rika.co.jp/pc>

Tíðnisvið: 119 - 135 kHz

Hámarks útvarpsbylgjutíðni: 55dB $\mu$ A/m @10m



TOYOTA MOTOR CORPORATION erklærer herved at radioustyrtypen TMIMB-3 er i samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:

<http://www.tokai-rika.co.jp/pc>

Frekvensbånd: 119 - 135 kHz

Maksimal radiofrekvensseffekt: 55dB $\mu$ A/m @10m

С настоящото TOYOTA MOTOR CORPORATION декларира, че този тип радиосъоръжение TMIMB-3 е в съответствие с Директива 2014/53/ЕС.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:

<http://www.tokai-rika.co.jp/pc>

Радиочестотна лента: 119 - 135 kHz

Максимална радиочестотна мощност: 55dB $\mu$ A/m @10m

Prin prezenta, TOYOTA MOTOR CORPORATION declară că tipul de echipamente radio TMIMB-3 este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

<http://www.tokai-rika.co.jp/pc>

Banda de frecvență: 119 - 135 kHz

Puterea maximă de radiofrecvență: 55dB $\mu$ A/m @10m

Ovime TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMIMB-3 u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sljedećoj internet adresi:

<http://www.tokai-rika.co.jp/pc>

Frekvencijski opseg: 119 - 135 kHz

Maksimalna radio-frekvencijska snaga: 55dB $\mu$ A/m @10m

Me anë të këtij dokumenti, TOYOTA MOTOR CORPORATION deklaron se tipi i radiopajisjes TMIMB-3 është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit:

<http://www.tokai-rika.co.jp/pc>

Brezi i frekuencës: 119 - 135 kHz

Fuqia maksimale e radiofrekuencës: 55dB $\mu$ A/m @10m

TOYOTA MOTOR CORPORATION ovime izjavljuje da je radijska oprema tipa TMIMB-3 u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

<http://www.tokai-rika.co.jp/pc>

Frekvencijski pojas: 119 - 135 kHz

Maksimalna RF snaga: 55dB $\mu$ A/m @10m

Ovim TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMIMB-3 u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:

<http://www.tokai-rika.co.jp/pc>

Frekventni opseg: 119 - 135 kHz

Maksimalna radio-frekventna snaga: 55dB $\mu$ A/m @10m

TOYOTA MOTOR CORPORATION, işbu belgeyle telsiz cihazı türünün TMIMB-3 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:

<http://www.tokai-rika.co.jp/pc>

Frekans bandı: 119 - 135 kHz

Maksimum radyo frekans gücü: 55dB $\mu$ A/m @10m



Address: 1, Toyota-cho, Toyota, Aichi, 471-8572, Japan

**Smart entry & start system**

Hereby, TOYOTA MOTOR CORPORATION declares that the radio equipment type TMLF15-1 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<http://www.tokai-rika.co.jp/pc>

Frequency band: 119 - 135 kHz

Maximum radio-frequency power: 55dB $\mu$ A/m @10m

TOYOTA MOTOR CORPORATION vakuuttaa, että radiolaitetyyppi TMLF15-1 on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

<http://www.tokai-rika.co.jp/pc>

Radiotaajuus: 119 - 135 kHz

suurin mahdollinen lähetysteho: 55dB $\mu$ A/m @10m

Hierbij verklaar ik, TOYOTA MOTOR CORPORATION, dat het type radioapparatuur TMLF15-1 conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

<http://www.tokai-rika.co.jp/pc>

Frequentieband: 119 - 135 kHz

Maximaal radiofrequentievermogen: 55dB $\mu$ A/m @10m

Le soussigné, TOYOTA MOTOR CORPORATION, déclare que l'équipement radioélectrique du type TMLF15-1 est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

<http://www.tokai-rika.co.jp/pc>

Bande de fréquences: 119 - 135 kHz

Puissance de radiofréquence maximale: 55dB $\mu$ A/m @10m

Härmed försäkrar TOYOTA MOTOR CORPORATION att denna typ av radioutrustning TMLF15-1 överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

<http://www.tokai-rika.co.jp/pc>

Frekvensband: 119 - 135 kHz

Maximal radiofrekvensseffekt: 55dB $\mu$ A/m @10m

Hermed erklærer TOYOTA MOTOR CORPORATION, at radioudstyrstypen TMLF15-1 er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

<http://www.tokai-rika.co.jp/pc>

Frekvensbånd: 119 - 135 kHz

Maksimal radiofrekvensseffekt: 55dB $\mu$ A/m @10m

Hiermit erklärt TOYOTA MOTOR CORPORATION, dass der Funkanlagentyp TMLF15-1 der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

<http://www.tokai-rika.co.jp/pc>

Frequenzband: 119 - 135 kHz

Abgestrahlte maximale Sendeleistung: 55dBμA/m @10m

Με την παρούσα ο/η TOYOTA MOTOR CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός TMLF15-1 πληροί την οδηγία 2014/53/EE.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

<http://www.tokai-rika.co.jp/pc>

Ζώνη συχνοτήτων: 119 - 135 kHz

Μέγιστη ισχύς ραδιοσυχνότητας: 55dBμA/m @10m

Il fabbricante, TOYOTA MOTOR CORPORATION, dichiara che il tipo di apparecchiatura radio TMLF15-1 è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

<http://www.tokai-rika.co.jp/pc>

Banda di frequenza: 119 - 135 kHz

Potenza massima radiofrequenza: 55dBμA/m @10m

Por la presente, TOYOTA MOTOR CORPORATION declara que el tipo de equipo radioeléctrico TMLF15-1 es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

<http://www.tokai-rika.co.jp/pc>

Banda de frecuencia: 119 - 135 kHz

Potencia máxima de radiofrecuencia: 55dB $\mu$ A/m @10m

O(a) abaixo assinado(a) TOYOTA MOTOR CORPORATION declara que o presente tipo de equipamento de rádio TMLF15-1 está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

<http://www.tokai-rika.co.jp/pc>

Banda de frequência: 119 - 135 kHz

Potência máxima de radiofrequências: 55dB $\mu$ A/m @10m

B'dan, TOYOTA MOTOR CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju TMLF15-1 huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:

<http://www.tokai-rika.co.jp/pc>

Tíðnisvið: 119 - 135 kHz

Hámarks útværpsbylgjutíðni: 55dB $\mu$ A/m @10m

Käesolevaga deklareerib TOYOTA MOTOR CORPORATION, et käesolev raadioseadme tüüp TMLF15-1 vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

<http://www.tokai-rika.co.jp/pc>

Sagedusriba: 119 - 135 kHz

Maksimaalne saatevõimsus: 55dB $\mu$ A/m @10m

TOYOTA MOTOR CORPORATION igazolja, hogy a TMLF15-1 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

<http://www.tokai-rika.co.jp/pc>

Frekvenciasáv: 119 - 135 kHz

Maximális jelerősség: 55dB $\mu$ A/m @10m

TOYOTA MOTOR CORPORATION týmto vyhlasuje, že rádiové zariadenie typu TMLF15-1 je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

<http://www.tokai-rika.co.jp/pc>

Frekvenčné pásmo: 119 - 135 kHz

Maximálny rádiový výkon: 55dB $\mu$ A/m @10m



Tímto TOYOTA MOTOR CORPORATION prohlašuje, že typ rádiového zařízení TMLF15-1 je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

<http://www.tokai-rika.co.jp/pc>

Kmitočtové pásmo: 119 - 135 kHz

Maximální radiofrekvenční výkon: 55dB $\mu$ A/m @10m

TOYOTA MOTOR CORPORATION potvrzuje, da je tip radijske opreme TMLF15-1 skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

<http://www.tokai-rika.co.jp/pc>

Frekvenčni pas: 119 - 135 kHz

Največja moč radijske frekvence: 55dB $\mu$ A/m @10m

Aš, TOYOTA MOTOR CORPORATION, patvirtinu, kad radijo įrenginių tipas TMLF15-1 atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

<http://www.tokai-rika.co.jp/pc>

Dažnių juosta: 119 - 135 kHz

Didžiausia radijo dažnių galia: 55dB $\mu$ A/m @10m

Ar šo TOYOTA MOTOR CORPORATION deklarē, ka radioiekārta TMLF15-1 atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

<http://www.tokai-rika.co.jp/pc>

Frekvenču josla: 119 - 135 kHz

Maksimālā radiofrekvenču jauda: 55dB $\mu$ A/m @10m

TOYOTA MOTOR CORPORATION niniešzīm ošwadcza, że typ urządzenia radiowego TMLF15-1 jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

<http://www.tokai-rika.co.jp/pc>

Zakres częstotliwości: 119 - 135 kHz

Maksymalna moc częstotliwości radiowej: 55dB $\mu$ A/m @10m

TOYOTA MOTOR CORPORATION lýsir því hér með yfir að fjarskiptatækið af gerð TMLF15-1 er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisýfirlýsingin er tiltæk á eftirfarandi vefslóð:

<http://www.tokai-rika.co.jp/pc>

Tíðnisvið: 119 - 135 kHz

Hámarks útværpsbylgjutíðni: 55dB $\mu$ A/m @10m

TOYOTA MOTOR CORPORATION erklærer herved at radioutstyrtypen TMLF15-1 er i samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:

<http://www.tokai-rika.co.jp/pc>

Frekvensbånd: 119 - 135 kHz

Maksimal radiofrekvensseffekt: 55dB $\mu$ A/m @10m

С настоящото TOYOTA MOTOR CORPORATION декларира, че този тип радиосъоръжение TMLF15-1 е в съответствие с Директива 2014/53/ЕС.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:

<http://www.tokai-rika.co.jp/pc>

Радиочестотна лента: 119 - 135 kHz

Максимална радиочестотна мощност: 55dB $\mu$ A/m @10m

Prin prezenta, TOYOTA MOTOR CORPORATION declară că tipul de echipamente radio TMLF15-1 este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

<http://www.tokai-rika.co.jp/pc>

Banda de frecvență: 119 - 135 kHz

Puterea maximă de radiofrecvență: 55dB $\mu$ A/m @10m

Ovime TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMLF15-1 u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi:

<http://www.tokai-rika.co.jp/pc>

Frekvencijski opseg: 119 - 135 kHz

Maksimalna radio-frekvencijska snaga: 55dB $\mu$ A/m @10m

Me anë të këtij dokumenti, TOYOTA MOTOR CORPORATION deklararon se tipi i radiopajisjes TMLF15-1 është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit:

<http://www.tokai-rika.co.jp/pc>

Brezi i frekuencës: 119 - 135 kHz

Fuqia maksimale e radiofrekuencës: 55dB $\mu$ A/m @10m

TOYOTA MOTOR CORPORATION ovime izjavljuje da je radijska oprema tipa TMLF15-1 u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

<http://www.tokai-rika.co.jp/pc>

Frekvencijski pojas: 119 - 135 kHz

Maksimalna RF snaga: 55dB $\mu$ A/m @10m

Ovim TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMLF15-1 u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:

<http://www.tokai-rika.co.jp/pc>

Frekventni opseg: 119 - 135 kHz

Maksimalna radio-frekventna snaga: 55dB $\mu$ A/m @10m

TOYOTA MOTOR CORPORATION, işbu belgeyle telsiz cihazı türünün TMLF15-1 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:

<http://www.tokai-rika.co.jp/pc>

Frekans bandı: 119 - 135 kHz

Maksimum radyo frekans gücü: 55dB $\mu$ A/m @10m



Address: 1, Toyota-cho, Toyota, Aichi, 471-8572, Japan

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type BF3US is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi BF3US on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

<http://www.tokai-rika.co.jp/pc>

Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur BF3US conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

<http://www.tokai-rika.co.jp/pc>

Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type BF3US est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

<http://www.tokai-rika.co.jp/pc>

Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning BF3US överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

<http://www.tokai-rika.co.jp/pc>

Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen BF3US er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

<http://www.tokai-rika.co.jp/pc>

Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp BF3US der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

<http://www.tokai-rika.co.jp/pc>

Με την παρούσα ο/η TOKAI RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός BF3US πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

<http://www.tokai-rika.co.jp/pc>

Il fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio BF3US è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

<http://www.tokai-rika.co.jp/pc>

Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico BF3US es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

<http://www.tokai-rika.co.jp/pc>

O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio BF3US está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

<http://www.tokai-rika.co.jp/pc>

B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju BF3US huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:

<http://www.tokai-rika.co.jp/pc>

Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp BF3US vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. igazolja, hogy a BF3US típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu BF3US je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

<http://www.tokai-rika.co.jp/pc>



Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení BF3US je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. potvrzuje, da je tip radijske opreme BF3US skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

<http://www.tokai-rika.co.jp/pc>

Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas BF3US atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

<http://www.tokai-rika.co.jp/pc>

Ar šo TOKAI RIKA CO., LTD. deklarė, ka radioiekārta BF3US atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego BF3US jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð BF3US er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisýfirlýsingin er tiltæk á eftirfarandi vefslóð:  
<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. erklærar herved at radioutstyrtypen BF3US er í samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:  
<http://www.tokai-rika.co.jp/pc>

С настоящото TOKAI RIKA CO., LTD. декларира, че този тип радиосъоръжение BF3US е в съответствие с Директива 2014/53/ЕС.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:  
<http://www.tokai-rika.co.jp/pc>

Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio BF3US este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:  
<http://www.tokai-rika.co.jp/pc>

Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BF3US u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi:  
<http://www.tokai-rika.co.jp/pc>

Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaron se tipi i radiopajisjes BF3US është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit:  
<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa BF3US u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:  
<http://www.tokai-rika.co.jp/pc>

Ovim TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BF3US u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:  
<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD., işbu belgeyle telsiz cihazı türünün BF3US 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:  
<http://www.tokai-rika.co.jp/pc>



Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Receiver Category (EN300 220): 2

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type BG2KV is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi BG2KV on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

<http://www.tokai-rika.co.jp/pc>

Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur BG2KV conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

<http://www.tokai-rika.co.jp/pc>

Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type BG2KV est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

<http://www.tokai-rika.co.jp/pc>

Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning BG2KV överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

<http://www.tokai-rika.co.jp/pc>

Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen BG2KV er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

<http://www.tokai-rika.co.jp/pc>

Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp BG2KV der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

<http://www.tokai-rika.co.jp/pc>

Με την παρούσα ο/η TOKAI RIKΑ CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός BG2KV πληροί την οδηγία 2014/53/EE.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

<http://www.tokai-rika.co.jp/pc>

Il fabbricante, TOKAI RIKΑ CO., LTD., dichiara che il tipo di apparecchiatura radio BG2KV è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

<http://www.tokai-rika.co.jp/pc>

Por la presente, TOKAI RIKΑ CO., LTD. declara que el tipo de equipo radioeléctrico BG2KV es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

<http://www.tokai-rika.co.jp/pc>

O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio BG2KV está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

<http://www.tokai-rika.co.jp/pc>

B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju BG2KV huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:

<http://www.tokai-rika.co.jp/pc>

Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp BG2KV vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. igazolja, hogy a BG2KV típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu BG2KV je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

<http://www.tokai-rika.co.jp/pc>

Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení BG2KV je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. potvrzuje, da je tip radijske opreme BG2KV skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

<http://www.tokai-rika.co.jp/pc>

Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas BG2KV atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

<http://www.tokai-rika.co.jp/pc>

Ar šo TOKAI RIKA CO., LTD. deklarė, ka radioiekārta BG2KV atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego BG2KV jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð BG2KV er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisýfirlýsingin er tiltæk á eftirfarandi vefslóð:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. erklærar herved at radioutstyrtypen BG2KV er í samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:

<http://www.tokai-rika.co.jp/pc>

С настоящото TOKAI RIKA CO., LTD. декларира, че този тип радиосъоръжение BG2KV е в съответствие с Директива 2014/53/ЕС.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:

<http://www.tokai-rika.co.jp/pc>

Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio BG2KV este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

<http://www.tokai-rika.co.jp/pc>

Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BG2KV u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi:

<http://www.tokai-rika.co.jp/pc>



Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaron se tipi i radiopajisjes BG2KV është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa BG2KV u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

<http://www.tokai-rika.co.jp/pc>

Ovim TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BG2KV u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD., işbu belgeyle telsiz cihazı türünün BG2KV 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:

<http://www.tokai-rika.co.jp/pc>



Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Receiver Category (EN300 220): 2

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type BR2EX is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<http://www.tokai-rika.co.jp/pc>

Frequency band: 433.050 - 434.790 MHz  
Maximum radio-frequency power: 10mW(ERP)

TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi BR2EX on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

<http://www.tokai-rika.co.jp/pc>

Radiotaajuus: 433.050 - 434.790 MHz  
suurin mahdollinen lähetysteho: 10mW(ERP)

Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur BR2EX conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

<http://www.tokai-rika.co.jp/pc>

Frequentieband: 433.050 - 434.790 MHz  
Maximaal radiofrequentievermogen: 10mW(ERP)

Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type BR2EX est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

<http://www.tokai-rika.co.jp/pc>

Bande de fréquences: 433.050 - 434.790 MHz

Puissance de radiofréquence maximale: 10mW(ERP)

Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning BR2EX överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

<http://www.tokai-rika.co.jp/pc>

Frekvensband: 433.050 - 434.790 MHz

Maximal radiofrekvenseffekt: 10mW(ERP)

Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen BR2EX er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

<http://www.tokai-rika.co.jp/pc>

Frekvensbånd: 433.050 - 434.790 MHz

Maksimal radiofrekvenseffekt: 10mW(ERP)

Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp BR2EX der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

<http://www.tokai-rika.co.jp/pc>

Frequenzband: 433.050 - 434.790 MHz

Abgestrahlte maximale Sendeleistung: 10mW(ERP)

Με την παρούσα ο/η TOKAI RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός BR2EX πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

<http://www.tokai-rika.co.jp/pc>

Ζώνη συχνότητων: 433.050 - 434.790 MHz

Μέγιστη ισχύς ραδιοσυχνότητας: 10mW(ERP)

Il fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio BR2EX è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

<http://www.tokai-rika.co.jp/pc>

Banda di frequenza: 433.050 - 434.790 MHz

Potenza massima radiofrequenza: 10mW(ERP)

Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico BR2EX es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

<http://www.tokai-rika.co.jp/pc>

Banda de frecuencia: 433.050 - 434.790 MHz

Potencia máxima de radiofrecuencia: 10mW(ERP)

O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio BR2EX está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

<http://www.tokai-rika.co.jp/pc>

Banda de frequência: 433.050 - 434.790 MHz

Potência máxima de radiofrequências: 10mW(ERP)

B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju BR2EX huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:

<http://www.tokai-rika.co.jp/pc>

Tíðnisvið: 433.050 - 434.790 MHz

Hámarks útværpsbylgjutíðni: 10mW(ERP)

Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp BR2EX vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

<http://www.tokai-rika.co.jp/pc>

Sagedusriba: 433.050 - 434.790 MHz  
Maksimaalne saatevõimsus: 10mW(ERP)

TOKAI RIKA CO., LTD. igazolja, hogy a BR2EX típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

<http://www.tokai-rika.co.jp/pc>

Frekvenciasáv: 433.050 - 434.790 MHz  
Maximális jelerősség: 10mW(ERP)

TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu BR2EX je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

<http://www.tokai-rika.co.jp/pc>

Frekvenčné pásmo: 433.050 - 434.790 MHz  
Maximálny rádiový výkon: 10mW(ERP)

Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení BR2EX je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

<http://www.tokai-rika.co.jp/pc>

Kmitočtové pásmo: 433.050 - 434.790 MHz  
Maximální radiofrekvenční výkon: 10mW(ERP)

TOKAI RIKA CO., LTD. potvrzuje, da je tip radijske opreme BR2EX skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

<http://www.tokai-rika.co.jp/pc>

Frekvenčni pas: 433.050 - 434.790 MHz  
Največja moč radijske frekvence: 10mW(ERP)

Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas BR2EX atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

<http://www.tokai-rika.co.jp/pc>

Dažnių juosta: 433.050 - 434.790 MHz  
Didžiausia radijo dažnių galia: 10mW(ERP)

Ar šo TOKAI RIKA CO., LTD. deklarē, ka radioiekārta BR2EX atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

<http://www.tokai-rika.co.jp/pc>

Frekvenču josla: 433.050 - 434.790 MHz  
Maksimālā radiofrekvenču jauda: 10mW(ERP)

TOKAI RIKA CO., LTD. niniešzym oświadcza, że typ urządzenia radiowego BR2EX jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

<http://www.tokai-rika.co.jp/pc>

Zakres częstotliwości: 433.050 - 434.790 MHz  
Maksymalna moc częstotliwości radiowej: 10mW(ERP)

TOKAI RIKA CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð BR2EX er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisýfirlýsingin er tiltæk á eftirfarandi vefslóð:

<http://www.tokai-rika.co.jp/pc>

Tíðnisvið: 433.050 - 434.790 MHz  
Hámarks útláttarþráttíðni: 10mW(ERP)



TOKAI RIKА CO., LTD. erklærer herved at radioutstyrtypen BR2EX er i samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:

<http://www.tokai-rika.co.jp/pc>

Frekvensbånd: 433.050 - 434.790 MHz  
Maksimal radiofrekvenseffekt: 10mW(ERP)

С настоящото TOKAI RIKА CO., LTD. декларира, че този тип радиосъоръжение BR2EX е в съответствие с Директива 2014/53/EC.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:

<http://www.tokai-rika.co.jp/pc>

Радиочестотна лента: 433.050 - 434.790 MHz  
Максимална радиочестотна мощност: 10mW(ERP)

Prin prezenta, TOKAI RIKА CO., LTD. declară că tipul de echipamente radio BR2EX este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

<http://www.tokai-rika.co.jp/pc>

Banda de frecvență: 433.050 - 434.790 MHz  
Puterea maximă de radiofrecvență: 10mW(ERP)

Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BR2EX u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi:

<http://www.tokai-rika.co.jp/pc>

Frekvencijski opseg: 433.050 - 434.790 MHz

Maksimalna radio-frekvencijska snaga: 10mW(ERP)

Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklararon se tipi i radiopajisjes BR2EX është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit:

<http://www.tokai-rika.co.jp/pc>

Brezi i frekuencës: 433.050 - 434.790 MHz

Fuqia maksimale e radiofrekuencës: 10mW(ERP)

TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa BR2EX u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

<http://www.tokai-rika.co.jp/pc>

Frekvencijski pojas: 433.050 - 434.790 MHz

Maksimalna RF snaga: 10mW(ERP)

Ovim TOKAI RIKAI CO., LTD. potvrđuje da je radio-oprema tipa BR2EX u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:

<http://www.tokai-rika.co.jp/pc>

Frekventni opseg: 433.050 - 434.790 MHz

Maksimalna radio-frekventna snaga: 10mW(ERP)

TOKAI RIKAI CO., LTD., işbu belgeyle telsiz cihazı türünün BR2EX 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:

<http://www.tokai-rika.co.jp/pc>

Frekans bandı: 433.050 - 434.790 MHz

Maksimum radyo frekans gücü: 10mW(ERP)



Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

⚠: This mark is a safety/warning mark.

- Do not ingest battery.

**Chemical Burn Hazard**

- This product contains a coin / button cell battery.
- If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

**CAUTION**

- Risk of explosion if the battery is replaced by an incorrect type.
- Replace battery with the same type.

**CAUTION**

- Risk of explosion or the leakage of flammable liquid or gas.
- Do not use in /store in /bring into environment of extremely high temperature or extremely low pressure due to the very high altitude.
- Do not attempt to burn, crush, or cut used battery.

⚠ : Tämä on turva-/varoituserkki.

- Paristoa ei saa laittaa suuhun.

**Kemiallisen palovamman vaara**


- Laitteessa on kolikko-/nappiparisto.
- Elimistöön joutunut kolikko-/nappiparisto voi aiheuttaa vakavia sisäisiä palovammoja vain 2 tunnissa, jolloin seurauksena voi olla hengen menetys.
- Uudet ja käytetyt paristot on pidettävä poissa lasten ulottuvilta.
- Jos paristolokero ei sulkeudu kunnolla, laitteen käyttö on lopetettava, ja laite on pidettävä poissa lasten ulottuvilta.
- Jos on syytä epäillä, että paristo on nielaistu tai muuten päässyt elimistöön, ota välittömästi yhteyttä lääkäriin.

**TÄRKEÄ HUOMAUTUS**

- Käytetyn pariston vaihtaminen tyypiltään väärään voi aiheuttaa räjähdysvaaran.
- Vaihda paristo tyypiltään samanlaiseen.

**TÄRKEÄ HUOMAUTUS**

- Räjähdysvaara tai syttyvän nesteen tai kaasun vuotovaara.
- Ei saa käyttää/säilyttää/tuoda lämpötilaltaan tai merenpinnasta mitattuna erittäin korkeaan ympäristöön, jossa ilmanpaine on erittäin alhainen.
- Käytettyä paristoa ei saa polttaa, murskata tai halkaista.

 : Dit teken is een veiligheids-/waarschuwingsteken.

- Slik de batterij niet in.

**Risico op chemische brandwonden**


- Dit product bevat een munt-/knoopcelbatterij.
- Als de munt-/knoopcelbatterij wordt ingeslikt, kan het al binnen 2 uur ernstige interne brandwonden veroorzaken en de dood tot gevolg hebben.
- Houd nieuwe en gebruikte batterijen buiten bereik van kinderen.
- Als het batterijcompartiment niet goed sluit, stop dan met het gebruik van het product en houd het buiten bereik van kinderen.
- Als u denkt dat batterijen zijn ingeslikt of in enig deel van het lichaam zijn gestopt, roep dan onmiddellijk medische hulp in.

**VOORZICHTIG**

- Er bestaat een risico op ontploffing als de batterij wordt vervangen door een verkeerd type.
- Vervang de batterij door een van hetzelfde type.

**VOORZICHTIG**

- Er bestaat een risico op ontploffing of lekkage van brandbare vloeistof of gas.
- Niet gebruiken in/bewaren in/meenemen naar een omgeving met extreem hoge temperatuur of met extreem lage druk als gevolg van zeer grote hoogte.
- Een gebruikte batterij niet verbranden, platdrukken, of doorsnijden.

 : Ce pictogramme est une marque de sécurité/avertissement.

- Ne pas ingérer la pile.

**Risques de brûlure chimique**

- Ce produit contient une pile bouton.
- Si la pile bouton est avalée, elle peut causer de graves brûlures internes en seulement 2 heures et peut entraîner la mort.
- Conservez les piles neuves et usagées hors de portée des enfants.
- Si le compartiment de la pile ne ferme pas correctement, cessez d'utiliser le produit et conservez-le hors de portée des enfants.
- Si vous pensez que des piles ont pu être avalées ou placées à l'intérieur d'une partie du corps, consultez immédiatement un médecin.

**AVERTISSEMENT**

- Risque d'explosion si la pile est remplacée par un type incorrect.
- Remplacez la pile par une pile du même type.

**AVERTISSEMENT**

- Risque d'explosion ou de fuite de liquide ou de gaz inflammable.
- Ne jamais utiliser, stocker, placer dans un environnement à la température extrêmement élevée ou à la pression extrêmement basse en raison d'une très haute altitude.
- Ne jamais essayer de brûler, écraser ou couper des piles usagées.

⚠: Det här märket är ett säkerhets-/varningsmärke.

- Förtär inte batteriet.

**Risk för kemisk brännskada**

- Den här produkten innehåller ett mynt-/knappbatteri.
- Om mynt-/knappbatteriet sväljs kan det orsaka allvarliga interna brännskador på bara två timmar, vilket kan leda till dödsfall.
- Håll nya och använda batterier borta från barn.
- Om batterifacket inte stängs ordentligt, sluta använda produkten och håll den undan från barn.
- Om du misstänker att batterier har svalts eller placerats inuti någon del av kroppen, sök omedelbart läkarvård.

**VARNING**

- Risk för explosion om batteriet byts ut mot ett av fel typ.
- Byt ut batteriet mot ett av samma typ.

**VARNING**

- Risk för explosion eller läckage av brandfarliga vätskor och gaser.

• Använd inte, förvara inte och ta inte in i miljö med extremt hög temperatur eller extremt lågt tryck p.g.a. hög höjd.

- Försök inte bränna, krossa eller skära använt batteri.

⚠ : Dette mærke er et sikkerheds-/advarselsmærke.

- Batteriet må ikke indtages.

**Fare for kemisk forbrænding**

- Dette produkt indeholder et mønt-/knapcellebatteri.
- Hvis mønt-/knapcellebatteriet sluges, kan det medføre alvorlige indre forbrændinger i løbet af kun 2 timer og kan føre til dødsfald.
- Opbevar nye og brugte batterier utilgængeligt for børn.
- Hvis batterirummet ikke kan lukkes ordentligt, skal du indstille brugen af produktet og opbevare det utilgængeligt for børn.
- Hvis du har mistanke om, at der måske er blevet slugt batterier, eller batterier på anden måde er kommet ind i kroppen, skal du øjeblikkeligt søge lægehjælp.

**FORSIGTIG**

- Risiko for eksplosion, hvis batteriet udskiftes med en forkert type.
- Udskift batteriet med et batteri af samme type.

**FORSIGTIG**

- Risiko for eksplosion eller lækage af brændbar væske eller gas.

• Må ikke anvendes på/opbevares på/tages med til meget varme steder eller steder med meget lavt tryk som følge af ekstreme højder.

- Forsøg ikke at brænde, knuse eller adskille brugte batterier.

⚠: Dieses Symbol ist ein Sicherheits-/Warnsymbol.

- Verschlucken Sie die Batterie nicht.

#### **Verätzungsgefahr**

- Dieses Produkt enthält eine Knopfzellenbatterie.
- Falls die Knopfzellenbatterie verschluckt wird, kann dies innerhalb von nur 2 Stunden schwere innere Verätzungen verursachen und zum Tode führen.
- Halten Sie neue und gebrauchte Batterien von Kindern fern.
- Falls sich das Batteriefach nicht sicher schließen lässt, stellen Sie die Verwendung des Produkts ein und halten Sie es von Kindern fern.
- Falls Sie glauben, dass Batterien eventuell verschluckt oder in einen Teil des Körpers eingeführt worden sind, begeben Sie sich sofort in ärztliche Behandlung.

#### **ACHTUNG**

- Es besteht Explosionsgefahr, falls die Batterie durch eine Batterie der falschen Art ersetzt wird.
- Ersetzen Sie Batterien nur durch die gleiche Art.

#### **ACHTUNG**

- Es besteht Explosionsgefahr oder die Gefahr eines Austritts von brennbarer Flüssigkeit oder entzündlichem Gas.

- Das Produkt darf nicht in Umgebungen mit hohen Temperaturen oder extrem niedrigem Luftdruck aufgrund von extremen Höhenlagen verwendet / aufbewahrt / gebracht werden.

- Versuchen Sie nicht, gebrauchte Batterien zu verbrennen, zu zerstoßen oder zu schneiden.

⚠: Το σήμα αυτό είναι ένα σήμα ασφαλείας/προειδοποίησης.

- Μην καταπίνετε την μπαταρία.

#### **Κίνδυνος χημικού εγκαύματος**


- Αυτό το προϊόν περιέχει μια μπαταρία σχήματος νομίσματος / κουμπιού.
- Αν η μπαταρία σχήματος νομίσματος / κουμπιού καταποθεί, μπορεί να προκαλέσει σοβαρά εσωτερικά εγκαύματα σε μόλις 2 ώρες και μπορεί να επέλθει θάνατος.
- Διατηρείτε τις καινούργιες και τις χρησιμοποιημένες μπαταρίες μακριά από παιδιά.
- Εάν το διαμέρισμα της μπαταρίας δεν κλείνει καλά, σταματήστε τη χρήση του προϊόντος και κρατήστε το μακριά από παιδιά.
- Αν νομίζετε ότι οι μπαταρίες ενδέχεται να έχουν καταποθεί ή τοποθετηθεί μέσα σε οποιοδήποτε μέρος του σώματος, ζητήστε αμέσως ιατρική φροντίδα.

#### **ΠΡΟΣΟΧΗ**

- Υπάρχει κίνδυνος έκρηξης εάν η μπαταρία αντικατασταθεί με μπαταρία εσφαλμένου τύπου.
- Αντικαταστήστε την μπαταρία με μπαταρία του ίδιου τύπου.

#### **ΠΡΟΣΟΧΗ**

- Υπάρχει κίνδυνος έκρηξης ή διαρροής εύφλεκτων υγρών ή αερίων.
- Μη χρησιμοποιείτε / αποθηκεύετε / μεταφέρετε το προϊόν σε περιβάλλον με εξαιρετικά υψηλή θερμοκρασία ή εξαιρετικά χαμηλή πίεση λόγω πολύ μεγάλου υψομέτρου.
- Μην επιχειρήσετε να κάψετε, να συνθλίψετε ή να κόψετε μια χρησιμοποιημένη μπαταρία.

 : Questo è un simbolo di sicurezza/avvertenza.

- Non ingerire la batteria.

**Pericolo di ustioni chimiche**

- Questo prodotto contiene una batteria a bottone/moneta.
- Se la batteria a bottone/moneta viene ingerita, può causare gravi ustioni interne in sole 2 ore e provocare la morte.
- Tenere le batterie nuove e usate lontano dalla portata dei bambini.
- Se il vano batteria non si chiude in modo saldo, interrompere l'utilizzo del prodotto e tenerlo lontano dalla portata dei bambini.
- Se si ritiene che le batterie siano state ingerite o inserite in qualsiasi parte del corpo, consultare immediatamente un medico.


**ATTENZIONE**

- Rischio di esplosione in caso di sostituzione della batteria con una di tipo errato.
- Sostituire la batteria con una dello stesso tipo.

**ATTENZIONE**

- Rischio di esplosione o di perdita di liquidi o gas infiammabili.

- Non utilizzare / immagazzinare / portare in ambienti con temperatura estremamente alta o pressione estremamente alta a causa dell'elevata altitudine.
- Non provare a bruciare, schiacciare o tagliare la batteria usata.

 : Este símbolo es un símbolo de seguridad/precaución.

- No ingerir la batería.

**Peligro de quemadura química**

- Este producto contiene una batería de pila de botón.
- Si se ingiere la batería de pila de botón, esta puede causar graves quemaduras internas en solo 2 horas y puede provocar la muerte.
- Mantenga las baterías nuevas y usadas alejadas de los niños.
- Si el compartimento de la batería no se cierra correctamente, deje de usar el producto y manténgalo alejado de los niños.
- Si cree que las baterías hayan podido ser ingeridas o introducidas en alguna parte del cuerpo, busque inmediatamente atención médica.

**ATENCIÓN**

- Riesgo de explosión si la batería es reemplazada por una del tipo incorrecto.
- Reemplace la batería por una del mismo tipo.

**ATENCIÓN**

- Riesgo de explosión o escape de líquido o gas inflamable.
- No usar / almacenar / introducir en un ambiente de temperatura extremadamente alta o de presión extremadamente baja a causa de la alta altitud.
- No intente quemar, aplastar, o cortar la batería usada.



⚠: Esta marca é uma marca de segurança/aviso.

- Não ingerir a pilha.

**Perigo de Queimadura Química**

- Este produto contém uma pilha de tipo moeda/botão.
- Se a pilha de tipo moeda/botão for engolida, poderá causar queimaduras internas graves em apenas 2 horas e levar à morte.
- Manter as pilhas novas e usadas longe de crianças.
- Se o compartimento da pilha não se fechar completamente, cessar a utilização do produto e manter fora do alcance das crianças.
- Caso seja possível que as pilhas tenham sido engolidas ou colocadas dentro de qualquer parte do corpo, procurar cuidados médicos imediatamente.

**CUIDADO**

- Risco de explosão se a pilha for substituída por uma de tipo incorreto.
- Substituir a pilha por uma do mesmo tipo.

**CUIDADO**

- Risco de explosão ou fuga de líquidos ou gases inflamáveis.
- Não utilizar/armazenar/colocar em ambiente de temperatura extremamente alta, ou pressão extremamente baixa devido a altitude muito alta.
- Não tentar queimar, esmagar ou cortar a pilha usada.

⚠: Din il-marka hija marka ta' sigurtá/twissija.

- Tiblax il-batterija.

**Periklu ta' Ħruq Kimiku**

- Dan il-prodott fih batterija munita / button cell.
- Jekk tinbela' l-batterija munita / button cell, tista' tikkawża ħruq intern sever f'temp ta' sagħtejn biss u tista' twassal għall-mewt.
- Żomm il-batteriji godda u użati 'l bogħod mit-tfal.
- Jekk il-kompartiment tal-batterija ma jagħlaqx sew, waqqaf l-użu tal-prodott u żommu 'l bogħod mit-tfal.
- Jekk taħseb li l-batteriji setgħu nbelgħu jew tpoġġew ġewwa xi parti tal-ġisem, fittex attenzjoni medika immedjata.

**ATTENZJONI**

- Riskju ta' splużjoni jekk il-batterija tiġi ssostitwita b'tip inkorrett.
- Ibdel il-batterija bl-istess tip.

**ATTENZJONI**

- Riskju ta' splużjoni jew tnixxija ta' likwidu jew gass f'jammabbli.
- Tużaxh / taħznux / iġġibux f'ambjent ta' temperatura estremament għolja jew pressjoni estremament baxxa minħabba l-altitudni għolja ħafna.
- Tippruvax taħraq, tfarrak jew tqatta' l-batteriji użati.

⚠: See märk on ohutus-/hoiatusmärk.

- Ärge patareid alla neelake.

**Keemilise põletuse oht**

- See toode sisaldab mündi/nööbi tüüpi elemendiga patareid.
- Mündi/nööbi tüüpi elemendiga patarei allaneelamine võib põhjustada raskeid sisemisi põletusi juba 2 tunni jooksul ning võib lõppeda surmaga.
- Hoidke uued ja kasutatud patareid lastele kättesaamatus kohas.
- Kui patareipesa ei sulgu kindlalt, lõpetage toote kasutamine ja hoidke seda lastele kättesaamatus kohas.
- Kui te arvate, et patareid võivad olla alla neelatud või mistahes kehaossa sattunud, pöörduge viivitamatult arsti poole.

**ETTEVAATUST**

- Plahvatusoht vahetamisel vale tüüpi patareiga.
- Vahetage sama tüüpi patareiga.

**ETTEVAATUST**

- Plahvatuse või tuleohtliku vedeliku või gaasi lekke oht.

- Ärge kasutage, hoidke ega tooge keskkonda eriti kõrge temperatuuriga või eriti madala rõhuga väga suure kõrguse tõttu merepinnast.
- Ärge üritage põletada, purustada ega lõigata kasutatud patareid.

⚠ : Ez a jelzés biztonsági/figyelmeztető jelzés.

- Ne nyelje le az elemet.

**Vegyí anyag okozta égésisérülés-veszély**

- Ez a termék gombelemet tartalmaz.
- Amennyiben a gombelemet lenyeli, az mindössze 2 órán belül komoly belső égési sérüléseket okozhat és halálhoz vezethet.
- Az új és használt elemeket tartsa távol a gyermekektől.
- Amennyiben az elemtartó rekesz nem zárható biztonságosan, függeszse fel a termék használatát és tartsa gyermekektől távol.
- Amennyiben úgy véli, hogy az elemet lenyelték vagy bármely testrészbe helyezték, haladéktalanul forduljon orvoshoz.

**VIGYÁZAT**

- Nem megfelelő típusú csereelem használata robbanásveszélyes.
- Az elemcseréhez azonos típusú elemet használjon.

**VIGYÁZAT**

- Robbanásveszély vagy gyúlékony folyadékok vagy gázok szivárgása.

- Ne használja/ne tárolja/ne helyezze szélsőségesen magas hőmérsékletű környezetbe, és ne tegye ki a nagy magasságokban kialakuló rendkívül alacsony nyomásnak.

- A használt elemet ne kísérelje meg elégetni, összezúzni vagy szétvágni.

⚠ : Toto je bezpečnostná/výstražná značka.

- Dbajte na to, aby nedošlo k prehltnutiu batérie.

#### **Nebezpečenstvo poleptania chemikáliou**

- Tento výrobok obsahuje mincovú/gombíkovú batériu.
- Ak dôjde k prehltnutiu mincovej/gombíkovej batérie, už v priebehu 2 hodín môže spôsobiť vážne vnútorné poleptanie a viesť k usmrteniu.
- Nové a použité batérie uchovávajte mimo dosahu detí.
- Ak sa priestor pre batériu nezatvorí bezpečne, prestaňte používať výrobok a uchovávajte ho mimo dosahu detí.
- Ak si myslíte, že mohlo dôjsť k prehltnutiu batérií alebo ich umiestneniu do ktorejkoľvek časti tela, okamžite vyhľadajte lekársku pomoc.

#### **UPOZORNENIE**

- Hrozí nebezpečenstvo výbuchu, ak sa batéria vymení za nesprávny typ.
- Vymeňte batériu za rovnaký typ.

#### **UPOZORNENIE**

- Nebezpečenstvo výbuchu alebo úniku horľavej kvapaliny alebo horľavého plynu.
- Nepoužívajte/neskladujte v prostredí/neprinášajte do prostredia s mimoriadne vysokou teplotou, alebo mimoriadne nízkym tlakom v dôsledku veľmi vysokej nadmorskej výšky.
- Nepokúšajte sa spáliť, rozdrviť ani rozrezať použitú batériu.

⚠ : Tento symbol je bezpečnostným/výstražným symbolom.

- Baterii nepolykejte.

#### **Nebezpečí chemických popálenin**

- Tento výrobok obsahuje mincovou/knoflíkovou baterii.
- Pokiaľ dojde ke spolknutí mincové/knoflíkové baterie, môže za pouhé 2 hodiny spôsobiť závažné vnútorné popáleniny a v jejich dôsledku prípadne i smrť.
- Použité a nové batérie udržiavajte mimo dosah detí.
- Pokiaľ nelze prostor pro baterii pevně uzavřít, přestaňte výrobek používat a udržiavajte jej mimo dosah detí.
- Pokiaľ si myslíte, že mohlo dojsť ke spolknutí baterie alebo jejímú vsunutí dovnitř kterékoli části těla, okamžitě vyhledejte lékařskou pomoc.

#### **UPOZORNĚNÍ**

- Nebezpečí výbuchu v případě výměny baterie za nesprávný druh baterie.
- Proto baterii vždy vyměňte za jinou stejného typu.

#### **UPOZORNĚNÍ**

- Nebezpečí výbuchu nebo úniku hořlavé kapaliny či plynu.
- Nepoužívejte/neskladujte/nepřinášejte je do prostředí s nesmírně vysokou teplotou nebo nesmírně nízkým tlakem zapříčiněným vysokou nadmořskou výškou.
- Nesnažte se baterii spálit, rozdrtit či rozříznout.

⚠ : Ta oznaka je varnostna/opozorilna oznaka.

- Ne zaužijte baterije.

#### **Nevarnost kemijske opekline**

- Ta izdelek vsebuje gumbasto baterijo.
- Če se gumbasto baterijo zaužije, lahko to povzroči hude notranje opekline v le 2 urah in lahko vodi v smrt.
- Nove in rabljene baterije hranite izven dosega otrok.
- Če se predalček za baterijo ne zapira pravilno, prenehajte z uporabo izdelka in ga hranite izven dosega otrok.
- Če sumite, da je morda nekdo zaužil baterijo ali jo dal v kateri koli del telesa, takoj poiščite zdravniško pomoč.

#### **POZOR**

- Nevarnost eksplozije, če baterijo zamenjate z baterijo napačne vrste.
- Zamenjajte baterijo z istim tipom.

#### **POZOR**

- Tveganje za eksplozijo ali puščanje vnetljivih tekočin ali plinov.
- Ne uporabljajte/shranjujte/prinašajte v okolje izredno visoke temperature ali izredno nizkega tlaka zaradi zelo visoke nadmorske višine.
- Ne poskušajte zažigati, uničiti, ali rezati rabljene baterije.

⚠: Šis ženklas yra saugos/įspėjamosis ženklas.

- Neprarykite baterijos.

#### **Cheminių nudegimų pavojus**

- Šiame gaminyje yra monetos/sagos formos baterija.
- Prarijęs monetos/sagos formos bateriją, asmuo per 2 valandas gali patirti sunkius vidinius nudegimus ir netgi mirti.
- Naujas ir panaudotas baterijas laikykite vaikams nepasiekiamoje vietoje.
- Jei baterijų skyrelio nepavyksta tvirtai uždaryti, nebenaudokite gaminio ir laikykite jį vaikams nepasiekiamoje vietoje.
- Jei manote, kad baterijos buvo prarytos arba pateko į kūną, nedelsdami kreipkitės į gydytoją.

#### **PERSPĖJIMAS**

- Bateriją pakeitus netinkamo tipo baterija, kyla sprogimo pavojus.
- Pakeiskite seną bateriją tik to paties tipo nauja baterija.

#### **PERSPĖJIMAS**

- Sprogimo arba degių skysčių ar dujų nuotėkio pavojus.
- Negalima naudoti/laikyti/turėti labai aukštos temperatūros arba labai dideliame aukštyje esančioje itin žemo slėgio aplinkoje.
- Naudotos baterijos nebandykite deginti, ardyti ar perpjauti.

⚠ : Št zīme ir drošības/brīdinājuma zīme.

- Nenorijiet bateriju.

**Ķīmisku apdegumu briesmas**

- Šis izstrādājums satur tabletes tipa bateriju.
- Ja ir norīta tabletes tipa baterija, tā 2 stundu laikā var radīt smagus apdegumus un izraisīt nāvi.
- Jaunas un lietotas baterijas uzglabājiet bērniem nepieejamā vietā.
- Ja bateriju nodalījumu nevar droši aizvērt, pārtrauciet lietot izstrādājumu un novietojiet to bērniem nepieejamā vietā.
- Ja jūsuprāt baterijas ir norītas vai ievietotas kādā ķermeņa daļā, nekavējoties vērsieties pēc medicīniskās palīdzības.

**UZMANĪBU!**

- Eksplozijas risks, ja baterija tiek nomainīta ar nepareiza tipa bateriju.
- Bateriju nomainiet pret tāda paša tipa bateriju.

**UZMANĪBU!**

- Eksplozijas vai uzliesmojoša šķidrums vai gāzes noplūdes risks.
- Nelietojiet, neuzglabājiet un neievietojiet vidē ar ļoti augstu temperatūru, kā arī vidē, kur ļoti lielā augstuma virs jūras līmeņa dēļ ir ļoti zems spiediens.
- Nemēģiniet sadedzināt, sagraut vai sagriezt nolietoto bateriju.

⚠ : ten symbol oznacza niebezpieczeństwo/ostrzeżenie.

- Nie połykać baterii.

**Ryzyko oparzenia chemicznego**

- Ten produkt zawiera baterię guzikową.
- Połknięta bateria guzikowa może spowodować poważne oparzenia wewnętrzne w czasie jedynie 2 godzin i prowadzić do śmierci.
- Przechowywać nowe i zużyte baterie z dala od dzieci.
- Jeśli solidne zamknięcie komory baterii jest niemożliwe, zaprzestać użytkowania produktu i przechowywać go w miejscu niedostępnym dla dzieci.
- W przypadku podejrzenia, że mogło dojść do połknięcia baterii lub ich umieszczenia w dowolnym otworze ciała, niezwłocznie uzyskać pomoc lekarską.

**PRZESTROGA**

- Istnieje ryzyko wybuchu, jeśli bateria zostanie zastąpiona baterią niewłaściwego typu.

- Wymieniać baterię na baterię tego samego typu.

**PRZESTROGA**

- Ryzyko wybuchu lub wycieku łatwopalnego płynu lub gazu.
- Nie używać i nie przechowywać w otoczeniu o skrajnie wysokiej temperaturze lub skrajnie niskim ciśnieniu wynikającym z bardzo dużej wysokości ani nie wnosić do takiego otoczenia.
- Nie podejmować prób spalania, zgniecenia lub przecięcia zużytej baterii.

⚠ : Този знак е знак за безопасност/предупреждение.

• Не поглъщайте батерията.

**Опасност от химическо изгаряне**

• Този продукт съдържа плоска/бутонна батерия.

• Ако плоската/бутонна батерия бъде погълната, тя може да причини тежки вътрешни изгаряния само за 2 часа и може да доведе до смърт.

• Пазете новите и използваните батерии далеч от деца.

• Ако отделението за батериите не се затваря добре, спрете да използвате продукта и го дръжте далеч от деца.

• Ако смятате, че батериите може да са били погълнати или поставени в някоя част на тялото, незабавно потърсете медицинска помощ.

**ВНИМАНИЕ**

• Опасност от експлозия, ако батерията бъде сменена с неправилен тип.

• Сменете батерията със същия вид.

**ВНИМАНИЕ**

• Опасност от експлозия или изтичане на запалими течности или газове.

• Не използвайте/съхранявайте/носете в среда с изключително висока температура или изключително ниско налягане, причинено от голямата височина.

• Не се опитвайте да изгаряте, смачквате или режете използваната батерия.

⚠ : Acest marcaj este un marcaj de securitate/avertizare.

• Nu ingerați bateria.

**Pericol de arsuri chimice**

• Acest produs conține o baterie tip pastilă.

• Dacă bateria tip pastilă este înghițită, aceasta poate cauza arsuri interne grave în numai 2 ore și poate duce la deces.

• Nu lăsați bateriile noi și bateriile uzate la îndemâna copiilor.

• În cazul în care compartimentul bateriei nu se închide bine, încetați utilizarea produsului și nu îl lăsați la îndemâna copiilor.

• Dacă bănuți că este posibil ca bateriile să fi fost înghițite sau introduse în orice parte a corpului, consultați imediat medicul.

**ATENȚIE**

• Risc de explozie dacă bateria este înlocuită cu un tip incorect.

• Înlocuiți bateria cu una de același tip.

**ATENȚIE**

• Risc de explozie sau de scurgeri de lichide sau gaze inflamabile.

• Nu utilizați/depozitați într-un mediu cu temperatură extrem de înaltă sau cu presiune extrem de joasă din cauza altitudinii foarte mari.

• Nu încercați să ardeți, să spargeți sau să tăiați bateriile uzate.

⚠ : Ova oznaka je oznaka sigurnosti/upozorenja.

- Nemojte gutati bateriju.

#### **Opasnost od kemijskih opekline**

- Ovaj proizvod sadrži novčić/gumb bateriju.
- Ako se novčić/gumb baterija proguta, može uzrokovati ozbiljne unutarnje opekline u samo 2 sata i može dovesti do smrti.
- Držite nove i rabljene baterije izvan dohvata djece.
- Ako se pretinac za baterije ne zatvara sigurno, prestanite koristiti proizvod i držite ga dalje od djece.
- Ako smatrate da su baterije možda progutane ili smještene unutar bilo kojeg dijela tijela, zatražite hitnu medicinsku pomoć.

#### **OPREZ**

- Ako je baterija zamijenjena pogrešnim tipom, postoji rizik od eksplozije.
- Zamijenite bateriju s baterijama iste vrste.

#### **OPREZ**

- Rizik od eksplozije ili istjecanja zapaljive tekućine ili plina.
- Nemojte koristiti u /pohranjivati u /unijeti u prostoru izuzetno visoke temperature ili izuzetno niskog tlaka zbog visoke nadmorske visine.
- Ne pokušavajte spaliti, lomiti ili rezati istrošenu bateriju.

⚠ : Þetta tákn er öryggis-/aðvörunartákn.

- Gleypið ekki rafhlöðuna.

#### **Hætta á efnabruna**

- Þessi vara inniheldur flata rafhlöðu.
- Ef rafhlaðan er gleypst getur hún valdið alvarlegum innvortis brunna á innan við 2 klukkustundum sem getur leitt til dauða.
- Geymið nýjar og notaðar rafhlöður þar sem börn ná ekki til.
- Ef rafhlöðuhólfíð lokast ekki örugglega skal hætta notkun vörunnar og geyma hana þar sem börn ná ekki til.
- Ef þú telur að rafhlöður hafi verið gleypar eða settar inn í eitthvert líkamsop, skaltu hafa samband við lækni tafarlaust.

#### **VARÚÐ**

- Hætta á sprengingu ef rafhlöðunni er skipt út fyrir ranga tegund.
- Skiptið rafhlöðunni ávallt út fyrir sömu tegund.

#### **VARÚÐ**

- Hætta á sprengingu eða leka á eldfimum vökva eða lofttegundum.
- Má ekki nota/geyma/setja í umhverfi þar sem er afar hár hiti, eða afar lágur þrýstingur vegna mikillar hæðar.
- Ekki reyna að brenna, kremja eða skera notaða rafhlöðu.

⚠ : Dette merket er et sikkerhets-/advarselsmerke.

- Ikke svelg batteriet.

#### **Kjemisk brannfare**

- Dette produktet inneholder et mynt-/knappecellebatteri.
- Dersom mynt-/knappecellebatteriet svelges, kan det frembringe alvorlige indre forbrenninger i løpet av kun to timer, og kan være dødelig.
- Hold nye og brukte batterier borte fra barn.
- Lukkes ikke batterirommet sikkert må du stanse å bruke produktet og holde det utenfor barns rekkevidde.
- Oppsøk medisinsk hjelp umiddelbart hvis du tror at batterier kan være svelget eller plassert inne i kroppen.

#### **FORSIKTIG**

- Eksplosjonsfare hvis batteriet erstattes med feil type.
- Bytt batteri med samme type.

#### **FORSIKTIG**

- Fare for eksplosjon eller lekkasje av brannfarlig væske eller gass.

- Ikke bruk i/oppbevar i/ta med inn i miljø med ekstremt høy temperatur eller ekstremt lavt trykk på grunn av den svært store høyden.
- Ikke forsøk å brenne, knuse eller skjære opp et brukt batteri.

⚠ : Ova oznaka je sigurnosna/upozoravajuća oznaka.

- Nemojte gutati bateriju.

#### **Opasnost od hemijskih opekotina**

- Ovaj proizvod sadrži bateriju veličine kovanice/dugmeta.
- Ako se baterija veličine kovanice/dugmeta proguta, može izazvati ozbiljne unutrašnje opekotine za samo 2 sata i može dovesti do smrti.
- Čuvajte nove i korišćene baterije dalje od djece.
- Ako se prostor za baterije ne zatvori dobro, prestanite sa korišćenjem proizvoda i držite ga dalje od djece.
- Ako mislite da su baterije možda progutane ili stavljene u unutrašnjost bilo kog dijela tijela, potražite hitnu medicinsku pomoć.

#### **OPREZ**

- Opasnost od eksplozije ako se baterija zamijeni s baterijom pogrešnog tipa.
- Zamijenite bateriju sa baterijom istog tipa.

#### **OPREZ**

- Opasnost od eksplozije ili curenja zapaljive tečnosti ili gasa.

- Nemojte koristiti /skladištiti /unositi u okruženje izuzetno visoke temperature ili izuzetno niskog pritiska usljed veoma velike visine.
- Ne pokušavajte da spalite, lomite ili isječete iskorišćenu bateriju.



⚠ : Kjo është shenjë sigurie/paralajmërimi.

- Mos e gëlltisni baterinë.

#### **Rrezik djegieje kimike**

- Ky produkt përmban një bateri të hollë në formë monedhe/kopse.
- Nëse bateria e hollë në formë monedhe/kopse gëlltitet, ajo mund të shkaktojë djegie të rënda të brendshme brenda vetëm 2 orëve dhe mund të sjellë vdekjen.
- Mbajini bateritë e reja dhe të përdorura larg nga fëmijët.
- Nëse foleja e baterisë nuk mbyllet mirë, ndaloni përdorimin e produktit dhe mbajeni larg nga fëmijët.
- Nëse mendoni se bateritë mund të jenë gëlltitur ose futur brenda ndonjë pjese trupi, kërkoni menjëherë vëmendjen e mjekut.

#### **KUJDES**

- Rrezik shpërthimi nëse bateria zëvendësohet me një lloj të pasaktë.
- Zëvendësojeni baterinë me të njëjtin lloj.

#### **KUJDES**

- Rrezik shpërthimi nga rrjedhja e lëngut apo gazit të ndezshëm.
- Mos e përdorni / ruani / sillni në mjedise me temperaturë jashtëzakonisht të lartë ose presion jashtëzakonisht të ulët në lartësi shumë të mëdha.
- Mos u përpiqni të digjini, shtypni ose prisni baterinë e përdorur.

⚠ : Ova oznaka je oznaka za bezbednost/upozorenje.

- Nemojte gutati bateriju.

#### **Opasnost od hemijskih opekotina**

- Ovaj proizvod sadrži bateriju u obliku novčića/dugmeta.
- Ako se baterija u obliku novčića/gumba proguta, može da izazove ozbiljne interne opekotine za samo 2 sata i može da dovede do smrti.
- Nove i korišćene baterije čuvajte van domašaja dece.
- Ako se odeljak za bateriju ne zatvori dobro, prestanite da koristite proizvod i čuvajte ga van domašaja dece.
- Ako mislite da su baterije možda progutane ili stavljene unutar bilo kog dela tela, odmah zatražite medicinsku pomoć.

#### **OPREZ**

- Rizik od eksplozije ako je baterija zamenjena nepravilnim tipom.
- Zamenite bateriju sa istim tipom.

#### **OPREZ**

- Rizik od eksplozije ili curenja zapaljive tečnosti ili gasa.
- Ne koristite/ne čuvajte/ne donosite u sredinu izuzetno visoke temperature ili izuzetno niskog pritiska usled vrlo visoke visine.
- Ne pokušavajte da zapalite, smrvite ili isečete korišćenu bateriju.

⚠ : Bu işaret bir güvenlik/uyarı işaretidir.

•Pili yutmayın.

**Kimyasal Yanma Tehlikesi**

•Bu üründe bir düğme pil bulunmaktadır.

•Düğme pil yutulursa, sadece 2 saat içinde ağır iç yanıklara neden olabilir ve ölüme yol açabilir.

•Yeni ve kullanılmış pilleri çocuklardan uzak tutun.

•Pil yuvası emniyetli bir şekilde kapanmıyorsa, ürünü kullanmayı bırakın ve çocuklardan uzak tutun.

•Pillerin yutulduğunu veya vücudun herhangi bir parçasının içine yerleştirildiğini düşünüyorsanız, derhal tıbbi yardım alın.

**DİKKAT**

•Pil yanlış tür bir pille değiştirilirse patlama riski vardır.

•Pili aynı tür pillerle değiştirin.

**DİKKAT**

•Patlama ya da yanıcı sıvı veya gaz sızıntısı riski vardır.

•Aşırı derecede yüksek sıcaklıktaki veya çok yüksek rakımdan dolayı aşırı derecede düşük basınçta sahip ortamlarda kullanmayın /saklamayın veya bu ortamlara götürmeyin.

•Kullanılmış pili yakmaya, ezmeye veya kesmeye çalışmayın.

► For vehicles sold in Serbia



### Tire pressure warning system

• Manufacturer's name: PACIFIC INDUSTRIAL CO., LTD.

• Registered trademark: 

This trademark is registered in the following countries:  
UK, Italy, Austria, Greece, Germany, France, Belgium,  
the Netherlands, Luxembourg, Portugal:

• Manufacturer's address:

1300-1 Yokoi, Godo-cho, Anpachi-gun, Gifu, 503-2397 JAPAN

• Operating frequency band: 433.05 — 434.79MHz

• Maximum radio-frequency power: 100dB $\mu$ V/m@3m(Radiated)

Hereby, PACIFIC INDUSTRIAL CO., LTD. declares that the radio equipment type PMV-E100 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

PACIFIC INDUSTRIAL CO., LTD. vakuuttaa, että radiolaitetyyppi PMV-E100 on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Hierbij verklaar ik, PACIFIC INDUSTRIAL CO., LTD., dat het type radioapparatuur PMV-E100 conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Le soussigné, PACIFIC INDUSTRIAL CO., LTD., déclare que l'équipement radioélectrique du type PMV-E100 est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Härmed försäkrar PACIFIC INDUSTRIAL CO., LTD. att denna typ av radioutrustning PMV-E100

överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Hermed erklærer PACIFIC INDUSTRIAL CO., LTD., at radioudstyrstypen PMV-E100 er i

overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Hiermit erklährt PACIFIC INDUSTRIAL CO., LTD., dass der Funkanlagentyp PMV-E100 der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Με την παρούσα ο/η PACIFIC INDUSTRIAL CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός PMV-E100 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Il fabbricante, PACIFIC INDUSTRIAL CO., LTD., dichiara che il tipo di apparecchiatura radio PMV-E100 è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Por la presente, PACIFIC INDUSTRIAL CO., LTD. declara que el tipo de equipo radioeléctrico PMV-E100 es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

O(a) abaixo assinado(a) PACIFIC INDUSTRIAL CO., LTD. declara que o presente tipo de equipamento de rádio PMV-E100 está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

B'dan, PACIFIC INDUSTRIAL CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju PMV-E100 huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Käesolevaga deklareerib PACIFIC INDUSTRIAL CO., LTD., et käesolev raadioseadme tüüp PMV-E100 vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

PACIFIC INDUSTRIAL CO., LTD. igazolja, hogy a PMV-E100 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

PACIFIC INDUSTRIAL CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu PMV-E100 je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Tímto PACIFIC INDUSTRIAL CO., LTD. prohlašuje, že typ rádiového zařízení PMV-E100 je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

PACIFIC INDUSTRIAL CO., LTD. potrjuje, da je tip radijske opreme PMV-E100 skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Aš, PACIFIC INDUSTRIAL CO., LTD., patvirtinu, kad radijo įrenginių tipas PMV-E100 atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Ar šo PACIFIC INDUSTRIAL CO., LTD. deklarē, ka radioiekārtā PMV-E100 atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

PACIFIC INDUSTRIAL CO., LTD. niniešzym oświadcza, że typ urządzenia radiowego PMV-E100 jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Hér með lýsir PACIFIC INDUSTRIAL CO., LTD. yfir því að PMV-E100 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU.

Samræmisýfirlýsing er einnig aðgengileg á eftirfarandi vefsíðu:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

PACIFIC INDUSTRIAL CO., LTD. erklærer at PMV-E100 er i overensstemmelse med direktiv 2014/53/EU.

Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

С настоящето PACIFIC INDUSTRIAL CO., LTD. декларира, че този тип радиосъоръжение PMV-E100 е в съответствие с Директива 2014/53/ЕС.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Prin prezenta, PACIFIC INDUSTRIAL CO., LTD. declară că tipul de echipamente radio PMV-E100 este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

U ovom dokumentu, PACIFIC INDUSTRIAL CO., LTD. deklarira da je radio oprema model PMV-E100 usklađena sa Directive 2014/53/EU.

Cio tekst EU deklaracije usklađenosti dostupan je na slijedećoj internet adresi:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Овим, PACIFIC INDUSTRIAL CO., LTD. изјављује да је радио опрема типа PMV-E100 усклађена са Directive 2014/53/EU.

Комплетан текст декларације ЕУ за усаглашеност доступан је на следећој веб адреси:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

PACIFIC INDUSTRIAL CO., LTD. ovime izjavljuje da je radijska oprema tipa PMV-E100 u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Këtu, PACIFIC INDUSTRIAL CO., LTD. deklaroi se pajisja radio PMV-E100 është në përputhje me Directive 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të BE-së gjendet në adresën e mëposhtme të internetit:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>



---

► For vehicles sold in Serbia



<b>GAS STATION INFORMATION</b>					
Auxiliary catch lever P. 511	Fuel filler door P. 279				
Fuel filler door opener P. 279	Hood lock release lever P. 511	Tire inflation pressure P. 665			
<small>IOPPS049a</small>					
Fuel tank capacity (Reference)	43 L (11.4 gal., 9.5 Imp.gal.)				
Fuel type	P. 657				
Cold tire inflation pressure	P. 665				
Engine oil capacity (Drain and refill — reference)	<table style="width: 100%; border: none;"> <tr> <td style="width: 30%;">With filter</td> <td style="text-align: right;">4.2 L (4.4 qt., 3.7 Imp.qt.)</td> </tr> <tr> <td>Without filter</td> <td style="text-align: right;">3.9 L (4.1 qt., 3.4 Imp.qt.)</td> </tr> </table>	With filter	4.2 L (4.4 qt., 3.7 Imp.qt.)	Without filter	3.9 L (4.1 qt., 3.4 Imp.qt.)
With filter	4.2 L (4.4 qt., 3.7 Imp.qt.)				
Without filter	3.9 L (4.1 qt., 3.4 Imp.qt.)				
Engine oil type	P. 658				